TÜV RHEINLAND ENERGIE UND UMWELT GMBH



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀

TÜV-Report: 936/21209885/G Cologne, 20 September 2013

www.umwelt-tuv.de



teu-service@de.tuv.com

The department of Environmental Protection of TÜV Rheinland Energie und Umwelt GmbH

is accredited for the following work areas:


- Determination of air quality and emissions of air pollution and odour substances;
- Inspection of correct installation, function and calibration of continuously operating emission measuring instruments, including data evaluation and remote emission monitoring systems;
- Combustion chamber measurements;
- Performance testing of measuring systems for continuous monitoring of emissions and ambient air, and of electronic data evaluation and remote emission monitoring systems;
- Determination of stack height and air quality projections for hazardous and odour substances;
- Determination of noise and vibration emissions and pollution, determination of sound power levels and execution of sound measurements at wind energy plants

according to EN ISO/IEC 17025.

The accreditation is valid up to 22-01-2018. DAkkS-register number: D-PL-11120-02-00.

Reproduction of extracts from this test report is subject to written consent.

TÜV Rheinland Energie und Umwelt GmbH D - 51105 Cologne, Am Grauen Stein, Tel: +49 221 806-5200, Fax: +49 221 806-1349





Page 2 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM10 pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM10, Report-No.: 936/21209885/G

Acknowledgement

TÜV Rheinland Energie und Umwelt GmbH would like to acknowledge the involvement of Bureau Veritas and the National Physical Laboratory as our UK partners in this project for their involvement in collecting the UK field data; project management; and data processing.





Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 3 of 440



Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀

Instrument tested: Model 5030*i* SHARP with PM₁₀ pre-separator

Manufacturer: Thermo Fisher Scientific

27 Forge Parkway Franklin, Ma 02038

USA

Test period: June 2009 to September 2013

Date of report: 20 September 2013

Report number: 936/21209885/G

Editor: Dipl.-Ing. Karsten Pletscher

Tel.: ++49 221 806-2592

karsten.pletscher@de.tuv.com

Scope of report: Report: 186 Pages

Annex Page 187

Manual Page 236

Manual Of 204 Pages Total 440 Pages



Air Pollution Control

Page 4 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Blank page

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 5 of 440

Content

1.	SUMMARY AND PROPOSAL FOR DECLARATION OF SUITABILITY	13
1.1	Summary	13
1.2	Certification proposal	17
1.3	Summary of test results	18
2.	TASK DEFINITION	27
2.1	Nature of test	27
2.2	Objective	27
3.	DESCRIPTION OF THE AMS TESTED	28
3.1	Measuring principle	28
3.2	Functionality of the measuring system	31
3.3	AMS scope and set-up	36
4.	TEST PROGRAMME	50
4.1	General	50
4.2	Laboratory test	53
4.3	Field test	54
5.	REFERENCE MEASURING METHODS	73
6.	TEST RESULTS	74
6.1	4.1.1 Measured value display	74
6.1	4.1.2 Easy maintenance	76
6.1	4.1.3 Functional check	78
6.1	4.1.4 Set-up times and warm-up times	80
6.1	4.1.5 Instrument design	82
6.1	4.1.6 Unintended adjustment	83
6.1	4.1.7 Data output	84



Page 6 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1	5.1 General	86
6.1	5.2.1 Certification ranges	87
6.1	5.2.2 Measuring range	88
6.1	5.2.3 Negative output signals	89
6.1	5.2.4 Failure in the mains voltage	90
6.1	5.2.5 Operating states	91
6.1	5.2.6 Switch-over	92
6.1	5.2.7 Maintenance interval	93
6.1	5.2.8 Availability	94
6.1	5.2.9 Instrument software	96
6.1	5.3.1 General	98
6.1	5.3.2 Repeatability standard deviation at zero point	100
6.1	5.3.3 Repeatability standard deviation at reference point	102
6.1	5.3.4 Linearity (lack of fit)	103
6.1	5.3.5 Sensitivity coefficient of sample gas pressure	104
6.1	5.3.6 Sensitivity coefficient of sample gas temperature	105
6.1	5.3.7 Sensitivity coefficient of surrounding temperature	106
6.1	5.3.8 Sensitivity coefficient of supply voltage	110
6.1	5.3.9 Cross-sensitivity	112
6.1	5.3.10 Averaging effect	113
6.1	5.3.11 Standard deviation from paired measurement	114
6.1	5.3.12 Long-term drift	116
6.1	5.3.13 Short-term drift	122
6.1	5.3.14 Response time	123
6.1	5.3.15 Difference between sample and calibration port	124
6.1	5.3.16 Converter efficiency	125
6.1	5.3.17 Increase of NO ₂ concentration due to residence in the measuring	system126

Air Pollution Control

6 1



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 7 of 440

6.1	5.3.18 Overall uncertainty	127
6.1	5.4.1 General	128
6.1	5.4.2 Equivalency of the sampling system	129
6.1	5.4.3 Reproducibility of the sampling systems	137
6.1	5.4.4 Calibration	142
6.1	5.4.5 Cross-sensitivity	144
6.1	5.4.6 Averaging effect	147
6.1	5.4.7 Constancy of sample volumetric flow	148
6.1	5.4.8 Tightness of the measuring system	151
6.1	Methodology of the equivalence check (modules 5.4.9 – 5.4.11)	153
6.1	5.4.9 Determination of uncertainty between systems under test u _{bs}	154
6.1	5.4.10 Calculation of the expanded uncertainty of the instruments	161
6.1	5.4.11 Application of correction factors and terms	175
6.1	5.5 Requirements on multiple-component measuring systems	180
7.	RECOMMENDATIONS FOR PRACTICAL USE	181
8.	LITERATURE	183
9	APPENDIX	184



Page 8 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Tables		
Table 1:	Description of the test sites	16
Table 2:	Description of the test site (additional campaign 2013)	
Table 3:	Technical data for Model 5030i SHARP (manufacturer's specifications)	
Table 4:	Overview of software versions during suitability testing	
Table 5:	Field test sites	
Table 6:	Ambient conditions at the field test sites, daily mean values	
Table 7:	Evaluation of the Teddington (summer) campaign with rH adjusted	
	to 50 %	61
Table 8:	Ambient conditions at the additional site "Bornheim, Summer 2013",	
	shown as daily mean values	64
Table 9:	Results of the equivalence test at the site Bornheim, Summer 2013,	
	SN 3 (58%) & SN 4 (50%), component PM ₁₀ , raw data	65
Table 10:	Results of the equivalence test at the site Bornheim, summer 2013,	
	SN 3 (58%) & SN 4 (50%), component PM ₁₀ , slope correction 1.009,	
	intercept correction -0.392	65
Table 11:	Results of the equivalence test "suitability testing + Bornheim,	
	summer 2013", SN 3 & SN 4, component PM ₁₀ , slope correction 1.009	
	and intercept correction -0.392	66
Table 12:	Results of Grubbs outlier test – Reference PM ₁₀	68
Table 13:	Discarded reference PM ₁₀ paired values according to Grubbs	69
Table 14:	Used filter materials	
Table 15:	Certification ranges	87
Table 16:	Determination of availability (without test-related outages)	95
Table 17:	Determination of availability (including test-related outages)	95
Table 18:	Detection limit PM ₁₀	
Table 19:	Dependence of the zero point (SHARP) on surrounding temperature,	
	deviation in µg/m³, average of three measurements	108
Table 20:	Dependence of sensitivity (mass coefficient) on surrounding temperature,	
	deviation in %, average of three measurements	108
Table 21:	Dependence of the zero point (NEPH) on surrounding temperature,	
	deviation in µg/m³, average of three measurements	109
Table 22:	Dependence of the measured values on mains voltage, deviation in %	111
Table 23:	Concentration averages, standard deviation, uncertainty range and	
	reproducibility in the field, measured component PM ₁₀	115
Table 24:	Zero point drift SN 3 & SN 4, test with zero filter	118
Table 25:	Sensitivity drift SN 3 & SN 4	120
Table 26:	Results of the linear regression analysis of the measurements with both	
	candidates SN 3 and SN 4 at the four test sites	131
Table 27:	Results of the linear regression analysis of the measurements with both	
	candidates SN 3 and SN 4 (full dataset)	
Table 28:	Two-sided 95 % confidence interval Cl ₉₅ for candidates SN 3 and SN 4	139
Table 29:	Parameters of the calibration and analysis function, measured	
	component PM ₁₀	142
Table 30:	Deviation between reference measurement and candidate on days	
	with a relative humidity > 70 %, measured component PM ₁₀	145

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 9 of 440

lity
146
lity
146
149
150
150
152
and
156
164
166
167
179
229
231
232



Page 10 of 440

Figures

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Figure 1:	Sample path within the Model 5030i SHARP measuring system	31
Figure 2:	Hardware components Model 5030i SHARP – Optics module	32
Figure 3:	Hardware components Model 5030i SHARP – Beta module	32
Figure 4:	Picture of hardware components Model 5030i SHARP – Beta module	33
Figure 5:	Diagram - Set-up of Model 5030i SHARP	34
Figure 6:	Model 5030i SHARP (SHARP optics modules (top) + SHARP beta	
	module (bottom))	36
Figure 7:	(European) PM ₂₁₀ sampling inlet for Model 5030i SHARP	37
Figure 8:	Heated sampling tube (DHS)	38
Figure 9:	Model 5030i SHARP measuring system	38
Figure 10:	Model 5030i SHARP measuring system – Optics module	39
Figure 11:	Model 5030i SHARP measuring system – Beta module	39
Figure 12:	Model 5030i SHARP measuring system (Systems 1 and 2 from right) at measuring station	40
Figure 13:	Vacuum pump (type: GAST Model 75R647, PN 110836-00)	
Figure 14:	Main screen of the user interface	
Figure 15:	Flow chart – Overview of menu-assisted firmware	
Figure 16:	Zero filter for supplying air free of suspended particles and its	
riguic ro.	connection adapter	45
Figure 17:	Set with foil holder and test foils	
Figure 18:	Leak test adapter	
Figure 19:	Course of PM ₁₀ concentrations (reference) at the test site "Cologne,	,
rigaro ro.	parking lot, winter"	56
Figure 20:	Course of PM ₁₀ concentrations (reference) at the test site "Bornheim,	00
9	motorway parking lot, summer"	56
Figure 21:	Course of PM ₁₀ concentrations (reference) at the test site "Bornheim,	
9	motorway parking lot, winter"	57
Figure 22:	Course of PM ₁₀ concentrations (reference) at the test site "Teddington,	
9 -	summer"	57
Figure 23:	Field test site Cologne, parking lot	
Figure 24:	Field test site Bornheim, motorway parking lot	
Figure 25:	Field test site Teddington	
Figure 26:	Comparison of reference and candidate SN 3, measured component	
J	PM ₁₀ , Teddington (summer), relative humidity threshold adjusted to 50 %	62
Figure 27:	Comparison of reference and candidate SN 4, measured component	
J	PM ₁₀ , Teddington (summer), relative humidity threshold adjusted to 50 %	62
Figure 28:	Grubbs test results for the PM ₁₀ reference method, Cologne (winter)	
Figure 29:	Grubbs test results for the PM ₁₀ reference method, Bornheim (summer)	70
Figure 30:	Grubbs test results for the PM ₁₀ reference method, Bornheim (winter)	70
Figure 31:	Grubbs test results for the PM ₁₀ reference method, Teddington (summer)	
Figure 32:	Display of the measured SHARP concentration	75
Figure 33:	Rear view of Model 5030i SHARP	
Figure 34:	Software version (here V02.00.00.232+) displayed by selection of the	
-	menu "Diagnostics / Program Versions"	97
Figure 35:	Zero point drift SN 3, measured component PM ₁₀	

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 11 of 440

Figure 36:	Zero point drift SN 4, measured component PM ₁₀	119
Figure 37:	Drift of the measured value SN 3, measured component PM ₁₀	
Figure 38:	Drift of the measured value SN 4, measured component PM ₁₀	
Figure 39:	Reference equivalence function SN 3, Cologne (winter)	
Figure 40:	Reference equivalence function SN 4, Cologne (winter)	
Figure 41:	Reference equivalence function SN 3, Bornheim (summer)	
Figure 42:	Reference equivalence function SN 4, Bornheim (summer)	
Figure 43:	Reference equivalence function SN 3, Bornheim (winter)	
Figure 44:	Reference equivalence function SN 4, Bornheim (winter)	
Figure 45:	Reference equivalence function SN 3, Teddington (summer)	
Figure 46:	Reference equivalence function SN 4, Teddington (summer)	
Figure 47:	Reference equivalence function SN 3, all test sites	
Figure 48:	Reference equivalence function SN 4, all test sites	
Figure 49:	Result of parallel measurements with candidates SN 3 / SN 4, Cologne (winter)	
Figure 50:	Result of parallel measurements with candidates SN 3 / SN 4, Bornheim (summer)	140
Figure 51:	Result of parallel measurements with candidates SN 3 / SN 4, Bornheim (winter)	140
Figure 52:	Result of parallel measurements with candidates SN 3 / SN 4, Teddington (summer)	
Figure 53:	Result of parallel measurements with candidates SN 3 / SN 4, all test sites	
Figure 54:	Flow of candidate SN 3 (field)	
Figure 55:	Flow of candidate SN 4 (field)	
Figure 56:	Results of the parallel measurements with the candidates SN 3 / SN 4,	
ga	measured component PM ₁₀ , all test sites	157
Figure 57:	Results of the parallel measurements with the candidates SN 3 / SN 4,	
900 0	measured component PM ₁₀ , test site Cologne (winter)	157
Figure 58:	Results of the parallel measurements with the candidates SN 3 / SN 4,	
9	measured component PM ₁₀ , test site Bornheim (summer)	158
Figure 59:	Results of the parallel measurements with the candidates SN 3 / SN 4,	
9	measured component PM ₁₀ , test site Bornheim (winter)	158
Figure 60:	Results of the parallel measurements with the candidates SN 3 / SN 4,	
3	measured component PM ₁₀ , test site Teddington (summer)	159
Figure 61:	Results of the parallel measurements with the candidates SN 3 / SN 4,	
9		159
Figure 62:	Results of the parallel measurements with the candidates SN 3 / SN 4,	
3	measured component PM ₁₀ , all test sites, values < 30 µg/m ³	160
Figure 63:	Reference vs. candidate, SN 3 & SN 4, measured component PM ₁₀ ,	
9	all test sites	168
Figure 64:	Reference vs. candidate, SN 3, measured component PM ₁₀ ,	
J	all test sites	169
Figure 65:	Reference vs. candidate, SN 4, measured component PM ₁₀ ,	
J	all test sites	169



Page 12 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Figure 66:	Reference vs. candidate, SN 3, measured component PM ₁₀ ,	470
F: 07:	Cologne (winter)	170
Figure 67:	Reference vs. candidate, SN 4, measured component PM ₁₀ ,	170
Ciaura 60.	Cologne (winter)	170
Figure 68:	Reference vs. candidate, SN 3, measured component PM ₁₀ ,	171
Figure 69:	Bornheim (summer)	171
i igule 09.	Bornheim (summer)	171
Figure 70:	Reference vs. candidate, SN 3, measured component PM ₁₀ ,	
ga. o . o.	Bornheim (winter)	172
Figure 71:	Reference vs. candidate, SN 4, measured component PM ₁₀ ,	
· ·	Bornheim (winter)	172
Figure 72:	Reference vs. candidate, SN 3, measured component PM ₁₀ ,	
	Teddington (summer)	173
Figure 73:	Reference vs. candidate, SN 4, measured component PM ₁₀ ,	
	Teddington (summer)	173
Figure 74:	Reference vs. candidate, SN 3, measured component PM ₁₀ ,	
	values ≥ 30 μg/m³	174
Figure 75:	Reference vs. candidate, SN 4, measured component PM ₁₀ ,	
	values ≥ 30 μg/m³	174
Figure 76:	Stability of standard weight	228
Figure 77:	Stability of the control filters	230
Figure 78:	Distribution for Emfab filters of (A) Pre spread weighed relative to	
	the check weight and (B) Post spread weighed relative to the check	• • •
	weight	235

Air Pollution Control

TÜVRheinland®
Precisely Right.

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 13 of 440

1. Summary and proposal for declaration of suitability

1.1 Summary

According to Directive 2008/50/EC of 21 May 2008 [7] on "Air quality and cleaner air for Europe" (replaces Council Directive 96/62/EC of 27 September 1996 on ambient air quality assessment and management including its daughter directives 1999/30/EC, 2000/69/EC, 2002/3/EC and the Council Decision 97/101/EC), the methods described in Standard EN 12341 "Air quality - Determination of the PM₁₀ fraction of suspended particulate matter. Reference method and field test procedure to demonstrate reference equivalence of measurement methods" [3] and Standard EN 14907 "Ambient air quality - Standard gravimetric measurement method for the determination of the PM_{2.5} mass fraction of suspended particulate matter" serve as reference methods for suspended particle measurement of the respective mass fraction. However, EC member states are free to use any other method in the case of particulate matter for which the Member State concerned can demonstrate displays a consistent relationship to the reference method. In that event the results achieved by that method must be corrected to produce results equivalent to those that would have been achieved by using the reference method. (2008/50/EC, Annex VI, B).

The Guidance "Demonstration of Equivalence of Ambient Air Monitoring Methods" [4], which was developed by an ad hoc EC task group (Source:

http://ec.europa.eu/environment/air/quality/legislation/pdf/equivalence.pdf, Version January 2010) describes an equivalence check method for non-standard measurement methods.

The specifications of the Guide for the equivalence testing were included in the last revision of the VDI Standards VDI 4202, Part 1 [1] as well as VDI 4203, Part 3 [2].

The following limits were applied during suitability testing:

 PM_{10}

Daily limit value (24 h) 50 µg/m³ Annual limit value (1 a) 40 µg/m³

as well as for the calculations according to the Guide [4]

 PM_{10}

Limit value 50 µg/m³

Standard VDI 4202, Part 1 of 2002 describes all "Performance criteria for performance tests of automated ambient air measuring systems". General parameters for the related tests are given in Standard VDI 4203, Part 1 "Testing of automated measuring systems - General con-



Page 14 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

cepts" of October 2001 and further specified in VDI 4203, Part 3 "Testing of automated measuring systems - Test procedures for point-related ambient air measuring systems for gaseous and particulate air pollutants" of August 2004.

Standard VDI 4202, Part 1 and VDI 4203, Part 3 were republished after an extensive revision with latest update September 2010. Unfortunately, after this revision uncertainties and contradictions remain regarding the concrete minimum requirements on the one hand, and the general relevance of the test points on the other hand when testing particulate ambient air measuring devices. The following test points require clarification:

- 6.1 5.3.2 Repeatability standard deviation at zero point no minimum requirement defined
- 6.1 5.3.3 Repeatability standard deviation at reference point not relevant for particulate devices
- 6.1 5.3.4 Linearity (lack of fit) not relevant for particulate devices
- 6.1 5.3.7 Sensitivity coefficient of surrounding temperature no minimum requirement defined
- 6.1 5.3.8 Sensitivity coefficient of supply voltage no minimum requirement defined
- 6.1 5.3.11 Standard deviation from paired measurement no minimum requirement defined
- 6.1 5.3.12 Long-term drift no minimum requirement defined
- 6.1 5.3.13 Short-term drift not relevant for particulate devices
- 6.1 5.3.18 Overall uncertainty not relevant for particulate devices, covered by 5.4.10

For this reason an official request to the competent German body was made, to define a coordinated procedure for dealing with inconsistencies in the Standard.

The following procedure was suggested:

Test points 5.3.2, 5.3.7, 5.3.8, 5.3.11 and 5.3.12 are evaluated as before basing on the minimum requirements stated in VDI 4202 Part 1 of 2002 (i.e. using the reference values B_0 , B_1 and B_2).

The performance of the test points 5.3.3, 5.3.4, 5.3.13 and 5.3.18 is omitted, as they are not relevant for particulate measuring devices.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

Page 15 of 440

The competent German body agreed with the proposed procedure by decisions of 27 June 2011 and 07 October 2011.

The following reference values for component PM_{10} were agreed upon in conformity to the applied standards PM_{10}

 B_0 2 $\mu g/m^3$ B_1 40 $\mu g/m^3$ B_2 200 $\mu g/m^3$

Thermo Fisher Scientific has commissioned TÜV Rheinland Energie und Umwelt GmbH to perform of a suitability test of Model 5030*i* SHARP measuring system for component suspended particulate matter PM₁₀.

- Standard VDI 4202 Part 1, "Performance criteria for performance tests of automated ambient air measuring systems – Point-related measurement methods for gaseous and particulate air pollutants", September 2010 or June 2002 [1]
- Standard VDI 4203 Part 3, "Testing of automated measuring systems Test procedures for point-related ambient air measuring systems for gaseous and particulate air pollutants", September 2010 or August 2004 [2]
- Standard EN 12341, "Air quality Determination of the PM10 fraction of suspended particulate matter. Reference method and field test procedure to demonstrate reference equivalence of measurement methods", German version EN 12341: 1998 [3]
- Guide "Demonstration of Equivalence of Ambient Air Monitoring Methods", English version of January 2010 [4]

The measuring system Model 5030i SHARP is a synchronised hybrid real-time measuring instrument for particulate matter which determines the particulate concentration using a combined nephelometric/radiometric method of measurement. With the aid of a pump, ambient air is sucked at 16.67 l/min via a PM₁₀ pre-separator. The dust-laden sampling air passes through a light-scattering photometer (nephelometer) and is then collected on a filter tape. The determination of particulate mass collected on the filter tape is performed continuously during sampling by means of the radiometric measuring principle of beta absorption. The actual reading of the measuring system Model 5030i SHARP is determined from the values measured by the nephelometer and radiometer by means of a calculation algorithm.

The tests took place in the laboratory and for several months in the field.



Page 16 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

The following test sites were chosen for the field test according to Table 1.

Table 1: Description of the test sites

	Cologne, parking lot, winter	Bornheim, motorway parking lot, summer	Bornheim, motorway parking lot, winter	Teddington (UK) summer
Period	03/2011 – 05/2011	07/2011 – 11/2011	01/2012 – 03/2012	07/2012 – 09/2012
No. of paired values: Candidates	53	96	49	64
Characteristics	Urban background	Rural structure + mo- torway	Rural structure + mo- torway	Urban background
Rank of pollution	Average to high	Low to average	Average	Average

To qualify the necessary change of the threshold for the relative humidity to control the sample heating from originally 50 % to 58 % (necessary due to the results of the campaign in Teddington UK), an additional campaign at one of the German sites with two candidate systems with settings of each 50 % and 58 % was performed (decision of the 32nd Expert Meeting "test reports" of May 14/15 2013). **Table 2** gives an overview on the additional campaign. The results of this campaign are shown in chapter 4.3 Field test from page 54.

Table 2: Description of the test site (additional campaign 2013)

	Bornheim, motorway parking lot, summer
Period	06/2013 – 07/2013
No. of paired values: Candidates	45
Characteristics	Rural structure + motorway
Rank of pollution	Low to average

The complete test was performed within the scope of the test programme "Combined MCERTS and TÜV PM Equivalence Testing Programme". In the context of European harmonisation, the test programme was developed and carried out by British and German test institutes (Bureau Veritas UK & Ireland, National Physical Laboratory NPL and TÜV Rheinland). It comprises the testing of the latest series of suspended particle measuring systems by different manufacturers in the laboratory and at field test sites in the UK and in Germany.

The minimum requirements were fulfilled during suitability testing.

TÜV Rheinland Energie und Umwelt GmbH therefore suggests publication as a suitabilitytested measuring system for continuous monitoring of suspended particulate matter PM₁₀ in ambient air.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 17 of 440

1.2 Certification proposal

Due to the positive results achieved, the following recommendation is put forward for the notification of the AMS as a suitability-tested measuring system:

AMS designation:

Model 5030 SHARP with PM₁₀ pre-separator for suspended particulate matter PM₁₀

Manufacturer:

Thermo Fisher Scientific, Franklin, USA

Field of application:

Continuous monitoring of suspended particulate matter of the PM₁₀ fraction in ambient air (stationary operation)

Measuring ranges during suitability test:

Component	Certification range	Unit	
PM ₁₀	0 – 1000	µg/m³	

Software version:

V02.00.00.232+

Restrictions:

None

Notes:

- 1. The requirements on variance coefficient R² according to Standard EN 12341 were not fulfilled by both candidates at the test sites Cologne (winter), Bornheim (summer) and Teddington (summer).
- 2. The reference equivalence function did not lie within the limits of the acceptance envelope described in EN 12341 at the test site Teddington (summer).
- 3. The requirements according to guide "Demonstration of Equivalence of Ambient Air Monitoring Methods" are fulfilled for the measured component PM_{10} .
- 4. The measuring system shall be operated within a lockable measuring cabinet.
- 5. The measuring system is to be calibrated on site at regular intervals by application of the gravimetric PM_{10} reference method according to EN 12341.
- 6. It is recommended that the measuring system is operated with a threshold for the relative humidity of 58 %, in particular at sites with significantly high ratio of volatiles in the suspended particulate matter.
- 7. The test report on the suitability test is available online under www.qal1.de.

Test report:

TÜV Rheinland Energie und Umwelt GmbH, Cologne, Germany

Report No.: 936/21209885/G of 20 September 2013



Page 18 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

1.3 Summary of test results

Minimum requirement		Specification	Test result	Ful- filled	Page
4	4 Requirements on the instrument design				
4.1	General requireme	ents			
		Shall be available.	The measuring system is fitted with a measured value display.	yes	74
nance measuring systems should be		possible without larger effort, if	Maintenance works can be carried out with commonly available tools taking reasonable time and effort.	yes	76
4.1.3 Functional check		If the operation or the functional check of the measuring system require particular instruments, they shall be considered as part of the measuring system and be applied in the corresponding sub-tests and included in the assessment.	manual are available, can be activated and function well. The current system status is continuously monitored and displayed by a series of status messages.		79
4.1.4	Set-up times and warm-up times	Shall be specified in the instruction manual.	The set-up and warm-up times were determined.	yes	81
4.1.5	Instrument design	Shall be specified in the instruction manual.	The instrument design specifications listed in the operating manual are complete and correct.	yes	82
4.1.6	Unintended adjustment	It shall be possible to secure the adjustment of the measur- ing system against illicit or un- intended adjustment during operation.	The AMS is protected against unauthorised and unintended adjustment. In addition, the AMS shall be locked up in a measuring cabinet.	yes	83
4.1.7	Data output	The output signals shall be provided digitally and/or as analogue signals	Measured signals are output as analogue signals (in V or mA) and digitally (via Ethernet, RS 232, RS 485).	yes	84
5. Performance requirements					
5.1 General		The manufacturer's specifications in the instruction manual shall be by no means better than the results of the performance test.	No differences between the instru- ment design and the descriptions giv- en in the manual were detected.	yes	86

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 19 of 440

Minim	um requirement	Specification	Test result	Ful- filled	Page
5.2	2 General requirements on measuring systems				
5.2.1	Certification ranges	Have to comply with the requirements of Table 1 of the Standard VDI 4202 Part 1.	It is possible to assess the measuring system in the range of the relevant limit values.	yes	87
5.2.2	Measuring range	The upper limit of measurement of the measuring systems shall be greater or equal to the upper limit of the certification range.	A measuring range of $0-10000\mu g/m^3$ is set by default. It is possible to adjust other measuring ranges. The upper limit of the measuring range of the measuring system is greater than the respective upper limit of the certification range.	yes	88
5.2.3	Negative output signals	Negative output signals or measured values may not be suppressed (life zero).	Negative measured signals are displayed directly on the AMS and are transmitted correctly via the respective signal outputs of the measuring system.	yes	89
5.2.4	Failure in the mains voltage	Uncontrolled emission of operation and calibration gas shall be avoided. The instrument parameters shall be secured by buffering against loss caused by failure in the mains voltage. When mains voltage returns, the instrument shall automatically reach the operation mode and start the measurement according to the operating instructions.	All instrument parameters are protected against loss through buffering. After the power supply has returned, the measuring device goes back to failure-free operational condition and resumes measurement. However, at least the first 12 h worth of data after voltage returns shall be discarded, since the system needs an equilibration phase after restart until the BETA detector adjusts to ambient conditions.	yes	90
5.2.5	Operating states	The measuring system shall allow the control of important operating states by telemetrically transmitted status signals.	The measuring systems can be extensively monitored and operated from an external PC via modem or router.	yes	91
5.2.6	Switch-over	Switch-over between measurement and functional check and/or calibration shall be possible telemetrically by computer control or manual intervention.	In principle, all necessary operations for performing a functional check can be monitored directly on the system or via telemetric remote control.	yes	92
5.2.7	Maintenance in- terval	If possible 3 months, minimum 2 weeks.	The maintenance interval is defined by the necessary maintenance procedures and has been set to 1 month.	yes	93



Page 20 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Minim	um requirement	Specification	Test result	Ful- filled	Page
5.2.8	Availability	Minimum 95 %.	The availability was 97.9 % for SN 3 and 100 % for SN 4 without test-related outages, or 90.3 % for SN 3 and 92.4 % for SN 4 including test-related outages.	yes	94
5.2.9	Instrument soft- ware	The version of the instrument software to be tested shall be displayed during switch-on of the measuring system. The test institute shall be informed on changes in the instrument software, which have influence on the performance of the measuring system.	The version of the instrument software is shown on the display. Changes to the instrument software are communicated to the test institute.	yes	96
5.3	Requirements on	measuring systems for gaseous a	ir pollutants		
5.3.1	General	Minimum requirement according VDI 4202 Part 1.	The test is based on the minimum requirements of Standard VDI 4202, Part 1 (September 2010). Test points 5.3.2, 5.3.7, 5.3.8, 5.3.11 and 5.3.12 are evaluated as before basing on the minimum requirements stated in VDI 4202 Part 1 of 2002 (i.e. using the reference values B_0 , B_1 and B_2). The performance of the test points 5.3.3, 5.3.4, 5.3.13 and 5.3.18 is omitted, as they are not relevant for particulate measuring devices.	yes	98
5.3.2	Repeatability standard devia- tion at zero point	The repeatability standard deviation at zero point shall not exceed the requirements of Table 2 in the certification range according to Table 1 of Standard VDI 4202 Part 1 (September 2010). For PM: Max. B ₀ .	The investigations result in detection limits of 0.01 $\mu g/m^3$ for system 1 (SN 3) and 0.16 $\mu g/m^3$ for system 2 (SN 4).	yes	100
5.3.3	Repeatability standard devia- tion at reference point	The repeatability standard deviation at reference point shall not exceed the requirements of Table 2 in the certification range according to Table 1 of Standard VDI 4202 Part 1 (September 2010).		•	102
5.3.4	Linearity (lack of fit)	The analytical function describing the relationship between the output signal and the value of the air quality characteristic shall be linear.	For PM ₁₀ particulate measuring systems, this test shall be performed according to minimum requirement 5.4.2 "Equivalency of the sampling system".	-	103

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 21 of 440

Minim	um requirement	Specification	Test result	Ful- filled	Page
5.3.5	Sensitivity coefficient of sample gas pressure	The sensitivity coefficient of the sample gas pressure at reference point shall not exceed the specifications of Table 2 of Standard VDI 4202 Part 1 (September 2010).	Not applicable.	-	104
5.3.6	Sensitivity coefficient of sample gas temperature	The sensitivity coefficient of the sample gas temperature at reference point shall not exceed the specifications of Table 2 of Standard VDI 4202 Part 1 (September 2010).	Not applicable.	1	105
5.3.7	Sensitivity coefficient of surrounding temperature	The sensitivity coefficient of the surrounding temperature at zero and reference point shall not exceed the specifications of Table 2 of Standard VDI 4202 Part 1 (September 2010). For PM: Zero point value for Δ Tu of 15 K between +5 °C and +20 °C or 20 K between +20 °C and +40 °C shall not exceed B ₀ . The measurement value in the range of B ₁ shall not exceed ± 5 % for Δ Tu of 15 K between +5 °C and +20 °C or for 20 K between +20 °C and +40 °C.	The maximum dependence on surrounding temperature in the range 5 °C to 40 °C was -1.1 µg/m³ at zero. No deviation > 0.9 % to the default value at 20 °C could be observed at reference point.	yes	106
5.3.8	Sensitivity coefficient of supply voltage	The sensitivity coefficient of the electric voltage at reference point shall not exceed the specifications made in Table 2 of Standard VDI 4202 Part 1 (September 2010). For PM: Change in measured value at B ₁ maximum B ₀ within the voltage interval (230 +15/-20) V.	No deviations > 0.8 % in relation to the default value at 230 V caused by voltage changes could be detected for PM_{10} .	yes	110
5.3.9	Cross-sensitivity	The change in the measured value caused by interfering components in the sample gas shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010) at zero and reference point.	Not applicable.	-	112



Page 22 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Minimum requirement	Specification	Test result	Ful- filled	Page
5.3.10 Averaging effect	For gaseous components the measuring system shall allow the formation of hourly averages. The averaging effect shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010).	Not applicable.	•	113
5.3.11 Standard deviation from paired measurement	The standard deviation from parallel determinations shall be done with two identical measuring devices during field test. It shall not exceed the specifications stated in Table 2 of Standard VDI 4202 Part 1 (September 2010). For PM: RD ≥ 10 related to B ₁ .	The reproducibility for PM ₁₀ was 20 for the complete dataset of the field test.	yes	114
5.3.12 Long-term drift	The long-term drift at zero point and reference point shall not exceed the requirements of Table 2 in the field test of Standard VDI 4202 Part 1 (September 2010) in the field test. For PM: Zero point: within 24 h and within the maintenance interval a maximum of B ₀ . As reference point: within 24 h and within the maintenance interval a maximum 5 % of B ₁ .	The maximum deviation at zero point was 1.8 μ g/m³ in relation to the previous value and 1.9 μ g/m³ in relation to the start value, and is therefore within the permissible limits of B ₀ = 2 μ g/m³. The values obtained during the sensitivity drift tests amount to a maximum of -2.1 % in relation to the previous value for PM ₁₀ .	yes	116
5.3.13 Short-term drift	The short-term drift at zero point and reference point shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010) within 12 h (for benzene 24 h) in the laboratory test and within 24 h in the field test.	Not applicable.	-	122

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 23 of 440

Minimum requirement	Specification	Test result	Ful- filled	Page
5.3.14 Response time	The response time (rise) of the measuring system shall not exceed 180 s. The response time (fall) of the	Not applicable.	-	123
	measuring system shall not exceed 180 s.			
	The difference between the response time (rise) and response time (fall) of the measuring system shall not exceed 10% of response time (rise) or 10 s, whatever value is larger.			
5.3.15 Difference be- tween sample and calibration port	The difference between the measured values obtained by feeding gas at the sample and calibration port shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010).	Not applicable.	-	124
5.3.16 Converter efficiency	In the case of measuring systems with a converter, the efficiency of the converter shall be at least 98 %.	Not applicable.	-	125
5.3.17 Increase of NO2 concentration due to residence in the measuring system	In case of NO_x measuring systems, the increase of NO_2 concentration due to residence in the measuring system shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010).	Not applicable.	•	126
5.3.18 Overall uncertainty	The expanded uncertainty of the measuring system shall be determined. The value determined shall not exceed the corresponding data quality objectives in the applicable EU Directives on air quality listed in Annex A, Table A1 of Standard VDI 4202 Part 1 (September 2010).	By resolution of the competent German body (see module 5.3.1), this test is not relevant for particulate measuring systems. Reference is made to module 5.4.10.	•	127
5.4 Requirements on	measuring systems for particulate	air pollutants		
5.4.1 General	Test according to the minimum requirement stated in Table 5 of Standard VDI 4202, Part 1. Furthermore, the particle mass	Testing was carried out in compliance with the minimum requirements stated in Table 5 of Standard VDI 4202, Part 1 (September 2010).	yes	128
	concentration shall be related to a defined volume.	The calculated mass is related to a defined and actively regulated sampling volume, thus determining the particulate mass concentration.		



Page 24 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Minim	um requirement	Specification	Test result	Ful- filled	Page
5.4.2	Equivalency of the sampling system	The equivalency to the reference method according to EN 12341 [T2] shall be demonstrated.	The reference equivalence functions lie within the limits of the respective acceptance envelope for all test sites with exception of test site "Teddington (summer)". Moreover, the variance coefficient R2 of the calculated reference equivalence function in the concentration range concerned is ≥ 0.95 for the datasets "Full dataset", "Cologne (winter)" (only SN 3), "Bornheim (summer)" (only SN 3), and "Bornheim (winter)". For datasets "Cologne (winter)" (only SN 4), "Bornheim (summer)" (only SN 4) and "Teddington (summer), the variance coefficient R2 lies below 0.95. Nevertheless, the instruments passed the equivalence test according to 6.1 5.4.10 Calculation of the expanded uncertainty of the instruments at all test sites.	no	129
5.4.3	Reproducibility of the sampling systems	This shall be demonstrated in the field test for two identical systems according to EN 12341 [T2].	The two-sided confidence interval Cl95 has a maximum value of 2.51 $\mu g/m^3$, thus lying within the permissible limit of 5 $\mu g/m^3$.	yes	137
5.4.4	Calibration	The systems under test shall be calibrated in the field test by comparison measurements with the reference method according to EN 12341 and EN 14907. Here, the relationship between the output signal and the gravimetrically determined reference concentration shall the determined as a steady function.	A statistical correlation between the reference measuring method and the device reading could be demonstrated.	yes	142
5.4.5	Cross-sensitivity	Shall not exceed 10 % of the limit value	No deviation of the measured signal from the nominal value > $0.4~\mu g/m^3$ caused by interference of moisture in the sample could be observed for PM ₁₀ . No negative influence on the measured values at varying relative humidity was detected during the field test. Comparability of the candidates with the reference method according to Guide "Demonstration of Equivalence of Ambient Air Monitoring Methods" [4] is also given for days with a relative humidity > $70~\%$.	yes	144
5.4.6	Averaging effect	The measuring system shall allow for formation of 24 h averages. The time of the sum of all filter changes within 24 h may not exceed 1 % of this averaging time.	It is possible to form daily averages based on the three measurement cycles using the described instrument configuration and a cycle duration of 8 hours.	yes	147

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 25 of 440

Minim	um requirement	Specification	Test result	Ful- filled	Page
5.4.7	Constancy of sample volumetric flow	± 3 % of the rated value. All instantaneous values of the sample volumetric flow shall be within a range of ± 5 % of the rated value during sampling.	All determined daily averages present deviations less than ±3 % from the nominal value; all instantaneous values deviate less than ±5 %.	yes	148
5.4.8	Tightness of the measuring system	Leakage shall not exceed 1 % of the sample volume sucked.	The criteria specified by the manufacturer upon which the tightness check is considered passed – maximum difference of ±0.42 l/min (= ±2.5 % of the flow rate) between the flow rates measured by the instrument and by the external flow meter under application of the adapter – proved to be appropriate parameters for monitoring the instrument's tightness. The laboratory tests resulted in a maximum leakage < 1 % of the nominal flow rate of 16.67 l/min for both candidates. The tightness check must only be performed with the tightness check adapter and the described procedure. It can otherwise damage the instrument.	yes	151
5.4.9	Determination of uncertainty be- tween systems under test ubs	Shall be determined according to chapter 9.5.2.1 of the guidance document "Demonstration of Equivalence of Ambient Air Monitoring Methods" in the field test for at least two identical systems.	The uncertainty between the candidates u_{bs} is with a maximum of 1.22 $\mu g/m^3$ for PM_{10} below the required value of 2.5 $\mu g/m^3$.	yes	154
5.4.10	Calculation of the expanded uncertainty of the instruments	Determination of the expanded uncertainty of the candidates according to chapter 9.5.2.2ff of the guidance document "Demonstration of Equivalence of Ambient Air Monitoring Methods".	The determined uncertainties WCM without application of correction factors lay for all observed datasets below the defined expanded relative uncertainty Wdqo of 25 % for fine dust.	yes	161

$igatesize igaplus \mathsf{T}\ddot{\mathsf{U}}\mathsf{V}\mathsf{R}$ heinland $^{ ext{ iny B}}$ Precisely Right.

TÜV Rheinland Energie und Umwelt GmbH Air Pollution Control

Page 26 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Minim	um requirement	Specification	Test result	Ful- filled	Page
5.4.11	Application of correction factors and terms	certainty of the systems under test exceeds the data quality objectives according to the European Directive on ambient air quality [7] for the test of PM _{2.5} measuring systems, the appli-	air quality measurements during the test even without application of correction factors. A correction of the slope and intercept leads nevertheless to a significant improvement of the expanded measuring uncertainty of the full data comparison.	yes	175
5.5	Requirements on multiple- component measuring sys- tems	Shall comply with the require- ments set for each component also in the case of simultane- ous operation of all measuring channels.	• • •	1	180

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 27 of 440

2. Task definition

2.1 Nature of test

Thermo Fisher Scientific has commissioned TÜV Rheinland Energie und Umwelt GmbH to carry out suitability testing of the measuring system Model 5030i SHARP with PM₁₀ preseparator. The test was performed as a complete suitability test.


2.2 Objective

The AMS shall determine the content of PM₁₀ fine dust in ambient air within the concentration range of 0 - 1000 μ g/m³.

The suitability test was carried out in accordance with the current standards for suitability tests while taking into account the latest developments.

The test was performed in consideration of the following standards:

- Standard VDI 4202 Part 1, "Performance criteria for performance tests of automated ambient air measuring systems – Point-related measurement methods for gaseous and particulate air pollutants", September 2010 or June 2002 [1]
- Standard VDI 4203 Part 3, "Testing of automated measuring systems Test procedures for point-related ambient air measuring systems for gaseous and particulate air pollutants", September 2010 or August 2004 [2]
- European Standard EN 12341, "Air quality Determination of the PM10 fraction of suspended particulate matter. Reference method and field test procedure to demonstrate reference equivalence of measurement methods", German version EN 12341: 1998 [3]
- Guide "Demonstration of Equivalence of Ambient Air Monitoring Methods", English version of January 2010 [4]





Page 28 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

3. Description of the AMS tested

3.1 Measuring principle

The ambient air measuring system Model 5030i SHARP operates combining the principles of particle light scattering (nephelometry) and beta attenuation. The designation SHARP stands for "Synchronised Hybrid Ambient Real-time Particulate". The clever combination of a highly sensitive but potentially inaccurate measuring technique (NEPH) and a non-sensitive but highly accurate real-time measurement (BETA) aims at providing a precise and, at the same time, sensitive real-time measurement of fine dust.

Nephelometry is based on the measurement of light radiation intensity, which is scattered by a totality of particles passing through a measured volume defined by the intersection of the illumination beam and the field of view of the detection optics. In contrast to particle counters, the measured volume shall be large in terms of inverse function of the concentration of particle numbers. The resulting signal is linearly proportional to the particle volume concentration for an aerosol with constant optical characteristics (particle size, form and refractive index), provided that the conditions of independent and single scattering that shall be maintained for the concentration range in focus are met.

A nephelometer's response R is defined by the following formula as the relation of the detection signal for light scattering to the mass concentration of the particles:

$$R = \frac{I_0 N}{C_m} \iiint f(d_p) \frac{\lambda^2}{8\pi^2 r^2} (i_1 + i_2) f(\lambda) F(\theta) dd_p d\lambda d\theta$$

where:

 I_0 = irradiation intensity I_0 = particle number concentration I_0 = mass concentration I_0 = particle size distribution function

 λ = illumination wavelength r = distance of scattered particles to detector

i₁,i₂ = Lorenz-Mie scattering functions, alternately dependent on the relation of particle size to wavelength and on the refractive index

 $f(\lambda)$ = combined dependence of wavelengths on emitter and detector

 $F(\theta)$ = angular scattering geometry of the optical system

The high sensitivity of the nephelometer is thus accompanied by an overall dependence of the measured signal on the size of particles. This means that nephelometric measuring systems are, in contrast to gravimetric reference measurements, prone to have difficulties caused by shifts in response.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 29 of 440

The nephelometer is therefore calibrated on site with a HEPA filter (zero point) and test aerosols for reference (with $PM_{2.5}$ Sharp-Cut Cyclone connected upstream). Zero point checks can be performed anytime with help of the HEPA filter at the instrument inlet. Furthermore, the sensitivity of the nephelometer is continuously being re-calibrated by the radiometric measurement during operation.

The principle of radiometric mass determination is based on the physics law of beta attenuation as effect of passing through a thin layer of matter.

This relation is described as follows:

$$C_{\beta} = \frac{A}{\mu_{m} Q t} \left(\ln \left[\frac{f_{o}}{f_{f}} \right] \right)$$

where:

 C_{β} = particle mass concentration A = particle collection area (filter spot)

 μ_{m} = mass attenuation coefficient (dependent on the energy of the beta source)

Q = sampling flow rate t = sampling time

 f_0 = initial beta count rate (tare) f_f = final beta count rate

The radiometric mass determination is calibrated on site with help of null and span foils. In using the "mass transfer standard" foil set (= span foil set), the radiometric measurement can be checked anytime for quality assurance purposes and, if required, calibrated.

The output mass concentration C_m of Model 5030i SHARP is calculated as follows:

$$C_m = C_{N1} \frac{C_{\beta}}{C_{N2}}$$

where:

C_m = mass concentration SHARP

C_{N1} = nephelometer signal averaged over 1 minute

 C_{β} = radiometric mass concentration, dynamically filtered over a variable time span

C_{N2} = nephelometric concentration, dynamically filtered over a variable time span



Page 30 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Both C_{β} and C_{N2} values are averaged in the same way over a variable time span. The averaging period depends on the variation coefficient of the mass concentration determined by the nephelometer itself. This coefficient is calculated using a mathematical algorithm, in which both the current nephelometer concentration and the concentration measured by the nephelometer one second before are integrated. The coefficient is calculated continuously and is averaged by a digital filter (one-minute time constant). The resulting factor is then multiplied by the maximum time constant of 720 min. In case of small and stable concentrations, the averaging period (= time constant) of the radiometric measurement is automatically extended to up to 12 h in order to increase the accuracy of mass concentration determination. For highly variable and large concentrations the process is exactly the opposite, i.e. the averaging time is reduced to up to 20 min. In practical use, however, the time constant is seldom less than 4 hours.

The C_{β} / C_{N2} ratio of the equation above is the so-called (auto) calibration factor, which applies a real-time calibration to the one-minute average of the nephelometer signal C_{N1} . In order to optimise this continuous mass calibration of the nephelometer signal, software has been implemented in the Model 5030i SHARP measuring system, which ensures that the measured mass concentration remains unaffected by changes in the total particle population.

Air Pollution Control

TÜVRheinland®
Precisely Right.

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 31 of 440

3.2 Functionality of the measuring system

The Model 5030i SHARP measuring system combines the principles of aerosol light scattering (nephelometry) and beta attenuation (analogous to Model 5014i BETA, see test report 936/21209985/I).

The particle sample passes through the PM_{10} sampling inlet with a flow rate of 1 m³/h (=16.67 l/min) and reaches via the heated sampling tube (DHS = dynamic heating system) the actual Model 5030i SHARP measuring instrument.

The use of the dynamic heating system DHS ensures that the relative humidity of the air passing through the filter tape of the radiometric stage stays well below the point at which the collected particles accrete and condensation effects that may distort the measured value appear. It also allows for maintaining the relative humidity below a specified threshold in the nephelometer (set value during suitability testing: 50 % and 58 % rel. humidity). This system minimises the internal temperature rise ensuring negligible loss of semi-volatiles from the collected sample when the ambient relative humidity is below the threshold to which the heater is controlling. As the ambient relative humidity increases above the threshold, the applied heating is optimised to maintain the relative humidity threshold above the beta attenuation filter tape of the radiometric stage. The regulation of the DHS is carried out using the control variable "relative sample humidity" rH (here: nominal value < 50 % / 58 %, see Section 4.3

Field test) and the filter temperature sensor (here: maximum value of 30 °C). The heating conditions can be adjusted subject to the requirements of the measurement network.

Figure 1 and Figure 5 show the path a particle sample travels within the Model 5030i SHARP measuring system after passing the sampling inlet and sampling tube, including the DHS.

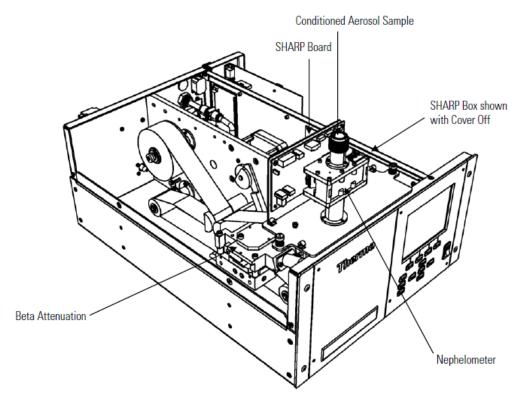


Figure 1: Sample path within the Model 5030i SHARP measuring system



Page 32 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

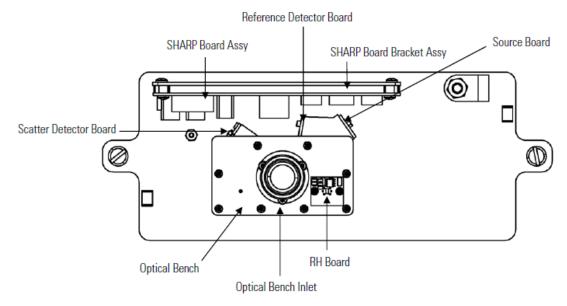


Figure 2: Hardware components Model 5030i SHARP – Optics module

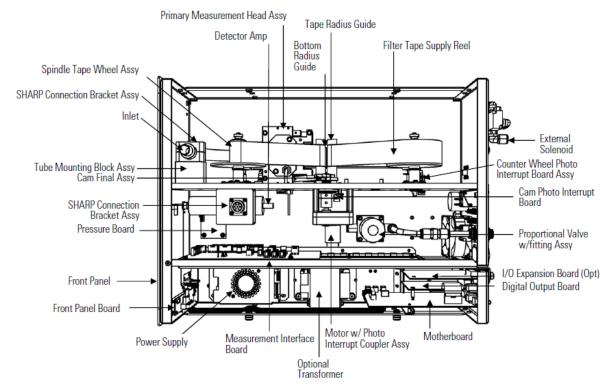


Figure 3: Hardware components Model 5030i SHARP – Beta module

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 33 of 440

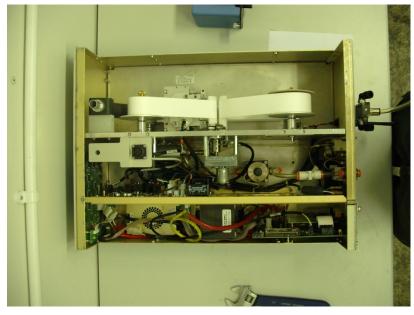


Figure 4: Picture of hardware components Model 5030i SHARP – Beta module



Page 34 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

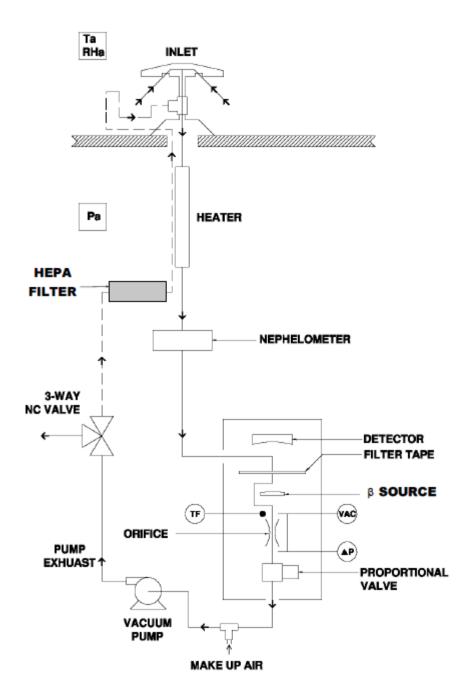


Figure 5: Diagram – Set-up of Model 5030i SHARP

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 35 of 440

The nephelometer assembly is under the heated tube. The fine dust follows a laminar path by the isolated nephelometer and reaches then the radial tube above the radiometric assembly. The nephelometer consists of a photometer based on light scattering with a pulsed near-IR LED operating at a central wavelength of 880 nm. The level of scattering is determined in a measured volume of 1 cm³ in forward direction at an angular range of 60-80°. The design of the measuring inlet ensures a low internal background produced by optical reflection. The analogue raw signal is detected in cycles of one second, digitised for further processing and the minute average is calculated. The nephelometer module offers six automatically chosen measuring ranges which ensure that measured values as precise as possible are obtained. During the periodic zero adjustment procedures (performed as part of every filter change), the zero adjustment magnetic valve on the rear side is activated and HEPA filtered air (= free of suspended particles) is admitted into the nephelometer. Every range is then zeroed again. The results of the zero adjustment can be read on the display and are as C-link command available.

At the location at which the nephelometer is attached to the enclosure of measuring system, an isolated radial tube hits the sampling tube. The nephelometer module can thereby be easily detached from the actual measuring system. This makes it possible to reconfigure the Model 5030i SHARP measuring system (combination of nephelometric and radiometric measurements) into the Model 5014i BETA measuring system (see test report 936/21209885/I).

After passing the nephelometer, the particles of the particle sample are deposited on the glass fibre filter tape for radiometric measurement. The particles are collected on the filter tape up to a specified threshold (during test: fast-forward of filter tape after 8 h or when mass is >1500 μ g on the filter tape or when the deviation of the current flow rate from the nominal flow rate is more than 2.5 %).

The filter tape can be found between the proportional detector and the 14C beta source. The beta ray is transmitted from the bottom upwards passing through the filter tape and the accumulated particle layer. The intensity of the beta ray is attenuated by the increasing mass load, thus reducing its intensity. The reduced beta intensity is then measured by the proportional detector. The mass on the filter tape is calculated from the continuous integrated count rate. The determined count rate is continuously corrected with regard to changes in the air density.

Furthermore, the radiometric mass determination is optimised by the simultaneous determination and consideration of the natural α activity of aerosols. This additional α count rate serves the purpose of measuring radon, which causes undesirable interference in the radiometric mass determination of particles and must therefore be compensated.

In order to keep the sampling flow rate at a constant nominal value, the continuous measurement of the flow rate as well as its adjustment is carried out by means of a proportional valve.

The PM concentrations are shown on the display on the front side of the measuring system as SHARP (= hybrid values), PM (= radiometrically measured values → analogous to Model 5014i BETA) and NEPH (= values measured with scattered light). The measured values can be obtained through different output paths (analogue, digital, Ethernet).



Page 36 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

3.3 AMS scope and set-up

The measuring system comprises the PM_{10} sampling inlet, the heated sampling tube (dynamic heating system DHS), the (optional) extension tube, the ambient air sensor (including radiation protection shield), the vacuum pump, the nephelometer module (= SHARP optics module), the central unit (= SHARP beta module, identical in design to the 5014i measuring system, see test report 936/21209885/I) including glass fibre filter tape, the respective connection lines, cables and adapters, roof bushing with flange, and a manual in German.



Figure 6: Model 5030i SHARP (SHARP optics modules (top) + SHARP beta module (bottom))

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 37 of 440

As sampling inlet, a PM_{10} inlet (manufacturer: Digitel, type: DPM10/01/00/16) which serves as pre-separator for suspended particles sucked in from outside air, is used. The instruments are operated at a constant volume flow rate adjusted to 16.67 l/min = 1.0 m³/h. It is also possible to use $PM_{2.5}$ and PM_1 sampling inlets instead.

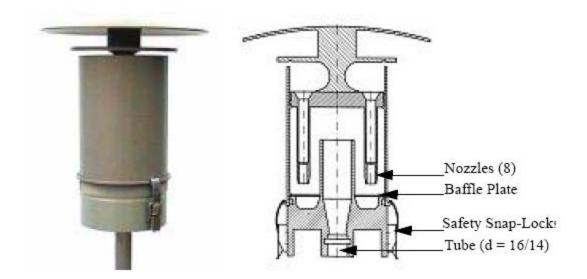


Figure 7: (European) PM₂₁₀ sampling inlet for Model 5030i SHARP

The heated sampling tube (approx. 0.9 m long) and the (optional) extension tube (approx. 1.8 m long) connect the sampling inlet to the actual measuring system. The adjustment of the sample heater (dynamic heating system DHS) is carried out as described in Section 3.2 Functionality of the measuring system.

Page 38 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G



Figure 8: Heated sampling tube (DHS)



Figure 9: Model 5030i SHARP measuring system

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 39 of 440



Figure 10: Model 5030i SHARP measuring system – Optics module



Figure 11: Model 5030i SHARP measuring system – Beta module



Page 40 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G



Figure 12: Model 5030i SHARP measuring system (Systems 1 and 2 from right) at measuring station

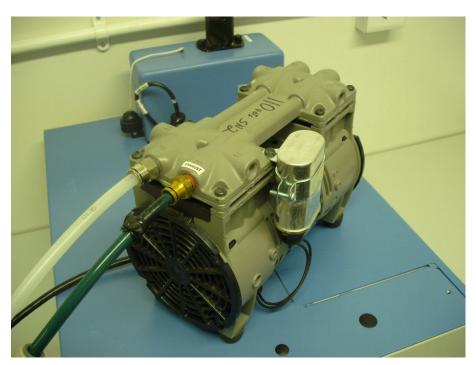


Figure 13: Vacuum pump (type: GAST Model 75R647, PN 110836-00)

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 41 of 440

The measuring system is operated through pushbuttons and an LCD display on the front side of the instrument. Here, the user can retrieve measurement data and instrument information, change parameters and perform tests for controlling the functionality of the measuring system.



Figure 14: Main screen of the user interface



Page 42 of 440


Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

The main screen is on the top level of the user interface. It usually displays the SHARP concentration. By scrolling down with the arrow buttons ↑↓, the screens for PM concentration (= BETA), NEPH concentration, ambient air conditions, flow conditions and mass sensor data are displayed.

In addition, the main screen displays a status bar with the current time as well as different status messages (e.g. the current mode the nephelometer is set to). In some cases, the following symbols can be observed:

Status Bar Icons

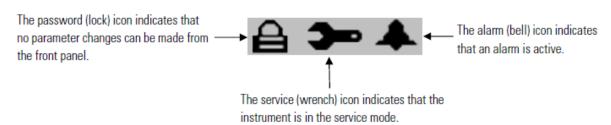

The main menu for operating the measuring system can be reached by pressing This button always leads to the previous sub-menu.

The four keys directly below the LCD display are programmable soft keys - by default, the keys lead to the sub-menus "RANGE", "AVG", "DIAGS" and "ALARM".

The sub-menu "Range" allows for setting the unit the concentration values are to be output in and adjusting standard as well as customised measuring ranges.

In the sub-menu "Integration Time" it is possible to adjust the averaging period of the radiometric measurement within the range 15 – 60 min (by default set to 20 min).

The sub-menu "24-Hour Average" allows the user to define the start time of the 24-hour averaging period of the concentration measurement.

The "Calibration Factors" sub-menu displays the calibration factors adjusted in the measuring system as well as those determined during manual and/or automatic calibrations. It is also possible to adjust them using this menu.

The "Instrument Controls" sub-menu may be selected to control various instrument operational parameters. It allows for parameterising the flow rate, turning the pump on and off, configuring the sample heater DHS, adjusting filter tape control operations (moving the tape manually, adjusting a reliable mass limit \rightarrow during test: 1500 µg, setting a time and interval for the next filter tape change, etc.), determining volumetric conditions, configuring the internal data logging and communication settings, adjusting the screen contrast, turning the service mode on and off (wrench icon appears on the main screen when service mode is on) as well as setting up the date and time.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 43 of 440

The "Diagnostics" sub-menu provides access to diagnostic information and functions, e.g. software version, current reading of the different sensors, radiometric detector and nephelometer status, status of the analogue and digital inputs and outputs, etc. This information is especially useful when troubleshooting the instrument.

The "Alarms" sub-menu displays the status of the measuring system with regard to potentially upcoming alarm messages. The bell icon on the main screen indicates that one (or more) alarm(s) are active.

The "Service" sub-menu (available only when the service mode is activated on the "Instrument Controls" sub-menu → if on, the wrench icon appears on the main screen) provides access to advanced diagnostic functions. These include, for example, the adjustment of the sensors with regard to ambient air temperature, flow temperature, ambient humidity, air pressure and flow. Furthermore, it allows for checking / adjusting the radiometric determination / mass coefficient, calibrating the detector (to be performed by a service technician of the manufacturer only) and nephelometer as well as setting up the analogue inputs and outputs.

The "Password" sub-menu allows the user to configure and activate password protection for the instrument (the lock icon on the main screen indicates that password protection is active).



Page 44 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Figure 15 provides an overview of the menu-assisted firmware.

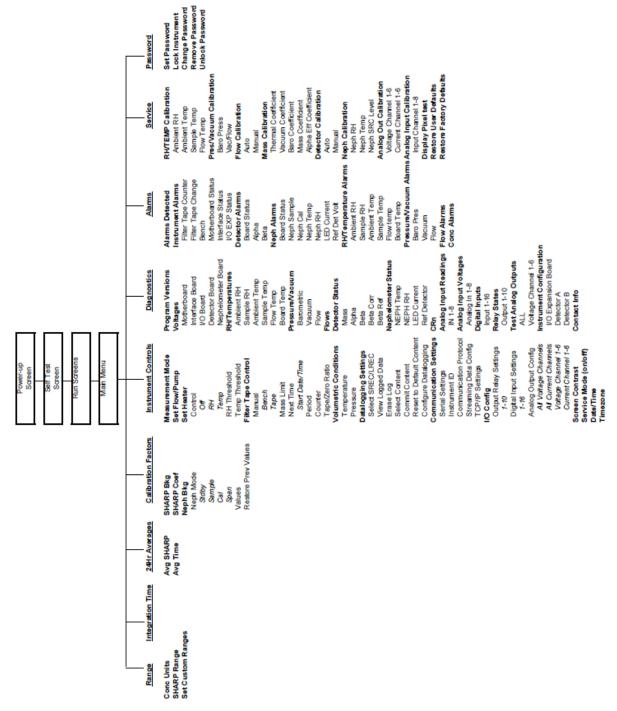


Figure 15: Flow chart – Overview of menu-assisted firmware

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 45 of 440

In addition to the possibility of direct communication via pushbuttons/display, the measuring system may be completely operated and parameterised over RS232/RSRS485 and Ethernet – both directly from a PC and indirectly via modem or network. During suitability testing, the measuring system was accessed over Ethernet and the terminal software iPort, especially for downloading the measurement data saved internally. The nature and scope of internal data logging (logging interval, recorded parameters) can be configured on the "Instrument Controls" menu. This remote operation of the measuring system contains the same features as direct operation.

The measuring system supports C-Link, MODBUS, Gesytec (Bayern-Hessen), ESM, Streaming Data and NTP protocols.

To perform external zero checks of the measuring system, a zero filter is mounted to the AMS inlet. This filter ensures the supply of air free of suspended particles.



Figure 16: Zero filter for supplying air free of suspended particles and its connection adapter



Page 46 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

In order to check and, if required, calibrate the radiometric measurement, the manufacturer provides a set of mass transfer standard foils. This set comprises one null foil and two span foils. The null foil has the same approximate mass as a clean filter spot and the span foil is a calibrated mass increase above the null foil. Therefore, the foils come in a set and must not be mixed with other sets.



Figure 17: Set with foil holder and test foils

It is not possible to produce a reproducible signal for the sensitivity of the nephelometer using external test standards. However, the nephelometer is regularly flushed with zero air during operation (auto-zero function as part of every filter change), thus determining and documenting the position of the zero point on a regular basis. Since the nephelometer is continuously calibrated with a very stable radiometric measurement, a separate examination of the stability of the nephelometer's signal under operating conditions can be omitted.

A special adapter for connecting an external flow measuring instrument is mounted to the inlet in order to check the leak tightness of the measuring system. The leak test adapter produces a high vacuum in the system. The leak tightness of the measuring system can be evaluated by comparing the flow rate measured by the system (at high vacuum) and the flow rate at the inlet (= external flow measuring instrument). If the difference exceeds the manufacturer's specification of 420 ml/min (= approx. 2.5 % of the nominal flow rate), the system shall be tested for leaks.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 47 of 440



Figure 18: Leak test adapter



Page 48 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Table 3 contains a list of important technical data of the ambient air quality measuring system Model 5030i SHARP for suspended particles.

Table 3: Technical data for Model 5030i SHARP (manufacturer's specifications)

Dimensions / Weight	Model 5030i SHARP
Measuring system	425 x 584 x 219 mm / 19 kg (without pump)
Sampling tube	Approx. 0.9 m long, isolated heated tube + 1.8 m extension tube
Sampling inlet	
Power requirements	Analyser: 100-240 V, 50-60 Hz Pump: 115 V, 50-60 Hz
Power input	Approximate maximum of 880 W
Ambient conditions	
Temperature	+5 to +40 °C (during suitability testing)
Humidity	Non-condensing
Sample flow rate (Inlet)	16.67 l/min = 1 m ³ /h
Nephelometer Source	IR LED, 6 mW, 880 nm
Detector	Hybrid silicone amplifier
Radiometry Source	¹⁴ C, <3.7 MBq (< 100 μCi)
Detector	Proportional radiation detector
Temporal resolution SHARP	1 min (at data output rate of 1 s)
Parameter: Filter change	
Filter change: time (cycle)	0 h – 100 h →Default: 8 h (3 changes per day)
Filter change: particle mass	0 – 9999 μg → Default: 1500 μg
Parameter: Sample heater	
Max. heating temperature	30 °C (during suitability testing)
Nominal relative humidity	50 % / 58 % (during suitability testing)
Data storage capacity (internal)	Max. 190,000 datasets (> 650 d at storage intervals of 5 min)
Instrument inputs and outputs	Outputs: Analogue 0-20 mA or 4-20 mA (optional) Digital RS232, RS485, TCP/IP, 10 status relays Inputs: 16 digital inputs 8 analogue inputs (optional)
Protocols	Communication with PC over Ethernet and iPort software

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 49 of 440

	C-Link, MODBUS, Gesytec, ESM, Data Streaming and NTP Simultaneous connections from different locations over Ethernet
Status signals / Error messages	Available, for an overview please refer to Chapter 6 of the instruction manual



Page 50 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

4. Test programme

4.1 General

The suitability test was carried out with two instruments of identical design with the serial numbers SN 3 and SN 4.

The test started in the year 2009 with the software version V00.05.41.114. The software was steadily enhanced and optimised during the course of testing.

At the beginning of the field test in January 2011, software version V01.00.01.197 was implemented. This version was used during the whole field test.

The software was updated to version V01.00.03.225 after conclusion of the regular field test and before starting the remaining laboratory tests. This software version was as well used for the additional campaign "Bornheim, Summer 2013".

In the meantime the software version was updated another time due to a discontinuation of a processor board to version V02.00.00.232+. The following software modifications were implemented:

Table 4: Overview of software versions during suitability testing

Version	Description of change	Status during suitability test
V00.05.41.114	Initial version	Installed during laboratory test, part 1
V01.00.00.163	 Integration of support for Model 5030i Improvement of algorithms for controlling RH and TEMP Addition of "Carriage return" to ESM protocol Replacement of term "Zero" with "Offset" Adjustment of digital filter for "Mass" and "PM" to 60 min Elimination of sample temperature from user interface Raise of limit for Temp offset values to +/-10°C Implementation of mass determination without flow in service mode for improving the calibration of mass measurement Implementation of the "Infinite Mass Accumulation Method" 	Not installed

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 51 of 440

V01.00.01.197	1.	Release of Model 5030i code	Installed during field
	2.	Integration time variable for mass and concentration determination (range 15 – 60 min) added	test
	3.	Necessary code adjustments for the amplifi- er, due to the change from batteries to ca- pacitor for buffering high voltage supply for up to 2 h during power outages	
	4.	Increase of filter tape movements per roll by approx. 50 %	
	5.	Change of filter tape after three failed attempts no longer possible	
	6.	Elimination of minor bugs	
V01.00.02.199	1.	Calibration coefficient is frozen at c (BETA) < $2.5~\mu g/m^3$ and/or c (NEPH) < $1~\mu g/m^3$ instead of c (BETA) < $2.5~\mu g/m^3$ and/or c (SHARP) < $1~\mu g/m^3$	Not installed
	2.	Flow temp replaced by sample temp in Bayern-Hessen protocol	
	3.	Increase of accuracy of "diag volts" command	
V01.00.03.225	1.	Modification of key variables and soft keys for USB keypad support	Installed during laboratory test, part 2,
	2.	Alarms added to the list of digital outputs	as well as the addi-
	3.	Additional parameters for recording added	tional campaign "Bornheim, Summer
	4.	Changes to timing procedure after filter exchange – no calculations in the first 15 min following pump stop	2013"
	5.	Update of algorithms for calculating ambient temperature, ambient humidity and flow temperature in order to provide a more precise sample humidity value (sample rH)	
	6.	Recording of amplification and mode for NEPH added	
	7.	Update of pressure calculations smoothing in order to improve flow control	
	8.	Update of heating control (PID control optimised)	
V02.00.00.232+	1.	Modification to new i-series processor board 110570	Not installed, examined during regular
	2.	Menu navigation "Servise/Pres/Vacuum Calibration/Vac/Flow" changed	production audit.
	3.	Diagnostics/Voltages/detector Board menu no longer locks up	
	4.	Title line on "Calibration factors/Neph BKG Values/restore Prev Values" verschoben	

TÜVRheinland® Precisely Right.

TÜV Rheinland Energie und Umwelt GmbH

Air Pollution Control

Page 52 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

5.	"range" Clink command now deliberately writes a response in every case	
6.	Several parameters are no longer displayed when the unit is password locked	
7.	Remove blanket rejection of "set" for the "sp field" Clink command	

The reliability of the AMS was consistently increased with every change. The changes introduced up to version V02.00.00.232+ are not expected to affect the performance of the AMS significantly.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 53 of 440

The suitability test comprised a laboratory test for determining the system's performance characteristics and a field test carried out over several months at different locations.

All determined concentrations are given as µg/m³ (operating conditions).

The report in hand provides a description of the minimum requirement for each test item in accordance with the number and wording used in standards [1, 2, 3, 4].

4.2 Laboratory test

The laboratory test was carried out with two identical instruments of the type Model 5030i SHARP with serial numbers SN 3 and SN 4. In conformity with standards [1, 2], the following performance criteria were tested in the laboratory:

Laboratory test, part 1 (2009):

- Description of system functions
- Determination of dependence of sensitivity on ambient temperature
- Determination of dependence of sensitivity on mains voltage

Laboratory test, part 2 (2012/2013):

- Detection limit
- Determination of the dependence of zero point / sensitivity on ambient temperature
- Tightness of the sampling system

The following auxiliary devices were used to determine the system characteristics during the laboratory test:

- Climatic chamber (temperature range from -20 °C to +50 °C, accuracy < 1 °C)
- Adjustable isolating transformer
- Zero filter for external zero point checks
- Span foil sets

The measured values were recorded internally by the instruments. Once stored in the systems, they were transmitted via Ethernet to the iPort software for read-out.

The laboratory tests and results are presented in Section 6.



Page 54 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

4.3 Field test

The field test was carried out with two identical systems with the serial numbers:

System 1: SN 3 System 2: SN 4

The following performance criteria were tested in the field:

- Comparability of the candidates according to the Guide "Demonstration of Equivalence of Ambient Air Monitoring Methods"
- Comparability of the candidates with the reference methods according to the Guide "Demonstration of Equivalence of Ambient Air Monitoring Methods"
- Calibratability, analytical function
- Reproducibility
- Zero drift and sensitivity
- Dependence of the measured values on sample humidity
- Maintenance interval
- Availability
- Constancy of sample volumetric flow
- Overall uncertainty of the test candidates

The following auxiliary devices were used during the field test:

- Measuring cabinet provided by TÜV Rheinland, air-conditioned to approx. 20 °C
- Measuring cabinet for low-volume samplers provided by DEFRA (UK), air-conditioned to approx. 20 °C
- Weather station (WS 500 manufactured by ELV Elektronik AG for use in Germany and MK III Series manufactured by Rainwise (US) for use in the UK) for the determination of meteorological characteristics such as air temperature, air pressure, air humidity, wind velocity, wind direction and precipitation
- 2 reference samplers LVS3 for PM₁₀ in accordance with point 5
- 1 gas meter, dry
- 1 mass flow meter Model 4303 (manufactured by TSI)
- 1 mass flow meter type BIOS volumeter (manufactured by BIOS) for use in the UK
- 1 mass flow meter type TetraCal venturi (manufactured by BGI), for use in the UK
- Power consumption measuring device type Metratester 5 (manufactured by Gosen Metrawatt)
- Zero filter for external zero point checks
- Span foil sets

Two Model 5030i SHARP systems and two PM_{10} reference instruments were each operated simultaneously for 24 h during the field test. The reference equipment worked discontinuously, i.e. the filter had to be changed manually after each sample drawing.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 55 of 440

The impaction plates of the PM_{10} sampling inlets of the reference devices were cleaned approx. every 2 weeks and lubricated with silicone grease in order to guarantee a safe separation and deposition of the particulate. The PM_{10} sampling inlets of the candidates were cleaned approx. every 4 weeks. The inlet was cleaned according to the manufacturer's instruction while taking into account the local suspended particle concentrations.

The flow rate was tested on each candidate and reference device prior to and after each change of location with a dry gas meter and a mass flow meter connected with a hose to the air inlet.

Test sites and arrangement of the measuring systems

During the field test, the measuring systems were arranged in such a way that the sampling inlets were positioned outside the measuring cabinet above its roof. The central units of both candidates were located inside the air-conditioned measuring cabinet. The entire reference equipment (LVS3) was placed outdoors on the roof of the cabinet.

The field test was carried out at the following test sites:

Table 5: Field test sites

No.	Measurement site	Period	Characteristics
1	Cologne, parking lot, winter	03/2011 – 05/2011	Urban background
2	Bornheim, motor- way parking lot, summer	07/2011 – 11/2011	Rural structure + traffic influence
3	Bornheim, motor- way parking lot, winter	01/2012 – 03/2012	Rural structure + traffic influence
4	Teddington, summer	07/2012 – 09/2012	Urban background



Page 56 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Figure 19 to Figure 22 show the course of PM_{10} concentrations at the field test sites obtained with the reference systems.

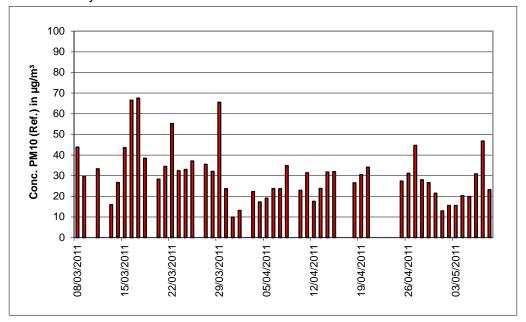


Figure 19: Course of PM₁₀ concentrations (reference) at the test site "Cologne, parking lot, winter"

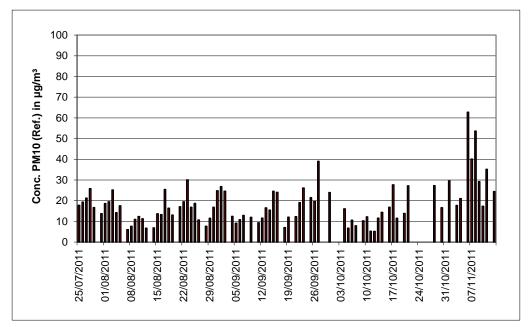


Figure 20: Course of PM₁₀ concentrations (reference) at the test site "Bornheim, motorway parking lot, summer"

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 57 of 440

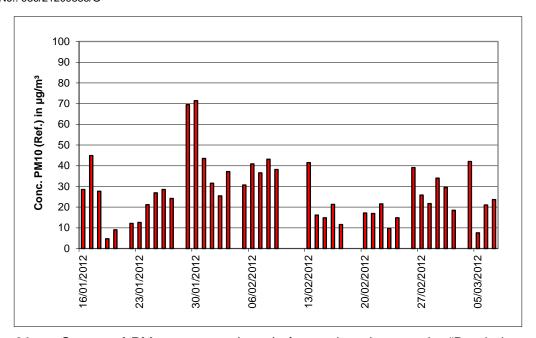


Figure 21: Course of PM₁₀ concentrations (reference) at the test site "Bornheim, motorway parking lot, winter"

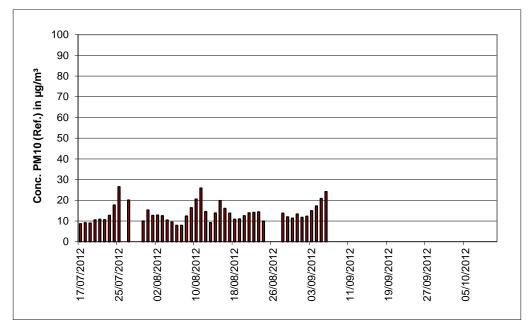


Figure 22: Course of PM₁₀ concentrations (reference) at the test site "Teddington, summer"



Page 58 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

The following figures show the measuring cabinet at the field test sites Cologne (parking lot), Bornheim (motorway parking lot) and Teddington.



Figure 23: Field test site Cologne, parking lot



Figure 24: Field test site Bornheim, motorway parking lot

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 59 of 440



Figure 25: Field test site Teddington

In addition to the measuring systems used for determining the content of suspended particulate matter in ambient air, a data acquisition system was installed at the cabinet/measurement site in order to determine the meteorological characteristics. Air temperature, pressure and humidity as well as wind velocity, direction and precipitation were continuously assessed and their half-hourly averages recorded.

The installation of the cabinet itself and the arrangement of the sampling probes are described as follows:

• Height of cabinet roof: 2.50 m

• Height of the sampling point for testing 1.10 m / 0.51 m above the cabinet roof

Reference instrument 3.61 / 3.01 m above ground

Height of weather vane: 4.5 m above ground (Germany)

2.5 m above ground (UK)

Table 6 contains, therefore, not only an overview of the most important meteorological factors determined during measurement at the four test sites, but also an overview of the PM ratio during the entire test. The individual values are presented in annexes 5 and 6.



Page 60 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Table 6: Ambient conditions at the field test sites, daily mean values

	Cologne, parking lot, winter	Bornheim, motorway parking lot, summer	Bornheim, motorway parking lot, winter	Teddington (UK), summer	
No. of paired values (reference)	50	82	42	46	
Ratio PM _{2,5} /PM ₁₀ [%]					
Range	38.8 - 86.3	27.1 – 88.1	43.1 – 91.1	36.2 – 70.5	
Average	61.7	57.3	73.0	53.9	
Ratio Volatiles/PM ₁₀ [%]*					
Range	5.2 – 29.2	0.0 - 34.6	9.2 – 81.3	11.0 – 49.3	
Average	15.4	14.3	20.7	21.9	
Air temperature [°C]					
Range	5.0 – 22.1	5.2 – 24.5	-8.9 – 10.4	11.7 – 24.2	
Average	12.3	15.5	1.9	17.5	
Air pressure [hPa]					
Range	998 – 1031	995 – 1024	1003 – 1031	983 – 1010	
Average	1012	1008	1018	998	
Rel. humidity [%]					
Range	34.7 – 90.4	53.8 – 91.1	50.2 – 90.5	47.1 – 88.3	
Average	61.8	75.1	77.7	70.0	
Wind velocity [m/s]					
Range	0.3 - 5.3	0.3 – 4.1	0.6 - 5.7	0.1 – 1.9	
Average	1.9	1.4	2.1	0.5	
Precipitation [mm/d]					
Range	0.0 – 11.1	0.0 – 51.7	0.0 – 12.8	0.0 - 27.9	
Average	0.9	2.7	1.5	0.9	

^{*} The content of volatiles was measured with a TEOM-FDMS system operated simultaneously

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

Page 61 of 440

Parameterisation of the relative humidity threshold for the Dynamic Heating System DHS

The Model 5030i SHARP measuring system uses a heated sampling system in order to prevent the effects of condensation in the system (especially in the nephelometer and filter tape). The heater must also be designed in such a way that the potential risk of volatile particle loss is minimised. The Dynamic Heating System DHS implemented in the Model 5030i SHARP measuring system ensures that the relative humidity of the air passing through the filter tape at the radiometric stage is kept well below the point at which the collected particles adhere together, thus producing disrupting condensation effects. Furthermore, the relative humidity in the nephelometer is adjusted below the specified limit. The system minimises the increase of internal temperature. This ensures a negligible loss of semi-volatile particle components, provided that the relative ambient humidity is maintained below the limit to which the heater is adjusted. As that the relative ambient humidity rises above the threshold, the applied heating is optimised to maintain the relative humidity threshold above the filter tape of the radiometric stage. The DH-System is adjusted using the controlled variable rH (= "rel. ambient humidity of the sample" → calculated from the rel. humidity of ambient air, ambient temperature and sample temperature) and the filter temperature sensor. The heating conditions can be adjusted according to the requirements of each measurement network.

The parameters were adjusted as follows during suitability testing:

Rel. air humidity threshold: 50 %

Filter temperature sensor: max. 30 °C

This means that the heater turns on as soon as the relative humidity rH rises above 50 %. However, the filter temperature does not exceed 30 °C. The relative humidity threshold value of 50 % was specified by the manufacturer, since it represents the filter conditioning value of the gravimetric reference method.

None of the slopes or offsets determined from the comparison with the reference method were significantly visible during the comparison campaigns at the test sites Cologne (winter). Bornheim (summer) and Bornheim (winter). All expanded measurement uncertainties calculated according to the Guide "Demonstration of Equivalence of Ambient Air Monitoring Methods" [4] lay below the maximum permissible value of 25 % without application of correction factors. After concluding the measurements in Germany, the final comparison campaign started in summer of 2012 at the test site Teddington. During this campaign, an underestimation of the suspended particulate content measured by the candidates was observed in comparison with the reference method. The evaluation of the campaign led to the following results:

Table 7: Evaluation of the Teddington (summer) campaign with rH adjusted to 50 %

PM10 5030i Sharp	Dataset -			Orthogo	Limit Value of 50 µg m-3			
FM 10 30301 Sharp	DataSet		r²	Slope (I	o) +/- u _b	Intercept (a) +/- u _a	W _{CM} / %	% ≥ 28 µg m-3
SN3	Teddington Summer with 50 % RH Setting	37	0.841	0.728	+/- 0.050	2.594 +/- 0.680	44.43	0.0
SN4	Teddington Summer with 50 % RH Setting	37	0.902	0.723	+/- 0.039	1.364 +/- 0.525	50.12	0.0



Page 62 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

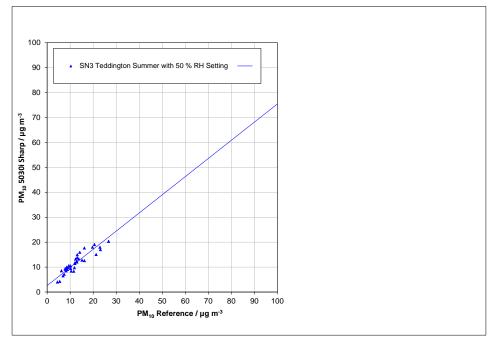


Figure 26: Comparison of reference and candidate SN 3, measured component PM₁₀, Teddington (summer), relative humidity threshold adjusted to 50 %

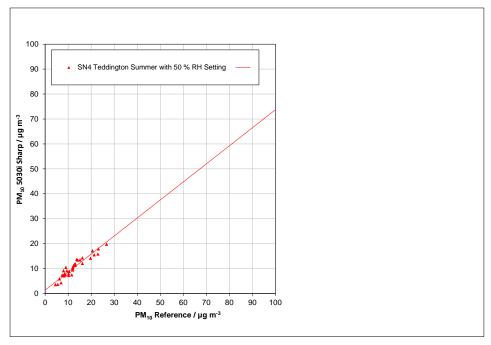


Figure 27: Comparison of reference and candidate SN 4, measured component PM₁₀, Teddington (summer), relative humidity threshold adjusted to 50 %

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 63 of 440

Since these parameters differ from the ones determined during previous campaigns, the possible causes for this discrepancy were analysed. In this context, the volatile content in fine dust was reviewed in detail. The content of volatiles in suspended particulate matter had been determined in measurements carried out in parallel with measuring systems of the type TEOM-FDMS. The results showed that the test site Teddington (summer) is characterised by a generally very low level of suspended particulate matter and a significantly high content of volatile dust components. The average content of volatiles in suspended particulate matter PM_{10} amounted to approx. 33 % during the campaign carried out in Teddington (summer), compared to a content of approx. 15-20 % during the three previous campaigns.

Based on similar experiences during measurement campaigns in China, the manufacturer suggested a change in the parameterisation of the relative air humidity threshold from 50 % to 58 % to solve the problem. This would activate the heater only when the relative humidity exceeds 58 % instead of 50 % as in the previous campaigns. The Teddington (summer) comparison campaign was subsequently repeated using the new parameters (average volatile content during this campaign: 21.9 %). No problems demonstrating the equivalence during this measurement campaign were detected after applying this change. The results are presented in detail in Section 6.1 5.4.10 Calculation of the expanded uncertainty of the instruments.

Table 6 and Annex 6 of this report present the results of the measurement campaigns with regard to content of volatiles in suspended particulate matter PM₁₀.

To qualify the necessary change of the threshold for the relative humidity to control the sample heating from originally 50 % to 58 % (necessary due to the results of the campaign in Teddington UK), an additional campaign at one of the German sites with two candidate systems with settings of each 50 % and 58 % was performed (decision of the 32. Expert discussion "test reports" of May 14/15 201) **Table 2** gives an overview on the additional campaign. The results of this campaign are shown in chapter 4.3 Field test from page 54.

The tests were performed at the site Bornheim with the candidate systems SN 3 and SN 4. The candidates were set up as follows:

Component threshold for heater regulation

SN 3 PM₁₀ 58 % SN 4 PM₁₀ 50 %

The following test program was performed:

- comparison campaign with a minimum of 40 valid paired values reference vs candidate system
- determination of the uncertainty between candidate systems ubs according to Guide
- determination of the expanded uncertainty of the candidate systems according to Guide
- application of the correction factors/ terms determined in chapter 6.1 5.4.10 Calculation of the expanded uncertainty of the instruments
- recalculation of equivalence of the 4 data sets from the existing suitability test and the additional data set "Bornheim Summer 2013 with different thresholds for the heater regulation according to the approach from point "8.2 Suitability testing" der CEN/TS 16450 [9]

The additional campaign was performed between 07 June 2013 and 25 July 2013. The ambient conditions during the campaign were as follows:



Page 64 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Table 8: Ambient conditions at the additional site "Bornheim, Summer 2013", shown as daily mean values

	Bornheim, motorway parking lot, summer 2013
No. of paired values (reference)	44
Ratio PM _{2,5} /PM ₁₀ [%]	
Range	39.1 – 75.1
Average	59.9
Ratio Volatiles/PM _{2,5} [%]*	
Range	4.7 – 38.4
Average	17.4
Air temperature [°C]	
Range	13.2 – 27.6
Average	19.8
Air pressure [hPa]	
Range	1001 – 1020
Average	1010
Rel. humidity [%]	
Range	52.2 – 86.1
Average	67.8
Wind velocity [m/s]	
Range	0.2 - 3.5
Average	1.2
Precipitation [mm/d]	
Range	0.0 - 34.6
Average	3.2
	0.2

All values are to be found in Appendix 7 (PM-measuring values) and 8 (ambient conditions). In total 45 paired values were determined. A Significant outlier according to Grubbs is the paired value for the reference PM_{10} of 12 July 2013 (Ref1: $28.7\mu g/m^3$; Ref2: $33.5~\mu g/m^3$). These values were discarded from the data pool. Therefore 44 paired values are available for evaluation.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

Page 65 of 440

The evaluation of the comparison measurements according to the Guide [4] leads to the following result:

Table 9: Results of the equivalence test at the site Bornheim, Summer 2013, SN 3 (58 %) & SN 4 (50 %), component PM₁₀, raw data

SN3 Dataset				Orthogonal Regression	Limit Value of 50 µg m-3		
		n _{c-s}	r ²	Slope (b) +/- u _b	Intercept (a) +/- u _a	W _{CM} / %	% ≥ 28 µg m-3
Individual Datasets	Bornheim Summer 2013	44	0.920	1.007 +/- 0.044	0.187 +/- 0.847	8.84	9.1
SN4	Datas at			Orthogonal Regression	on	Limit Value	of 50 µg m-3
5144	Dataset	n _{c-s}	r ²	Slope (b) +/- u _b	Intercept (a) +/- u _a	W _{CM} / %	% ≥ 28 µg m-3
Individual Datasets	Bornheim Summer 2013	44	0.920	1.026 +/- 0.045	0.125 +/- 0.866	10.49	9.1

Assessment:

- 1. The uncertainty between the two candidate systems is 0.79 μg/m³ and thus is below the permissible 2.5 µg/m³.
- 2. The expanded uncertainty for the raw data for SN 3 (58%) and for SN 4 (50%) is below the permissible 25 %.

The correction factors/ terms detected during suitability testing in 6.1 5.4.10 Calculation of the expanded uncertainty of the instruments are afterwards applied to the raw data sets.

Therefore a correction of the data sets for SN 3 and SN 4 with a slope of 1.009 (uncertainty of slope 0.013) and with an intercept of -0.392 (uncertainty of the intercept 0.327) is carried out and. This results to the following evaluation:

Table 10: Results of the equivalence test at the site Bornheim, summer 2013, SN 3 (58 %) & SN 4 (50 %), component PM₁₀, slope correction 1.009, intercept correction -0.392

SN3 Dataset				Orthogonal Regression	Limit Value of 50 μg m-3			
		n _{c-s}	r ²	Slope (b) +/- u _b	Intercept (a) +/- u _a	W _{CM} / %	% ≥ 28 µg m-3	
Individual Datasets	Bornheim Summer 2013	44	0.920	0.997 +/- 0.043	0.580 +/- 0.839	9.14	9.1	
CNIA	Detect	Orthogonal Regression					Limit Value of 50 µg m-3	
SN4	Dataset	n _{c-s}	r ²	Slope (b) +/- u _b	Intercept (a) +/- u _a	W _{CM} / %	% ≥ 28 µg m-3	
Individual Datasets	Bornheim Summer 2013	44	0.920	1.016 +/- 0.044	0.519 +/- 0.858	10.59	9.1	

Assessment:

The expanded uncertainty of the data corrected by the slope of 1.009 and by the intercept of -0.392 lies for SN 3 (58 %) and SN 4 (50 %) beneath the allowed 25 %.



Page 66 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Closing, the corrected data set for Bornheim, Summer 2013 was included in the original equivalence evaluation from suitability testing (see Table 41) according to point "8.2 Suitability testing of CEN/TS 16450 [9] as additional 5th data set, to check whether the criteria for equivalence test are still fulfilled.

Table 11: Results of the equivalence test "suitability testing + Bornheim, summer 2013", SN 3 & SN 4, component PM₁₀, slope correction 1.009 and intercept correction - 0.392

		<u> </u>		0.1			.	
PM10 5030i Sharp Slope and Intercept	21.1% ≥ 28 μg m-3			Orthogo	nal Regressio	on	Betw een Instrui	ment Uncertainties
Corrected	W _{CM} / %	n _{c-s}	r ²	Slope (I	o) +/- u _b	Intercept (a) +/- u _a	Reference	Candidate
All Data	9.5	246	0.964	0.998	+/- 0.012	0.166 +/- 0.294	0.63	1.05
< 30 μg m-3	8.6	203	0.903	1.011	+/- 0.022	0.081 +/- 0.393	0.62	1.06
≥ 30 µg m-3	14.0	43	0.933	1.095	+/- 0.044	-4.566 +/- 1.926	0.63	1.19
SN3	Dataset			Orthogo	nal Regressio	on	Limit Value	of 50 µg m-3
SNS	Dalasel	n _{c-s}	r ²	Slope (I	o) +/- u _b	Intercept (a) +/- u _a	W _{CM} / %	% ≥ 28 µg m-3
	Bornheim Winter	42	0.976	0.978	+/- 0.024	1.358 +/- 0.738	8.82	42.9
	Cologne Winter	43	0.947	1.023	+/- 0.037	-1.159 +/- 1.244	13.10	53.5
Individual Datasets	Bornheim Summer	71	0.952	0.976	+/- 0.026	0.850 +/- 0.529	9.12	9.9
	Teddington Summer	46	0.855	0.965	+/- 0.055	1.048 +/- 0.805	7.89	0.0
	Bornheim Summer 2013	44	0.920	0.997	+/- 0.043	0.580 +/- 0.839	9.14	9.1
	< 30 μg m-3	203	0.899	1.002	+/- 0.022	0.547 +/- 0.398	8.70	4.4
Combined Datasets	≥ 30 µg m-3	43	0.934	1.085	+/- 0.043	-4.185 +/- 1.896	13.78	100.0
	All Data	246	0.963	0.985	+/- 0.012	0.690 +/- <mark>0.295</mark>	9.49	21.1
	5			Orthogo	nal Regressio	on	n Limit Value of 50	
SN4	Dataset	n _{c-s}	r ²	Slope (I	o) +/- u _b	Intercept (a) +/- u _a	W _{CM} / %	% ≥ 28 µg m-3
	Bornheim Winter	42	0.981	1.018	+/- 0.022	0.318 +/- 0.683	9.37	42.9
	Cologne Winter	45	0.944	1.039	+/- 0.037	-2.231 +/- 1.238	13.78	51.1
Individual Datasets	Bornheim Summer	75	0.935	1.007	+/- 0.030	-0.785 +/- 0.618	10.70	9.3
	Teddington Summer	46	0.833	0.911	+/- 0.057	0.701 +/- 0.823	16.69	0.0
	Bornheim Summer 2013	44	0.920	1.016	+/- 0.044	0.519 +/- 0.858	10.59	9.1
	< 30 μg m-3	209	0.875	1.028	+/- 0.025	-0.602 +/- 0.447	9.87	4.3
Combined Datasets	≥ 30 µg m-3	43	0.925	1.111	+/- 0.047	-5.158 +/- 2.067	15.11	100.0
	All Data	252	0.956	1.015	+/- 0.013	-0.519 +/- 0.324	10.53	20.6

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 67 of 440

Assessment summary

To verify the equivalence of the data between both candidates with the threshold set for the heating of 50 % respectively 58 % a comparison campaign was performed at one of the German sites. The gathered data sets (SN 3 with 58 % setting, SN 4 with 50 % setting) were subjected to an equivalence test. The assessment led to the following results:

- 1. The uncertainty between the two candidate systems is $0.79~\mu g/m^3$ and thus is below the permissible $2.5~\mu g/m^3$
- 2. The expanded uncertainty of the raw data is for SN 3 (58 %) and SN 4 (50 %) below the permissible 25 %
- 3. The expanded uncertainty of the data corrected by the slope of 1.009 and by the intercept of -0.392 (determined during suitability test) is for SN 3 (58 %) and SN 4 (50%) below the permissible 25 %
- 4. The combined evaluation of the 4 original data sets of suitability testing with the additional 5th data set Bornheim, summer 2013 leads as well to a compliance with the equivalence criteria according to the guide [4]

Hence the verification of the equivalence of the candidate systems with a threshold for the rel. humidity of 58 % was proved also for a German site.

Therefore, the Model 5030i SHARP measuring system can alternatively as well be operated with a relative humidity threshold of 58 %, in particular for any site where a significantly high volatile content is expected.



Page 68 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Sampling period

EN 12341 defines a sampling period of 24 h. However, longer sampling times are permitted for low concentrations as well as shorter sampling times for high concentrations.

The sampling period was set to 24 h for all instruments during the entire field test (10:00 – 10:00 in Teddington and Cologne, and 7:00 – 7:00 in Bornheim).

Data handling

All paired reference values determined during the field tests were subject to statistical testing according to Grubbs (99 %) to prevent influences of clearly implausible data on the measurement results. Paired values identified as significant outliers may be discarded from the data pool as long as the critical value of the test statistic does not fall below the target. The January 2010 version of Guide [4] stipulates that only 2.5 % of the paired values may be identified as outliers and discarded.

During the "Combined MCERTS and TÜV PM Equivalence Testing" programme we agreed with our British partners not to discard any value measured by the candidates, unless the implausibility is attributed to technical causes. Thus, no values measured by the candidates were discarded during the entire testing period.

Table 12 shows an overview of the amount of paired values (reference) recognised as significant outliers and discarded at each test site.

Table 12: Results of Grubbs outlier test – Reference PM₁₀

Graph Number	Site	Sampler	Number of data- pairs	Maximum Number that can be deleted	Number Identified	Number Deleted	Number of data- pairs remaining
А	Bornheim Winter	PM ₁₀ Reference	42	1	0	0	42
В	Cologne Winter	PM ₁₀ Reference	50	1	0	0	50
С	Bornheim Summer	PM ₁₀ Reference	84	2	3	2	82
D	Teddington Summer	PM ₁₀ Reference	47	1	2	1	46

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 69 of 440

The following paired values were discarded:

Table 13: Discarded reference PM₁₀ paired values according to Grubbs

Test site	Date	Reference 1 [µg/m³]	Reference 2 [µg/m³]
Bornheim (summer)	19 Oct 2011	19.7	9.1
Bornheim (summer)	22 Oct 2011	32.6	27.6
Teddington (summer)	26 Jul 2012	33.7	32.1

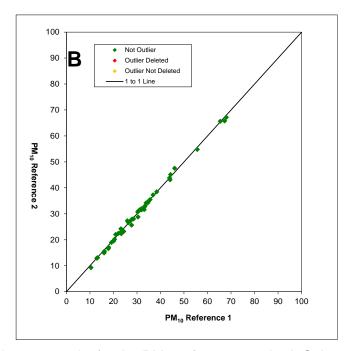


Figure 28: Grubbs test results for the PM₁₀ reference method, Cologne (winter)



Page 70 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

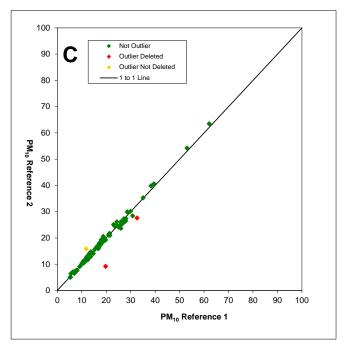


Figure 29: Grubbs test results for the PM₁₀ reference method, Bornheim (summer)

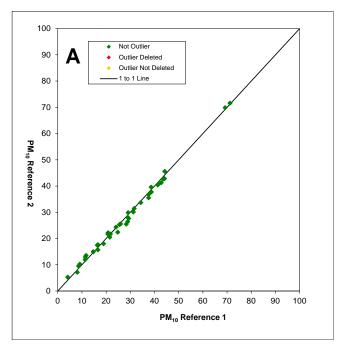


Figure 30: Grubbs test results for the PM₁₀ reference method, Bornheim (winter)

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 71 of 440

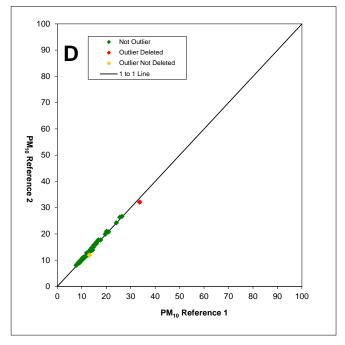


Figure 31: Grubbs test results for the PM₁₀ reference method, Teddington (summer)



Page 72 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Filter handling – Mass determination

The following filters were used for suitability testing:

Table 14: Used filter materials

Measuring instrument	Filter material, type	Manufacturer	
Reference instrument LVS3	Emfab™, ∅ 47 mm	Pall	

The filter material EmfabTM (Teflon-coated glass fibre filters) was used during the "Combined MCERTS and TÜV PM Equivalence Testing" programme by special request of our British partners, because according to [8], they consider it most appropriate for the measurement task.

The handling of filters for PM_{10} was carried out analogous to the requirements of EN 14907 for $PM_{2.5}$ filters.

The procedures for filter handling and weighing are described in detail in Appendix 2 of this report.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 73 of 440

5. Reference measuring methods

In accordance with the specifications of EN 12341, the following instruments were used during the field test:

1. Reference equipment for PM₁₀:

Low-Volume Sampler LVS3

Manufacturer: Ingenieurbüro Sven Leckel, Leberstraße 63, Berlin

Germany

Date of manufacture: 2007 PM₁₀ Sampling inlet

Two PM_{10} reference instruments were operated simultaneously during the test, each with a controlled volume flow of 2.3 m³/h. The accuracy of the volume flow control is <1 % of the nominal volume flow under real operating conditions.

The sampling air for the LVS3 is sucked in through the sampling inlet by a rotary vane vacuum pump. The sampling air volume flow is measured between the filter and the vacuum pump with a measuring orifice. The suctioned air streams then out of the pump passing through a separator for abrasion of the rotary vane towards the air outlet.

The electronic measuring equipment displays the inlet sampling air volume in standard or operating m³ as soon as the sampling is complete.

To determine the PM_{10} concentration, the laboratory performed a gravimetric determination of the amount of suspended particulate matter on the respective filters. The obtained result was then divided by the respective volume of sampling air in operating m^3 (or standard m^3 as specified in EN 12341).



Page 74 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6. Test results

6.1 4.1.1 Measured value display

The measuring system shall be fitted with a measured value display.

6.2 Equipment

No additional equipment is required.

6.3 Performance of test

It was checked whether the measuring device has a display for measured values.

6.4 Evaluation

The measuring system has a display for measured values. The main screen displays the current SHARP concentration at all times (updated every second). From here, it is easy to select the screens displaying the PM concentration (= BETA), the NEPH concentration, the ambient conditions, the flow conditions and the mass sensor data using the arrow keys $\uparrow\downarrow$.

6.5 Assessment

The measuring system is fitted with a measured value display. Minimum requirement fulfilled? yes

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 75 of 440

6.6 Detailed presentation of test results

Figure 32 shows the user interface with the current concentration values.



Figure 32: Display of the measured SHARP concentration



Page 76 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 4.1.2 Easy maintenance

Necessary maintenance for the measuring systems should be possible without larger effort, if possible from outside.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

Necessary regular maintenance works were carried out according to the instructions of the manual.

6.4 Evaluation

The following maintenance works must be performed by the user:

- 1. Check of system status:
 - The system status can be monitored and controlled directly on the system itself or online.
- 2. In general, the sampling inlet must be cleaned according to the manufacturer's instructions while taking into account the local suspended particle concentrations (during suitability test every 4 weeks).
- 3. Inspection of filter tape supply one filter tape is enough for approx. 650 filter tape changes per roll (approx. 215 days at cycles of 8 hours). Semi-annual filter tape changes are expected to be sufficient under normal conditions (no unscheduled filter changes due to significantly high dust concentrations). The "Filter Tape Counter" function allows for monitoring the current number of filter tape changes as well as configuring alarm thresholds which remind the user of upcoming changes.
- 4. An inspection of the sensors for ambient temperature and ambient pressure shall be carried out every three months according to the manufacturer's specifications.
- 5. A flow rate check must be performed every three months according to the manufacturer's specifications.
- 6. The system's leak tightness shall be inspected every three months according to the manufacturer's specifications.
- 7. The external pump exhaust filter shall be exchanged every six months.
- 8. As part of an annual basic maintenance, the carbon vanes of the vacuum pump shall be exchanged and the SHARP optics module shall be cleaned once a year. The cleaning of the SHARP optics module is ideally performed by an experienced service technician. Furthermore, it is recommended to carry out a yearly inspection and, if required, a re-calibration of the radiometric measurement using the foil set.
- 9. The cleaning of the sampling tube shall be paid attention to during the annual basic maintenance.

The instructions of the manual (chapters 4 and 5) shall be observed when performing maintenance works. In general, all works can be carried out with commonly available tools.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 77 of 440

6.5 Assessment

Maintenance works can be carried out with commonly available tools taking reasonable time and effort. The semi-annual filter tape change and the works described in points 7ff are to be performed while the system is on standstill only. These works come up every six or twelve months. In the meantime, maintenance works are limited to the check of contaminations, plausibility checks and possible status/error messages.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

The maintenance works were carried out during the test in accordance with the instructions given in the manual. No problems were noticed while following the described procedures. All maintenance works could be performed smoothly with customary tools.



Page 78 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 4.1.3 Functional check

If the operation or the functional check of the measuring system requires particular instruments, they shall be considered as part of the measuring system and be applied in the corresponding sub-tests and included in the assessment.

Test gas units included in the measuring system shall indicate their operational readiness to the measuring system by a status signal and shall provide direct as well as remote control via the measuring system.

6.2 Equipment

Manual, zero filter and span foil set.

6.3 Performance of test

The system status is constantly monitored and problems are indicated by a series of different warning messages. Parameters which are relevant for a proper functioning of the measuring system (e.g. NEPH zero adjustment, flow rates, pump vacuum) can also be reviewed on the instrument itself and/or recorded continuously by a data logger.

Furthermore, it is possible to check the zero point of the measuring system externally. For this, a zero filter is installed at the device inlet. The use of this filter allows the provision of particle-free air.

During the test, the position of the zero point was determined approx. every 4 weeks using a zero filter.

In order to check the stability of the beta measurement, the "mass transfer standard" foil set is required. This set comprises one null foil and two span foils. The null foil has the same approximate mass as a clean filter spot and the span foil is a calibrated mass increase above the null foil. Therefore, the foils come in a set and must not be mixed with other sets. The foil set is used for determining mass only.

A comparison campaign was carried out once at the beginning and once at the end of the test in order to determine the mass coefficient.

It is not possible to produce a reproducible signal for the sensitivity of the nephelometer using external test standards. However, the nephelometer is regularly flushed with zero air during operation (auto-zero function as part of every filter change), thus determining and documenting the position of the zero point on a regular basis. Information on the current and previous NEPH backgrounds can be retrieved from the instrument at all times. Since the nephelometer is continuously calibrated with a very stable radiometric measurement, a separate examination of the stability of the nephelometer's signal under operating conditions can be omitted.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

Page 79 of 440

6.4 **Evaluation**

All instrument functions listed in the manual are available and can be activated. The current system status is monitored continuously and problems are indicated by a series of different warning messages.

An external check of the zero point using a zero filter is possible at any time. A check of the radiometric measurement using the "mass transfer standard" foil set can also be performed anytime.

It is not possible to produce a reproducible signal for the sensitivity of the nephelometer using external test standards. However, the nephelometer is regularly flushed with zero air during operation (auto-zero function as part of every filter change), thus determining and documenting the position of the zero point on a regular basis. Information on the current and previous NEPH backgrounds can be retrieved from the instrument at all times. Since the nephelometer is continuously calibrated with a very stable radiometric measurement, a separate examination of the stability of the nephelometer's signal under operating conditions can be omitted.

6.5 Assessment

All system functions listed in the manual are available, can be activated and function well. The current system status is continuously monitored and displayed by a series of status messages.

The results of the external zero checks performed with a zero filter during the field tests as well as the results of the regular mass coefficient checks can be found in Section 6.1

5.3.12 Long-term drift of this report.

Minimum requirement fulfilled? yes

6.6 **Detailed presentation of test results**

Please refer to Section 6.1 5.3.12 Long-term drift



Page 80 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 4.1.4 Set-up times and warm-up times

The set-up times and warm-up times shall be specified in the instruction manual.

6.2 Equipment

A clock was required for this test.

6.3 Performance of test

The AMS were put into operation in accordance with the manufacturer's description. The necessary set-up and warm-up times were recorded separately.

Constructional measures undertaken prior to the measurement, such as the opening of an inlet through the cabinet roof, were not taken into account for evaluation.

6.4 Evaluation

The set-up time comprises the time needed for all necessary works from system installation to start-up.

The measuring system must be protected from weather inconsistencies, e.g. in an air-conditioned measuring cabinet. Moreover, extensive on-site construction work is required in order to lead the sampling tube through the roof of a measuring cabinet. A non-stationary application is therefore only to be undertaken together with the associated peripheral devices.

The following steps are strictly necessary for the installation of the measuring device:

- Unpacking and installation of the measuring system (in a rack or on a bench)
- Installation of the sampling tube, dynamic heating system and PM₁₀ sampling inlet
- Connection of the pump
- Fitting of the ambient temperature sensor (near the sampling inlet)
- Set-up of all connecting and control lines
- Connection of power supply
- Optional: Connection of peripheral recording and control systems (data logger, PC with iPort) to the respective ports
- Switch-on of the measuring system
- Set-up of filter tape

The time it takes to perform these works makes up the set-up time. In this case, it amounts to approx. 1 hour.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

Page 81 of 440

The warm-up time is the time between the start of operation of the measuring system and the point when it is ready for measurement.

After switching on the system, the system is in the equilibration phase until the BETA detector has adjusted to the ambient conditions. This phase has a duration of at least 12 hours. After the equilibration phase, the following actions are necessary for starting operation the first time:

- Check of system settings with regard to flow, heating, filter tape parameters, recording of measured values, date and time
- Check and, if required, adjustment of the temperature sensors (ambient temperature, nephelometer temperature, flow temperature)
- Check and, if required, adjustment of rel. air humidity of the nephelometer
- Check and, if required, adjustment of the ambient air pressure measurement
- Check and, if required, adjustment of the flow rate
- Leak test
- Check and, if required, adjustment of the nephelometer's zero point with a HEPA filter
- If necessary, check of the radiometric mass determination calibration with mass foils

Duration: approx. 1 hour

In case of restarting operation after a short downtime, e.g. after a power outage, the above mentioned steps can be omitted with exception of a check of the system parameters, a plausibility test of the sensor values and an inspection of possible status/error messages.

If required, potential changes in the basic parameterisation of the measuring instrument can likewise be performed in just a few minutes by staff familiarised with the instruments.

6.5 **Assessment**

The set-up and warm-up times were determined.

The measuring system can be operated at different measurement sites with manageable effort. The set-up time is approximately 1 hour and the warm-up time takes a minimum of approx. 12 hours after the measuring system has adjusted to ambient conditions.

Minimum requirement fulfilled? yes

Detailed presentation of test results 6.6



Page 82 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 4.1.5 Instrument design

The instruction manual shall include specifications of the manufacturer regarding the design of the measuring system. The main elements are:

Instrument shape (e.g. bench mounting, rack mounting, free mounting)

Mounting position (e.g. horizontal or vertical mounting)

Safety requirements

Dimensions

Weight

Power consumption

6.2 Equipment

A power consumption measuring instrument and a scale were used for this test.

6.3 Performance of test

The installation of the delivered instruments was compared with the description given in the manuals. The specified power consumption was determined for a period of 24 h under normal operating conditions during field test.

6.4 Evaluation

The measuring system must be installed in horizontal mounting position (e.g. on a bench or a rack) protected from weather inconsistencies. The temperature at the installation site shall be within the range of 5 °C to 40 °C with a relatively low amount of temperature fluctuation (no direct sunlight, no direct exposure to heater or air conditioner).

The dimensions and weights of the measuring system conform to the specifications in the manual.

The power consumption of the measuring system and pump is specified by the manufacturer as a maximum of approx. 880 W. During a 24-hour test, these specifications were checked. At no time the mentioned value was exceeded during these investigations.

6.5 Assessment

The instrument design specifications listed in the operating manual are complete and correct. Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 83 of 440

6.1 4.1.6 Unintended adjustment

It shall be possible to secure the adjustment of the measuring system against illicit or unintended adjustment during operation.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

The measuring system is operated using the front panel pushbuttons and LCD display.

A change of the parameters or the adjustment of sensors is only possible by pressing several key sequences.

The measuring system can also be password protected. If a password protection is activated (lock icon), it is still possible to see data, parameters and settings on the front panel user interface. It is, however, not possible to perform any changes.

As an outside installation of the measuring device is not possible, additional protection is given by installation at locations, to which unauthorised people have no access (e.g. locked measuring cabinet).

6.4 Evaluation

Unintended and unauthorised adjustment of instrument parameters can be avoided by password protection. Even without password protection, the adjustment of sensors and change of the parameters can only be done by pressing several key sequences. Moreover, additional protection against unauthorised intervention is given by installing the system in a locked measuring cabinet.

6.5 Assessment

The AMS is protected against unauthorised and unintended adjustment. In addition, the AMS shall be locked up in a measuring cabinet.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results



Page 84 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

6.1 4.1.7 Data output

The output signals shall be provided digitally (e.g. RS232) and/or as analogue signals (e.g. 4 mA to 20 mA).

6.2 Equipment

PC with "iPort" software.

6.3 Performance of test

The test was carried out using a PC with the software "iPort" (via Ethernet).

The AMS was connected to a PC via Ethernet and the data were downloaded.

The AMS also offers the possibility of outputting analogue signals and measured signals or communicating via serial interface RS 232/RS 485.

6.4 Evaluation

The measured signals are offered as follows at the rear side of the instrument:

Analogue: 0-0.1, 0-1, 0-5 and 0-10 V selectable concentration range

0-20 or 4-20 mA selectable concentration range

Digital: Ethernet with "iPort" software

RS 232 / RS 485 interface

6.5 Assessment

Measured signals are output as analogue signals (in V or mA) and digitally (via Ethernet, RS 232, RS 485).

The connection of additional measuring and peripheral devices to the respective ports of the devices is possible (e.g. analogue inputs).

Minimum requirement fulfilled? yes

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 85 of 440

6.6 Detailed presentation of test results

Figure 33 shows a view of the rear side of the instrument with the respective measured value outputs.



Figure 33: Rear view of Model 5030i SHARP



Page 86 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.1 General

The manufacturer's specifications in the instruction manual shall be by no means better than the results of the performance test.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

The test results were compared with the specifications of the manual.

6.4 Evaluation

Deviations found on the first draft of the manual from the actual design were cleared.

6.5 Assessment

No differences between the instrument design and the descriptions given in the manual were detected.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Please refer to Section 6.4 of this module.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 87 of 440

6.1 5.2.1 Certification ranges

The certification range intended for testing shall be determined.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

The certification range intended for testing shall be determined.

6.4 Evaluation

Standard VDI 4202, Part 1 contains the following minimum requirements on certification ranges for systems measuring suspended particulate matter in ambient air:

Table 15: Certification ranges

Measured com- ponent	Lower limit of CR	Upper limit of CR	Limit value	Evaluation period
	in µg/m³	in µg/m³	in µg/m³	
PM ₁₀	0	100	50	24 h

The certification ranges are related to the limit value with the shortest assessment period and used for the assessment of the measuring system in the range of the limit value. This assessment of the measuring system in the range of the limit value is performed as part of the determination of the expanded uncertainty of the candidates according to Guide [4]. For this purpose, the following values are used as reference values in accordance with the specifications of the guide:

 PM_{10} : 50 µg/m³

Reference is made to test point 6.1 5.4.10 Calculation of the expanded uncertainty of the instruments of this report.

6.5 Assessment

It is possible to assess the measuring system in the range of the relevant limit values. Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Please refer to test point 6.1 5.4.10 Calculation of the expanded uncertainty of the instruments of this report.



Page 88 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.2.2 Measuring range

The upper limit of the measuring range shall be greater or equal to the upper limit of the certification range.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

It was tested, whether the upper limit of the measuring range of the measuring system is greater or equal to the upper limit of the certification range.

6.4 Evaluation

As a standard, a measuring range of $0-10\ 000\ \mu\text{g/m}^3$ is adjusted on the measuring system.

As appropriate default setting of the analogue output for European conditions a measuring range of 0 - 200 or $0 - 1000 \,\mu\text{g/m}^3$ is recommended.

(Recommended) measuring range: $0 - 200 \text{ or } 0 - 1000 \text{ µg/m}^3$

Upper limit of the certification range: PM_{10} : 100 $\mu g/m^3$

6.5 Assessment

A measuring range of $0-10~000~\mu g/m^3$ is set by default. It is possible to adjust other measuring ranges.

The upper limit of the measuring range of the measuring system is greater than the respective upper limit of the certification range.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 89 of 440

6.1 5.2.3 Negative output signals

Negative output signals or measured values may not be suppressed (life zero).

6.2 Equipment

No additional equipment required.

6.3 Performance of test

The AMS was tested on its ability to display negative output signals in the laboratory and in the field.

6.4 Evaluation

The AMS can display negative values both on the front panel and over data outputs.

6.5 Assessment

Negative measured signals are displayed directly on the AMS and are transmitted correctly via the respective signal outputs of the measuring system.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results



Page 90 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.2.4 Failure in the mains voltage

In case of malfunction of the measuring system or failure in the mains voltage for a period of up to 72 h, uncontrolled emission of operation and calibration gas shall be avoided. The instrument parameters shall be secured by buffering against loss caused by failure in the mains voltage. When mains voltage returns, the instrument shall automatically reach the operation mode and start the measurement according to the operating instructions.

6.2 Equipment

Not additional equipment required.

6.3 Performance of test

A failure in the mains voltage was simulated and it was tested, whether the instrument remains undamaged and is ready for measurement after restart of the power supply.

6.4 Evaluation

Since the measuring systems need neither operation nor calibration gases an uncontrolled escape of gases is not possible.

In case of a failure in the mains voltage, the measuring system resumes operation automatically. However, at least the first 12 h worth of data after voltage returns shall be discarded, since the system needs an equilibration phase after restart until the BETA detector adjusts to ambient conditions (see point 6.1 4.1.4 Set-up times and warm-up times).

6.5 Assessment

All instrument parameters are protected against loss through buffering. After the power supply has returned, the measuring device goes back to failure-free operational condition and resumes measurement. However, at least the first 12 h worth of data after voltage returns shall be discarded, since the system needs an equilibration phase after restart until the BETA detector adjusts to ambient conditions.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 91 of 440

6.1 5.2.5 Operating states

The measuring system shall allow the control of important operating states by telemetrically transmitted status signals.

6.2 Equipment

PC for data acquisition.

6.3 Performance of test

A PC was connected locally via Ethernet to the AMS and the transfer of data including system status was tested.

Furthermore, it is possible to monitor and operate the instrument via serial interface.

It is also easy to monitor and operate the AMS remotely with an appropriate router or modem.

6.4 Evaluation

The measuring system enables an extensive telemetric control and operation in a variety of ways (Ethernet, RS232, RS485).

6.5 Assessment

The measuring systems can be extensively monitored and operated from an external PC via modem or router.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results



Page 92 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.2.6 Switch-over

Switch-over between measurement and functional check and/or calibration shall be possible telemetrically by computer control or manual intervention.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

The AMS can be monitored and partly operated by the user directly on the instrument or via telemetric remote control.

Some functions, e.g. performing a span foil test for checking the mass coefficient of the radiometric measurement, can only be activated directly on the instrument.

6.4 Evaluation

All operating procedures that do not require practical work on site can be monitored by the user directly on the instrument as well as by telemetric remote control.

6.5 Assessment

In principle, all necessary operations for performing a functional check can be monitored directly on the system or via telemetric remote control.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 93 of 440

6.1 5.2.7 Maintenance interval

The maintenance interval of the measuring system shall be determined during the field test and specified. The maintenance interval should be three months, if possible, but at least two weeks.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

This test was carried out in order to determine, which maintenance procedures are required at which period to maintain the correct functionality of the measuring system. Furthermore, the results of the zero and span drift test described in point 6.1 5.3.12 Long-term drift were taken into account for the determination of the maintenance interval.

6.4 Evaluation

No drifts beyond the permissible limits were detected during the entire field test period. Therefore, the maintenance interval is determined by the specified maintenance procedures (see module 4.1.2).

During operation, the maintenance works can be limited to checks of contamination, plausibility and status/error messages.

6.5 Assessment

The maintenance interval is defined by the necessary maintenance procedures and has been set to 1 month.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

The necessary maintenance works can be found in module 4.1.2 of this report and in chapter 5 of the instruction manual.



Page 94 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.2.8 Availability

The availability of the measuring system shall be determined during the field test and shall be at least 95 %.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

The start and end times of the availability tests were defined by the start and end of the field tests at each test site. All measurement interruptions, e.g. due to system failures or maintenance works, were taken into account.

6.4 Evaluation

Table 16 and Table 17 show a summary of the operation, maintenance and malfunction times. The measuring systems were operated over a period of 294 measurement days (see annex 5). This period includes a total of 22 days of zero filter operation, audits and days, which had to be rejected due to the change to zero filter (see annex 5).

Outages caused by external influences, which cannot be attributed to the devices themselves, were recorded on 10 March 2011 and 14 March 2011 (power outage). Since the AMS needs some hours for stabilising, one day following the outages had to be discarded as well. Furthermore, SN 3 was switched off inadvertently on 26 April 2011. On this account, the total operating time is reduced to 290 days for SN 3 and 290 days for SN 4.

The systems presented the following malfunctions:

SN 3:

A malfunction of the motor, which opens / closes the measuring chamber, ine was observed at the test site Cologne (winter) on 1 May 2011. It was repaired on 2 May 2011. The outage had thus a duration of 2 days.

A further outage took place at the test site Bornheim (summer) between the 26 July 2011 and 29 July 2011, due to a faulty heater board. It was replaced on 29 July 2011.

No further malfunctions of the instrument were observed

SN 4:

No malfunctions were observed on SN 4.

The customary maintenance works (not including zero filter operation), e.g. maintenance of the sampling inlet and check of flow rate / leak tightness, generally do not take more than approx. 1 h per day. For this reason, the pertaining daily averages were not discarded.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 95 of 440

6.5 Assessment

The availability was 97.9~% for SN 3 and 100~% for SN 4 without test-related outages, or 90.3~% for SN 3 and 92.4~% for SN 4 including test-related outages.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Table 16: Determination of availability (without test-related outages)

		System 1 (SN 3)	System 2 (SN 4)
Operating time	d	290	290
Outage time	d	6	0
Maintenance	d	0	0
Actual operating time	d	284	290
Availability	%	97.9	100

 Table 17:
 Determination of availability (including test-related outages)

		System 1 (SN 3)	System 2 (SN 4)
Operating time	d	290	290
Outage time	d	6	0
Maintenance incl. zero filter operation	d	22	22
Actual operating time	d	262	268
Availability	%	90.3	92.4



Page 96 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.2.9 Instrument software

The version of the instrument software to be tested shall be displayed during switch-on of the measuring system. The test institute shall be informed on changes in the instrument software, which have influence on the performance of the measuring system.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

It was tested, whether the instrument software version can be displayed on the instrument. The manufacturer was made aware that any change to the instrument software must be reported to the test institute.

6.4 Evaluation

The current software version is not displayed on the instrument during switch-on. It can, however, be reviewed at any time by selecting the menu "Diagnostics", item "Program Versions".

The test started in the year 2009 with the software version V00.05.41.114. The software was steadily enhanced and optimised during the course of testing.

At the beginning of the field test in January 2011, software version V01.00.01.197 was implemented. This version was used during the whole field test.

The software was updated to version V01.00.03.225 after conclusion of the regular field test and before starting the remaining laboratory tests. This software version was as well installed during the additional comparison campaign "Bornheim, summer 2013.

In the meantime the software version was set to the current version V02.00.00.232+ due to a discontinuation of a processor board.

An overview of software changes can be found in Section 4.1General.

The reliability of the AMS was consistently increased with every change. The changes introduced up to version V02.00.00.232+ are not expected to affect the performance of the AMS significantly.

6.5 Assessment

The version of the instrument software is shown on the display. Changes to the instrument software are communicated to the test institute.

Minimum requirement fulfilled? yes

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 97 of 440

6.6 Detailed presentation of test results

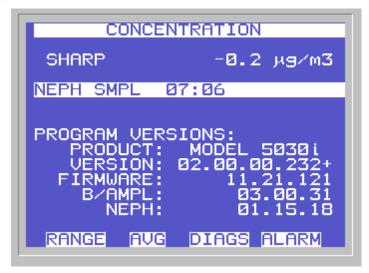


Figure 34: Software version (here V02.00.00.232+) displayed by selection of the menu "Diagnostics / Program Versions"

Note:

The subordinate software versions FIRMWARE (general parameters of the i-series), B/AMPL (beta / amplifier) and NEPH (nephelometer) listed in the software display above are fixed main software components. Changes to the subordinate software programmes FIRMWARE (general parameters of the i-series), B/AMPL (beta / amplifier) and NEPH (nephelometer) are necessarily bound to a change in the main software.





Page 98 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.3.1 General

The test is based on the minimum requirements of Standard VDI 4202 Part 1 (September 2010).

6.2 Equipment

No additional equipment required.

6.3 Performance of test

The test is based on the minimum requirements of Standard VDI 4202, Part 1 (September 2010).

6.4 Evaluation

Standard VDI 4202, Part 1 and VDI 4203, Part 3 were republished after an extensive revision with latest update September 2010. Unfortunately, after this revision uncertainties and contradictions remain regarding the concrete minimum requirements on the one hand, and the general relevance of the test points on the other hand when testing particulate ambient air measuring devices. The following test points require clarification:

- 6.1 5.3.2 Repeatability standard deviation at zero point
- no minimum requirement defined
- 6.1 5.3.3 Repeatability standard deviation at reference point
- not relevant for particulate devices
- 6.1 5.3.4 Linearity (lack of fit)
- not relevant for particulate devices
- 6.1 5.3.7 Sensitivity coefficient of surrounding temperature
- no minimum requirement defined
- 6.1 5.3.8 Sensitivity coefficient of supply voltage
- no minimum requirement defined
- 6.1 5.3.11 Standard deviation from paired measurement
- no minimum requirement defined
- 6.1 5.3.12 Long-term drift
- no minimum requirement defined
- 6.1 5.3.13 Short-term drift
- not relevant for particulate devices
- 6.1 5.3.18 Overall uncertainty
- not relevant for particulate devices

For this reason an official request to the competent German body was made, to define a coordinated procedure for dealing with inconsistencies in the Standard.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 99 of 440

The following procedure was suggested:

Test points 5.3.2, 5.3.7, 5.3.8, 5.3.11 and 5.3.12 are evaluated as before basing on the minimum requirements stated in VDI 4202 Part 1 of 2002 (i.e. using the reference values B_0 , B_1 and B_2).

The performance of the test points 5.3.3, 5.3.4, 5.3.13 and 5.3.18 is omitted, as they are not relevant for particulate measuring devices.

The competent German body agreed with the proposed procedure by decisions of 27 June 2011 and 07 October 2011.

6.5 Assessment

The test is based on the minimum requirements of Standard VDI 4202, Part 1 (September 2010). Test points 5.3.2, 5.3.7, 5.3.8, 5.3.11 and 5.3.12 are evaluated as before basing on the minimum requirements stated in VDI 4202 Part 1 of 2002 (i.e. using the reference values B_0 , B_1 and B_2). The performance of the test points 5.3.3, 5.3.4, 5.3.13 and 5.3.18 is omitted, as they are not relevant for particulate measuring devices.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results



Page 100 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.3.2 Repeatability standard deviation at zero point

The repeatability standard deviation at zero point shall not exceed the requirements of Table 2 in the certification range according to Table 1 of Standard VDI 4202 Part 1 (September 2010).

In case of deviating certification ranges, the repeatability standard deviation at zero point shall not exceed 2% of the upper limit of this certification range.

Note:

This item cannot be evaluated according to the current versions of Standards VDI 4202 Part 1 (September 2010) and VDI 4203 Part 3 (September 2010) when testing particulate measuring systems, due to the fact that a minimum requirement has not been defined. By resolution of the competent German body (see module 5.3.1), reference is made to the following requirement in the previous version of Standard VDI 4202 Part 1 (June 2002):

The detection limit of the measuring system shall be smaller or equal to reference value B₀. The detection limit shall be determined in the field.

6.2 Equipment

Zero filter for testing the zero point.

6.3 Performance of test

The detection limit is determined for candidates SN 3 and SN 4 by operating the devices with the respective zero filters installed at the inlets of both measuring systems. Sampling air free of suspended particulate matter was offered over a period of 15 days, for a duration of 24 h a day. The determination of the detection limit was done in the laboratory, since the provision of particulate-free air for such a long time was not possible under field conditions.

6.4 Evaluation

The detection limit X is determined from the standard deviation s_{x_0} of the SHARP measured values by applying particulate-free sampling air to both candidates. It corresponds to the standard deviation of the average x_0 of the measured values x_{0i} of each candidate multiplied with the Students factor:

$$X = t_{n-1;0.95} \cdot S_{x0} \qquad \qquad \text{where} \cdot S_{x0} = \sqrt{\frac{1}{n-1} \cdot \sum_{i=1,n} (x_{0i} - \overline{x_0})^2}$$

Reference value: $B_0 = 2 \mu g/m^3$

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 101 of 440

6.5 **Assessment**

The investigations result in detection limits of 0.01 µg/m³ for system 1 (SN 3) and 0.16 µg/m³ for system 2 (SN 4).

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Table 18: Detection limit PM₁₀

		System SN 3	System SN 4
No. of values n		15	15
Mean of the zero values $\overline{x_0}$	µg/m³	0.01	0.04
Standard deviation of values s _{x0}	µg/m³	0.01	0.07
Students Factor t _{n-1;0.95}		2.14	2.14
Detection limit X	µg/m³	0.01	0.16

Single values from the determination of the detection limit can be looked up in annex 1 of the appendix.



Page 102 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.3.3 Repeatability standard deviation at reference point

The repeatability standard deviation at reference point shall not exceed the requirements of Table 2 in the certification range according to Table 1 of Standard VDI 4202 Part 1 (September 2010). The limit value or the alert threshold shall be used as reference point.

In case of deviating certification ranges, the repeatability standard deviation at reference point shall not exceed 2% of the upper limit of this certification range. In this case a value c_t at 70% to 80% of the upper limit of this certification range shall be used as reference point.

Note:

By resolution of the competent German body (see module 5.3.1), this test is not relevant for particulate measuring systems.

6.2 Equipment

Not applicable.

6.3 Performance of test

Not applicable.

6.4 Evaluation

Not applicable.

6.5 Assessment

Not applicable.

Minimum requirement fulfilled? -

6.6 Detailed presentation of test results

Not applicable.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 103 of 440

6.1 5.3.4 Linearity (lack of fit)

The analytical function describing the relationship between the output signal and the value of the air quality characteristic shall be linear.

Reliable linearity is given, if deviations of the group averages of measured values about the calibration function meet the requirements of Table 2 of in the certification range according to Table 1 of Standard VDI 4202 Part 1 (September 2010).

For all other certification ranges the group averages of measured values about the calibration function shall not exceed 5 % of the upper limit of the corresponding certification range.

Note:

By resolution of the competent German body (see module 5.3.1), this test is not relevant for particulate measuring systems. For PM₁₀ particulate measuring systems, this test shall be performed according to minimum requirement 5.4.2 "Equivalency of the sampling system".

6.2 Equipment

See module 5.4.2 (PM₁₀)

6.3 Performance of test

For PM₁₀ particulate measuring systems, this test shall be performed according to minimum requirement 5.4.2 "Equivalency of the sampling system".

6.4 Evaluation

See module 5.4.2 (PM₁₀)

6.5 Assessment

For PM₁₀ particulate measuring systems, this test shall be performed according to minimum requirement 5.4.2 "Equivalency of the sampling system".

Minimum requirement fulfilled? -

6.6 Detailed presentation of test results

See module 5.4.2 (PM₁₀)



Page 104 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.3.5 Sensitivity coefficient of sample gas pressure

The sensitivity coefficient of sample gas pressure at reference point shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010). A value c_t at 70 % to 80 % of the upper limit of the certification range shall be used as reference point.

Note:

This test is not relevant for particulate measuring systems.

6.2 Equipment

Not applicable.

6.3 Performance of test

Not applicable.

6.4 Evaluation

Not applicable.

6.5 Assessment

Not applicable.

Minimum requirement fulfilled? -

6.6 Detailed presentation of test results

Not applicable.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

Page 105 of 440

6.1 5.3.6 Sensitivity coefficient of sample gas temperature

The sensitivity coefficient of sample gas temperature at reference point shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010). A value c_t at 70 % to 80 % of the upper limit of the certification range shall be used as reference point.

Note:

This test is not relevant for particulate measuring systems.

6.2 **Equipment**

Not applicable.

6.3 Performance of test

Not applicable.

6.4 **Evaluation**

Not applicable.

6.5 **Assessment**

Not applicable.

Minimum requirement fulfilled? -

6.6 **Detailed presentation of test results**

Not applicable.



Page 106 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

5.3.7 Sensitivity coefficient of surrounding temperature

The sensitivity coefficient of surrounding temperature at zero and reference point shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010). A value c_t at 70 % to 80 % of the upper limit of the certification range shall be used as reference point.

Note:

This item cannot be evaluated according to the current versions of Standards VDI 4202 Part 1 (September 2010) and VDI 4203 Part 3 (September 2010) when testing particulate measuring systems, due to the fact that a minimum requirement has not been defined. By resolution of the competent German body (see module 5.3.1), reference is made to the following requirement in the previous version of Standard VDI 4202 Part 1 (June 2002):

The temperature dependence of the measured value at zero concentration shall not exceed the reference value B_0 if ambient temperature is changed by 15 K in the range of +5 °C to +20 °C or by 20 K in the range of +20 °C to +40 °C.

The temperature dependence of the measured value in the range of the reference value B_1 shall not exceed 5 % of the measured value if ambient temperature is changed by 15 K in the range of +5 °C and +20 °C or by 20 K in the range of +20 °C and +40 °C.

6.2 Equipment

Climatic chamber for a temperature range of +5 to +40 °C, zero filter for testing the zero point and span foil set for testing the span point.

6.3 Performance of test

In order to test the dependence of zero point and measured values on the surrounding temperature, the complete measuring systems were operated in a climatic chamber.

For the zero point test zero filters were installed at the inlets of both measuring systems SN 3 and SN 4, to which particle-free sampling air was applied.

The reference point test comprised a check of the mass coefficient in order to test the stability of the sensitivity of both candidates SN 3 and SN 4.

It is not possible to produce a reproducible signal for the sensitivity of the nephelometer using external test standards. Since the nephelometer is continuously calibrated with a very stable radiometric measurement, a separate examination of the stability of the nephelometer's signal at the reference point under operating conditions can be omitted. The potential dependence of the nephelometer's signal on surrounding temperature is thus examined solely at the zero point.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 107 of 440

The devices were exposed to the following surrounding temperature sequence in the climatic chamber:

$$20 \, ^{\circ}\text{C} - 5 \, ^{\circ}\text{C} - 20 \, ^{\circ}\text{C} - 40 \, ^{\circ}\text{C} - 20 \, ^{\circ}\text{C}.$$

After an equilibration time of approx. 24 h per temperature step, the recording of measured values at zero point (3 x 24 h per temperature step) and at reference point (3 x per temperature step) started.

6.4 Evaluation

Zero point:

The values measured at the concentration of the respective 24 h single measurements were read out and evaluated. The absolute deviation in $\mu g/m^3$ per temperature step was examined in relation to the default value at 20 °C.

Reference value: $B_0 = 2 \mu g/m^3$

Reference point:

The percentage change of the determined measured values for the mass coefficient was examined at each temperature step in relation to the default value at 20 °C.

It should be noted that concentration values could not be simulated by checking the mass coefficient. It was therefore not possible to examine the range of B₁.

6.5 Assessment

The maximum dependence on surrounding temperature in the range 5 °C to 40 °C was -1.1 µg/m³ at zero.

No deviation > 0.9 % to the default value at 20 °C could be observed at reference point. Minimum requirement fulfilled? yes



Page 108 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.6 Detailed presentation of test results

Table 19: Dependence of the zero point (SHARP) on surrounding temperature, deviation in $\mu g/m^3$, average of three measurements

Temperature		Deviation	
Start temperature	End temperature	SN 3	SN 4
°C	°C	μg/m³	μg/m³
20	5	0.0	-0.5
5	20	0.1	-0.5
20	40	0.0	-1.1
40	20	0.0	-1.0

Table 20: Dependence of sensitivity (mass coefficient) on surrounding temperature, deviation in %, average of three measurements

<u> </u>			
Temperature		Deviation	
Start temperature	End temperature	SN 3	SN 4
°C	°C	[%]	[%]
20	5	0.0	0.3
5	20	0.6	-0.3
20	40	0.3	0.9
40	20	0.3	0.3

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 109 of 440

Table 21: Dependence of the zero point (NEPH) on surrounding temperature, deviation in μg/m³, average of three measurements

Tempe	erature	Devi	ation
Start temperature	End temperature	SN 3	SN 4
°C	°C	μg/m³	μg/m³
20	5	-0.1	-0.5
5	20	0.8	-0.5
20	40	-0.2	-1.0
40	20	-0.3	-0.9

The results of the three single measurements are presented in annexes 2 and 3 of the appendix.



Page 110 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.3.8 Sensitivity coefficient of supply voltage

The sensitivity coefficient of supply voltage shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010). A value c_t at 70 % to 80 % of the upper limit of the certification range shall be used as reference point.

Note:

This item cannot be evaluated according to the current versions of Standards VDI 4202 Part 1 (September 2010) and VDI 4203 Part 3 (September 2010) when testing particulate measuring systems, due to the fact that a minimum requirement has not been defined. By resolution of the competent German body (see module 5.3.1), reference is made to the following requirement in the previous version of Standard VDI 4202 Part 1 (June 2002):

The change in the measured values at reference value B_1 caused by normal changes in the mains voltage in the interval (230 +15/-20) V shall not exceed B_0 .

6.2 Equipment

Adjustable isolating transformer and span foil set for testing the reference point.

6.3 Performance of test

In order to test the dependence of the measured signals on supply voltage, the voltage was reduced from 230 V to 210 V and then increased with an intermediate step of 230 V to 245 $^{\circ}$ V

The reference point test comprised a check of the mass coefficient in order to test the stability of the sensitivity of both candidates SN 3 and SN 4.

Since the AMS is not intended for mobile application, a separate check of the dependence of the measured signals on the mains frequency was omitted.

6.4 Evaluation

The percentage change of the determined measured values for the mass coefficient was examined at each voltage step in relation to the default value at 230 V.

It should be noted that concentration values could not be simulated by checking the mass coefficient. It was therefore not possible to examine the range of B₁.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 111 of 440

6.5 Assessment

No deviations > 0.8 % in relation to the default value at 230 V caused by voltage changes could be detected for PM₁₀.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Table 22 shows a summary of the test results.

Table 22: Dependence of the measured values on mains voltage, deviation in %

Mains	voltage	Deviation		
Start voltage	End voltage	SN 3	SN 4	
V	V	[%]	[%]	
230	190	-0.4	-0.2	
190	230	-0.3	0.0	
230	245	0.0	-0.1	
245	230	-0.2	0.8	

The single values are presented in annex 4 of the appendix.



Page 112 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.3.9 Cross-sensitivity

The change in the measured value caused by interfering components in the sample gas shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010) at zero and reference point.

Note:

This test is not relevant for particulate measuring systems. Instead, minimum requirement 5.4.5 is valid. The results of this test can be found in module 5.4.5.

6.2 Equipment

Not applicable.

6.3 Performance of test

Not applicable.

6.4 Evaluation

Not applicable.

6.5 Assessment

Not applicable.

Minimum requirement fulfilled? -

6.6 Detailed presentation of test results

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 113 of 440

6.1 5.3.10 Averaging effect

For gaseous components the measuring system shall allow the formation of hourly averages.

The averaging effect shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010).

Note:

This test is not relevant for particulate measuring systems.

6.2 Equipment

Not applicable.

6.3 Performance of test

Not applicable.

6.4 Evaluation

Not applicable.

6.5 Assessment

Not applicable.

Minimum requirement fulfilled? -

6.6 Detailed presentation of test results



Page 114 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.3.11 Standard deviation from paired measurement

The standard deviation from paired measurements under field conditions shall be determined with two identical measuring systems by paired measurements in the field test. It shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010).

Note:

This item cannot be evaluated according to the current versions of Standards VDI 4202 Part 1 (September 2010) and VDI 4203 Part 3 (September 2010) when testing particulate measuring systems, due to the fact that a minimum requirement has not been defined. By resolution of the competent German body (see module 5.3.1), reference is made to the following requirement in the previous version of Standard VDI 4202 Part 1 (June 2002):

The "Reproduzierbarkeit" [reproducibility] R_D of the measuring system shall be determined by parallel measurements with two identical measuring systems and shall be at least equal to 10. B_1 shall be used as the reference value.

6.2 Equipment

The reproducibility was determined with the auxiliary equipment described in Section 5.

6.3 Performance of test

Reproducibility is defined as the maximum difference between two randomly chosen single values obtained under equal conditions. This test was carried out with two identical systems operated simultaneously during the field test. All measurement data obtained during the field test was evaluated.

6.4 Evaluation

The reproducibility is calculated as follows:

$$R = \frac{B_1}{U} \ge 10 \qquad \qquad \text{where} \qquad U = \pm s_D \cdot t_{(n;0,95)} \quad \text{and} \quad s_D = \sqrt{\frac{1}{2n}} \cdot \sum_{i=1}^n (x_{1i} - x_{2i})^2$$

R = Reproducibility at B₁

U = Uncertainty

• $B_1 = 40 \,\mu g/m^3 \,for \,PM_{10}$

• s_D = Standard deviation from paired measurements

• n = No. of paired measurements

• $t_{(n;0,95)}$ = Students factor at confidence level of 95 %

x_{1i} = Measured signal of system 1 (e.g. SN 3) at ith concentration.

x_{2i} = Measured signal of system 2 (e.g. SN 4) at ith concentration.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

Page 115 of 440

6.5 **Assessment**

The reproducibility for PM₁₀ was 20 for the complete dataset of the field test. Minimum requirement fulfilled? yes

6.6 **Detailed presentation of test results**

The test results are summarised in Table 23. The graphical representation for PM₁₀ is shown in Figure 56 to Figure 60.

Note: The determined uncertainties are applied to reference value B₁ for each test site.

Table 23: Concentration averages, standard deviation, uncertainty range and reproducibility in the field, measured component PM₁₀

Test site	No. of values	C (SN 3)	C (SN 4)	\overline{c}_{ges}	S _D	t	U	R
		µg/m³	µg/m³	μg/m³	μg/m³		µg/m³	
Cologne (winter)	53	30.0	29.3	29.6	1.040	2.006	2.09	19
Bornheim (summer)	96	18.2	17.4	17.8	1.028	1.985	2.04	20
Bornheim (winter)	49	27.0	27.1	27.1	1.039	2.010	2.09	19
Teddington (summer)	64	13.4	12.5	13.0	1.158	1.998	2.31	17
All sites	262	21.0	20.4	20.7	1.039	1.969	2.05	20

- c (SN 3): Concentration averages, system SN 3
- c (SN 4): Concentration averages, system SN 4
- Concentration averages of systems SN 3 & SN 4

The single values are presented in annex 5 of the appendix.



Page 116 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.3.12 Long-term drift

The long-term drift at zero point and reference point shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010) in the field test. A value c_t at 70 % to 80 % of the upper limit of the certification range shall be used as reference point.

Note:

This item cannot be evaluated according to the current versions of Standards VDI 4202 Part 1 (September 2010) and VDI 4203 Part 3 (September 2010) when testing particulate measuring systems, due to the fact that a minimum requirement has not been defined. By resolution of the competent German body (see module 5.3.1), reference is made to the following requirement in the previous version of Standard VDI 4202 Part 1 (June 2002):

The temporal change in the measured value at zero concentration shall not exceed the reference value B₀ in 24 h and in the maintenance interval.

The temporal change in the measured value in the range of the reference value B_1 shall not exceed 5 % of B_1 in 24 h and in the maintenance interval.

6.2 Equipment

Zero filter for testing the zero point and span foil set for testing the reference point.

6.3 Performance of test

The test was performed as part of the field test over a period 19 months.

As part of the monthly regular checks (including those at the beginning and at the end of tests at each field test site), the measuring systems were operated with a zero filter at the device inlet over a period of at least 24 h each. The values obtained at zero concentration were evaluated.

Furthermore, the stability of the mass coefficient was tested and evaluated as reference point check at the beginning and at the end of the tests at each field test site.

It is not possible to produce a reproducible signal for the sensitivity of the nephelometer using external test standards. Since the nephelometer is continuously calibrated with a very stable radiometric measurement, a separate examination of the stability of the nephelometer's signal at the reference point can be omitted.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 117 of 440

6.4 Evaluation

An evaluation of the drift at zero point and of the measured value in 24 h is not possible.

The zero point drift was evaluated on the basis of the results of the external zero point measurements performed on a regular basis. For this, the values were compared with the "measured values" of the previous test and with the "measured values" of the first test.

The reference point drift was evaluated on the basis of the results of the mass coefficient determination. Here again, the values were compared with the "measured values" of the previous test and with the "measured values" of the first test.

It should be noted that concentration values could not be simulated by checking the mass coefficient. It was therefore not possible to examine the range of B₁.

6.5 Assessment

The maximum deviation at zero point was 1.8 μ g/m³ in relation to the previous value and 1.9 μ g/m³ in relation to the start value, and is therefore within the permissible limits of B₀ = 2 μ g/m³.

The values obtained during the sensitivity drift tests amount to a maximum of -2.1 % in relation to the previous value for PM₁₀.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Table 24 presents the values obtained at zero concentration and the calculated deviations in relation to the previous value and to the start value in $\mu g/m^3$. Figure 35 to Figure 36 presents a graph of the zero point drift during the entire test.

Table 25 shows the deviations of the measured values from the respective previous value in %. Figure 37 and Figure 38 presents a graph of the drift of the measured values (in relation to the previous value).



Page 118 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Table 24: Zero point drift SN 3 & SN 4, test with zero filter

		SN 3				SN 4	
	Measured	Deviation from	Deviation from		Measured	Deviation from	Deviation from
Date	Value	previous value	start value	Date	Value	previous value	start value
	μg/m³	μg/m³	μg/m³		μg/m³	μg/m³	µg/m³
3/5/2011	-0.1	-	=	3/5/2011	-0.1	-	-
3/6/2011	0.1	0.1	0.1	3/6/2011	0.0	0.1	0.0
3/7/2011	0.0	-0.1	0.1	3/7/2011	-0.1	-0.1	0.0
4/8/2011	0.1	0.1	0.2	4/8/2011	0.7	0.8	0.7
4/9/2011	-0.1	-0.2	0.0	4/9/2011	0.0	-0.7	0.0
4/10/2011	0.0	0.1	0.0	4/10/2011	0.0	0.0	0.1
5/10/2011	0.1	0.1	0.2	5/10/2011	0.0	0.0	0.1
5/11/2011	0.1	0.0	0.2	5/11/2011	0.0	0.0	0.1
7/22/2011	-0.2	-0.3	-0.2	7/22/2011	0.2	0.2	0.3
7/23/2011	-0.1	0.1	-0.1	7/23/2011	0.3	0.1	0.4
7/24/2011	-0.6	-0.5	-0.5	7/24/2011	0.0	-0.4	0.0
9/17/2011	-0.2	0.4	-0.1	9/17/2011	0.0	0.0	0.0
9/18/2011	-0.2	0.0	-0.1	9/18/2011	0.2	0.2	0.3
10/22/2011	-0.2	0.0	-0.1	10/22/2011	0.0	-0.2	0.0
10/23/2011	-0.1	0.1	0.0	10/23/2011	0.1	0.1	0.1
11/11/2011	0.0	0.0	0.0	11/11/2011	1.0	1.0	1.1
11/12/2011	0.1	0.1	0.2	11/12/2011	0.0	-1.0	0.1
11/13/2011	0.0	-0.1	0.0	11/13/2011	0.0	0.0	0.1
2/11/2012	0.0	0.0	0.0	2/11/2012	0.1	0.1	0.1
2/12/2012	0.0	0.0	0.1	2/12/2012	0.0	-0.1	0.1
3/9/2012	0.0	0.0	0.0	3/9/2012	0.0	0.0	0.0
3/10/2012	-0.1	0.0	0.0	3/10/2012	0.0	0.1	0.1
9/8/2012	-0.1	0.0	0.0	9/8/2012	1.8	1.8	1.9
9/9/2012	0.0	0.1	0.0	9/9/2012	0.0	-1.8	0.1

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 119 of 440

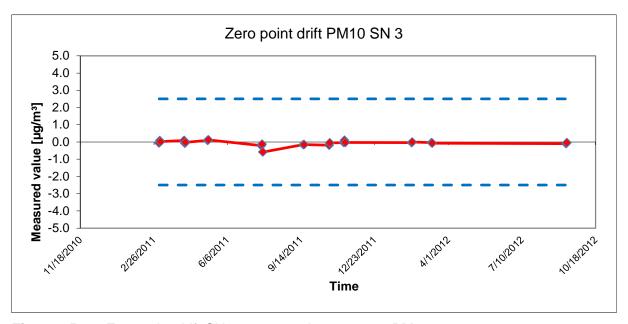


Figure 35: Zero point drift SN 3, measured component PM₁₀

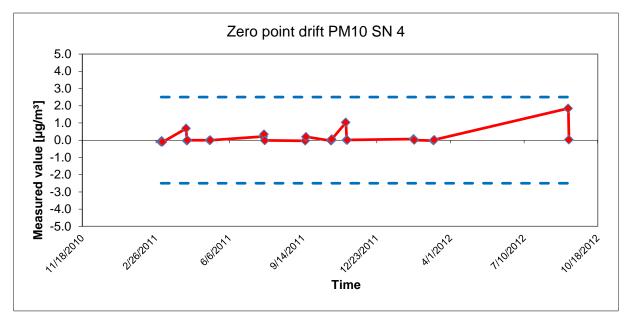


Figure 36: Zero point drift SN 4, measured component PM₁₀



Page 120 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Table 25:Sensitivity drift SN 3 & SN 4

		SN3				SN 4	
	Measured	Deviation from	Deviation from		Measured	Deviation from	Deviation from
Date	Value	previous value	start value	Date	Value	previous value	start value
		%	%			%	%
1/27/2011	7138.1	-	-	1/27/2011	7203.2	-	-
5/12/2011	7108.0	-0.4	-0.4	5/12/2011	7050.4	-2.1	-2.1
7/19/2011	7251.0	2.0	1.6	7/19/2011	7201.1	2.1	0.0
11/14/2011	7129.7	-1.7	-0.1	11/14/2011	7175.2	-0.4	-0.4
3/8/2012	7149.4	0.3	0.2	3/8/2012	7147.8	-0.4	-0.8
6/18/2012	7176.1	0.4	0.5	6/18/2012	7004.6	-2.0	-2.8
9/10/2012	7118.5	-0.8	-0.3	9/10/2012	7068.7	0.9	-1.9

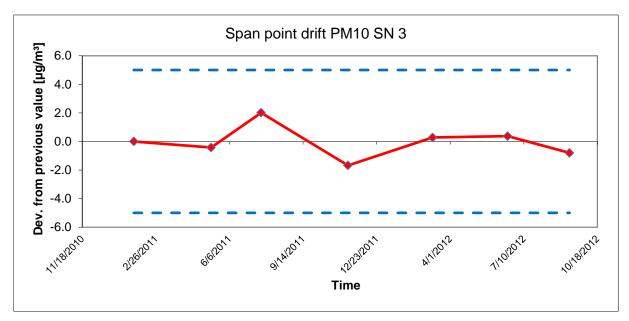


Figure 37: Drift of the measured value SN 3, measured component PM₁₀

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 121 of 440

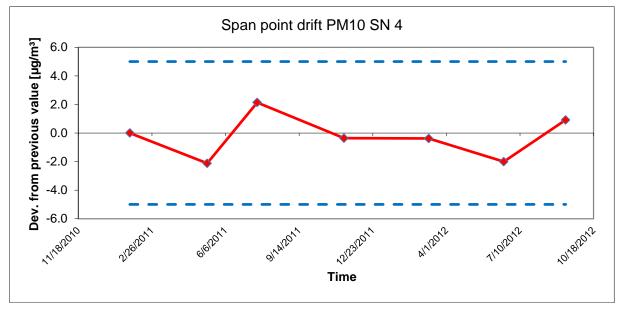


Figure 38: Drift of the measured value SN 4, measured component PM₁₀



Page 122 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.3.13 Short-term drift

The short-term drift at zero point and reference point shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010) within 12 h (for benzene 24 h) in the laboratory test and within 24 h in the field test. A value c_t at 70 % to 80 % of the upper limit of the certification range shall be used as reference point.

Note:

By resolution of the competent German body (see module 5.3.1), this test is not relevant for particulate measuring systems.

6.2 Equipment

Not applicable.

6.3 Performance of test

Not applicable.

6.4 Evaluation

Not applicable.

6.5 Assessment

Not applicable.

Minimum requirement fulfilled? -

6.6 Detailed presentation of test results

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

Page 123 of 440

6.1 5.3.14 Response time

The response time (rise) of the measuring system shall not exceed 180 s.

The response time (fall) of the measuring system shall not exceed 180 s.

The difference between the response time (rise) and response time (fall) of the measuring system shall not exceed 10 % of response time (rise) or 10 s, whatever value is larger.

Note:

This test is not relevant for particulate measuring systems.

6.2 **Equipment**

Not applicable.

6.3 Performance of test

Not applicable.

6.4 **Evaluation**

Not applicable.

6.5 **Assessment**

Not applicable.

Minimum requirement fulfilled? -

6.6 **Detailed presentation of test results**



Page 124 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.3.15 Difference between sample and calibration port

The difference between the measured values obtained by feeding gas at the sample and calibration port shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010). A value c_t at 70 % to 80 % of the upper limit of the certification range shall be used as reference point.

Note:

This test is not relevant for particulate measuring systems.

6.2 Equipment

Not applicable.

6.3 Performance of test

Not applicable.

6.4 Evaluation

Not applicable.

6.5 Assessment

Not applicable.

Minimum requirement fulfilled? -

6.6 Detailed presentation of test results

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 125 of 440

6.1 5.3.16 Converter efficiency

In the case of measuring systems with a converter, the converter efficiency shall be at least 98 %.

Note:

This test is not relevant for particulate measuring systems.

6.2 Equipment

Not applicable.

6.3 Performance of test

Not applicable.

6.4 Evaluation

Not applicable.

6.5 Assessment

Not applicable.

Minimum requirement fulfilled? -

6.6 Detailed presentation of test results



Page 126 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.3.17 Increase of NO₂ concentration due to residence in the measuring system

In case of NO_X measuring systems the increase of NO_2 concentration due to residence in the measuring system shall not exceed the requirements of Table 2 of Standard VDI 4202 Part 1 (September 2010).

The requirements of Table 2 apply to certification ranges according to Table 1 of Standard VDI 4202 Part 1 (September 2010). For deviating certification ranges the requirements shall be proportionally converted.

Note:

This test is not relevant for particulate measuring systems.

6.2 Equipment

Not applicable.

6.3 Performance of test

Not applicable.

6.4 Evaluation

Not applicable.

6.5 Assessment

Not applicable.

Minimum requirement fulfilled? -

6.6 Detailed presentation of test results

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 127 of 440

6.1 5.3.18 Overall uncertainty

The expanded uncertainty of the measuring system shall be determined. The value determined shall not exceed the corresponding data quality objectives in the applicable EU Directives on air quality listed in Annex A, Table A1 of Standard VDI 4202 Part 1 (September 2010).

Note:

By resolution of the competent German body (see module 5.3.1), this test is not relevant for particulate measuring systems. Reference is made to module 5.4.10.

6.2 Equipment

By resolution of the competent German body (see module 5.3.1), this test is not relevant for particulate measuring systems. Reference is made to module 5.4.10.

6.3 Performance of test

By resolution of the competent German body (see module 5.3.1), this test is not relevant for particulate measuring systems. Reference is made to module 5.4.10.

6.4 Evaluation

By resolution of the competent German body (see module 5.3.1), this test is not relevant for particulate measuring systems. Reference is made to module 5.4.10.

6.5 Assessment

By resolution of the competent German body (see module 5.3.1), this test is not relevant for particulate measuring systems. Reference is made to module 5.4.10.

Minimum requirement fulfilled?

6.6 Detailed presentation of test results

By resolution of the competent German body (see module 5.3.1), this test is not relevant for particulate measuring systems. Reference is made to module 5.4.10.



Page 128 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.4.1 General

Testing of measuring systems for particulate air pollutants is carried out in compliance with the minimum requirement stated in Table 5 of Standard VDI 4202, Part 1. Furthermore, the particle mass concentration shall be related to a defined volume. The relation to volume with respect to pressure and temperature shall be comprehensively described.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

Testing was carried out in compliance with the minimum requirements stated in Table 5 of Standard VDI 4202, Part 1 (September 2010).

It was tested, whether the measured particulate mass concentrations are related to a defined volume.

6.4 Evaluation

Testing was carried out in compliance with the minimum requirements stated in Table 5 of Standard VDI 4202, Part 1 (September 2010).

The Model 5030i SHARP measuring system combines two different methods of measurement (nephelometry + radiometry). Here, the highly sensitive but potentially inaccurate measurement technique (NEPH) is continuously calibrated by the non-sensitive but very precise measurement technique (BETA). The mass collected on the filter tape is determined by the radiometric measurement. The calculated mass is then related to a defined and actively regulated sampling volume, thus determining the particulate mass concentration.

6.5 Assessment

Testing was carried out in compliance with the minimum requirements stated in Table 5 of Standard VDI 4202, Part 1 (September 2010).

The calculated mass is related to a defined and actively regulated sampling volume, thus determining the particulate mass concentration.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Not required for this test.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 129 of 440

6.1 5.4.2 Equivalency of the sampling system

The equivalency between the PM₁₀ sampling system and the reference method according to EN 12341 [T5] shall be demonstrated.

6.2 Equipment

This test was carried out with the auxiliary equipment described in Section 5.

6.3 Performance of test

The test was carried out as described in Section 4 at various sites during the field test while taking into account different seasons and PM₁₀ concentrations levels.

At least 15 valid paired values were determined at each test site.

6.4 Evaluation

Requirement of EN 12341:

The calculated function y = f(x) describing the relation between the concentration values measured by the candidate (y) and the reference instrument (x) shall be bounded within a two-sided acceptance envelope. This acceptance envelope is defined by:

y = $(x \pm 10) \mu g/m^3$ for concentration averages $\leq 100 \mu g/m^3$ and

 $y = 0.9x \mu g/m^3$ or $1.1x \mu g/m^3$ for concentration averages > 100 $\mu g/m^3$

Furthermore, the variance coefficient R² of the calculated reference equivalence function must not drop below the value of 0.95.

The test focuses on the relationship between the concentration values obtained from duplicate measurements with the candidate and reference sampler. Ideally the candidate sampler is probing the same suspended particulate matter fraction as the reference one, implying y = x. The pertinent procedure is as follows:

A linear regression analysis is carried out for the measured values of all four test sites individually and as a whole.

A reference equivalence function corresponding to the equation below is determined for each measured value y_i of the respective candidate and of the reference instrument x (both in $\mu g/m^3$):

 $y_i = m \cdot x + b$

where i = candidate Modell 5030i SHARP



Page 130 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.5 Assessment

The reference equivalence functions lie within the limits of the respective acceptance envelope for all test sites with exception of test site "Teddington (summer)". Moreover, the variance coefficient R^2 of the calculated reference equivalence function in the concentration range concerned is ≥ 0.95 for the datasets "Full dataset", "Cologne (winter)" (only SN 3), "Bornheim (summer)" (only SN 3), and "Bornheim (winter)". For datasets "Cologne (winter)" (only SN 4), "Bornheim (summer)" (only SN 4) and "Teddington (summer), the variance coefficient R^2 lies below 0.95. Nevertheless, the instruments passed the equivalence test according to 6.1 5.4.10 Calculation of the expanded uncertainty of the instruments at all test sites.

Minimum requirement fulfilled? no

6.6 Detailed presentation of test results

Table 26 and Table 27 present a summary of the results of the regression analyses. This is also illustrated in Figure 39 to Figure 48. In addition to the "best fit" lines of both candidates, the graphs present the ideal curve y = x and the two-sided acceptance envelope. The values for the candidates and reference instrument are listed for each test site separately in annex 5 of the appendix.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 131 of 440

Table 26: Results of the linear regression analysis of the measurements with both candidates SN 3 and SN 4 at the four test sites

SN 3	Number of paired values N	Slope m	Intercept b	R²
Cologne, winter	43	0.995	-0.487	0.95
Bornheim, summer	71	0.967	0.967	0.95
Bornheim, winter	42	0.970	1.439	0.98
Teddington, summer	46	0.895	1.983	0.85
SN 4	Number of paired values N	Slope m	Intercept b	R²
Cologne, winter	45	1.011	-1.632	0.94
Bornheim, summer	75	0.980	-0.550	0.93
Bornheim, winter	42	1.002	0.378	0.98
Teddington, summer	46	0.838	1.641	0.83

Table 27: Results of the linear regression analysis of the measurements with both candidates SN 3 and SN 4 (full dataset)

System	Number of paired values N	Slope m	Intercept b	R²
SN 3	202	0.969	0.909	0.96
SN 4	208	0.996	-0.587	0.96



Page 132 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

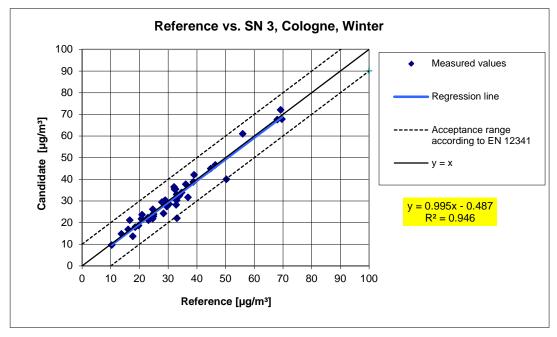


Figure 39: Reference equivalence function SN 3, Cologne (winter)

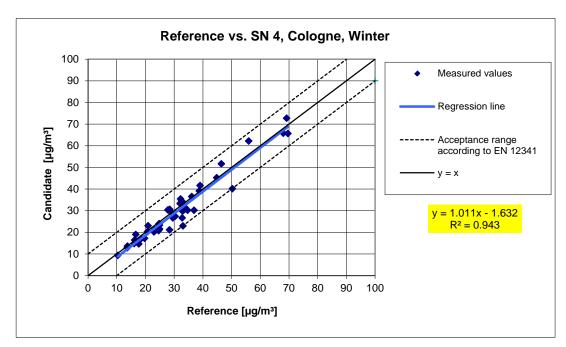


Figure 40: Reference equivalence function SN 4, Cologne (winter)

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 133 of 440

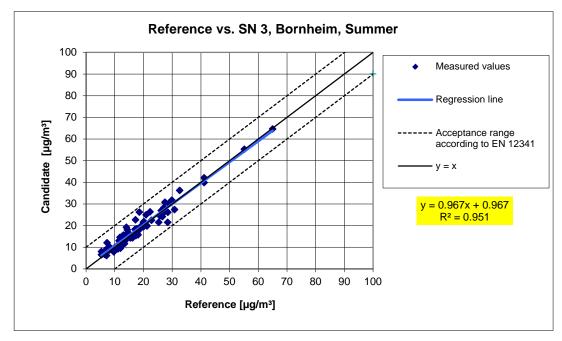


Figure 41: Reference equivalence function SN 3, Bornheim (summer)

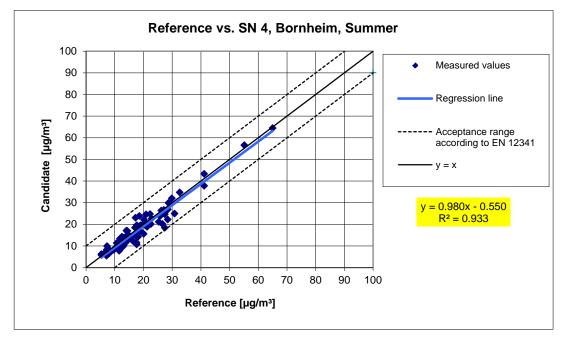


Figure 42: Reference equivalence function SN 4, Bornheim (summer)



Page 134 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

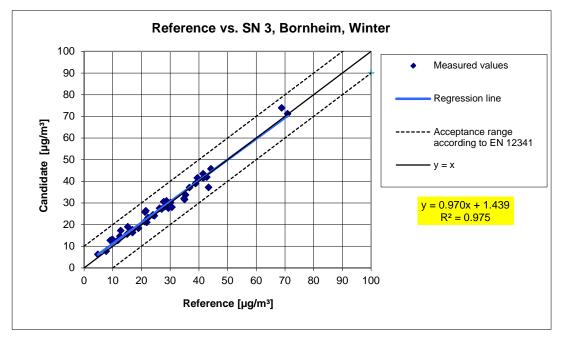


Figure 43: Reference equivalence function SN 3, Bornheim (winter)

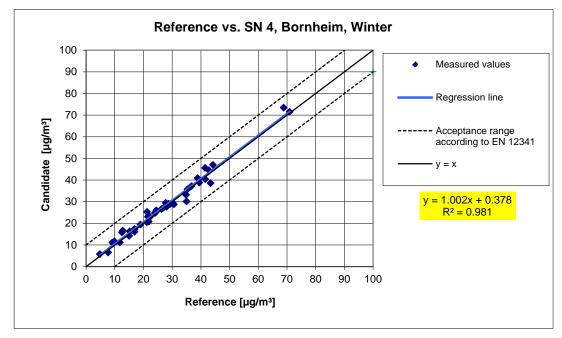


Figure 44: Reference equivalence function SN 4, Bornheim (winter)

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} ,

Report No.: 936/21209885/G

Page 135 of 440

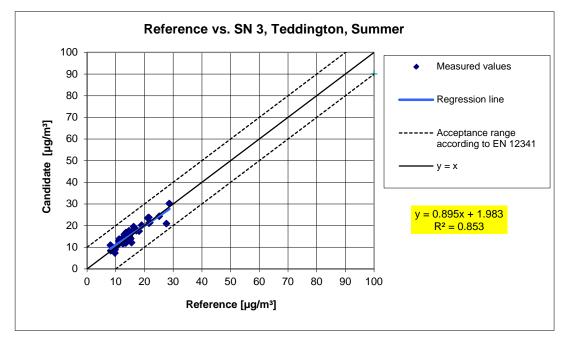


Figure 45: Reference equivalence function SN 3, Teddington (summer)

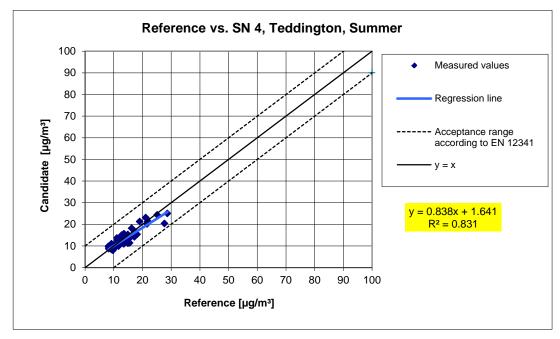


Figure 46: Reference equivalence function SN 4, Teddington (summer)



Page 136 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

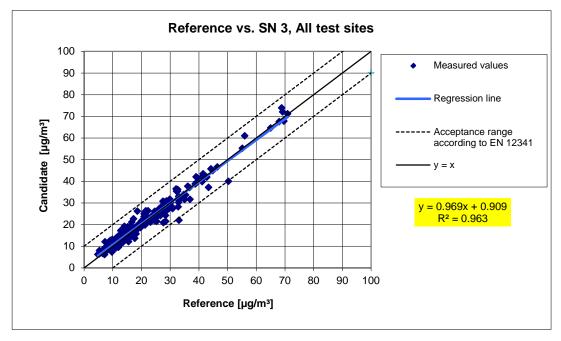


Figure 47: Reference equivalence function SN 3, all test sites

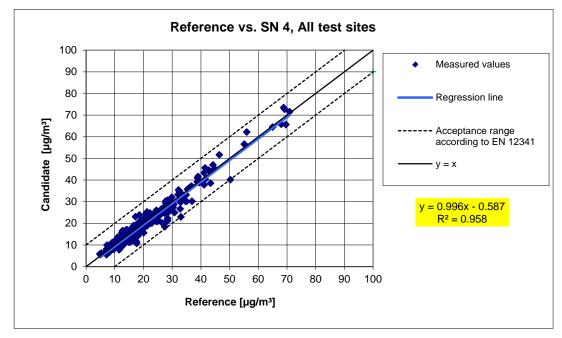


Figure 48: Reference equivalence function SN 4, all test sites

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 137 of 440

6.1 5.4.3 Reproducibility of the sampling systems

The PM₁₀ sampling systems of two identical systems under test shall be reproducible among themselves according to EN 12341 [T5]. This shall be demonstrated in the field test.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

The test was carried out at various sites during the field test while taking into account different seasons and PM_{10} concentrations levels.

At least 15 valid paired values were determined at each test site.

6.4 Evaluation

The two-sided confidence interval Cl_{95} calculated from the average concentration measured by the candidates shall not exceed 5 $\mu\text{g/m}^3$ if the average concentration is $\leq 100~\mu\text{g/m}^3$. For average concentrations > 100 $\mu\text{g/m}^3$, the confidence inerval shall not exceed 0.05.

The test focuses on the differences D_i between the concentration values Y_i of the candidates. Ideally both candidate samplers are identical hence probing the same suspended particulate matter fraction, implying $D_i = 0$. The procedure is as follows:

First, the average concentration values Y_i are calculated from the concentrations determined in parallel measurements with both candidates. The average concentrations Y_i are then classified in two separate datasets:

- a) Dataset with $Y_i \le 100 \,\mu\text{g/m}^3$ has number of concentration pairs $n_<$ and
- b) Dataset with $Y_i > 100 \mu g/m^3$ has number of concentration pairs n_i

With respect to a):

Using the concentration pairs of the dataset with $Y_i \leq 100~\mu g/m^3$ the absolute standard deviation s_a is calculated:

$$s_a = \sqrt{(\sum D_i^2 / 2n_{\leq})}$$

The corresponding Student factor $t_{f_{\leq};0,975}$ is then selected. The Student factor is defined as the 0.975 quantile of the two-sided 95 % confidence interval of the Student t-distribution with $f_{\leq} = n_{\leq} - 2$ degrees of freedom.



Page 138 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

The two-sided 95 % confidence interval Cl_{95} for average concentrations \leq 100 $\mu\text{g/m}^3$ is calculated as follows:

$$Cl_{95} = s_a \cdot t_{f_{<;0,975}}$$

With respect to b):

Using the concentration pairs of the dataset with $Y_i > 100 \mu g/m^3$ the relative standard deviation s_r is calculated:

$$s_r = \sqrt{(\sum (D_i / Y_i)^2 / 2n_>)}$$

Again, the corresponding Student factor $t_{f_{>;0,975}}$ is selected. The Student factor is defined as the 0.975 quantile of the two-sided 95 % confidence interval of the Student t-distribution with $f_{>} = n_{>} - 2$ degrees of freedom.

The two-sided 95 % confidence interval Cl_{95} for average concentrations > 100 $\mu\text{g/m}^3$ is calculated as follows:

$$Cl_{95} = s_r \cdot t_{f_{>};0,975}$$

No concentrations > $100 \mu g/m^3$ were observed during the field test. A statistical evaluation for this range, i.e. according to b), is therefore not possible.

6.5 Assessment

Applicable to all test sites:

The two-sided confidence interval CI_{95} has a maximum value of 2.51 $\mu g/m^3$, thus lying within the permissible limit of 5 $\mu g/m^3$.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Table 28 presents the calculated values of the standard deviation s_a and of the two-sided confidence interval Cl_{95} . These are illustrated in Figure 49 to Figure 53. In addition to the "best fit" lines of both candidates (determined by linear regression analysis), the graphs present the ideal curve y = x and the two-sided acceptance envelope. The values for both candidates are listed in annex 5.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 139 of 440

Table 28: Two-sided 95 % confidence interval Cl₉₅ for candidates SN 3 and SN 4

Candidate	Test site	No. of values	Standard deviation s _a	Student factor t _f	Confidence interval Cl ₉₅
SN			μg/m³		μg/m³
3 / 4	Cologne, winter	53	1.15	2.008	2.31
3 / 4	Bornheim, summer	96	1.18	1.986	2.35
3 / 4	Bornheim, winter	49	1.01	2.012	2.04
3 / 4	Teddington, summer	64	1.25	1.999	2.51
3 / 4	Total	262	1.16	1.969	2.29

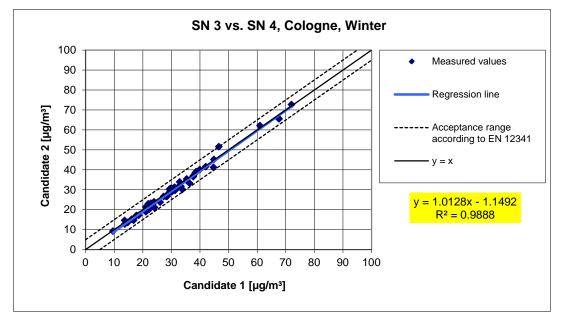


Figure 49: Result of parallel measurements with candidates SN 3 / SN 4, Cologne (winter)



Page 140 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

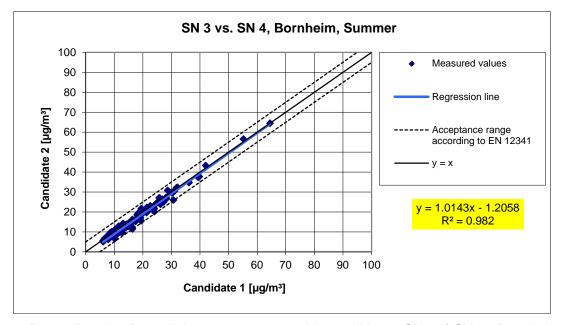


Figure 50: Result of parallel measurements with candidates SN 3 / SN 4, Bornheim (summer)

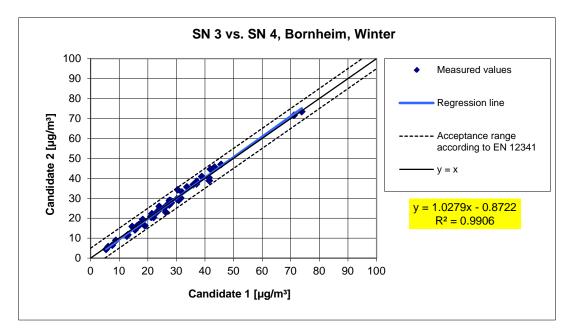


Figure 51: Result of parallel measurements with candidates SN 3 / SN 4, Bornheim (winter)

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 141 of 440

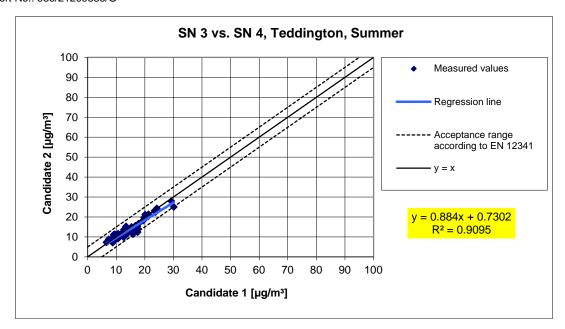


Figure 52: Result of parallel measurements with candidates SN 3 / SN 4, Teddington (summer)

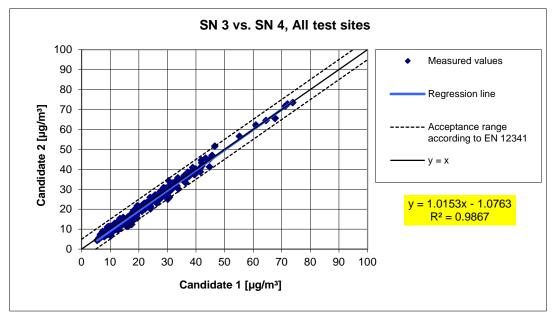


Figure 53: Result of parallel measurements with candidates SN 3 / SN 4, all test sites



Page 142 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.4.4 Calibration

The systems under test shall be calibrated in the field test by comparison measurements with the reference method. Here, the relationship between the output signal and the gravimetrically determined reference concentration shall the determined as a steady function.

6.2 Equipment

See module 5.4.2.

6.3 Performance of test

For PM₁₀:

The comparability of the measuring systems according to module 5.4.2 was demonstrated during the test.

The determination of the calibration and analysis function was carried out using the complete dataset (202 (SN 3) and 208 (SN 4) valid paired values).

The parameters of the calibration function

$$y = m * x + b$$

were determined by linear regression. The analysis function is the reversal of the calibration function. It reads:

$$x = 1/m * y - b/m$$

The slope m of the regression line characterises the sensitivity of the measuring system; the ordinate intercept b characterises the zero point.

6.4 Evaluation

This results in the following parameters:

Table 29: Parameters of the calibration and analysis function, measured component PM₁₀

System No.	Calibration function		Analysis function		
	Y = m * x + b		x = 1/m * y - b/m		
	m b		1/m	b/m	
	μg/m³ / μg/m³	μg/m³	μg/m³ / μg/m³	μg/m³	
System 1 (SN 3)	0.969	0.909	1.032	0.938	
System 2 (SN 4)	0.996	-0.587	1.004	-0.589	

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 143 of 440

6.5 Assessment

A statistical correlation between the reference measuring method and the device reading could be demonstrated.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

See module 5.4.2.



Page 144 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.4.5 Cross-sensitivity

The interference caused by moisture in the sample may not exceed 10 % of the limit value in the range of the limit value.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

The determination of interference caused by moisture in the sample was carried out under field conditions.

For this purpose, the differences between the determined reference value (= nominal value) and the measured value of the respective candidate were calculated for days with more than 70 % relative humidity during the field test. The average difference was set as conservative estimate of the interference caused by moisture in the sample.

In addition, the reference equivalence functions of both candidates were determined from the field investigations for days with more than 70 % relative humidity.

6.4 Evaluation

The average difference between the determined reference value (= nominal value) and the measured value of the respective candidate was calculated for days with more than 70 % relative humidity during the field test. The relative deviation from the average concentration was calculated.

Annual limit value $PM_{10} = 40 \mu g/m^3$

10 % of ALV = $4 \mu g/m^3$

Further investigations were made to determine whether the comparability of both candidates with the reference method according to Guide "Demonstration of Equivalence of Ambient Air Monitoring Methods" [4] is also given for days with more than 70 % relative humidity.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

Page 145 of 440

6.5 Assessment

No deviation of the measured signal from the nominal value > 0.4 µg/m³ caused by interference of moisture in the sample could be observed for PM₁₀. No negative influence on the measured values at varying relative humidity was detected during the field test. Comparability of the candidates with the reference method according to Guide "Demonstration of Equivalence of Ambient Air Monitoring Methods" [4] is also given for days with a relative humidity > 70 %.

Minimum requirement fulfilled? yes

Detailed presentation of test results

A summary of the results is presented in Table 30.

Table 30: Deviation between reference measurement and candidate on days with a relative humidity > 70 %, measured component PM_{10}

Field test, days with a relative humidity >70 %								
		Reference	SN 3	SN 4				
Average	μg/m³	19.6	20.0	19.2				
Deviation from reference aver- age in µg/m³	μg/m³	-	0.4	-0.4				
Deviation from reference average in %	%	-	2.3	-1.8				
Deviation from ALV in %	%	-	1.1	-0.9				

The single values are presented in annexes 5 and 6 of the appendix.

The presentation and the assessment of the measuring uncertainties W_{CM} of days with a relative humidity > 70 % are shown in Table 31 and Table 32. The single values are presented in annexes 5 and 6 of the appendix.



Page 146 of 440

Table 31: Comparison candidate SN 3 with reference instrument, rel. humidity > 70 %, all test sites, measured component PM_{10}

Comp	parison candidate with ref	erence according to		
Guide "Demonstration o	f Equivalence Of Ambient	Air Monitoring Methods"	January 2010	
Candidate	Model 5030i SHARP	SN	SN 3	
Test site	All test sites, rH>70%	Limit value	50	µg/m³
Status of measured values	Raw data	Allowed uncertainty	25	%
	Results of regression	n analysis		
Slope b	1.01	not significant		
Uncertainty of b	0.02			
Ordinate intercept a	0.42	not significant		
Uncertainty of a	0.38			
	Results of the equival	lence test		
Deviation at limit value	0.77	μg/m³		
Uncertainty u _{c_s at limit value}	2.28	μg/m³		
Combined measurement uncertainty w _{CM}	4.57	%		
Expanded measurement uncertainty W _{CM}	9.13	%		
Status equivalence test	pass			

Table 32: Comparison candidate SN 4 with reference instrument, rel. humidity > 70 %, all test sites, measured component PM_{10}

Comp	parison candidate with ref	erence according to		
Guide "Demonstration o	f Equivalence Of Ambient	Air Monitoring Methods"	, January 2010	
Candidate	Model 5030i SHARP	SN	SN 4	
Test site	All test sites, rH>70%	Limit value	50	µg/m³
Status of measured values	Raw data	Allowed uncertainty	25	%
	Results of regression	analysis		
Slope b	1.03	not significant		
Uncertainty of b	0.02			
Ordinate intercept a	-0.91	significant		
Uncertainty of a	0.41			
	Results of the equiva	ence test		
Deviation at limit value	0.60	μg/m³		
Uncertainty u _{c_s at limit value}	2.45	μg/m³		
Combined measurement uncertainty w _{CM}	4.91	%		
Expanded measurement uncertainty W _{CM}	9.82	%		
Status equivalence test	pass			

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 147 of 440

6.1 5.4.6 Averaging effect

The measuring system shall allow for formation of 24 h averages. The time of the sum of all filter changes within 24 h may not exceed 1 % of this averaging time.

6.2 Equipment

A clock was required for this test.

6.3 Performance of test

It was tested, whether the AMS allows the formation of daily averages.

6.4 Evaluation

By default, the measuring system saves the measured values as 5-minute averages or hourly averages (configuration used during suitability testing) in the internal storage. These values can, for example, be read out on the iPort software and processed as required with a spread sheet analysis. Furthermore, it is also possible to parameterise the AMS in a way that daily averages are calculated internally and output as such.

The filter tape transport itself takes approx. 1 min. After changing the filter tape, both the radiometric and nephelometric measurements are zeroed. The zeroing of the nephelometric measurement is carried out within 10 min after the pump has stopped, the radiometric measurement zeroes within 15 minutes after pump stop. It should be noted that the measuring system does not output new SHARP values during the first 10 min after filter tape change. After completing the zeroing of the nephelometer, the SHARP signal can be determined again, since it is calculated from the nephelometer concentration and the auto calibration factor. Nevertheless, the auto calibration factor is frozen until the end of the zeroing phase of the radiometric measurement and is only updated upon its completion.

The time required for filter tape transport is 1 min. It corresponds to approx. 0.21 % lag time for 24-h measurements with three tape changes a day.

The available time of the SHARP signal at cycles of 8 h is 470 min (=480 min - 10 min), covering 97.9 % of the total time.

6.5 Assessment

It is possible to form daily averages based on the three measurement cycles using the described instrument configuration and a cycle duration of 8 hours.

The time required for changing the filter tape amounts to a maximum of 0.21 %, thus lying well below the permissible 1 %.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Not required for this test.



Page 148 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.4.7 Constancy of sample volumetric flow

The sample volumetric flow averaged over the sampling time shall be constant within \pm 3 % of the rated value. All instantaneous values of the sample volumetric flow shall be within a range of \pm 5 % of the rated value during sampling.

6.2 Equipment

A flow meter was used for testing this requirement, as indicated in Section 4.

6.3 Performance of test

The sample volumetric flow was calibrated before testing at the first field test site, checked with a dry gas meter or a mass flow meter before testing at the other field test sites, and if necessary readjusted.

The constancy of the sample volumetric flow is monitored internally with a reliable deviation from the nominal value of ±2.5 %. If this criterion is not met during operation, the measuring system performs a filter change.

To determine the constancy of the sample volumetric flow, the internal data regarding flow rate and pump vacuum (= information on filter load) were recorded for the test site Cologne (winter), characterised partly by high concentrations, and the flow rates were evaluated on a 24-h basis.

6.4 Evaluation

Average values, standard deviations as well as maximum and minimum values were determined from the flow rate measured values.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

Page 149 of 440

6.5 Assessment

The results of the flow rate checks performed before testing at each field test site are presented in Table 33.

Table 33: Results of flow rate checks

Flow rate check before testing at:	S	SN 3	S	6N 4
Test site:	[I/min] Deviation [I/min] from nominal value [%]		Deviation from nominal value [%]	
Cologne, winter	16.33	-2.04	16.34	-1.98
Bornheim, summer	16.56	-0.66	16.75	0.48
Bornheim, winter	16.63	-0.24	16.66	-0.06
Teddington, summer	16.64	-0.18	16.76	0.54

The graphical representation of the flow rates at the test site used as example (Cologne, winter, nominal: 16.67 l/min) shows that all values determined during sampling deviate less than ±5 % from the respective nominal value. The deviation of the 24-h averages for the total flow rate of 16.67 I/min is as well significantly smaller than the specified ±3 % of the nominal val-

All determined daily averages present deviations less than ±3 % from the nominal value; all instantaneous values deviate less than ±5 %.

Minimum requirement fulfilled? yes

6.6 **Detailed presentation of test results**

Table 34 and Table 35 show the determined flow parameters. Figure 54 and Figure 55 illustrate the flow measurements for both candidates SN 3 and SN 4.



Page 150 of 440

Table 34: Parameters for flow measurement (24-h average), SN 3 (field)

No. 24h-values	Mean [l/min]	Dev. from nominal [%]	Std.Dev. [I/min]	Max [l/min]	Min [l/min]
102	16.67	0.00	0.01	16.71	16.62

Table 35: Parameters for flow measurement (24-h average), SN 4 (field)

No. 24h-values	Mean [l/min]	Dev. from nominal [%]	Std.Dev. [I/min]	Max [l/min]	Min [l/min]
103	16.67	0.00	0.01	16.73	16.59

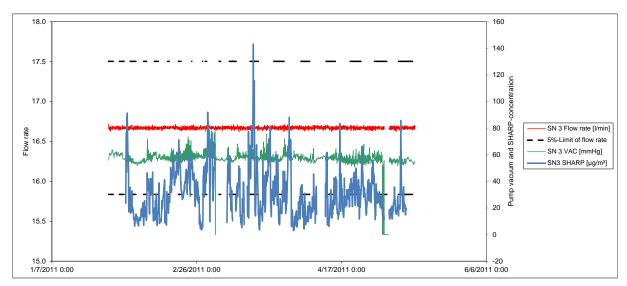


Figure 54: Flow of candidate SN 3 (field)

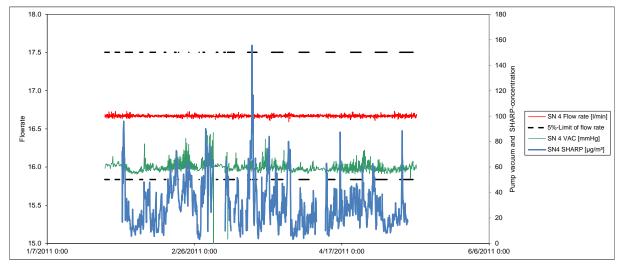


Figure 55: Flow of candidate SN 4 (field)

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 151 of 440

6.1 5.4.8 Tightness of the measuring system

The complete measuring system shall be checked for tightness. Leakage shall not exceed 1 % of the sample volume sucked.

6.2 Equipment

The test required an adapter for tightness check and a mass flow meter.

6.3 Performance of test

The Model 5030i SHARP can perform a tightness check using an adapter.

For testing the leak tightness, the instrument is switched to service mode. First, an external flow meter is installed at the inlet, followed by a recording of the flow rates indicated on the instrument itself and by the external measurement as well as of the displayed vacuum (VAC in mmHg). The instrument flow rate is compared with the flow rate of the external flow meter and adjusted. Then, the tightness check adapter is inserted into the inlet as connection between inlet and external flow meter. The adapter creates a significantly higher vacuum in the instrument for it reduces the size of the air sampling opening. The flow rates indicated by the instrument and by the external flow meter are compared again. Ideally (i.e. at absolute tightness), there should be no difference between both flow rates. The manufacturer specifies a maximum permissible difference of 0.42 l/min (= 2.5 % of the flow rate). If greater deviations were to be found, a leak test must be performed taking special care of checking the many fittings above the radiometric measuring head. If the cause cannot be found, the manufacturer should be contacted.

The tightness check must only be performed with the tightness check adapter and the described procedure. It can otherwise damage the instrument.

It is recommended to check the tightness of the measuring system on a quarterly basis according to the described procedure

6.4 Evaluation

The tightness was checked with the adapter as part of the laboratory test.

The criteria specified by the manufacturer upon which the tightness check is considered passed – maximum difference of 0.42 l/min (= 2.5 % of the flow rate) between the flow rates measured by the instrument and by the external flow meter under application of the adapter – proved to be appropriate parameters for monitoring the instrument's tightness. The laboratory tests resulted in a maximum leakage < 1 % of the nominal flow rate of 16.67 l/min for both candidates.

The tightness check must only be performed with the tightness check adapter and the described procedure. It can otherwise damage the instrument.



Page 152 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.5 Assessment

The criteria specified by the manufacturer upon which the tightness check is considered passed – maximum difference of ± 0.42 l/min (= ± 2.5 % of the flow rate) between the flow rates measured by the instrument and by the external flow meter under application of the adapter – proved to be appropriate parameters for monitoring the instrument's tightness. The laboratory tests resulted in a maximum leakage < 1 % of the nominal flow rate of 16.67 l/min for both candidates.

The tightness check must only be performed with the tightness check adapter and the described procedure. It can otherwise damage the instrument.

Minimum requirement fulfilled? yes

6.6 Detailed presentation of test results

Table 36 contains the values determined during the tightness check.

Table 36: Results of the tightness check

		System's measured value, with- out adapter	Pump vacu- um, without adapter	System's measured value, with adapter	Pump vacu- um, with adapter	Ext. flow me- ter's measured value, with adapter	Difference of flow rates, with adapter	Related to nominal flow rate
		l/min	mm Hg	l/min	mm Hg	l/min	l/min	%
SN	1	16.68	77	16.57	115	16.49	-0.08	-0.5
3	2	16.64	77	16.48	115	16.57	0.09	0.5
	3	16.58	77	16.46	115	16.59	0.13	0.8
	Avg.	16.63	77	16.50	115	16.55	0.05	0.3
SN	1	16.65	80	16.60	126	16.59	-0.01	-0.1
4	2	16.72	81	16.63	126	16.54	-0.09	-0.5
	3	16.67	81	16.57	126	16.63	0.06	0.4
	Avg.	16.68	81	16.60	126	16.59	-0.02	-0.1

Air Pollution Control

TÜVRheinland®
Precisely Right.

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 153 of 440

6.1 Methodology of the equivalence check (modules 5.4.9 – 5.4.11)

According to the version of the Guide from January 2010 [4] the following 5 criteria must be fulfilled to proof the equivalence.

- Of the full dataset at least 20 % of the results obtained using the standard method shall be greater than the upper assessment threshold specified in 2008/50/EC for annual limit values i.e.: 28 μg/m³ for PM₁₀ and currently 17 μg/m³ for PM_{2.5}.
- 2. The in-between uncertainty of the candidate must be less than 2.5 μ g/m³ for all data and for two sub datasets corresponding to all the data split greater than or equal to and lower than 30 μ g/m³ or 18 μ g/m³ for PM₁₀ and PM_{2.5} respectively.
- 3. The in-between uncertainty of the reference method must be less than 2.0 µg/m³.
- 4. The expanded uncertainty (W_{CM}) is calculated at 50 µg/m³ for PM₁₀ and 30 µg/m³ for PM_{2.5} for each individual candidate instrument against the average results of the reference method. For each of the following permutations, the expanded uncertainty must be less than 25 %:
 - Full dataset:
 - Datasets representing PM concentrations greater than or equal to 30 μg/m³ for PM₁₀, or concentrations greater than or equal to 18 μg/m³ for PM_{2.5}, provided that the subset contains 40 or more valid data pairs;
 - Datasets for each individual test site.
- 5. Preconditions for acceptance of the full dataset are that: the slope b is insignificantly different from 1: $|b-1| \le 2 \cdot u(b)$, and the intercept a is insignificantly different from 0: $|a| \le 2 \cdot u(a)$. If these preconditions are not met, the candidate method may be calibrated using the values obtained for slope and/or intercept of all paired instruments together.

The fulfilment of the 5 criteria is checked in the following chapters:

In chapter 6.1 $\,$ 5.4.9 Determination of uncertainty between systems under test u_{bs} criteria 1 and 2 will be checked.

In chapter 6.1 5.4.10 Calculation of the expanded uncertainty of the instruments criteria 3, 4 and 5 will be checked.

In chapter 6.1 5.4.11 Application of correction factors and terms, there is an exemplary evaluation for the case, that criterion 5 cannot be fulfilled without the application of correction factors or terms.



Page 154 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.4.9 Determination of uncertainty between systems under test u_{bs}

For the test of PM_{2.5} measuring systems the uncertainty between the systems under test shall be determined according to chapter 9.5.3.1 of the guidance document "Demonstration of Equivalence of Ambient Air Monitoring Methods" in the field test at least at four sampling sites representative of the future application.

Note:

The test is carried out for component PM₁₀ as well.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

The test was carried out at four different comparisons during field test. Different seasons and varying concentrations for PM_{10} were taken into consideration.

Of the complete data et, at least 20 % of the concentration values determined with the reference method shall be greater than the upper assessment threshold according to 2008/50/EC [7]. For PM₁₀ the upper assessment threshold is at $28 \mu g/m^3$.

At each comparison campaign at least 40 valid data pairs were determined. Of the complete dataset (4 test sites, 202 valid data pairs for SN 3, 208 valid data pairs for SN 4) a total of 23.8% of the measured values are above the upper assessment threshold of 28 μ g/m³ for PM₁₀. The measured concentrations were referred to ambient conditions.

6.4 Evaluation

According to **point 9.5.3.1** of the Guide "Demonstration of Equivalence of Ambient Air Monitoring Methods" applies:

The uncertainty between the candidates u_{bs} must be $\leq 2.5 \,\mu\text{g/m}^3$. An uncertainty > $2.5 \,\mu\text{g/m}^3$ between the two candidates is an indication that the performance of one or both systems is not sufficient and the equivalence cannot be declared.

The uncertainty is determined for:

- All test sites and comparisons together (full dataset)
- 1 dataset with measured values ≥ 30 µg/m³ for PM₁0 (Basis: averages of reference measurement)

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 155 of 440

Furthermore the evaluation of the following datasets is done for:

- Each test site and comparison individually
- 1 dataset with measured values < 30 μg/m³ for PM₁₀ (Basis: averages of reference measurement)

The uncertainty between the candidates u_{bs} is calculated from the differences of all 24-hour results of the simultaneously operated candidate systems according to the following equation:

$$u_{bs}^{2} = \frac{\sum_{i=1}^{n} (y_{i,1} - y_{i,2})^{2}}{2n}$$

with $y_{i,1}$ and $y_{i,2}$ = results of the parallel measurements of individual 24-h values in = No. of 24-h values

6.5 Assessment

The uncertainty between the candidates u_{bs} is with a maximum of 1.22 $\mu g/m^3$ for PM₁₀ below the required value of 2.5 $\mu g/m^3$.

Minimum requirement fulfilled? yes



Page 156 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.6 Detailed presentation of test results

Table 37 shows the values calculated for the uncertainty between systems under test u_{bs} . The graphical representation is displayed in Figure 56 to Figure 62.

Table 37: Uncertainty between systems under test u_{bs} for candidates SN 3 and SN 4, measured component PM_{10}

Candidate	Test site	No. of values	Uncertainty u _{bs}
SN			μg/m³
SN 3 / SN 4	All test sites	262	1.10
	Single test	sites	
SN 3 / SN 4	Cologne, winter	53	1.11
SN 3 / SN 4	Bornheim, summer	96	1.07
SN 3 / SN 4	Bornheim, winter	49	1.05
SN 3 / SN 4	Teddington, summer	64	1.17
	Classification over re	eference v	alue
SN 3 / SN 4	Values ≥ 30 µg/m³	41	1.22
SN 3 / SN 4	Values < 30 μg/m³	161	1.13

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 157 of 440

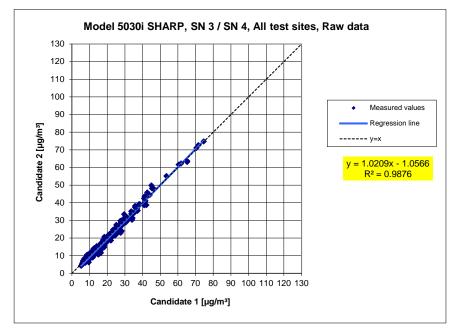


Figure 56: Results of the parallel measurements with the candidates SN 3 / SN 4, measured component PM₁₀, all test sites

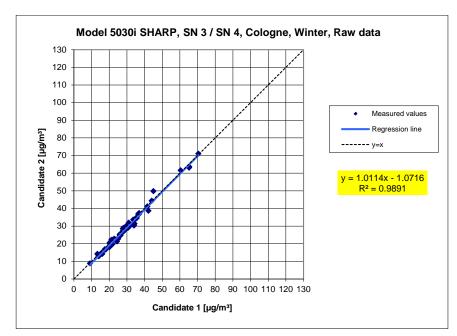


Figure 57: Results of the parallel measurements with the candidates SN 3 / SN 4, measured component PM₁₀, test site Cologne (winter)



Page 158 of 440

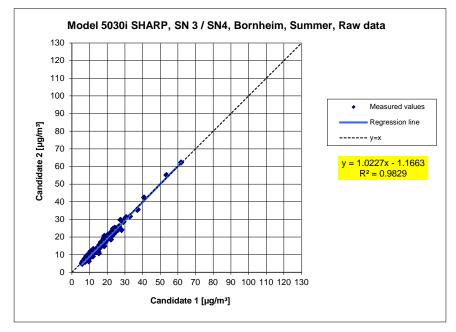


Figure 58: Results of the parallel measurements with the candidates SN 3 / SN 4, measured component PM₁₀, test site Bornheim (summer)

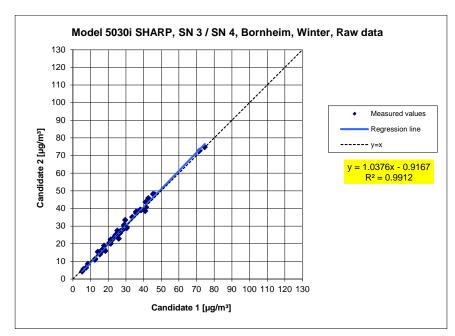


Figure 59: Results of the parallel measurements with the candidates SN 3 / SN 4, measured component PM₁₀, test site Bornheim (winter)

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 159 of 440

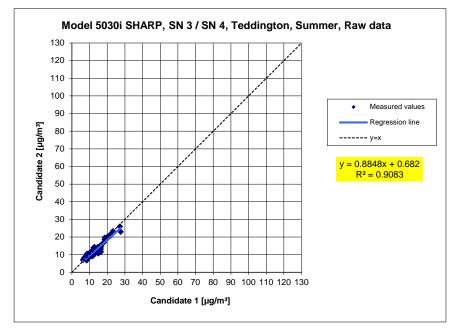


Figure 60: Results of the parallel measurements with the candidates SN 3 / SN 4, measured component PM₁₀, test site Teddington (summer)

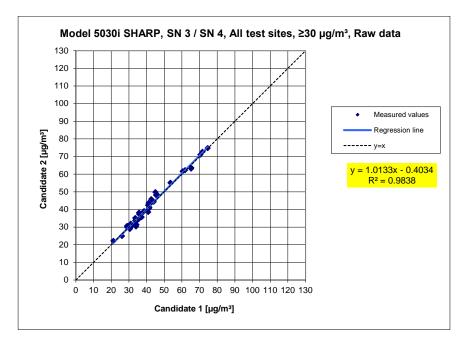


Figure 61: Results of the parallel measurements with the candidates SN 3 / SN 4, measured component PM_{10} , all test sites, values \geq 30 $\mu g/m^3$



Page 160 of 440

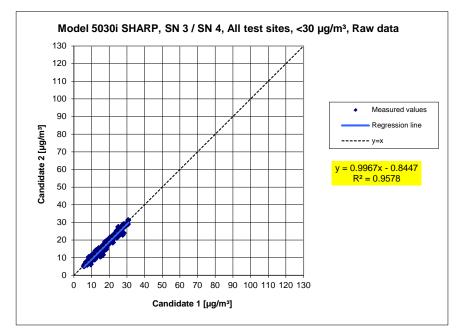


Figure 62: Results of the parallel measurements with the candidates SN 3 / SN 4, measured component PM_{10} , all test sites, values < 30 $\mu g/m^3$

Air Pollution Control



Page 161 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀,

Report No.: 936/21209885/G

6.1 5.4.10 Calculation of the expanded uncertainty of the instruments

For the test of PM_{2.5} measuring systems the equivalency with the reference method shall be demonstrated according to chapter 9.5.3.2 to chapter 9.6 of the guidance document "Demonstration of Equivalence of Ambient Air Monitoring Methods" in the field test at least at four sampling sites representative of the future application. The maximum expanded uncertainty of the systems under test shall be compared with data quality objectives according to Annex A of Standard VDI 4202 Part 1 (September 2010).

Note:

The test is carried out for component PM₁₀ as well.

6.2 **Equipment**

Auxiliary equipment described in Section 5.

6.3 Performance of test

The test was carried out at four different comparisons during field test. Different seasons and varying concentrations for PM₁₀ were taken into consideration.

Of the complete dataset, at least 20 % of the concentration values determined with the reference method shall be greater than the upper assessment threshold according to 2008/50/EC [7]. For PM₁₀ the upper assessment threshold is at $28 \mu g/m^3$.

At each comparison campaign at least 40 valid data pairs were determined. Of the complete dataset (4 test sites, 202 valid data pairs for SN 3, 208 valid data pairs for SN 4) a total of 23.8 % of the measured values are above the upper assessment threshold of 28 µg/m³ for PM₁₀. The measured concentrations were referred to ambient conditions.

6.4 **Evaluation**

[Point 9.5.3.2] The calculation of the in-between uncertainty of the reference devices u_{ref} is carried out prior to the calculation of the expanded uncertainty of the candidates.

The in-between uncertainty of the reference devices u_{ref} is determined analogous to the uncertainty between candidates and shall be $\leq 2 \mu g/m^3$.

The evaluated results are illustrated in "Detailed presentation of test results" of this test item.

A linear correlation $y_i = a + bx_i$ is assumed between the results of both methods in order to evaluate the comparability of the candidates y and the reference procedure x. The correlation between the average values of the reference devices and the candidates is established by orthogonal regression.

Regression is calculated for:

- All test sites and comparisons together
- Each test site and comparison separately
- 1 dataset with measured values $PM_{10} \ge 30 \mu g/m^3$ (Basis: average value of reference measurement)



Page 162 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate and the property of the prope

Report No.: 936/21209885/G

For further evaluation, the results of the uncertainty u_{c_s} of the candidates compared with the reference method are described with the following equation, which describes u_{CR} as a function of the PM concentration x_i :

$$u_{CR}^{2}(y_{i}) = \frac{RSS}{(n-2)} - u^{2}(x_{i}) + [a + (b-1)x_{i}]^{2}$$

With RSS = Sum of the (relative) residuals from orthogonal regression

u(x_i) = random uncertainty of the reference procedure if value u_{bs}, which is calculated for using the candidates, can be used in this test (refer to point 6.1 5.4.9 Determination of uncertainty between systems under test ubs)

Algorithms for the calculation of ordinate intercept a as well as slope b and its variances by orthogonal regression are described in detail in annex B of [4].

The sum of the (relative) residuals RSS is calculated by the following equation:

$$RSS = \sum_{i=1}^{n} (y_{i} - a - bx_{i})^{2}$$

Uncertainty u_{CR} is calculated for:

- · All test sites and comparisons together
- · Each test site and comparison individually
- 1 dataset with measured values PM₁₀ ≥ 30 µg/m³ (Basis: average values of the reference measurement)

Preconditions for acceptance of the full dataset are that:

- The slope b is insignificantly different from 1: $\left|b-1\right| \le 2 \cdot u(b)$ and
- The intercept a is insignificantly different from 0: |a| ≤ 2 · u(a)

Where u(b) and u(a) are the standard uncertainties of the slope and intercept, respectively calculated as the square root of their variances. If these preconditions are not met, the candidate method may be calibrated according to point 9.7 of the Guide (refer to 6.1 5.4.11

Application of correction factors and terms. The calibration shall only be applied to the full dataset.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 163 of 440

[Point 9.5.4] The combined uncertainty of the candidates $w_{c,CM}$ is calculated for each dataset by combining the contributions from 9.5.3.1 and 9.5.3.2 according to the following equation:

$$w_{c,CM}^{2}(y_{i}) = \frac{u_{CR}^{2}(y_{i})}{y_{i}^{2}}$$

For each dataset, the uncertainty $w_{c,CM}$ is calculated at the level of $y_i = 30 \,\mu\text{g/m}^3$ for PM₁₀.

[Point 9.5.5] The expanded relative uncertainty of the results of the candidates is calculated for each dataset by multiplication of $w_{c,CM}$ with a coverage factor k according to the following equation:

$$W_{\text{CM}} = k \cdot w_{\text{CM}}$$

In practice: k=2 for large n

[Point 9.6] The highest resulting uncertainty W_{CM} is compared and assessed with the requirements on data quality of ambient air measurements according to EU Standard [7]. Two results are possible:

- 1. $W_{CM} \le W_{dqo} \rightarrow C$ andidate method is accepted as equivalent to the standard method.
- 2. $W_{CM} > W_{dqo} \rightarrow$ Candidate method is not accepted as equivalent to the standard method. The specified expanded relative uncertainty W_{dqo} for particulate matter is 25 % [7].

6.5 Assessment

The determined uncertainties W_{CM} without application of correction factors lay for all observed datasets below the defined expanded relative uncertainty W_{dqo} of 25 % for fine dust. Minimum requirement fulfilled? yes

The following Table 38 shows an overview of the results of the equivalence check for the candidate Model 5030i SHARP for PM_{10} . In case that a criterion is fulfilled or not the text is represented in green or red. Furthermore, the five criteria from chapter 6.1 Methodology of the equivalence check (modules 5.4.9-5.4.11) are taken into account; the related cells are highlighted in colour.



Page 164 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

9.29

23.8

Table 38: Overview equivalence test of Model 5030i SHARP for PM₁₀

PM10 5030i Sharp	23.8% ≥ 28 µg m-3			Orthogonal Regre	ession	Betw een Instrur	ment Uncertainties	KEY	
FINITO 30301 Sitai p	WCM/%	nc-s	r2	Slope (b) +/- ub	Intercept (a) +/- ua	Reference	Candidate		(
All Data	9.2	202	0.967	1.009 +/- 0.013	-0.392 +/- 0.327	0.63	1.10		
< 30 µg m-3	8.0	161	0.903	0.986 +/- 0.024	0.109 +/- 0.431	0.63	1.13		(
≥ 30 µg m-3	13.7	41	0.938	1.112 +/- 0.044	-5.181 +/- 1.940	0.63	1.22		
SN3	Dataset			Orthogonal Regre	ession	Limit Value	of 50 µg m-3	<u> </u>	
3113	Dalasel	nc-s	r2	Slope (b) +/- ub	Intercept (a) +/- ua	WCM/%	% ≥ 28 µg m-3		(
	Bornheim Winter	42	0.976	0.987 +/- 0.024	0.975 +/- 0.745	8.46	42.9		
Individual Datasets	Cologne Winter	43	0.947	1.033 +/- 0.037	-1.570 +/- 1.256	12.91	53.5		(
IIIdividuai Dalasels	Bornheim Summer	71	0.952	0.986 +/- 0.026	0.461 +/- 0.534	8.69	9.9		
	Teddington Summer	46	0.855	0.975 +/- 0.056	0.655 +/- 0.813	7.25	0.0		
	< 30 µg m-3	161	0.899	0.982 +/- 0.025	0.625 +/- 0.439	7.85	4.3		
Combined Datasets	≥ 30 µg m-3	41	0.938	1.102 +/- 0.044	-4.835 +/- 1.911	13.38	100.0		

SN4	Dataset			Orthogonal Regre	Limit Value of 50 µg m-3		
	Dataset	nc-s	r2	Slope (b) +/- ub	Intercept (a) +/- ua	WCM/%	% ≥ 28 µg m-3
	Bornheim Winter	42	0.981	1.027 +/- 0.022	-0.073 +/- 0.689	9.19	42.9
Individual Datasets	Cologne Winter	45	0.944	1.049 +/- 0.038	-2.653 +/- 1.250	13.58	51.1
individuai Datasets	Bornheim Summer	75	0.935	1.017 +/- 0.030	-1.191 +/- 0.623	10.35	9.3
	Teddington Summer	46	0.833	0.921 +/- 0.057	0.304 +/- 0.831	16.19	0.0
	< 30 μg m-3	167	0.876	0.996 +/- 0.027	-0.601 +/- 0.485	9.32	4.2
Combined Datasets	≥ 30 µg m-3	41	0.929	1.128 +/- 0.048	-5.747 +/- 2.091	14.88	100.0
	All Data	208	0.960	1.029 +/- 0.014	-1.242 +/- 0.359	10.32	23.1

All Data

The check of the five criteria from chapter 6.1 Methodology of the equivalence check (modules 5.4.9 - 5.4.11) resulted as follows:

Criterion 1: More than 20 % of the data are greater than 28 µg/m³.

Criterion 2: The in-between uncertainty of the candidates is smaller than 2.5 µg/m³.

Criterion 3: The in-between uncertainty of the reference is smaller than 2.0 µg/m³.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 165 of 440

Criterion 4: All of the expanded uncertainties are below 25 %.

Criterion 5: The slope and intercept used for evaluation of the complete dataset are signif-

icantly greater than the permissible values for SN 4.

Other: The evaluation of the complete dataset for both candidates together shows

that the AMS demonstrates a very good correlation with the reference method with a slope of 1.009 and an intercept of -0.392 at an expanded total uncer-

tainty of 9.2 %

The January 2010 version of The Guidance is ambiguous with respect to which slope and intercept should be used to correct a candidate should it fail the test of equivalence. After communication with the convenor of the EC working group, which is responsible for setting up the Guide (Mr Theo Hafkenscheid), it was decided that the requirement of the November 2005 version of the Guidance are still valid, and that the slope and intercept from the orthogonal regression of all the paired data should be used. These are shaded gold and marked 'other' in the key on the above Table 38.

The 2006 UK Equivalence Report [8] highlighted that this was a flaw in the mathematics required for equivalence as per the November 2005 version of The Guidance as it penalised instruments that were more accurate (Appendix E Section 4.2 therein). This same flaw is copied in the January 2010 version. It is the opinion of TÜV Rheinland and their UK partners that the Model 5030i SHARP measuring system for PM_{10} is indeed being penalised by the mathematics for being accurate. It is proposed that the same pragmatic approach is taken here that was previously undertaken in earlier studies.

Therefore, according to Table 38, the slope and intercept correction on SN 4 should be carried out for PM_{10} due to its significance. Nonetheless it should be noted that the determined uncertainties W_{CM} lie below the specified expanded relative uncertainty W_{dqo} of 25 % for particulate matter for all datasets considered without application of correction factors.

In this particular case the slope for the complete dataset comparison is 1.009, and the intercept of the same -0.392. Therefore, under point 6.1 5.4.11 Application of correction factors and terms, an additional evaluation using the respective calibration factor for the datasets is carried out.

The reworked version of the Guide of January 2010 requires that when operating in networks, a candidate method needs to be tested annually at a number of sites and that the number of the instruments to be tested is dependent on the expanded measurement uncertainty of the device. The respective realisation is the responsibility of the network operator or of the responsible authority of the member state. However, TÜV Rheinland and their UK partners recommend that the expanded uncertainty for the full dataset is referred to for this, i.e. 9.2 %, which again would require an annual test at 2 measurement sites (Guide [4], chapter 9.9.2, Table 6).



Page 166 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.6 Detailed presentation of test results

Table 39 presents an overview on the uncertainties between the reference devices u_{ref} from the field tests. In Table 40, the results of the equivalence test including the determined expanded measuring uncertainties W_{CM} from the field test are summarised.

Table 39: Uncertainty between the reference devices u_{ref} for PM₁₀

Reference device	Test site	Amount values	Uncertainty u _{bs}
No.			μg/m³
1/2	Cologne, winter	50	0.58
1/2	Bornheim, summer	82	0.66
1/2	Bornheim, winter	42	0.85
1/2	Teddington, summer	46	0.32
1/2	All test sites	220	0.63

The uncertainty between the reference devices u_{ref} is < 2 $\mu g/m^3$ for all test sites.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 167 of 440

Table 40: Summary of the results of the equivalence test, SN 3 & SN 4, measured component PM₁₀, raw data

DM40 5020; Cl	23.8% ≥ 28 µg m-3			Orthogo	nal Regressio	on	Betw een Instru	ment Uncertainties
PM10 5030i Sharp	W _{CM} / %	n _{c-s}	r²	Slope (I	o) +/- u _b	Intercept (a) +/- u _a	Reference	Candidate
All Data	9.2	202	0.967	1.009	+/- 0.013	-0.392 +/- 0.327	0.63	1.10
< 30 μg m-3	8.0	161	0.903	0.986	+/- 0.024	0.109 +/- 0.431	0.63	1.13
≥ 30 µg m-3	13.7	41	0.938	1.112	+/- 0.044	-5.181 +/- 1.940	0.63	1.22
0110	5			Orthogo	nal Regressio	on	Limit Value	of 50 µg m-3
SN3	Dataset	n _{c-s}	r²	Slope (I	o) +/- u _b	Intercept (a) +/- u _a	W _{CM} / %	% ≥ 28 µg m-3
	Bornheim Winter	42	0.976	0.987	+/- 0.024	0.975 +/- 0.745	8.46	42.9
Individual Datasets	Cologne Winter	43	0.947	1.033	+/- 0.037	-1.570 +/- 1.256	12.91	53.5
individuai Datasets	Bornheim Summer	71	0.952	0.986	+/- 0.026	0.461 +/- 0.534	8.69	9.9
	Teddington Summer	46	0.855	0.975	+/- 0.056	0.655 +/- 0.813	7.25	0.0
	< 30 µg m-3	161	0.899	0.982	+/- 0.025	0.625 +/- 0.439	7.85	4.3
Combined Datasets	≥ 30 µg m-3	41	0.938	1.102	+/- 0.044	-4.835 +/- 1.911	13.38	100.0
	All Data	202	0.966	0.994	+/- 0.013	0.286 +/- 0.329	9.29	23.8
SN4	Deterat		Orthogonal Regression			Limit Value of 50 µg m-3		
5N4	Dataset	n _{c-s}	r²	Slope (I	o) +/- u _b	Intercept (a) +/- ua	W _{CM} / %	% ≥ 28 µg m-3
	Bornheim Winter	42	0.981	1.027	+/- 0.022	-0.073 +/- 0.689	9.19	42.9
	Cologne Winter	45	0.944	1.049	+/- 0.038	-2.653 +/- 1.250	13.58	51.1
Individual Datasets	Bornheim Summer	75	0.935	1.017	+/- 0.030	-1.191 +/- 0.623	10.35	9.3
	Teddington Summer	46	0.833	0.921	+/- 0.057	0.304 +/- 0.831	16.19	0.0
	< 30 µg m-3	167	0.876	0.996	+/- 0.027	-0.601 +/- 0.485	9.32	4.2
Combined Datasets	≥ 30 µg m-3	41	0.929	1.128	+/- 0.048	-5.747 +/- 2.091	14.88	100.0
	All Data	208	0.960	1.029	+/- 0.014	-1.242 +/- 0.359	10.32	23.1



Page 168 of 440

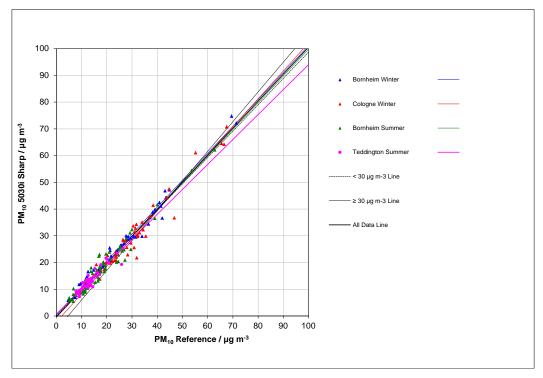


Figure 63: Reference vs. candidate, SN 3 & SN 4, measured component PM₁₀, all test sites

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 169 of 440

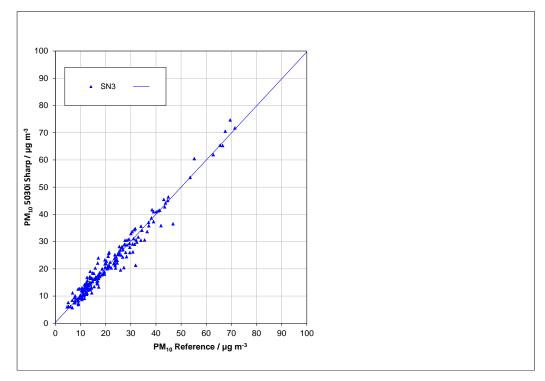


Figure 64: Reference vs. candidate, SN 3, measured component PM₁₀, all test sites

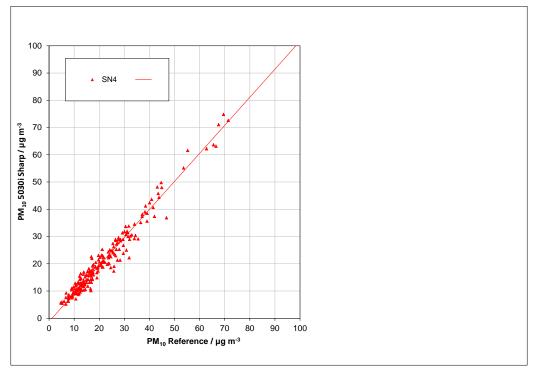


Figure 65: Reference vs. candidate, SN 4, measured component PM₁₀, all test sites



Page 170 of 440

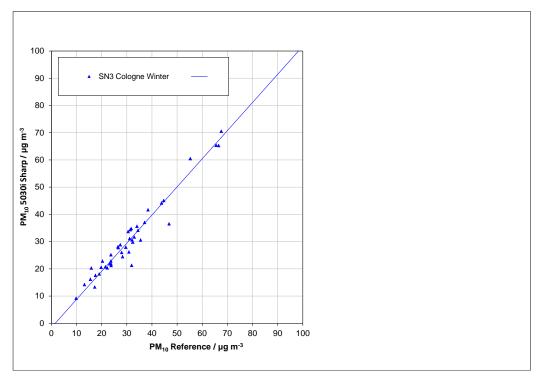


Figure 66: Reference vs. candidate, SN 3, measured component PM₁₀, Cologne (winter)

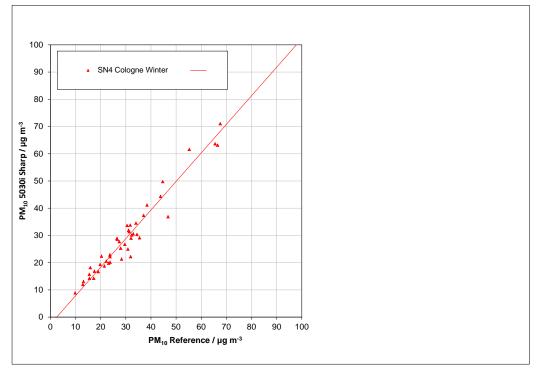


Figure 67: Reference vs. candidate, SN 4, measured component PM₁₀, Cologne (winter)

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 171 of 440

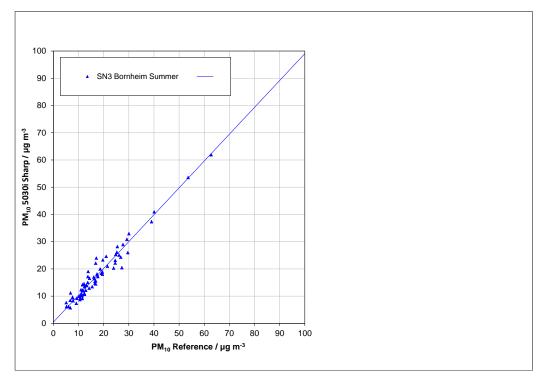


Figure 68: Reference vs. candidate, SN 3, measured component PM₁₀, Bornheim (summer)

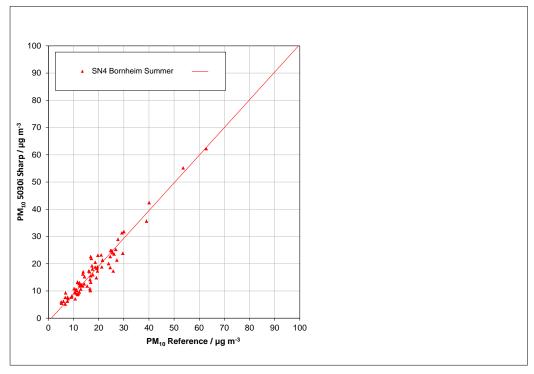


Figure 69: Reference vs. candidate, SN 4, measured component PM₁₀, Bornheim (summer)



Page 172 of 440

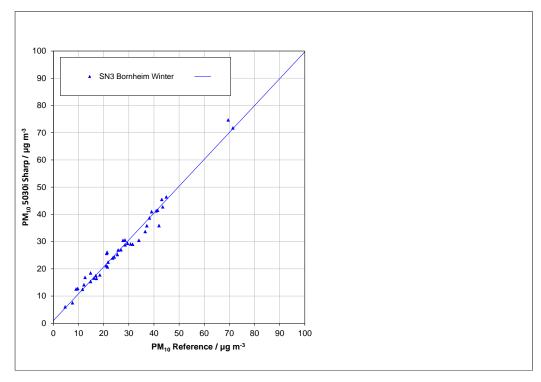


Figure 70: Reference vs. candidate, SN 3, measured component PM₁₀, Bornheim (winter)

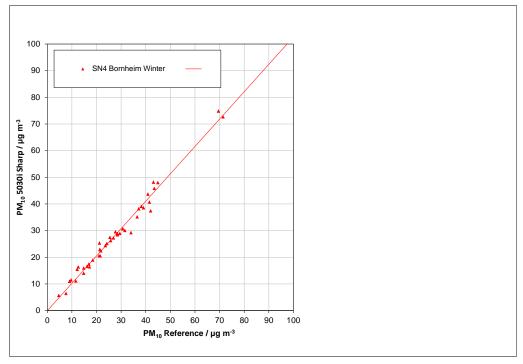


Figure 71: Reference vs. candidate, SN 4, measured component PM₁₀, Bornheim (winter)

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 173 of 440

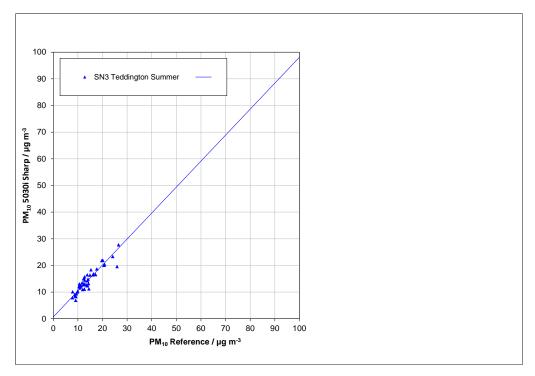


Figure 72: Reference vs. candidate, SN 3, measured component PM_{10} , Teddington (summer)

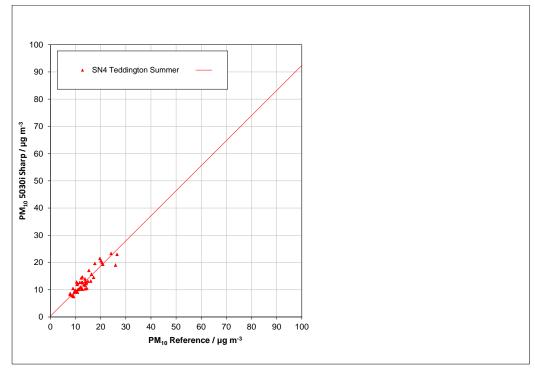


Figure 73: Reference vs. candidate, SN 4, measured component PM₁₀, Teddington (summer)



Page 174 of 440

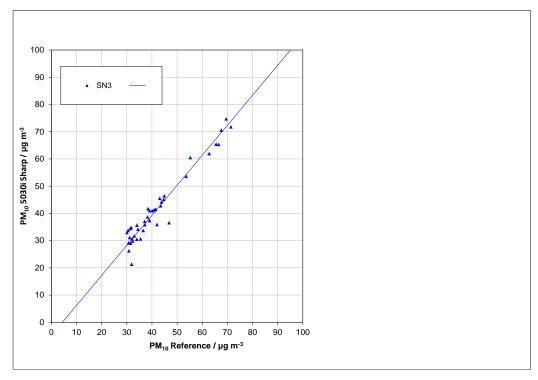


Figure 74: Reference vs. candidate, SN 3, measured component PM₁₀, values ≥ 30 μg/m³

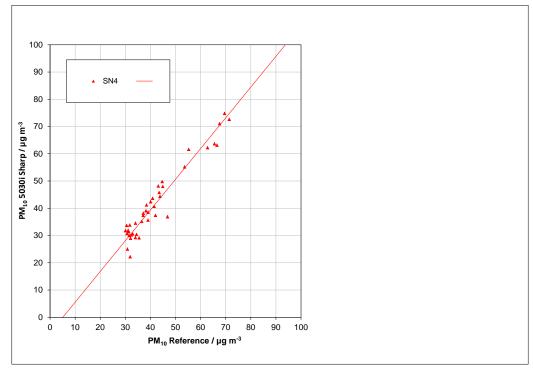


Figure 75: Reference vs. candidate, SN 4, measured component PM_{10} , values $\geq 30 \mu g/m^3$

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 175 of 440

6.1 5.4.11 Application of correction factors and terms

If the highest resulting expanded uncertainty of the candidate method is larger than the expanded relative uncertainty, which is defined in the requirements on the data quality of ambient air measurements according to EU-Guideline [7], the application of correction factors or terms is permitted. The corrected values have to fulfil the requirements according to point 9.5.3.2 et seqq. of the Guide "Demonstration of Equivalence of Ambient Air Monitoring Methods".

Note:

The test is carried out for component PM₁₀ as well.

6.2 Equipment

No additional equipment required.

6.3 Performance of test

Refer to module 5.4.10.

6.4 Evaluation

If evaluation of the raw data according to module 5.4.10 leads to a case where $W_{\text{CM}} > W_{\text{dqo}}$, which means that the candidate systems is not regarded equivalent to the reference method, it is permitted to apply a correction factor or term resulting from the regression equation obtained from the <u>full dataset</u>. The corrected values shall satisfy the requirements for all datasets or subsets (refer to module 5.4.10). Moreover, a correction factor may be applied even for $W_{\text{CM}} \leq W_{\text{dqo}}$ in order to improve the accuracy of the candidate systems.


Three different cases may occur:

- a) Slope b not significantly different from 1: $|b-1| \le 2u(b)$, intercept a significantly different from 0: |a| > 2u(a)
- b) Slope b significantly different from 1: |b-1| > 2u(b), intercept a not significantly different from 0: $|a| \le 2u(a)$
- c) Slope b significantly different from 1: |b-1| > 2u(b) intercept a significantly different from 0: |a| > 2u(a)

With respect to a)

The value of the intercept a may be used as a correction term to correct all input values y_i according to the following equation.

$$y_{i,corr} = y_i - a$$





Page 176 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

The resulting values of $y_{i,corr}$ may then be used to calculate the following new terms by linear regression:

$$y_{i,corr} = c + dx_i$$

and

$$u_{c_{-s}}^{2}(y_{i,corr}) = \frac{RSS}{(n-2)} - u^{2}(x_{i}) + [c + (d-1)x_{i}]^{2} + u^{2}(a)$$

with u(a) = uncertainty of the original intercept a, the value of which has been used to obtain $y_{i,corr}$.

Algorithms for the calculation of intercepts as well as slopes and their variances by orthogonal regression are described in detail in annex B of [4]. RSS is determined analogue to the calculation in module 5.4.10.

With respect to b)

The value of the slope b may be used as a term to correct all input values y_i according to the following equation.

$$y_{i,corr} = \frac{y_i}{b}$$

The resulting values of $y_{i,corr}$ may then be used to calculate the following new terms by linear regression:

$$y_{i,corr} = c + dx_i$$

and

$$u_{c_{-s}}^{2}(y_{i,corr}) = \frac{RSS}{(n-2)} - u^{2}(x_{i}) + [c + (d-1)x_{i}]^{2} + x_{i}^{2}u^{2}(b)$$

with u(b) = uncertainty of the original slope b, the value of which has been used to obtain $v_{i,corr}$.

Algorithms for the calculation of intercepts as well as slopes and their variances by orthogonal regression are described in detail in annex B of [4]. RSS is determined analogue to the calculation in module 5.4.10.

With respect to c)

The values of the slope b and of the intercept a may be used as correction terms to correct all input values y_i according to the following equation.

$$y_{i,corr} = \frac{y_i - a}{b}$$

The resulting values of $y_{i,corr}$ may then be used to calculate the following new terms by linear regression:

$$y_{i,corr} = c + dx_i$$

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 177 of 440

and

$$u_{c_{-}s}^{2}(y_{i,corr}) = \frac{RSS}{(n-2)} - u^{2}(x_{i}) + [c + (d-1)x_{i}]^{2} + x_{i}^{2}u^{2}(b) + u^{2}(a)$$

with u(b) = uncertainty of the original slope b, the value of which has been used to obtain $y_{i,corr}$ and with u(a) = uncertainty of the original intercept a, the value of which has been used to obtain $y_{i,corr}$.

Algorithms for the calculation of intercepts as well as slopes and their variances by orthogonal regression are described in detail in annex B of [4]. RSS is determined analogue to the calculation in module 5.4.10.

The values for $u_{c_s,corr}$ are used for the calculation of the combined relative uncertainty of the candidate systems after correction according to the following equation:

$$W_{c,CM,corr}^{2}(y_{i}) = \frac{u_{c_{s,corr}}^{2}(y_{i})}{y_{i}^{2}}$$

For the corrected dataset, uncertainty $w_{c,CM,corr}$ is calculated at the daily limit value by taking y_i as the concentration at the limit value.

The expanded relative uncertainty W_{CM.corr} is calculated according to the following equation:

$$W_{\text{CM',corr}} = k \cdot w_{\text{CM,corr}}$$

In practice: k=2 for large number of available experimental results

The highest resulting uncertainty $W_{\text{CM,corr}}$ is compared and assessed with the requirements on data quality of ambient air measurements according to EU Standard [7]. Two results are possible:

- 1. $W_{CM} \le W_{dqo} \rightarrow C$ and date method is accepted as equivalent to the standard method.
- 2. $W_{CM} > W_{dqo} \rightarrow$ Candidate method is not accepted as equivalent to the standard method.

The specified expanded relative uncertainty W_{dqo} for particulate matter is 25 % [7].

6.5 Assessment

The candidate systems fulfil the requirements on data quality of ambient air quality measurements during the test even without application of correction factors. A correction of the slope and intercept leads nevertheless to a significant improvement of the expanded measuring uncertainty of the full data comparison.

Minimum requirement fulfilled? yes



Page 178 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

The evaluation of the full data comparison for candidate SN 4 delivers, nevertheless, a significant slope and a significant intercept (see Table 38).

The slope for the full dataset of SN 4 is 1.029 with an uncertainty of the slope of merely 0.014.

The intercept for the full dataset of SN 4 is -1.242 with an uncertainty of 0.359.

The 2006 UK Equivalence Report [8] highlighted that this was a flaw in the mathematics required for equivalence as per the November 2005 version of The Guidance as it penalised instruments that were more accurate (Appendix E Section 4.2 therein). This same flaw is copied in the January 2010 version. It is the opinion of TÜV Rheinland and their UK partners that the Model 5030i SHARP measuring system for PM_{10} is indeed being penalised by the mathematics for being accurate. It is proposed that the same pragmatic approach is taken here that was previously undertaken in earlier studies.

The slope for the full dataset is 1.009, the intercept of the same is -0.392. For this reason, a slope correction and intercept correction of the entire dataset was performed and evaluated again with the corrected values. All datasets fulfil the requirements on data quality after the correction. However, the measurement uncertainty shows a slight worsening (see Table 41 in comparison to Table 38).

The version of the Guide of January 2010 requires that when operating in networks, a candidate method needs to be tested annually at a number of sites corresponding to the highest expanded uncertainty found during equivalence testing. These criteria are banded in 5 % steps (Guide [4], point 9.9.2, Table 6). We have to bear in mind that the highest determined expanded uncertainty lies in the range 0 % to 10 % after the correction of the slope and intercept.

The respective realisation of the above mentioned requirement on on-going QA/QC in networks is the responsibility of the network operator or of the responsible authority of the member state. However, TÜV Rheinland and their UK partners recommend that the expanded uncertainty of the full dataset is referred to for this, namely 9.2 % (uncorrected dataset) and 9.6 % (dataset after slope and intercept correction), which again would require an annual test at 2 measurement sites.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 179 of 440

6.6 Detailed presentation of test results

Table 41 shows the results of the evaluations of the equivalence check after the application of the correction factor for the slope and intercept on the complete dataset.

Table 41: Summary of the results of the equivalence check, SN 3 & SN 4, after slope and intercept correction

PM10 5030i Sharp Slope and Intercept	23.8% ≥ 28 µg m-3	Orthogonal Regression				Betw een Instrument Uncertainties		
Corrected	W _{CM} / %	n _{c-s}	r ²	Slope (b) +/- u _b	Intercept (a) +/- ua	Reference	Candidate
All Data	9.6	202	0.967	1.000	+/- 0.013	0.003 +/- 0.324	0.63	1.09
< 30 µg m-3	8.5	161	0.903	0.976	+/- 0.024	0.504 +/- 0.427	0.63	1.12
≥ 30 µg m-3	13.8	41	0.938	1.102	+/- 0.044	-4.729 +/- 1.922	0.63	1.21
SN3	Dataset	Orthogonal Regression					Limit Value of 50 μg m-3	
		n _{c-s}	r ²	Slope (b) +/- u _b		Intercept (a) +/- u _a	W _{CM} / %	% ≥ 28 µg m-3
Individual Datasets	Bornheim Winter	42	0.976	0.978	+/- 0.024	1.358 +/- 0.738	8.82	42.9
	Cologne Winter	43	0.947	1.023	+/- 0.037	-1.159 +/- 1.244	13.10	53.5
	Bornheim Summer	71	0.952	0.976	+/- 0.026	0.850 +/- 0.529	9.12	9.9
	Teddington Summer	46	0.855	0.965	+/- 0.055	1.048 +/- 0.805	7.89	0.0
Combined Datasets	< 30 µg m-3	161	0.899	0.972	+/- 0.025	1.016 +/- 0.435	8.34	4.3
	≥ 30 µg m-3	41	0.938	1.092	+/- 0.043	-4.387 +/- 1.893	13.54	100.0
	All Data	202	0.966	0.985	+/- 0.013	0.676 +/- 0.326	9.65	23.8
SN4	Dataset	Orthogonal Regression					Limit Value of 50 µg m-3	
		n _{c-s}	r ²	Slope (b) +/- u _b	Intercept (a) +/- u _a	W _{CM} / %	% ≥ 28 µg m-3
Individual Datasets	Bornheim Winter	42	0.981	1.018	+/- 0.022	0.318 +/- 0.683	9.37	42.9
	Cologne Winter	45	0.944	1.039	+/- 0.037	-2.231 +/- 1.238	13.78	51.1
	Bornheim Summer	75	0.935	1.007	+/- 0.030	-0.785 +/- 0.618	10.70	9.3
	Teddington Summer	46	0.833	0.911	+/- 0.057	0.701 +/- 0.823	16.69	0.0
Combined Datasets	< 30 µg m-3	167	0.876	0.986	+/- 0.027	-0.196 +/- 0.480	9.81	4.2
	≥ 30 µg m-3	41	0.929	1.117	+/- 0.047	-5.288 +/- 2.072	14.97	100.0
	All Data	208	0.960	1.019	+/- 0.014	-0.837 +/- <mark>0.355</mark>	10.60	23.1



Page 180 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

6.1 5.5 Requirements on multiple-component measuring systems

Multiple-component measuring systems shall comply with the requirements set for each component, also in the case of simultaneous operation of all measuring channels.

6.2 Equipment

Not applicable.

6.3 Performance of test

Not applicable.

6.4 Evaluation

Not applicable.

6.5 Assessment

Not applicable.

Minimum requirement fulfilled?

6.6 Detailed presentation of test results

Not applicable.

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 181 of 440

7. Recommendations for practical use

Works in the maintenance interval (4 weeks)

The following procedures are required to be undertaken at regular intervals:

- Regular visual inspection / telemetric monitoring
- Check of system status
- Check of error messages
- Contamination check
- Check of the instrument functions according to the instructions of the manufacturer
- Maintenance of the sampling inlet according to the instructions of the manufacturer

For the rest, the manufacturer's directions and recommendations shall be followed.

TÜV Rheinland Energie und Umwelt GmbH Air Pollution Control



Page 182 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Further maintenance works

The following works are necessary in addition to the regular works in the maintenance interval:

- Inspection of filter tape supply one filter tape is enough for approx. 650 filter tape changes per roll (approx. 215 days at cycles of 8 hours). Semi-annual filter tape changes are expected to be sufficient under normal conditions (no unscheduled filter changes due to significantly high dust concentrations). The "Filter Tape Counter" function allows for monitoring the current number of filter tape changes as well as configuring alarm thresholds which remind the user of upcoming changes.
- An inspection of the sensors for ambient temperature and ambient pressure shall be carried out every three months according to the manufacturer's specifications.
- A flow rate check must be performed every three months according to the manufacturer's specifications.
- The system's leak tightness shall be inspected every three months according to the manufacturer's specifications.
- The external pump exhaust filter shall be exchanged every six months.
- As part of an annual basic maintenance, the carbon vanes of the vacuum pump shall be exchanged and the SHARP optics module shall be cleaned once a year. The cleaning of the SHARP optics module is ideally performed by an experienced service technician. Furthermore, it is recommended to carry out a yearly inspection and, if required, a re-calibration of the radiometric measurement using the foil set.
- The cleaning of the sampling tube shall be paid attention to during the annual basic maintenance.

Further details are provided in the user manual.

Department of Environmental Protection/Air Pollution Control

Janse W	guido Baum	
Karsten Pletscher	Guido Baum	

Cologne, 20 September 2013 936/21209885/G

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

Page 183 of 440

8. Literature

- [1] Standard VDI 4202, Part 1, "Performance criteria for performance tests of automated ambient air measuring systems Point-related measurement methods for gaseous and particulate air pollutants", June 2002 & September 2010
- [2] Standard VDI 4203, Part 3, "Testing of automated measuring systems Test procedures for point-related ambient air measuring systems for gaseous and particulate air pollutants", August 2004 & September 2010
- [3] Standard EN 12341, "Air quality Determination of the PM10 fraction of suspended particulate matter. Reference method and field test procedure to demonstrate reference equivalence of measurement methods", German version EN 12341: 1998
- [4] Guide "Demonstration of Equivalence of Ambient Air Monitoring Methods", English version of January 2010
- [5] Operating manual Modell 5030i SHARP, 12 March 2013
- [6] Operating manual LVS3, Stand 2000
- [7] Directive 2008/50/EC of the European Parliament and of the Council of 21 May 2008 on ambient air quality and cleaner air for Europe
- [8] Report "UK Equivalence Programme for Monitoring of Particulate Matter", Report No.: BV/AQ/AD202209/DH/2396 of 5 June 2006
- [9] Technical specification CEN/TS 16450, "Ambient air Automated measuring systems for the measurement of the concentration of particulate matter (PM10; PM2.5)", English Version of May 2013

TÜV Rheinland Energie und Umwelt GmbH Air Pollution Control



Page 184 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report No.: 936/21209885/G

9. Appendix

Appendix 1	Measured and calculated values
Annex 1:	Detection limit
Annex 2:	Temperature dependence of zero point
Annex 3:	Temperature dependence of the sensitivity
Annex 4:	Dependence on supply voltage
Annex 5:	Measured values at the field test sites
Annex 6:	Ambient conditions at the field test sites
Annex 7:	Measured values from the additional campaign Bornheim, summer 2013
Annex 8:	Ambient conditions during the additional campaign Bornheim, summer 2013
Appendix 2	Filter weighing procedure

Appendix 3 **Manuals**

Air Pollution Control



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Page 185 of 440



Deutsche Akkreditierungsstelle GmbH

Beliehene gemäß § 8 Absatz 1 AkkStelleG i.V.m. § 1 Absatz 1 AkkStelleGBV Unterzeichnerin der Multilateralen Abkommen von EA, ILAC und IAF zur gegenseitigen Anerkennung

Akkreditierung



Die Deutsche Akkreditierungsstelle GmbH bestätigt hiermit, dass das Prüflaboratorium

TÜV Rheinland Energie und Umwelt GmbH

mit seiner

Messstelle für Immissionsschutz (Environmental Protection) Am Grauen Stein, 51105 Köln

und seiner unselbständigen Messstelle

Robert-Koch-Straße 27, 55129 Mainz

die Kompetenz nach DIN EN ISO/IEC 17025:2005 und CEN/TS 15675:2007 besitzt, Prüfungen in folgenden Bereichen durchzuführen:

Bestimmung (Probenahme und Analytik) von anorganischen und organischen gas- oder partikelförmigen Luftinhaltsstoffen im Rahmen von Emissions- und Immissionsmessungen; Probenahme von luftgetragenen polyhalogenierten Dibenzo-p-Dioxinen und Dibenzofuranen bei Emissionen und Immissionen; Probenahme von faserförmigen Partikeln bei Emissionen und Immissionen; Ermittlung von gas- oder partikelförmigen Luftinhaltsstoffen mit kontinulerlich arbeitenden Messgeräten; Bestimmung von Geruchsstoffen in Luft; Kalibrierungen und Funktionsprüfungen kontinulerlich arbeitender Messgeräte für Luftinhaltsstoffe einschließlich Systemen zur Datenauswertung und Emissionsfernüberwachung; Eignungsprüfungen von automatisch arbeitenden Emissions- und Immissionsmesseinrichtungen einschließlich Systemen zur Datenauswertung und Emissionsfernüberwachung; Feuerraummessungen; Ermittlung der Emissionen und Immissionen von Geräuschen; Ermittlung von Geräuschen und Vibrationen am Arbeitsplatz; Akustische und schwingungstechnische Messungen Im Eisenbahnwesen; Bestimmung von Schallleistungspegeln von zur Verwendung im Freien vorgesehenen Geräten und Maschinen nach Richtlinie 2000/14/EG und Konformitätsbewertungsverfahren; Schallmessungen an Windenergleanlagen (Geräuschemission, Geräuschimmission); Immissionsprognose auf der Grundlage der Technischen Anleitung zur Reinhaltung der Luft und der Geruchsimmissions-Richtlinie und der VDI 3783 Blatt 13;

Die Akkreditierungsurkunde gilt nur in Verbindung mit dem Bescheid vom 23.01.2013 mit der Akkreditierungsnummer D-PL-11120-02 und ist gültig bis 22.01.2018. Sie besteht aus diesem Deckblatt, der Rückseite des Deckblatts und der folgenden Anlage mit insgesamt 33 Seiten.

Registrierungsnummer der Urkunde: D-PL-11120-02-00

Im Auftrag

Berlin, 23.01.2013

Siehe Hinweise auf der Rückseite

Vallueva Andrea Valbuena Abteilungsleiterin



Air Pollution Control

Page 186 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report No.: 936/21209885/G

Deutsche Akkreditierungsstelle GmbH

Standort Berlin Spittelmarkt 10 10117 Berlin Standort Frankfurt am Main Gartenstraße 6 60594 Frankfurt am Main Standort Braunschweig Bundesallee 100 38116 Braunschweig

Die auszugsweise Veröffentlichung der Akkreditierungsurkunde bedarf der vorherigen schriftlichen Zustimmung der Deutsche Akkreditierungsstelle GmbH (DAkkS). Ausgenommen davon ist die separate Weiterverbreitung des Deckblattes durch die umseitig genannte Konformitätsbewertungsstelle in unveränderter Form.

Es darf nicht der Anschein erweckt werden, dass sich die Akkreditierung auch auf Bereiche erstreckt, die über den durch die DAkkS bestätigten Akkreditierungsbereich hinausgehen.

Die Akkreditierung erfolgte gemäß des Gesetzes über die Akkreditierungsstelle (AkkStelleG) vom 31. Juli 2009 (BGBI. I S. 2625) sowie der Verordnung (EG) Nr. 765/2008 des Europäischen Parlaments und des Rates vom 9. Juli 2008 über die Vorschriften für die Akkreditierung und Marktüberwachung im Zusammenhang mit der Vermarktung von Produkten (Abl. L 218 vom 9. Juli 2008, S. 30). Die DAkkS ist Unterzeichnerin der Multilateralen Abkommen zur gegenseitigen Anerkennung der European co-operation for Accreditation (EA), des International Accreditation Forum (IAF) und der International Laboratory Accreditation Cooperation (ILAC). Die Unterzeichner dieser Abkommen erkennen ihre Akkreditierungen gegenseitig an.

Der aktuelle Stand der Mitgliedschaft kann folgenden Webseiten entnommen werden:

EA: www.european-accreditation.org

ILAC: www.ilac.org IAF: www.iaf.nu

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report-No.: 936/21209885/G



Zero filter

Page 187 of 440

ZΡ

Standards

Annex 1 Detection limit Page 1 of 1

Manufacturer Thermo Fisher Scientific

Type Model 5030i

No.	Date	Measured values [µg/m³]	Date	Measured values [µg/m³]
		SN 3		SN 4
1	12/20/2012	0.0	11/13/2012	0.0
2	12/21/2012	0.0	11/14/2012	0.0
3	12/22/2012	0.0	11/15/2012	-0.1
4	12/23/2012	0.0	11/16/2012	-0.1
5	12/24/2012	0.0	11/17/2012	0.0
6	12/25/2012	0.0	11/18/2012	0.1
7	12/26/2012	0.0	11/19/2012	0.0
8	12/27/2012	0.0	11/20/2012	0.1
9	12/28/2012	0.0	11/21/2012	0.2
10	12/29/2012	0.0	11/22/2012	0.1
11	12/30/2012	0.0	11/23/2012	-0.1
12	12/31/2012	0.0	11/24/2012	0.1
13	1/1/2013	0.0	11/25/2012	0.1
14	1/2/2013	0.0	11/26/2012	0.1
15	1/3/2013	0.0	11/27/2012	0.0
	No. of values	15	No. of values	15
	Mean	0.01	Mean	0.04
	Standard deviation s _{x0}	0.01	Standard deviation s _{x0}	0.07
	Detection limit x	0.01	Detection limit x	0.16

$$s_{xo} = \sqrt{(\frac{1}{n-1}) \cdot \sum_{i=1,n} (x_{0i} - \overline{x_0})^2}$$



Page 188 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 2

Dependence of zero point on ambient temperature (SHARP)

Page 1 of 1

Manufacturer Thermo Fisher Scientifc

Standards ZP Zero filter

Type Model 5030i

			Cycle 1		Cycle 2		Cycle 3		
SN 3		Temperature	Measured value	Dev.	Measured value	Dev.	Measured value	Dev.	
	No.	[°C]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	
	1	20	0.0	-	0.0	-	0.0	-	
	2	5	0.0	0.0	0.0	0.0	0.0	0.0	
ZP	3	20	0.1	0.1	0.1	0.1	0.1	0.1	
	4	40	0.0	0.0	0.0	0.0	0.0	0.0	
	5	20	-0.1	-0.1	0.0	0.0	0.0	0.0	
SN 4		Temperature	Measured value	Dev.	Measured value	Dev.	Measured value	Dev.	
	No.	[°C]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	
	1	20	1.1	-	1.2	-	1.2	-	
	2	5	0.7	-0.4	0.7	-0.4	0.4	-0.8	
ZP	3	20	0.6	-0.5	0.7	-0.5	0.7	-0.5	
	4	40	0.1	-1.0	0.1	-1.1	0.1	-1.1	
	5	20	0.3	-0.8	0.3	-0.9	0.1	-1.2	

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report-No.: 936/21209885/G



Page 189 of 440

Annex 2

Dependence of zero point on ambient temperature (NEPH)

Page 2 of 2

Manufacturer Thermo Fisher Scientifc
Standards ZP Zero filter

Type Model 5030i

			Cycle 1		Cycle 2		Cycle 3		
SN 3		Temperature	Measured value	Dev.	Measured value	Dev.	Measured value	Dev.	
	No.	[°C]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	
	1	20	-0.1	-	0.0	-	0.0	-	
	2	5	-0.3	-0.3	-0.2	-0.2	0.2	0.1	
ZP	3	20	0.8	0.8	0.8	0.8	0.8	0.8	
	4	40	0.0	0.0	-0.4	-0.4	-0.4	-0.5	
	5	20	-0.6	-0.5	-0.2	-0.2	-0.1	-0.1	
SN 4		Temperature	Measured value	Dev.	Measured value	Dev.	Measured value	Dev.	
	No.	[°C]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	
	1	20	1.1	-	1.1	-	1.2	-	
	2	5	0.7	-0.4	0.7	-0.4	0.4	-0.8	
ZP	3	20	0.6	-0.5	0.6	-0.5	0.7	-0.5	
	4	40	0.1	-1.0	0.1	-1.0	0.1	-1.1	
	5	20	0.3	-0.8	0.3	-0.8	0.0	-1.1	



Page 190 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 3

Dependence of measured value on ambient temperature

Page 1 of 1

Manufacturer Thermo Fisher Scientific

Standards

ZΡ

Reference foils

Type Model 5030i SHARP

			Cycle 1		Cycle 2		Cycle 3		
SN 3		Temperature	Measured value	Dev.	Measured value	Dev.	Measured value	Dev.	
	No.	[°C]		[%]		[%]		[%]	
	1	20	7104.5	-	7048.1	-	7042.6	-	
	2	5	7082.2	-0.3	7057.7	0.1	7062.6	0.3	
RP	3	20	7167.7	0.9	7055.5	0.1	7100.1	0.8	
	4	40	7055.5	-0.7	7052.3	0.1	7052.3	0.1	
	5	20	7143.8	0.6	7016.4	-0.4	7096.3	0.8	
SN 4		Temperature	Measured value	Dev.	Measured value	Dev.	Measured value	Dev.	
	No.	[°C]		[%]		[%]		[%]	
	1	20	7058.3	-	7075.4	-	7058.0	-	
	2	5	7032.6	-0.4	7109.6	0.5	7108.6	0.7	
RP	3	20	7068.8	0.1	6989.1	-1.2	7071.8	0.2	
	4	40	7093.4	0.5	7238.4	2.3	7056.9	0.0	
	5	20	7079.5	0.3	6985.4	-1.3	7182.4	1.8	

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report-No.: 936/21209885/G



Page 191 of 440

Annex 4

Dependence of measured value on mains voltage

Page 1 of 1

Manufacturer Thermo Fisher Scientific

Standards

ZΡ

Reference foils

Type Model 5030i SHARP

			Cycle 1		Cycle 2		Cycle 3		
SN 3		Mains voltage	Measured value	Dev.	Measured value	Dev.	Measured value	Dev.	
	No.	[V]		[%]		[%]		[%]	
	1	230	7082.5	-	7206.5	-	7202.2	-	
	2	190	7121.6	0.6	7141.8	-0.9	7141.5	-0.8	
RP	3	230	7084.1	0.0	7128.3	-1.1	7204.4	0.0	
	4	245	7253.7	2.4	7037.7	-2.3	7037.7	-2.3	
	5	230	7098.8	0.2	7194.3	-0.2	7165.8	-0.5	
SN 4		Mains voltage	Measured value	Dev.	Measured value	Dev.	Measured value	Dev.	
	No.	[V]		[%]		[%]		[%]	
	1	230	7087.1	-	7084.8	-	7093.0	-	
	2	190	7134.5	0.7	7082.8	0.0	7001.5	-1.3	
RP	3	230	7082.1	-0.1	7095.8	0.2	7091.6	0.0	
	4	245	7104.9	0.3	7075.6	-0.1	7052.6	-0.6	
	5	230	7013.7	-1.0	7164.1	1.1	7250.6	2.2	



Page 192 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 5

Measured values from field test sites, related to actual conditions

Page 1 of 20

Manufacturer	Thermo Fishe	r Scientific							RMA	
Type of instrument	Model 5030i S	SHARP							PM10 Measured values in μg/m³ (ACT)	
Serial-No.	SN 3 / SN 4									
No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5 [µg/m³]	PM2,5 [μg/m³]	PM10 [μg/m³]	PM10 [μg/m³]	PM2,5/PM10 [%]	PM10 [μg/m³]	PM10 [µg/m³]		
1	3/8/2011	31.1	31.8	43.9	43.8	71.7	44.1	44.3		Cologne, Winter
2	3/9/2011	19.1	18.8	30.5	28.7	63.9	27.9	26.7		Gologilo, Trinto.
3	3/10/2011	15.1	10.0	30.3	20.7	00.0	27.5	20.7	Complete power loss	
4	3/11/2011	16.7	16.1	33.5	33.1	49.2			Recovery after re-start	
5	3/12/2011	10.7	10.1	33.3	33.1	45.2	29.5	29.6	recovery after to start	
6	3/13/2011	13.3	13.1	16.2	15.6	83.0	20.3	18.2		
7	3/14/2011	18.2	20.0	27.7	25.6	71.5	20.0	10.2	Power loss, only Thermo	
8	3/15/2011	37.4	37.8	44.1	43.1	86.3			Recovery after re-start	
9	3/16/2011	55.0	57.8	67.3	65.8	84.8	65.3	63.1	receivery after to start	
10	3/17/2011	50.7	49.6	68.0	67.1	74.1	70.5	71.0		
11	3/18/2011	28.4	28.1	38.4	38.4	73.5	41.6	41.1		
12	3/19/2011						14.0	12.9		
13	3/20/2011	20.4	20.3	28.6	28.0	72.0	24.4	21.3		
14	3/21/2011	22.4	22.3	34.7	34.3	64.8	34.1	30.3		
15	3/22/2011	41.7	41.6	55.7	54.8	75.4	60.5	61.6		
16	3/23/2011	20.3	20.4	33.1	31.6	63.0	29.8	30.2		
17	3/24/2011	18.6	20.2	33.3	32.7	58.7	31.6	30.6		
18	3/25/2011	27.6	27.5	36.9	37.2	74.2	37.0	37.3		
19	3/26/2011						15.8	14.9		
20	3/27/2011	24.6	24.8	35.6	35.4	69.5	30.5	29.1		
21	3/28/2011	20.5	20.7	32.4	31.9	64.2	30.6	29.0		
22	3/29/2011	44.7	44.2	65.4	65.6	67.8	65.4	63.6		
23	3/30/2011	15.6	15.6	24.0	23.4	65.8	22.8	22.8		
24	3/31/2011	6.0	5.1	10.5	9.3	56.2	9.1	8.9		
25	4/1/2011	8.5	7.7	13.3	13.0	61.7	14.2	13.0		
26	4/2/2011						27.8	27.4		
27	4/3/2011	14.6	13.7	22.1	22.4	63.6	20.3	20.5		
28	4/4/2011	8.8	9.0	17.9	16.6	51.6	13.3	14.2		
29	4/5/2011	11.0	11.4	19.2	19.0	58.7	18.1	16.7		
	11	•	1		1	II II		II .		

4/6/2011

13.0

12.9

23.6

23.8

54.6

22.2

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G



Page 193 of 440

Annex 5

Measured values from field test sites, related to actual conditions

Page 2 of 20

Manufacturer	Thermo Fishe	r Scientific							PM10	
Type of instrument	Model 5030i S	SHARP							Measured values in µg/m³ (ACT)	
Serial-No.	SN 3 / SN 4									
No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[%]	[µg/m³]	[µg/m³]		
31	4/7/2011	13.7	13.1	23.2	24.2	56.7	25.1	22.9		Cologne, Winter
32	4/8/2011	19.0	19.8	34.9	34.8	55.7			Zero point	_
33	4/9/2011								Zero point	
34	4/10/2011	11.1	11.8	23.4	22.3	50.1			Zero point	
35	4/11/2011	15.2	15.1	31.3	31.5	48.2	34.3	31.4		
36	4/12/2011	9.0	8.2	18.0	17.1	49.0	17.6	16.8		
37	4/13/2011	12.5	12.2	24.4	23.2	51.9	21.2	20.1		
38	4/14/2011	19.6	19.4	32.0	31.5	61.5	34.7	33.8		
39	4/15/2011	13.3	11.4	31.9	31.9	38.8	21.3	22.2		
40	4/16/2011						36.9	36.8		
41	4/17/2011						21.9	22.0		
42	4/18/2011	17.0	17.2	26.4	26.6	64.6	28.1	28.9		
43	4/19/2011	17.5	17.9	30.3	30.7	58.0	33.6	33.6		
44	4/20/2011	20.0	20.8	33.9	34.2	59.8	35.6	34.5		
45	4/21/2011						35.5	34.8		
46	4/22/2011						26.4	24.7		
47	4/23/2011						42.2	38.7		
48	4/24/2011						31.2	29.6		
49	4/25/2011	19.6	20.7	27.4	27.4	73.6	28.8	27.7		
50	4/26/2011	17.0	17.6	31.0	31.3	55.7	31.1	31.9		
51	4/27/2011			44.3	45.1		45.1	49.8		
52	4/28/2011	16.2	17.8	28.0	28.0	60.8	26.0	25.3		
53	4/29/2011	19.0	19.3	25.9	27.3	72.0	27.8	28.6		
54	4/30/2011	12.9	13.3	21.0	22.0	61.0	20.7	18.7		
55	5/1/2011	6.7	7.0	13.0	12.9	52.9		12.0	SN3 Motor at meas. chamber defective	
56	5/2/2011	9.3	9.2	16.1	14.9	59.8		15.7	SN3 Motor at meas. chamber defective	
57	5/3/2011	9.0	9.3	15.9	15.1	59.2	16.1	14.2		
58	5/4/2011	11.4	11.5	20.5	20.2	56.1	22.8	22.4		
59	5/5/2011			20.1	19.5		20.5	19.3	Outlier Ref. PM2,5	
60	5/6/2011	13.7	13.6	30.7	31.1	44.2	26.2	25.0	,	



Page 194 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 5

Measured values from field test sites, related to actual conditions

Page 3 of 20

Manufacturer	Thermo Fishe	r Scientific							DMAG	
Type of instrument	Model 5030i \$	SHARP							PM10 Measured values in μg/m³ (ACT)	
Serial-No.	SN 3 / SN 4									
No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[%]	[µg/m³]	[µg/m³]		
61	5/7/2011	19.1	17.6	46.1	47.5	39.2	36.5	36.8		Cologne, Winter
62	5/8/2011	12.3	12.2	23.4	23.0	53.0	21.8	19.8		
63	7/25/2011	12.1	11.2	17.8	17.8	65.4			Recovery after Zero point	Bornheim, Summer
64	7/26/2011	11.8	11.8	19.6	19.1	61.2		18.2	SN3 Heater board defective	
65	7/27/2011	14.3	13.7	21.5	20.9	65.9		18.8	SN3 Heater board defective	
66	7/28/2011	17.5	19.0	26.5	25.2	70.6		17.3	SN3 Heater board defective	
67	7/29/2011	10.2	7.9	16.8	16.6	54.2		10.1	SN3 Heater board defective	
68	7/30/2011						10.5	9.1		
69	7/31/2011	9.8	9.5	13.3	14.2	70.4	17.1	16.2		
70	8/1/2011	12.7	11.4	18.0	19.2	64.8	19.9	18.7		
71	8/2/2011	10.3	10.1	19.0	20.1	52.1	18.0	17.3		
72	8/3/2011	17.0	16.6	24.4	26.1	66.5	26.1	24.7		
73	8/4/2011	8.7	8.4	13.8	14.7	60.2	12.9	12.6		
74	8/5/2011	8.6	10.6	17.1	18.0	54.7	17.8	18.0		
75	8/6/2011						10.8	10.6		
76	8/7/2011	2.8	3.1	5.6	6.4	49.5	6.1	6.2		
77	8/8/2011	2.8	4.0	7.9	7.5	44.1	9.4	7.6		
78	8/9/2011	2.7	3.2	10.8	11.2	27.1	12.3	10.6		
79	8/10/2011	5.3	6.4	12.1	12.7	47.0	13.4	12.9		
80	8/11/2011	5.5	5.2	11.4	11.1	47.3	10.8	10.2		
81	8/12/2011	3.0	3.8	6.4	7.0	50.2	8.4	7.6		
82	8/13/2011						8.1	8.0		
83	8/14/2011	2.6	3.6	7.0	6.7	45.5	11.1	9.2		
84	8/15/2011	6.0	5.4	13.5	13.9	41.7	15.0	11.8		
85	8/16/2011	6.0	6.0	13.7	12.9	45.1	13.9	11.9		
86	8/17/2011	14.7	14.0	25.8	25.0	56.3	28.2	24.0		
87	8/18/2011	9.0	8.7	16.8	15.9	54.1	16.4	17.0		
88	8/19/2011	6.6	6.2	13.3	12.8	48.8	13.9	12.3		
89	8/20/2011	40.4	40.0	47.4	47.0	00.4	16.2	14.2		
90	8/21/2011	10.4	10.3	17.1	17.2	60.4	23.9	21.9		<u></u>

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G



Page 195 of 440

Annex 5

Measured values from field test sites, related to actual conditions

Page 4 of 20

Manufacturer Thermo Fisher Scientific

PM10

Type of instrument Model 5030i SHARP Measured values in μg/m³ (ACT)

Serial-No. SN 3 / SN 4

No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
INU.	Date	PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	5N 4 PM10	Remark	Test site
		,	,		[µg/m³]	[%]	-			
0.4	0/00/0044	[µg/m³]	[µg/m³]	[µg/m³]			[µg/m³]	[µg/m³]		
91	8/22/2011	10.9	10.8	19.7	19.3	55.8	18.8	18.8		Bornheim, Summer
92	8/23/2011	19.2	19.1	29.9	30.1	63.7	32.9	31.7		
93	8/24/2011	6.7	7.4	16.9	16.7	41.9	14.4	13.2		
94	8/25/2011	11.5	12.1	18.8	18.6	63.4	19.9	20.5		
95	8/26/2011	4.9	5.5	10.7	10.7	48.8	9.3	7.1		
96	8/27/2011						5.8	4.8		
97	8/28/2011			7.7	7.6		9.6	6.2		
98	8/29/2011	5.9	6.2	11.4	11.5	53.0	10.1	9.0		
99	8/30/2011	9.1	8.1	17.1	16.6	51.1	15.6	15.5		
100	8/31/2011	14.5	13.9	26.0	23.6	57.2	25.3	24.8		
101	9/1/2011	17.7	18.2	27.5	26.1	66.9	24.3	25.2		
102	9/2/2011	14.9	15.0	25.1	24.1	60.6	22.1	18.6		
103	9/3/2011						23.3	24.7		
104	9/4/2011	8.2	8.0	12.7	12.1	65.3	10.6	11.8		
105	9/5/2011	4.8	5.0	9.2	9.1	53.8	7.3	7.7		
106	9/6/2011	5.2	5.6	11.1	10.6	49.8	10.3	9.2		
107	9/7/2011	6.1	5.8	12.5	13.2	46.1	12.1	10.6		
108	9/8/2011						8.2	9.1		
109	9/9/2011	6.8	7.1	12.1	11.8	57.9	11.9	9.0		
110	9/10/2011						11.5	11.5		
111	9/11/2011	5.7	5.5	9.4	9.3	59.5	9.1	8.1		
112	9/12/2011	5.2	6.1	11.6	11.6	48.5	12.1	13.2		
113	9/13/2011	6.3	7.2	16.3	16.8	40.6	15.3	10.8		
114	9/14/2011	6.7	7.2	15.3	15.6	44.9	13.5	11.8		
115	9/15/2011	11.1	12.2	24.3	24.9	47.4	23.1	22.6		
116	9/16/2011	13.0	13.7	23.0	25.1	55.4			Inlet -> Zero filter	
117	9/17/2011								Zero point	
118	9/18/2011	3.2	3.9	7.0	7.1	50.4			Zero point	
119	9/19/2011	7.8	8.2	12.5	11.6	66.2			Zero filter -> Inlet	
120	9/20/2011			_			11.7	12.4		



Page 196 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 5

Measured values from field test sites, related to actual conditions

Page 5 of 20

Manufacturer	Thermo Fishe	r Scientific								
Type of instrument	Model 5030i S	SHARP							PM10 Measured values in μg/m³ (ACT)	
Serial-No.	SN 3 / SN 4									
	1 5.	D ()	I D (0	1 5 ()	D (0	1 D.:	0110	0.1.4		T
No.	Date	Ref. 1 PM2,5	Ref. 2 PM2,5	Ref. 1 PM10	Ref 2. PM10	Ratio PM2,5/PM10	SN 3 PM10	SN 4 PM10	Remark	Test site
		[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[%]	[µg/m³]	[µg/m³]		
121	9/21/2011	[μg/111]	[μ9/111]	12.4	12.3	[70]	11.0	9.6		Bornheim, Summer
122	9/22/2011	6.4	7.8	19.2	18.9	37.3	18.4	14.8		Dominenti, Summer
123	9/23/2011	12.2	13.4	26.1	26.2	49.1	25.0	23.5		
124	9/24/2011	12.2	13.4	20.1	20.2	49.1	22.4	21.2		
125	9/25/2011	15.7	14.5	21.3	21.7	70.0	21.0	21.3		
126	9/26/2011	15.7	14.5	18.8	20.6	70.0	23.2	23.0		
127	9/27/2011			38.3	39.8		37.3	35.6		
128	9/28/2011			30.3	39.0		24.6	25.0		
129	9/29/2011	17.1	16.0				29.2	28.8		
130	9/30/2011	12.4	11.8	23.4	24.5	50.6	20.3	20.0		
131	10/1/2011	12.4	11.0	20.4	24.5	30.0	21.6	21.4		
132	10/2/2011						37.1	35.4		
133	10/3/2011	13.5	14.8				22.5	20.3		
134	10/4/2011	9.8	9.8	15.9	16.3	60.9	17.0	17.3		
135	10/5/2011	4.5	2.5	7.0	6.5	51.8	5.7	5.2		
136	10/6/2011	5.5	4.1	10.8	10.4	45.6	8.7	9.5		
137	10/7/2011	3.6	3.1	8.1	7.6	42.9	8.3	7.2		
138	10/8/2011	0.0	0.1	0.1	1.0	12.0	10.9	9.4		
139	10/9/2011	6.0	6.4	10.1	10.4	60.7	9.9	10.8		
140	10/10/2011	4.7	5.2	11.9	12.5	40.9	14.5	12.7		
141	10/11/2011	1.3	2.0	5.5	5.0	31.2	6.1	5.5		
142	10/12/2011	1.9	3.2	5.3	5.0	49.3	7.6	6.0		
143	10/13/2011	4.2	4.2	11.5	11.7	36.3	14.2	13.1		
144	10/14/2011	5.9	8.5	14.8	14.0	50.2	16.6	15.2		
145	10/15/2011						16.9	15.8		
146	10/16/2011	11.1	13.7	17.0	16.7	73.7	22.1	22.6		
147	10/17/2011	18.6	20.1	28.0	27.3	70.0	28.9	28.9		
148	10/18/2011	4.3	6.7	11.6	11.5	47.7	9.1	8.7		
149	10/19/2011	3.8	5.2				12.5	11.8	Outlier Ref. PM10	
150	10/00/0011	I	l		45.0	I	I	I		

150

9.3

10/20/2011

9.5

11.9

15.8

67.9

19.0

17.0

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G



Page 197 of 440

Annex 5

177

178

179

180

1/18/2012

1/19/2012

1/20/2012

1/21/2012

19.5

3.5

6.2

18.9

3.5

5.9

28.9

4.1

8.6

26.4

5.3

9.5

69.4

74.2

67.3

30.4

6.0

12.5

8.5

29.5

5.6

11.0

8.6

Measured values from field test sites, related to actual conditions

Page 6 of 20

Thermo Fisher Scientific PM10 Model 5030i SHARP Type of instrument Measured values in µg/m³ (ACT) SN 3 / SN 4 Serial-No. Ref. 2 Ref. 1 Ref 2. Ratio SN3 SN 4 No. Date Ref. 1 Remark Test site PM2,5 PM2.5 PM10 PM10 PM2,5/PM10 PM10 PM10 $[\mu g/m^3]$ [µg/m³] $[\mu g/m^3]$ $[\mu g/m^3]$ [%] [µg/m³] $[\mu g/m^3]$ 151 10/21/2011 17.6 18.1 28.0 26.4 65.5 Inlet -> Zero filter Bornheim, Summer 152 10/22/2011 Zero point / Outlier Ref PM10 10/23/2011 23.2 153 23.0 Zero point 154 10/24/2011 15.4 15.4 Zero filter -> Inlet 10/25/2011 20.6 155 11.0 12.1 18.4 156 10/26/2011 6.0 6.7 12.6 10.8 157 10/27/2011 18.1 19.3 27.5 29.7 10/28/2011 158 17.8 18.0 27.2 27.3 65.6 20.4 21.3 10/29/2011 159 26.8 26.1 160 10/30/2011 11.7 12.2 16.8 16.3 72.0 14.6 14.1 161 10/31/2011 29.1 28.5 162 11/1/2011 22.5 22.3 30.8 28.4 75.7 25.9 23.8 163 11/2/2011 17.2 17.3 20.2 18.7 164 11/3/2011 10.8 56.4 17.1 15.9 9.2 17.8 17.5 165 11/4/2011 21.0 21.1 66.5 24.6 23.2 13.7 14.3 11/5/2011 30.5 30.9 166 87.5 167 11/6/2011 55.2 54.7 62.1 63.5 61.9 62.2 168 11/7/2011 34.6 34.3 39.5 40.6 85.9 40.9 42.4 169 11/8/2011 43.7 43.6 53.1 54.2 81.4 53.5 55.1 23.4 29.9 170 11/9/2011 24.0 28.6 81.1 30.8 31.3 171 11/10/2011 14.3 13.9 17.3 17.3 81.4 18 1 19.2 172 11/11/2011 26.9 27.9 35.1 35.3 78.0 Zero point 173 11/12/2011 Zero point 174 11/13/2011 21.5 21.5 24.1 24.7 88.1 Zero point 175 1/16/2012 22.3 Bornheim, Winter 20.6 28.9 28.1 75.1 28.8 28.4 176 1/17/2012 32.7 33.2 44.3 45.6 73.4 46.4 48.0



Page 198 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 5

Serial-No.

Measured values from field test sites, related to actual conditions

Page 7 of 20

Manufacturer Thermo Fisher Scientific PM10 Type of instrument

Model 5030i SHARP

SN 3 / SN 4

Measured values in µg/m³ (ACT)

Senar-No.	311373114									
No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
110.	Date	PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10	Koman	1001 0110
		[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[%]	[µg/m³]	[µg/m³]		
181	1/22/2012	5.4	5.1	11.4	12.9	43.1	14.1	15.4		Bornheim, Winter
182	1/23/2012	7.0	7.9	11.7	13.5	59.0	16.8	16.3		
183	1/24/2012			20.9	21.5		25.6	25.3		
184	1/25/2012	19.9	20.0	28.3	25.5	74.1	26.9	27.2		
185	1/26/2012	22.7	22.3	29.3	27.6	79.0	30.5	28.9		
186	1/27/2012	17.0	16.0	24.1	24.3	68.2	24.3	25.1		
187	1/28/2012						21.5	22.4		
188	1/29/2012	64.0	62.4	69.2	69.8	90.9	74.7	74.8		
189	1/30/2012	61.2	60.2	71.2	71.6	85.0	71.7	72.6		
190	1/31/2012	36.5	36.6	44.2	42.8	84.0	42.7	45.8		
191	2/1/2012	25.3	25.1	31.6	31.4	80.0	29.0	30.0		
192	2/2/2012	20.1	20.2	25.6	25.3	79.2	25.2	27.4		
193	2/3/2012	29.0	28.9	37.6	36.7	77.9	35.8	38.2		
194	2/4/2012						38.1	39.2		
195	2/5/2012	24.1	25.6	31.3	30.1	81.1	29.1	30.7		
196	2/6/2012	31.9	32.4	41.3	40.4	78.7	41.2	43.6		
197	2/7/2012	25.2	25.7	37.6	35.5	69.7	33.6	35.1		
198	2/8/2012	33.4	34.4	43.6	42.7	78.6	45.4	48.1		
199	2/9/2012	30.1	32.6	38.7	37.7	82.0	38.6	39.0		
200	2/10/2012								Inlet -> Zero filter	
201	2/11/2012								Zero point	
202	2/12/2012								Zero point	
203	2/13/2012	39.6	36.0	41.9	41.0	91.1	41.5	40.7		
204	2/14/2012	10.3	9.8	16.6	15.7	62.3	16.6	16.5		
205	2/15/2012	7.1	6.7	14.7	15.0	46.6	15.3	14.0		
206	2/16/2012	15.6	14.2	20.8	21.9	69.7	26.0	22.9		
207	2/17/2012	9.7	9.1	11.3	11.9	80.8	12.4	11.0		
208	2/18/2012			I			5.3	4.3		
209	2/19/2012	40.2	10.6	10.0	47.6	64.0	15.9	15.2		
210	2/20/2012	10.3	10.6	16.6	17.6	61.0	16.4	16.4		

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G



Page 199 of 440

Annex 5

Measured values from field test sites, related to actual conditions

Page 8 of 20

Manufacturer	Thermo Fishe	r Scientific								
Manuacturei	memo risne	1 Scientific							PM10	
Type of instrument	Model 5030i S	SHARP							Measured values in μg/m³ (ACT)	
Serial-No.	SN 3 / SN 4									
No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[%]	[µg/m³]	[µg/m³]		
211	2/21/2012	9.9	10.5	16.3	17.4	60.4	17.5	17.4		Bornheim, Winter
212	2/22/2012	13.3	14.4	20.8	22.2	64.5	20.7	20.5		
213	2/23/2012	8.3	8.6	9.1	10.2	87.3	12.7	11.4		
214	2/24/2012	12.1	11.6	14.7	14.9	80.1	18.4	15.9		
215	2/25/2012						21.5	20.0		
216	2/26/2012	26.5	26.4	38.6	39.6	67.7	41.0	38.5		
217	2/27/2012	19.6	18.9	26.0	25.6	74.6	26.9	26.2		
218	2/28/2012	18.7	16.0	21.8	21.7	79.8	22.4	22.4		
219	2/29/2012	27.6	26.5	34.3	33.7	79.5	30.4	29.2		
220	3/1/2012	19.6	18.0	29.1	29.8	63.7	29.3	28.9		
221	3/2/2012	15.9	13.3	18.9	18.0	78.8	17.7	18.9		
222	3/3/2012						29.6	33.5		
223	3/4/2012	31.5	30.0	42.8	41.3	73.2	35.8	37.4		
224	3/5/2012	6.1	4.6	8.1	7.1	70.6	7.5	6.4		
225	3/6/2012	15.2	12.8	21.5	20.5	66.7	21.1	20.5		
226	3/7/2012	15.5	14.5	24.8	22.4	63.4	23.9	24.3		
227	7/17/2012	4.2	4.5	8.5	8.9	50.1	9.0	7.8		Teddington, Summer
228	7/18/2012	3.8	4.2	8.9	9.4	44.2	6.9	7.5		
229	7/19/2012	4.6	4.6	9.1	8.9	51.2	8.6	10.4		
230	7/20/2012	5.1	4.9	10.3	10.8	47.7	12.2	9.5		
231	7/21/2012	5.8	6.1	10.9	10.7	55.0	12.5	12.2		
232	7/22/2012	7.1	6.8	10.6	10.6	65.3	13.0	11.9		
233	7/23/2012	8.5	8.8	12.7	12.8	67.8	15.7	14.7		
234	7/24/2012	11.4	11.5	17.7	17.7	64.6	18.6	19.6		
235	7/25/2012	17.8	18.5	26.5	26.6	68.4	27.7	23.0		
236	7/26/2012	21.0	21.4		1		27.2	25.9	Outlier Ref. PM10	
237	7/27/2012	12.3	11.8	20.0	20.3	59.7	21.9	20.6		
238	7/28/2012				1		10.6	10.3		
239	7/29/2012				1		8.4	6.8		
240	7/30/2012	5.0	4.8	10.0	9.8	49.2	10.3	9.2		



Page 200 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 5

Measured values from field test sites, related to actual conditions

Page 9 of 20

Manufacturer	Thermo Fishe	r Scientific								
Type of instrument	Model 5030i S	SHARP							PM10 Measured values in μg/m³ (ACT)	
Serial-No.	SN 3 / SN 4									
No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[%]	[µg/m³]	[µg/m³]		
241	7/31/2012	9.2	9.4	14.9	15.7	60.7	18.3	17.1		Teddington, Summer
242	8/1/2012	5.9	5.9	12.7	12.6	46.7	11.1	10.1		
243	8/2/2012	5.3	5.5	12.6	13.0	42.3	14.5	12.7		
244	8/3/2012			13.2	11.9		12.7	10.6	Outlier Ref. PM2,5	
245	8/4/2012	4.8	5.3	10.3	10.6	48.3	12.0	12.8		
246	8/5/2012	4.6	4.8	9.2	9.6	50.4	9.3	9.0		
247	8/6/2012	3.4	3.6	7.7	8.0	44.4	7.8	8.2		
248	8/7/2012	3.5	3.4	7.8	8.0	43.4	10.1	8.6		
249	8/8/2012	8.1	8.1	12.0	12.7	65.7	15.0	10.7		
250	8/9/2012	11.5	11.6	15.9	16.8	70.5	16.7	15.7		
251	8/10/2012	13.3	13.3	20.2	21.0	64.7	20.0	19.9		
252	8/11/2012	15.3	15.0	25.6	26.3	58.3	19.5	19.0		
253	8/12/2012	7.3	7.1	14.4	14.6	49.6	11.2	10.5		
254	8/13/2012	4.8	4.6	9.0	9.3	51.4	8.3	7.7		
255	8/14/2012	7.7	7.7	13.6	14.1	55.4	12.5	10.3		
256	8/15/2012	7.2	7.1	19.6	19.9	36.2	21.8	21.4		
257	8/16/2012	6.5	6.6	16.0	16.2	40.8	16.4	13.2		
258 259	8/17/2012 8/18/2012	6.7	6.7 6.9	13.7 10.7	13.9	48.9	12.3	13.9 9.1		
259 260	8/19/2012	6.9 6.5	6.4	10.7	10.9 11.2	63.8 58.4	11.5 11.9	10.1		
261	8/20/2012	7.4	7.3	12.4	12.6	58.8	13.1	12.7		
262	8/21/2012	7.4	7.3	13.8	14.1	30.0	14.2	13.1		
263	8/22/2012			14.4	13.8		14.8	12.2		
264	8/23/2012			14.4	14.6		13.1	12.6		
265	8/24/2012			9.7	10.1		10.0	9.9		
266	8/25/2012			5.7	10.1		8.2	7.6		
267	8/26/2012						10.0	9.8		
268	8/27/2012						8.9	10.6		
269	8/28/2012			14.0	13.6		16.4	11.6		
1	0,20,2012		1	I	1		1	ı	I	

10.9

10.8

12.0

12.0

270

8/29/2012

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G




Page 201 of 440

Annex 5

Measured values from field test sites, related to actual conditions

Page 10 of 20

Manufacturer	Thermo Fishe	r Scientific								
Type of instrument	Model 5030i S	SHARP							PM10 Measured values in μg/m³ (ACT)	
Serial-No.	SN 3 / SN 4									
No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[%]	[µg/m³]	[µg/m³]		
271	8/30/2012			11.5	11.2		12.3	10.2		Teddington, Summer
272	8/31/2012			13.4	13.3		12.7	11.9		I
273	9/1/2012			11.8	11.6		13.4	12.7		l .
274	9/2/2012			12.6	12.0		12.8	14.3		
275	9/3/2012			14.9	15.0		16.3	13.1		1
276	9/4/2012	8.9	8.6	16.8	17.7	50.9	16.5	14.5		l
277	9/5/2012	10.7	11.0	21.0	20.8	51.9	20.3	19.3		l
278	9/6/2012	11.2	11.4	24.1	24.2	46.7	23.3	23.3	Stop PM10 reference	1
279	9/7/2012								Inlet -> Zero filter	l
280	9/8/2012								Zero point	l
281	9/9/2012								Zero point	l
282	9/10/2012								Audits	l
283	9/11/2012	4.4	4.4				6.6	7.3		l
284	9/12/2012						6.3	7.0		l
285	9/13/2012	4.7	4.7				9.2	9.6		1
286	9/14/2012	5.1	5.3				14.7	14.3		1
287	9/15/2012	8.9	8.6				18.6	18.5		l
288	9/16/2012	3.4	3.3				7.0	8.3		1
289	9/17/2012	5.9	6.0				13.1	11.5		1
290	9/18/2012	6.5	6.3				11.7	10.4		1
291	9/19/2012	8.2	8.2				13.0	12.2		1
292	9/20/2012	5.4	6.0				10.3	11.2		1
293	9/21/2012	5.5	5.2				12.5	11.0		1
294	9/22/2012	7.6	7.4				12.4	11.7		1
i										
			1							
ĺ										
	I	l .	1	1	I	I I		I		II .





Page 202 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 5

PM10-Measured values from field test sites, related to standard conditions [EN 12431]

Page 11 of 20

Manufacturer Thermo Fisher Scientific PM10

Type of instrument Model 5030i SHARP Measured values in µg/m³ (STD)

No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/Nm³]	[µg/Nm³]	[%]	[µg/Nm³]	[µg/Nm³]		
1	3/8/2011	-	-	44.7	45.0	-	44.9	45.2		Cologne, Winter
2	3/9/2011	-	-	31.2	29.6	-	28.5	27.4		
3	3/10/2011	-	-			-			Complete power loss	
4	3/11/2011	-	-	34.2	34.0	-			Recovery after re-start	
5	3/12/2011	-	-			-	31.2	31.3	,	
6	3/13/2011	-	-	16.9	16.4	-	21.1	19.0		
7	3/14/2011	-	-	28.6	26.6	-			Power loss, only Thermo	
8	3/15/2011	-	-	46.1	45.5	-			Recovery after re-start	
9	3/16/2011	-	-	70.2	69.1	-	67.7	65.6	•	
10	3/17/2011	-	-	69.4	69.1	-	72.1	72.7		
11	3/18/2011	-	-	38.9	39.2	-	42.1	41.6		
12	3/19/2011	-	-			-	13.7	12.7		
13	3/20/2011	-	-	28.5	28.3	-	24.2	21.1		
14	3/21/2011	-	-	34.7	34.6	-	33.9	30.2		
15	3/22/2011	-	-	56.3	55.8	-	61.0	62.1		
16	3/23/2011	-	-	33.6	32.4	-	30.2	30.6		
17	3/24/2011	-	-	34.1	33.8	-	32.4	31.3		
18	3/25/2011	-	-	38.5	39.1	-	38.7	39.1		
19	3/26/2011	-	-			-	16.2	15.2		
20	3/27/2011	-	-	36.8	37.0	-	31.6	30.1		
21	3/28/2011	-	-	33.1	32.9	-	31.3	29.7		
22	3/29/2011	-	-	67.7	68.4	-	67.5	65.8		
23	3/30/2011	-	-	25.1	24.6	-	24.0	24.0		
24	3/31/2011	-	-	10.9	9.7	-	9.6	9.3		
25	4/1/2011	-	-	13.8	13.7	-	14.8	13.6		
26	4/2/2011	-	-			-	29.6	29.1		
27	4/3/2011	-	-	22.9	23.4	-	21.1	21.3		
28	4/4/2011	-	-	18.3	17.1	-	13.7	14.6		
29	4/5/2011	-	-	19.7	19.7	-	18.6	17.2		
30	4/6/2011	-	-	24.7	25.1	-	22.9	23.3		

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report-No.: 936/21209885/G

SN 3 / SN 4



Page 203 of 440

Annex 5

Serial-No.

PM10-Measured values from field test sites, related to standard conditions [EN 12431]

Page 12 of 20

 Manufacturer
 Themo Fisher Scientific


 Type of instrument
 Model 5030i SHARP

 PM10

 Measured values in μg/m³ (STD)

No. Date Ref. 1 Ref. 2 Ref. 1 Ref 2. Ratio SN 3 SN 4 Remark Test site PM2,5 PM2,5 PM10 PM10 PM2,5/PM10 PM10 PM10 PM10 PM10 [μg/m³] [μg/m³] [μg/m³] [μg/Nm³] [μg/Nm³] [μg/Nm³] [μg/Nm³] [μg/Nm³] [μg/Nm³] [μg/Nm³] [μg/Nm³]

		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/Nm³]	[µg/Nm³]	[%]	[µg/Nm³]	[µg/Nm³]		
31	4/7/2011	-	-	24.1	25.3	-	26.1	23.7		Cologne, Winter
32	4/8/2011	-	-	36.2	36.3	-			Zero point	-
33	4/9/2011	-	-			-			Zero point	
34	4/10/2011	-	-	24.3	23.5	-			Zero point	
35	4/11/2011	-	-	31.8	32.3	-	36.4	33.2		
36	4/12/2011	-	-	18.9	18.1	-	17.8	17.1		
37	4/13/2011	-	-	25.1	24.1	-	21.8	20.7		
38	4/14/2011	-	-	32.7	32.5	-	35.4	34.5		
39	4/15/2011	-	-	32.9	33.2	-	22.0	22.9		
40	4/16/2011	-	-			-	38.3	38.3		
41	4/17/2011	-	-			-	22.5	22.6		
42	4/18/2011	-	-	27.6	28.1	-	29.4	30.3		
43	4/19/2011	-	-	31.9	32.6	-	35.4	35.4		
44	4/20/2011	-	-	35.8	36.4	-	37.7	36.5		
45	4/21/2011	-	-			-	37.7	37.0		
46	4/22/2011	-	-			-	28.6	26.7		
47	4/23/2011	-	-			-	44.8	41.2		
48	4/24/2011	-	-			-	33.4	31.7		
49	4/25/2011	-	-	28.9	29.1	-	30.3	29.1		
50	4/26/2011	-	-	32.7	33.3	-	32.9	33.9		
51	4/27/2011	-	-	45.9	47.1	-	46.6	51.6		
52	4/28/2011	-	-	29.4	29.7	-	27.3	26.6		
53	4/29/2011	-	-	27.6	29.3	-	29.7	30.6		
54	4/30/2011	-	-	22.4	23.6	-	22.2	20.2		
55	5/1/2011	-	-	13.7	13.7	-		12.8	SN3 Motor at meas. chamber defective	
56	5/2/2011	-	-	16.8	15.7	-		16.4	SN3 Motor at meas. chamber defective	
57	5/3/2011	-	-	16.4	15.8	-	16.8	14.7		
58	5/4/2011	-	-	21.0	20.9	-	23.6	23.0		
59	5/5/2011	-	-	20.9	20.5	-	21.6	20.2	Outlier Ref. PM2,5	
60	5/6/2011	-	-	32.5	33.2	-	28.2	26.6		





Page 204 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 5

PM10-Measured values from field test sites, related to standard conditions [EN 12431]

Page 13 of 20

Manufacturer Thermo Fisher Scientific

PM10

Type of instrument Model 5030i SHARP

Measured values in µg/m³ (STD)

No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/Nm³]	[µg/Nm³]	[%]	[µg/Nm³]	[µg/Nm³]		
61	5/7/2011	-	-	49.3	51.3	-	40.0	40.1		Cologne, Winter
62	5/8/2011	-	-	25.0	24.8	-	23.8	21.4		
63	7/25/2011	-	-	19.0	19.2	-			Recovery after Zero point	Bornheim, Summer
64	7/26/2011	-	-	20.8	20.4	-		19.5	SN3 Heater board defective	
65	7/27/2011	-	-	22.8	22.4	-		20.0	SN3 Heater board defective	
66	7/28/2011	-	-	28.0	26.9	-		18.4	SN3 Heater board defective	
67	7/29/2011	-	-	17.7	17.7	-		10.7	SN3 Heater board defective	
68	7/30/2011	-	-			-	11.1	9.5		
69	7/31/2011	-	-	13.9	15.0	-	18.0	16.9		
70	8/1/2011	-	-	19.2	20.8	-	21.5	20.1		
71	8/2/2011	-	-	20.6	22.0	-	19.7	18.8		
72	8/3/2011	-	-	26.1	28.2	-	28.3	26.6		
73	8/4/2011	-	-	14.9	16.1	-	14.2	13.8		
74	8/5/2011	-	-	18.4	19.5	-	19.5	19.6		
75	8/6/2011	-	-			-	11.8	11.5		
76	8/7/2011	-	-	6.0	6.9	-	6.6	6.6		
77	8/8/2011	-	-	8.3	8.0	-	10.0	8.1		
78	8/9/2011	-	-	11.2	11.8	-	13.0	11.1		
79	8/10/2011	-	-	12.8	13.6	-	14.4	13.8		
80	8/11/2011	-	-	12.2	12.1	-	11.8	11.1		
81	8/12/2011	-	-	6.9	7.6	-	9.1	8.1		
82	8/13/2011	-	-			-	8.8	8.6		
83	8/14/2011	-	-	7.5	7.2	-	12.0	9.9		
84	8/15/2011	-	-	14.3	14.9	-	16.1	12.6		
85	8/16/2011	-	-	14.5	13.8	-	14.9	12.8		
86	8/17/2011	-	-	27.8	27.2	-	30.7	26.0		
87	8/18/2011	-	-	18.2	17.4	-	18.0	18.6		
88	8/19/2011	-	-	14.1	13.6	-	14.9	13.1		
89	8/20/2011	-	-			-	17.6	15.3		
90	8/21/2011	-	-	18.4	18.7	-	26.2	23.8		

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report-No.: 936/21209885/G

SN 3 / SN 4



Page 205 of 440

Annex 5

PM10-Measured values from field test sites, related to standard conditions [EN 12431]

Page 14 of 20


 Manufacturer
 Thermo Fisher Scientific

 Type of instrument
 Model 5030i SHARP

 PM10

 Measured values in µg/m³ (STD)

No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/Nm³]	[µg/Nm³]	[%]	[µg/Nm³]	[µg/Nm³]		
91	8/22/2011	-	-	21.1	20.8	-	20.4	20.3		Bornheim, Summe
92	8/23/2011	-	-	32.4	32.9	-	36.2	34.7		
93	8/24/2011	-	-	18.1	18.1	-	15.7	14.3		
94	8/25/2011	-	-	20.2	20.2	-	21.7	22.2		
95	8/26/2011	-	-	11.5	11.6	-	10.3	7.7		
96	8/27/2011	-	-			-	6.2	5.1		
97	8/28/2011	-	-	8.1	8.1	-	10.2	6.6		
98	8/29/2011	-	-	12.0	12.2	-	10.7	9.5		
99	8/30/2011	-	-	17.9	17.5	-	16.4	16.2		
100	8/31/2011	-	-	27.3	25.1	-	26.9	26.3		
101	9/1/2011	-	-	29.1	27.9	-	26.1	26.9		
102	9/2/2011	-	-	27.0	26.2	-	24.1	20.1		
103	9/3/2011	-	-			-	25.7	27.1		
104	9/4/2011	-	-	13.7	13.1	-	11.6	12.9		
105	9/5/2011	-	-	9.7	9.7	-	7.8	8.2		
106	9/6/2011	-	-	11.8	11.4	-	11.1	9.9		
107	9/7/2011	-	-	13.2	14.1	-	12.9	11.3		
108	9/8/2011	-	-			-	8.7	9.7		
109	9/9/2011	-	-	13.0	12.7	-	12.9	9.6		
110	9/10/2011	-	-			-	12.7	12.6		
111	9/11/2011	-	-	10.0	10.0	-	9.8	8.7		
112	9/12/2011	-	-	12.4	12.6	-	13.2	14.2		
113	9/13/2011	-	-	17.3	17.9	-	16.4	11.5		
114	9/14/2011	-	-	16.0	16.5	-	14.3	12.4		
115	9/15/2011	-	-	25.3	26.2	-	24.4	23.7		
116	9/16/2011	-	-	24.4	26.9	-			Inlet -> Zero filter	
117	9/17/2011	-	-			-			Zero point	
118	9/18/2011	-	-	7.4	7.5	-			Zero point	
119	9/19/2011	-	-	13.0	12.3	-			Zero filter -> Inlet	
120	9/20/2011	_	_			_	12.4	13.0		





Page 206 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 5

PM10-Measured values from field test sites, related to standard conditions [EN 12431]

Page 15 of 20

Manufacturer Thermo Fisher Scientific

PM10

Type of instrument Model 5030i SHARP Measured values in µg/m³ (STD)

No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/Nm³]	[µg/Nm³]	[%]	[µg/Nm³]	[µg/Nm³]		
121	9/21/2011	-	-	13.0	13.1	-	11.8	10.2		Bornheim, Summer
122	9/22/2011	-	-	20.1	20.0	-	19.4	15.6		
123	9/23/2011	-	-	27.3	27.6	-	26.4	24.7		
124	9/24/2011	-	-			-	23.8	22.3		
125	9/25/2011	-	-	22.5	23.1	-	22.4	22.6		
126	9/26/2011	-	-	19.9	22.0	-	24.9	24.5		
127	9/27/2011	-	-	40.2	42.2	-	39.8	37.7		
128	9/28/2011	-	-			-	26.1	26.4		
129	9/29/2011	-	-			-	31.1	30.4		
130	9/30/2011	-	-	24.6	26.0	-	21.5	21.1		
131	10/1/2011	-	-			-	22.9	22.6		
132	10/2/2011	-	-			-	39.4	37.3		
133	10/3/2011	-	-			-	24.0	21.6		
134	10/4/2011	-	-	16.8	17.3	-	18.2	18.4		
135	10/5/2011	-	-	7.4	6.9	-	6.1	5.5		
136	10/6/2011	-	-	11.3	11.0	-	9.2	10.0		
137	10/7/2011	-	-	8.4	7.9	-	8.6	7.5		
138	10/8/2011	-	-			-	11.3	9.6		
139	10/9/2011	-	-	10.5	10.9	-	10.4	11.3		
140	10/10/2011	-	-	12.6	13.4	-	15.6	13.5		
141	10/11/2011	-	-	5.7	5.0	-	6.5	5.8		
142	10/12/2011	-	-	5.5	5.2	-	7.9	6.2		
143	10/13/2011	-	-	11.7	12.0	-	14.5	13.4		
144	10/14/2011	-	-	14.9	14.3	-	16.8	15.3		
145	10/15/2011	-	-			-	17.2	15.9		
146	10/16/2011	-	-	17.3	17.2	-	22.7	23.0		
147	10/17/2011	-	-	29.0	28.5	-	30.1	29.9		
148	10/18/2011	-	-	12.0	12.0	-	9.5	9.0		
149	10/19/2011	-	-			-	12.8	12.1	Outlier Ref. PM10	
150	10/20/2011	-	-	12.0	16.1	-	19.2	17.0		

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report-No.: 936/21209885/G



Page 207 of 440

Annex 5

PM10-Measured values from field test sites, related to standard conditions [EN 12431]

Page 16 of 20

 Manufacturer
 Themo Fisher Scientific

 Type of instrument
 Model 5030i SHARP

 PM10

 Measured values in μg/m³ (STD)

No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		1
		[µg/m³]	[µg/m³]	[µg/Nm³]	[µg/Nm³]	[%]	[µg/Nm³]	[µg/Nm³]		
151	10/21/2011	-	-	28.0	26.8	-			Inlet -> Zero filter	Bornheim, Summer
152	10/22/2011	-	-			-			Zero point / Outlier Ref PM10	1
153	10/23/2011	-	-			-			Zero point	1
154	10/24/2011	-	-			-			Zero filter -> Inlet	1
155	10/25/2011	-	-			-	19.5	21.7		1
156	10/26/2011	-	-			-	13.0	11.1		1
157	10/27/2011	-	-			-	28.7	30.8		1
158	10/28/2011	-	-	28.2	28.6	-	21.4	22.2		
159	10/29/2011	-	-			-	28.1	27.2		
160	10/30/2011	-	-	17.5	17.2	-	15.4	14.7		1
161	10/31/2011	-	-			-	30.5	29.6		1
162	11/1/2011	-	-	31.8	29.9	-	27.3	24.9		1
163	11/2/2011	-	-			-	21.4	19.7		1
164	11/3/2011	-	-	18.9	18.8	-	18.3	16.9		1
165	11/4/2011	-	-	22.2	22.5	-	26.3	24.7		1
166	11/5/2011	-	-			-	32.1	32.3		1
167	11/6/2011	-	-	64.0	66.0	-	64.6	64.4		1
168	11/7/2011	-	-	40.4	41.9	-	42.0	43.2		1
169	11/8/2011	-	-	54.3	56.0	-	55.3	56.5		1
170	11/9/2011	-	-	29.1	30.7	-	31.7	32.0		1
171	11/10/2011	-	-	17.6	17.8	-	18.5	19.5		1
172	11/11/2011	-	-	35.6	36.1	-			Zero point	1
173	11/12/2011	-	-			-			Zero point	1
174	11/13/2011	-	-	24.1	24.9	-			Zero point	
175	1/16/2012	-	-	28.3	27.9	-	28.3	27.7		Bornheim, Winter
176	1/17/2012	-	-	43.3	45.2	-	45.7	46.9		
177	1/18/2012	-	-	28.8	26.7	-	30.5	29.4		
178	1/19/2012	-	-	4.2	5.5	_	6.2	5.7		
179	1/20/2012	_	-	8.7	9.7	_	12.7	11.0		
180	1/21/2012	_	_	J	0.7	_	8.9	8.8		



Page 208 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 5

Type of instrument

PM10-Measured values from field test sites, related to standard conditions [EN 12431]

Page 17 of 20

Manufacturer Thermo Fisher Scientific PM10

Measured values in µg/m³ (STD)

Serial-No. SN 3 / SN 4

Model 5030i SHARP

No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/Nm³]	[µg/Nm³]	[%]	[µg/Nm³]	[µg/Nm³]		
181	1/22/2012	-	-	11.7	13.4	-	14.6	15.8		Bornheim, Winter
182	1/23/2012	-	-	11.8	13.8	-	17.2	16.6		
183	1/24/2012	-	-	20.8	21.8	-	25.8	25.2		
184	1/25/2012	-	-	28.3	25.8	-	27.1	27.2		
185	1/26/2012	-	-	29.4	28.1	-	30.9	29.0		
186	1/27/2012	-	-	23.9	24.6	-	24.3	24.9		
187	1/28/2012	-	-			-	21.5	22.2		
188	1/29/2012	-	-	68.1	69.7	-	73.8	73.4		
189	1/30/2012	-	-	70.3	71.6	-	71.2	71.6		
190	1/31/2012	-	-	43.1	42.5	-	41.9	44.5		
191	2/1/2012	-	-	30.5	30.8	-	28.0	28.8		
192	2/2/2012	-	-	24.4	24.6	-	24.1	25.9		
193	2/3/2012	-	-	35.5	35.2	-	33.7	35.7		
194	2/4/2012	-	-			-	36.0	36.7		
195	2/5/2012	-	-	29.7	29.1	-	27.6	28.9		
196	2/6/2012	-	-	39.0	38.7	-	38.9	40.9		
197	2/7/2012	-	-	35.6	34.1	-	32.0	33.1		
198	2/8/2012	-	-	41.6	41.3	-	43.4	45.6		
199	2/9/2012	-	-	37.0	36.6	-	37.1	37.2		
200	2/10/2012	-	-	0.0	0.0	-			Inlet -> Zero filter	
201	2/11/2012	-	-	0.0	0.0	-			Zero point	
202	2/12/2012	-	-	0.0	0.0	-			Zero point	
203	2/13/2012	-	-	41.7	41.4	-	41.4	40.3		
204	2/14/2012	-	-	16.8	16.0	-	16.8	16.7		
205	2/15/2012	-	-	15.0	15.1	-	15.6	14.1		
206	2/16/2012	-	-	20.9	22.2	-	26.3	23.0		
207	2/17/2012	-	-	11.4	12.2	-	12.7	11.2		
208	2/18/2012	-	-			-	5.4	4.3		
209	2/19/2012	-	-			-	15.9	15.0		
210	2/20/2012	-	-	16.3	17.5	-	16.3	16.0		

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G



Page 209 of 440

Annex 5

PM10-Measured values from field test sites, related to standard conditions [EN 12431]

Page 18 of 20

Manufacturer
Thermo Fisher Scientific

PM10

Type of instrument
Model 5030i SHARP
Measured values in μg/m³ (STD)

Serial-No.

SN 3 / SN 4

No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/Nm³]	[µg/Nm³]	[%]	[µg/Nm³]	[µg/Nm³]		
211	2/21/2012	-	-	16.3	17.6	-	17.5	17.3		Bornheim, Winter
212	2/22/2012	-	-	21.1	22.7	-	21.0	20.7		
213	2/23/2012	-	-	9.3	10.5	-	13.1	11.7		
214	2/24/2012	-	-	15.0	15.4	-	19.0	16.2		
215	2/25/2012	-	-			-	22.0	20.4		
216	2/26/2012	-	-	38.8	40.2	-	41.5	38.8		
217	2/27/2012	-	-	26.4	26.2	-	27.5	26.6		
218	2/28/2012	-	-	22.3	22.4	-	23.1	22.9		
219	2/29/2012	-	-	35.2	34.9	-	31.6	30.1		
220	3/1/2012	-	-	29.7	30.7	-	30.2	29.5		
221	3/2/2012	-	-	19.3	18.6	-	18.3	19.4		
222	3/3/2012	-	-			-	30.5	34.2		
223	3/4/2012	-	-	43.9	42.9	-	37.2	38.5		
224	3/5/2012	-	-	8.2	7.3	-	7.6	6.5		
225	3/6/2012	-	-	21.6	20.8	-	21.3	20.5		
226	3/7/2012	-	-	25.1	22.9	-	24.4	24.7		
227	7/17/2012	-	-	8.9	9.5	-	9.6	8.4		Teddington, Summer
228	7/18/2012	-	-	9.4	10.0	-	7.3	8.0		
229	7/19/2012	-	-	9.0	9.5	-	9.1	11.0		
230	7/20/2012	-	-	10.8	11.4	-	12.8	10.0		
231	7/21/2012	-	-	11.4	11.3	-	13.1	12.8		
232	7/22/2012	-	-	11.1	11.2	-	13.7	12.5		
233	7/23/2012	-	-	13.4	13.7	-	16.8	15.6		
234	7/24/2012	-	-	19.0	19.1	-	20.2	21.2		
235	7/25/2012	-	-	28.5	28.9	-	30.2	25.0		
236	7/26/2012	-	-	0.0	0.0	-	29.3	27.9	Outlier Ref. PM10	
237	7/27/2012	-	-	21.3	21.8	-	23.8	22.4		
238	7/28/2012	-	-			-	11.3	11.0		
239	7/29/2012	-	-			-	8.8	7.1		
240	7/30/2012	-	-	10.5	5.8	-	10.9	9.8		





Page 210 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 5

PM10-Measured values from field test sites, related to standard conditions [EN 12431]

Page 19 of 20

Manufacturer Thermo Fisher Scientific PM10

Type of instrument Model 5030i SHARP Measured values in μg/m³ (STD)

No.	Date	Ref. 1 PM2,5	Ref. 2 PM2,5	Ref. 1 PM10	Ref 2. PM10	Ratio PM2,5/PM10	SN 3 PM10	SN 4 PM10	Remark	Test site
		[µg/m³]	[µg/m³]	[µg/Nm³]	[µg/Nm³]	[%]	[µg/Nm³]	[µg/Nm³]		
241	7/31/2012	-	-	15.8	16.8	-	19.4	18.1		Teddington, Summ
242	8/1/2012	-	-	13.5	13.6	-	11.9	10.9		_
243	8/2/2012	-	-	13.4	13.9	-	15.5	13.5		
244	8/3/2012	-	-	13.9	12.7	-	13.6	11.3	Outlier Ref. PM2,5	
245	8/4/2012	-	-	10.9	11.3	-	12.7	13.6		
246	8/5/2012	-	-	9.8	10.3	-	10.0	9.6		
247	8/6/2012	-	-	8.1	8.5	-	8.3	8.7		
248	8/7/2012	-	-	8.2	8.5	-	10.6	9.1		
249	8/8/2012	-	-	12.6	13.5	-	15.9	11.3		
250	8/9/2012	-	-	16.8	17.9	-	17.8	16.7		
251	8/10/2012	-	-	21.4	22.4	-	21.3	21.3		
252	8/11/2012	-	-	27.1	28.2	-	20.9	20.3		
253	8/12/2012	-	-	15.3	15.8	-	12.1	11.4		
254	8/13/2012	-	-	9.6	10.0	-	8.9	8.3		
255	8/14/2012	-	-	14.6	15.3	-	13.5	11.2		
256	8/15/2012	-	-	20.9	21.4	-	23.5	23.1		
257	8/16/2012	-	-	17.0	17.4	-	17.6	14.1		
258	8/17/2012	-	-	14.7	15.1	-	13.4	15.3		
259	8/18/2012	-	-	11.5	11.9	-	12.6	9.9		
260	8/19/2012	-	-	11.6	12.1	-	13.0	11.0		
261	8/20/2012	-	-	13.1	13.4	-	14.0	13.5		
262	8/21/2012	-	-	14.5	15.0	-	15.1	14.0		
263	8/22/2012	-	-	15.2	14.7	-	15.8	13.0		
264	8/23/2012	-	-	14.9	15.6	-	14.0	13.4		
265	8/24/2012	-	-	10.3	10.9	-	10.8	10.6		
266	8/25/2012	-	-			-	8.7	8.2		
267	8/26/2012	-	-	I		-	10.6	10.3		
268	8/27/2012	-	-			-	9.6	11.3		
269	8/28/2012	-	-	14.7	14.5	-	17.6	12.4		
270	8/29/2012	-	-	12.5	12.7	-	11.5	11.4		

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G



Page 211 of 440

Annex 5

PM10-Measured values from field test sites, related to standard conditions [EN 12431]

Page 20 of 20

 Manufacturer
 Thermo Fisher Scientific
 PM10

 Type of instrument
 Model 5030i SHARP
 Measured values in μg/m³ (STD)

No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/Nm³]	[µg/Nm³]	[%]	[µg/Nm³]	[µg/Nm³]		
271	8/30/2012	-	-	11.8	11.6	-	12.7	10.5		Teddington, Summer
272	8/31/2012	-	-	13.8	13.9	-	13.2	12.4		
273	9/1/2012	-	-	12.3	12.2	-	14.1	13.3		
274	9/2/2012	-	-	13.2	12.6	-	13.5	15.0		
275	9/3/2012	-	-	15.6	15.8	-	17.2	13.8		
276	9/4/2012	-	-	17.6	18.8	-	17.4	15.3		
277	9/5/2012	-	-	21.6	21.6	-	21.1	20.2		
278	9/6/2012	-	-	25.0	25.4	-	24.3	24.3	Stop PM10 reference	
279	9/7/2012	-	-			-			Inlet -> Zero filter	
280	9/8/2012	-	-			-			Zero point	
281	9/9/2012	-	-			-			Zero point	
282	9/10/2012	-	-			-			Audits	
283	9/11/2012	-	-			-	6.9	7.6		
284	9/12/2012	-	-			-	6.6	7.3		
285	9/13/2012	-	-			-	9.7	10.2		
286	9/14/2012	-	-			-	15.4	15.0		
287	9/15/2012	-	-			-	19.8	19.6		
288	9/16/2012	-	-			-	7.4	8.8		
289	9/17/2012	-	-			-	14.0	12.2		
290	9/18/2012	-	-			-	12.3	10.9		
291	9/19/2012	-	-			-	13.5	12.7		
292	9/20/2012	-	-			-	10.7	11.6		
293	9/21/2012	-	-			-	13.0	11.4		
294	9/22/2012	-	-			-	12.9	12.2		
										<u> </u>



Page 212 of 440

TÜV Rheinland Energie und Umwelt GmbH

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 6 Ambient conditions at field test sites Page 1 of 10

No.	Date	Test site	Mean PM2,5-conc.	PM2,5 volatiles	Ratio volatiles / PM2,5	Mean ambient temperature	Max. ambient temperature	Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]
1	3/8/2011	Cologne, Winter	43.8	6.4	14.5	7.9	14.4	1013	54.0	2.3	147	0.0
2	3/9/2011		29.6	4.6	15.4	7.1	10.6	1010	75.8	3.5	232	0.9
3	3/10/2011					9.2	10.1	1008	68.9	5.3	231	0.0
4	3/11/2011		33.3	2.5	7.6	8.1	11.4	1008	69.5	3.8	197	0.3
5	3/12/2011			2.6		12.1	16.4	998	61.6	3.3	147	0.3
6	3/13/2011		15.9	1.4	8.6	11.2	14.1	1001	77.3	2.0	156	1.5
7	3/14/2011		26.7			9.8	13.8	1010	81.2	0.3	114	0.0
8	3/15/2011		43.6	6.5	15.0	12.3	19.6	1006	66.2	2.2	96	0.0
9	3/16/2011		66.5	9.2	13.9	9.5	16.9	1000	71.9	2.5	126	0.0
10	3/17/2011		67.6	9.0	13.3	5.7	7.2	1009	86.9	4.7	267	0.0
11	3/18/2011		38.4	11.2	29.2	6.0	7.6	1018	89.1	1.1	135	11.1
12	3/19/2011			5.8		5.0	12.1	1027	59.5	1.2	123	0.0
13	3/20/2011		28.3	5.1	18.0	5.3	13.2	1027	57.7	0.9	150	0.0
14	3/21/2011		34.5	5.1	14.8	6.9	16.1	1029	56.5	1.0	166	0.0
15	3/22/2011		55.2	9.9	17.8	9.4	17.2	1031	62.7	1.1	184	0.0
16	3/23/2011		32.4	7.0	21.6	10.7	18.6	1030	66.8	1.2	161	0.0
17	3/24/2011		33.0	6.6	19.9	10.9	18.6	1021	67.2	1.0	174	0.0
18	3/25/2011		37.1	9.3	25.1	11.8	18.0	1010	59.4	1.6	183	0.0
19	3/26/2011			4.3		7.7	11.6	1010	64.8	1.5	105	0.0
20	3/27/2011		35.5	6.3	17.7	9.3	16.3	1006	60.9	1.1	196	0.0
21	3/28/2011		32.1	6.2	19.3	7.2	13.7	1009	60.2	1.9	172	0.0
22	3/29/2011		65.5	13.9	21.3	9.6	18.5	1007	62.1	1.1	168	0.0
23	3/30/2011		23.7	6.7	28.4	12.6	15.9	1008	66.7	2.4	170	0.0
24	3/31/2011		9.9	1.7	17.5	13.8	15.6	1011	78.2	3.7	230	6.5
25	4/1/2011		13.2	3.2	24.1	13.9	18.8	1014	78.1	2.3	175	0.0
26	4/2/2011			3.7		17.6	24.3	1006	62.2	2.6	159	0.0
27	4/3/2011		22.3	4.8	21.6	10.9	15.8	1009	85.3	2.0	251	8.7
28	4/4/2011		17.2	3.0	17.4	10.0	15.0	1017	65.3	2.7	214	0.0
29	4/5/2011		19.1	3.4	17.9	11.8	15.1	1020	71.9	2.1	173	0.9
30	4/6/2011		23.7	3.8	16.2	16.2	23.0	1019	73.9	1.8	196	0.0

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-systems

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G



Page 213 of 440

Annex 6 Ambient conditions at field test sites Page 2 of 10

No.	Date	Test site	Mean PM2,5-conc.	PM2.5 volatiles	Ratio volatiles / PM2,5	Mean ambient temperature	Max. ambient temperature	Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]
31	4/7/2011	Cologne, Winter	23.7	5.7	24.1	13.8	21.6	1019	67.2	3.0	245	0.0
32	4/8/2011	-	34.8			12.9	18.2	1018	64.7	2.9	255	0.0
34	4/9/2011					11.3	18.9	1018	59.8	1.3	183	0.0
34	4/10/2011		22.9			14.0	23.1	1016	60.2	1.1	191	0.0
35	4/11/2011		31.4			16.0	25.0	1012	58.8	3.9	244	2.7
36	4/12/2011		17.5	2.3	13.3	7.7	12.4	1018	66.7	4.1	257	0.9
37	4/13/2011		23.8	2.9	12.1	10.1	14.3	1013	57.1	2.0	203	0.0
38	4/14/2011		31.8	4.5	14.1	8.0	14.2	1013	65.4	0.6	159	0.0
39	4/15/2011		31.9	2.9	9.0	10.4	17.0	1014	53.6	1.2	169	0.0
40	4/16/2011			1.7		11.9	16.9	1017	51.7	0.9	166	0.0
41	4/17/2011			2.3		11.4	19.2	1017	53.7	1.2	139	0.0
42	4/18/2011		26.5	3.0	11.4	14.3	21.2	1011	48.6	1.9	149	0.0
43	4/19/2011		30.5	2.6	8.4	15.5	25.5	1009	52.4	1.2	146	0.0
44	4/20/2011		34.1	2.8	8.2	16.6	25.7	1008	51.3	1.1	154	0.0
45	4/21/2011			2.4		17.8	26.3	1006	54.1	0.7	180	0.0
46	4/22/2011			2.7		20.0	27.8	1003	51.8	1.3	146	8.3
47	4/23/2011			3.2		18.0	28.9	1005	58.0	0.7	152	0.0
48	4/24/2011			1.9		18.1	28.0	1011	51.7	1.0	172	0.0
49	4/25/2011		27.4	2.1	7.8	16.8	26.0	1013	50.3	1.2	153	0.0
50	4/26/2011		31.1	3.2	10.2	16.7	23.4	1011	51.5	1.8	166	2.1
51	4/27/2011		44.7	8.2	18.2	10.8	12.5	1010	90.4	0.7	213	8.9
52	4/28/2011		28.0	5.3	18.8	14.2	20.5	1005	77.6	0.7	176	0.3
53	4/29/2011		26.6	2.8	10.5	17.2	24.9	1002	56.8	1.7	112	3.0
54	4/30/2011		21.5	1.7	7.7	16.9	24.2	1002	47.4	1.7	141	0.0
55	5/1/2011		12.9	2.1	16.6	14.8	22.4	1002	44.5	1.6	111	0.0
56	5/2/2011		15.5	1.9	12.3	11.0	17.8	1004	53.3	2.0	116	0.0
57	5/3/2011		15.5	2.4	15.8	10.0	17.2	1011	49.4	1.0	164	0.0
58	5/4/2011		20.3	3.0	14.8	9.7	16.2	1016	61.5	1.3	168	0.0
59	5/5/2011		19.8	3.7	18.6	14.1	19.8	1015	46.9	2.2	119	0.0
60	5/6/2011		30.9	2.7	8.7	18.6	24.8	1012	41.1	2.5	110	0.0

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-systems



Page 214 of 440

TÜV Rheinland Energie und Umwelt GmbH

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 6 Ambient conditions at field test sites Page 3 of 10

No.	Date	Test site	Mean PM2,5-conc.	PM2,5 volatiles	Ratio volatiles / PM2,5	Mean ambient temperature	Max. ambient temperature	Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]
61	5/7/2011	Cologne, Winter	46.8	2.7	5.7	21.9	28.3	1011	37.0	3.4	109	0.0
62	5/8/2011	-	23.2	1.2	5.2	22.1	28.6	1013	34.7	4.1	97	0.0
63	7/25/2011	Bornheim, Summer	17.8			17.2	22.8	1001	73.8	0.8	193	1.2
64	7/26/2011		19.3	3.2	16.5	17.0	20.6	1006	78.4	1.1	259	0.0
65	7/27/2011		21.2	4.1	19.1	17.3	24.3	1010	84.8	0.7	229	51.7
66	7/28/2011		25.8	5.3	20.4	17.7	24.5	1011	85.6	0.6	228	5.9
67	7/29/2011		16.7	3.4	20.2	16.9	20.2	1011	76.2	2.9	299	0.0
68	7/30/2011			1.4		14.5	16.1	1010	80.4	2.3	288	0.0
69	7/31/2011		13.7	1.3	9.4	13.4	16.6	1009	76.2	0.9	244	0.0
70	8/1/2011		18.6	1.9	10.3	19.1	26.1	1008	68.1	0.9	177	0.0
71	8/2/2011		19.5	1.0	5.1	23.2	30.0	1007	60.8	1.5	143	0.0
72	8/3/2011		25.2	3.1	12.3	19.7	24.1	1006	82.9	1.1	195	5.4
73	8/4/2011		14.2	3.4	24.1	22.3	29.2	1005	71.6	0.8	204	3.6
74	8/5/2011		17.5	2.3	12.9	20.6	25.0	1004	75.8	1.1	221	0.6
75	8/6/2011			2.0		19.3	25.4	996	85.0	1.4	171	7.7
76	8/7/2011		6.0	1.1	17.6	17.8	22.4	998	64.0	1.5	209	1.8
77	8/8/2011		7.7	-0.2	-2.5	15.5	18.4	1000	74.7	2.5	219	6.2
78	8/9/2011		11.0			13.8	17.8	1012	76.8	2.7	265	14.8
79	8/10/2011		12.4	2.7	22.2	18.0	22.4	1013	57.5	1.3	224	0.0
80	8/11/2011		11.2	1.5	13.5	20.9	25.5	1004	53.8	1.2	220	0.3
81	8/12/2011		6.7	2.3	34.6	18.5	21.7	1003	78.9	1.1	228	2.1
82	8/13/2011			1.7		20.1	23.7	1001	77.0	0.7	185	0.0
83	8/14/2011		6.8	0.6	9.3	17.4	19.9	1000	86.2	1.1	219	17.4
84	8/15/2011		13.7	0.8	6.0	17.9	22.4	1009	71.8	1.2	230	0.0
85	8/16/2011		13.3	2.0	14.9	19.1	23.9	1010	69.0	0.7	190	0.6
86	8/17/2011		25.4	3.7	14.5	21.1	27.8	1007	73.8	0.7	206	4.7
87	8/18/2011		16.4	3.3	20.1	22.5	31.3	1004	76.6	1.2	174	20.9
88	8/19/2011		13.1	2.6	19.9	16.8	21.2	1011	80.0	1.5	235	3.3
89	8/20/2011			2.1		20.7	28.1	1011	66.6	0.8	157	0.0
90	8/21/2011	1	17.1	1.1	6.3	23.2	31.4	1007	74.8	1.0	184	0.3

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-systems

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G



Page 215 of 440

Annex 6 Ambient conditions at field test sites Page 4 of 10

No.	Date	Test site	Mean PM2,5-conc.	PM2,5 volatiles	Ratio volatiles / PM2,5	Mean ambient temperature	Max. ambient temperature	Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]
91	8/22/2011	Bornheim, Summer	19.5	3.8	19.4	20.4	24.4	1009	76.5	1.2	253	0.0
92	8/23/2011		30.0	3.7	12.4	22.6	27.8	1005	78.4	0.9	206	0.0
93	8/24/2011		16.8	2.5	14.7	20.1	27.2	1007	76.6	0.7	192	0.6
94	8/25/2011		18.7	2.9	15.7	20.8	27.6	1003	83.4	1.0	176	2.1
95	8/26/2011		10.7	2.1	19.9	19.4	30.2	999	83.7	1.5	195	29.1
96	8/27/2011			1.0		15.3	20.0	1007	77.0	1.1	207	0.3
97	8/28/2011		7.6	1.3	16.8	15.6	19.7	1009	69.2	1.3	212	0.0
98	8/29/2011		11.5	1.4	12.1	14.5	18.4	1008	66.7	2.0	243	0.0
99	8/30/2011		16.8	2.3	13.7	13.6	18.4	1008	73.6	0.8	236	0.0
100	8/31/2011		24.8	3.3	13.1	14.8	21.4	1007	72.0	0.7	225	0.0
101	9/1/2011		26.8	4.3	16.2	16.4	23.4	1006	71.6	0.6	182	0.0
102	9/2/2011		24.6	1.8	7.3	21.2	29.4	1004	72.2	0.8	160	0.0
103	9/3/2011			1.8		24.5	30.9	1002	67.0	1.3	132	3.6
104	9/4/2011		12.4	1.8	14.2	20.2	27.4	1002	79.5	1.1	223	0.6
105	9/5/2011		9.1	0.7	8.1	16.6	21.4	1009	62.9	1.9	217	0.0
106	9/6/2011		10.9	2.2	20.3	17.4	20.6	1005	66.8	2.6	219	4.8
107	9/7/2011		12.9	1.4	11.1	14.9	18.1	1004	73.1	2.2	246	5.7
108	9/8/2011			0.9		14.7	16.2	1003	84.7	1.1	209	3.3
109	9/9/2011		12.0	1.1	8.8	19.0	21.6	1004	86.9	0.4	167	0.0
110	9/10/2011			1.0		23.8	29.7	1001	73.0	1.5	155	0.0
111	9/11/2011		9.4	2.0	21.4	16.2	22.1	1003	86.0	0.7	165	16.2
112	9/12/2011		11.6	1.7	14.4	19.4	24.6	1004	71.1	1.7	204	0.0
113	9/13/2011		16.5	1.4	8.4	16.7	20.8	1006	67.3	1.6	219	0.0
114	9/14/2011		15.4	0.6	4.1	15.2	19.6	1011	65.1	1.5	224	0.0
115	9/15/2011		24.6	2.2	8.8	14.1	20.4	1013	75.3	0.6	207	0.0
116	9/16/2011		24.1			17.1	21.9	1006	72.6	1.4	145	0.0
117	9/17/2011					16.8	21.4	1001	70.6	1.0	207	3.6
118	9/18/2011		7.0			13.3	16.5	998	76.4	1.0	200	4.5
119	9/19/2011		12.0			13.6	18.1	1008	75.8	1.4	231	0.9
120	9/20/2011	1		1.2		15.6	18.5	1014	78.0	0.5	196	0.0

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-systems



Page 216 of 440

TÜV Rheinland Energie und Umwelt GmbH

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 6 Ambient conditions at field test sites Page 5 of 10

No.	Date	Test site	Mean PM2,5-conc.	PM2,5 volatiles	Ratio volatiles / PM2,5	Mean ambient temperature	Max. ambient temperature	Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation		
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]		
121	9/21/2011	Bornheim, Summer	12.3	1.0	8.4	16.9	20.5	1011	69.5	0.8	204	0.0		
122	9/22/2011		19.1	0.9	4.7	15.2	18.7	1011	72.2	1.2	231	0.0		
123	9/23/2011		26.1	1.6	6.2		•	•		•				
124	9/24/2011			0.7										
125	9/25/2011		21.5	1.1	5.3									
126	9/26/2011		19.7					Outage v	veather station					
127	9/27/2011		39.1	3.1	7.8									
128	9/28/2011													
129	9/29/2011			2.1										
130	9/30/2011		24.0	1.9	7.8	18.4	26.8	1017	68.3	1.2	155	0.0		
131	10/1/2011			1.9		18.1	28.0	1018	70.6	0.5	176	0.0		
132	10/2/2011			3.8		17.8	26.8	1016	75.4	0.3	213	0.0		
134	10/3/2011			4.3		18.8	26.5	1013	65.9	0.8	168	0.0		
134	10/4/2011		16.1	1.3	8.4	17.8	20.5	1013	72.4	1.6	214	0.0		
135	10/5/2011		6.7	2.0	29.3	17.5	20.0	1011	70.8	1.2	199	0.0		
136	10/6/2011		10.6	1.8	16.6	13.2	19.3	1001	71.2	2.3	213	0.3		
137	10/7/2011		7.9	0.8	10.1	9.9	13.4	1005	81.6	3.6	272	5.7		
138	10/8/2011			1.1		8.7	11.4	1009	85.5	2.1	258	6.0		
139	10/9/2011		10.3	2.2	21.9	12.2	16.3	1011	84.5	1.4	190	5.4		
140	10/10/2011		12.2	1.1	8.9	17.7	21.3	1009	74.4	3.2	261	0.3		
141	10/11/2011		5.2	1.3	25.6	16.3	18.0	1010	77.4	3.6	251	0.0		
142	10/12/2011		5.1	0.1	1.0	12.5	15.8	1012	91.1	0.9	226	17.9		
143	10/13/2011		11.6	1.0	8.9	9.9	15.8	1022	76.3	0.6	209	0.0		
144	10/14/2011		14.4	1.5	10.6	8.7	15.9	1024	69.6	1.0	151	0.0		
145	10/15/2011			2.2		7.8	14.8	1020	68.8	1.2	162	0.0		
146	10/16/2011		16.9	2.5	14.8	8.5	14.8	1016	73.8	1.5	157	0.0		
147	10/17/2011		27.7	5.0	18.1	10.5	16.6	1011	78.5	0.8	163	0.0		
148	10/18/2011		11.6	2.9	24.9	9.2	15.0	1003	82.0	1.2	197	3.0		
149	10/19/2011			0.9		8.1	14.0	1010	74.4	1.5	225	0.0		
150	10/20/2011		13.8	2.0	14.4	5.6	10.6	1018	79.8	1.0	223	0.0		

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-systems

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G



Page 217 of 440

Annex 6 Ambient conditions at field test sites Page 6 of 10

No.	Date	Test site	Mean PM2,5-conc.	PM2,5 volatiles	Ratio volatiles / PM2,5	Mean ambient temperature	Max. ambient temperature	Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]
151	10/21/2011	Bornheim, Summer	27.2	4.2	15.5	5.2	11.4	1019	79.3	1.1	154	0.0
152	10/22/2011			5.6		6.8	11.9	1013	69.3	3.9	128	0.0
153	10/23/2011			6.0		7.4	13.6	1007	71.6	2.3	138	0.0
154	10/24/2011			4.2		9.8	12.4	999	67.2	3.8	132	0.0
155	10/25/2011			1.9		10.9	13.0	997	68.8	1.9	132	0.0
156	10/26/2011			1.3		9.4	15.7	1006	74.9	0.9	171	0.0
157	10/27/2011			3.6		10.1	13.4	1008	80.4	2.7	126	0.0
158	10/28/2011		27.3	3.4	12.4	14.0	20.1	1016	75.8	0.7	149	0.0
159	10/29/2011			3.0		13.5	17.2	1015	79.8	1.0	132	0.9
160	10/30/2011		16.6	2.7	16.4	13.5	18.2	1014	86.7	0.4	170	0.0
161	10/31/2011			4.4		11.9	17.2	1009	87.0	1.0	152	0.3
162	11/1/2011		29.6	4.6	15.7	12.2	15.6	1007	83.2	2.0	134	1.8
163	11/2/2011			5.2		12.5	14.7	1002	80.8	2.9	124	0.3
164	11/3/2011		17.7	2.6	14.7	13.7	17.3	995	69.7	3.8	140	0.0
165	11/4/2011		21.0	2.2	10.6							
166	11/5/2011			1.1								
167	11/6/2011		62.8	6.3	10.1							
168	11/7/2011		40.1	5.1	12.6			Outogo	eather station			
169	11/8/2011		53.6	5.4	10.0			Outage vi	realiter station			
170	11/9/2011		29.2	5.0	16.9							
171	11/10/2011		17.3	4.2	24.5							
172	11/11/2011		35.2	4.6	13.1							
173	11/12/2011			6.8		7.2	9.4	1024	81.6	4.1	135	0.0
174	11/13/2011		24.4	5.9	24.3	5.4	10.1	1023	83.7	2.4	131	0.0
175	1/16/2012	Bornheim, Winter	28.5	3.3	11.6	-0.9	3.9	1020	81.8	0.6	138	0.3
176	1/17/2012		44.9	4.7	10.5	-0.6	4.7	1022	81.5	0.5	123	0.3
177	1/18/2012		27.7	5.4	19.6	3.1	7.1	1018	84.3	1.5	126	6.6
178	1/19/2012		4.7	3.8	81.3	7.2	11.9	1006	84.8	4.1	253	12.8
179	1/20/2012		9.0	3.2	35.5	3.1	5.4	1008	85.5	3.1	239	5.1
180	1/21/2012		1	3.1	1	7.3	10.3	1000	81.9	5.3	261	6.9

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-systems



Page 218 of 440

TÜV Rheinland Energie und Umwelt GmbH

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 6 Ambient conditions at field test sites Page 7 of 10

No.	Date	Test site	Mean PM2,5-conc.	PM2,5 volatiles	Ratio volatiles / PM2,5	Mean ambient temperature	Max. ambient temperature	Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]
181	1/22/2012	Bornheim, Winter	12.2	1.7	13.6	6.4	9.3	1003	77.0	4.7	271	1.8
182	1/23/2012		12.6	2.3	18.2	4.2	7.1	1008	83.7	3.0	268	3.6
183	1/24/2012		21.2	3.2	15.3	2.3	5.5	1014	87.4	0.9	188	0.0
184	1/25/2012		26.9	5.0	18.7	2.5	4.2	1012	81.0	3.9	126	0.0
185	1/26/2012		28.5	6.3	22.2	2.6	4.0	1010	78.6	4.1	127	0.6
186	1/27/2012		24.2	4.0	16.7	2.3	7.4	1016	85.6	1.1	124	0.0
187	1/28/2012			4.1		1.6	4.4	1021	81.0	0.9	166	0.3
188	1/29/2012		69.5	7.2	10.3	-0.4	0.3	1020	81.2	1.4	238	0.0
189	1/30/2012		71.4	7.6	10.6	-0.1	0.9	1017	75.8	1.5	110	0.0
190	1/31/2012		43.5	5.6	13.0	-2.7	0.9	1018	62.8	2.0	116	0.0
191	2/1/2012		31.5	5.5	17.4	-5.2	0.7	1023	53.6	2.2	144	0.0
192	2/2/2012		25.5	4.2	16.4	-7.0	-0.8	1026	50.2	1.5	186	0.0
193	2/3/2012		37.2	5.4	14.6	-8.5	-4.0	1031	69.0	1.0	252	0.0
194	2/4/2012			8.1		-8.5	-3.7	1031	69.8	1.0	182	0.0
195	2/5/2012		30.7	5.6	18.1	-7.9	-3.6	1027	57.9	1.7	142	0.0
196	2/6/2012		40.9	4.7	11.6	-8.9	-3.6	1029	57.8	1.1	152	0.0
197	2/7/2012		36.5	4.2	11.5	-7.6	-4.3	1031	61.6	1.8	148	0.0
198	2/8/2012		43.1	5.3	12.2	-5.7	0.0	1030	68.4	0.8	187	0.0
199	2/9/2012		38.2	6.9	18.0	-5.4	-2.2	1030	81.1	1.6	259	0.0
200	2/10/2012					-5.7	-0.3	1031	64.9	1.1	116	0.6
201	2/11/2012					-7.6	-2.1	1028	67.2	1.1	198	0.0
202	2/12/2012					-4.2	-1.5	1024	69.3	0.9	233	0.0
203	2/13/2012		41.5			0.4	1.9	1012	89.7	0.7	208	2.1
204	2/14/2012		16.2			3.1	5.0	1006	88.5	4.4	280	4.2
205	2/15/2012		14.8			3.5	5.3	1008	81.1	5.7	303	0.6
206	2/16/2012		21.4			4.2	5.3	1016	90.4	1.2	246	2.1
207	2/17/2012		11.6			5.6	7.1	1013	87.7	1.7	229	1.2
208	2/18/2012			2.0		6.5	9.4	1005	81.8	2.5	213	1.5
209	2/19/2012			0.4		1.5	4.8	1017	84.7	2.9	270	0.9
210	2/20/2012	1	17 1	2.3	13.3	1.0	5.1	1026	76.4	0.8	179	0.0

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-systems

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G



Page 219 of 440

Annex 6 Ambient conditions at field test sites Page 8 of 10

No.	Date	Test site	Mean PM2,5-conc.	PM2,5 volatiles	Ratio volatiles / PM2,5	Mean ambient temperature	Max. ambient temperature	Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]
211	2/21/2012	Bornheim, Winter	16.9	1.6	9.2	4.4	8.5	1023	70.8	1.8	176	0.0
212	2/22/2012		21.5			6.3	11.2	1017	69.6	1.6	156	3.0
213	2/23/2012		9.7	2.8	28.6	8.2	10.3	1016	86.2	1.0	191	0.0
214	2/24/2012		14.8	4.1	27.4	9.9	13.7	1017	86.4	2.8	256	1.2
215	2/25/2012			6.5		7.0	10.9	1016	78.1	3.4	269	0.3
216	2/26/2012		39.1	6.7	17.2	5.2	6.9	1019	87.2	1.9	244	0.6
217	2/27/2012		25.8	6.6	25.8	7.7	10.3	1016	77.4	1.1	211	0.6
218	2/28/2012		21.8	5.5	25.4	9.4	10.7	1016	86.5	1.8	252	0.0
219	2/29/2012		34.0	7.7	22.8	10.4	13.3	1017	87.9	0.6	142	0.0
220	3/1/2012		29.5	5.4	18.3	8.8	10.6	1018	90.5	0.8	178	0.0
221	3/2/2012		18.5	5.0	27.0	9.0	11.8	1016	87.0	2.2	151	0.0
222	3/3/2012			5.9		8.7	10.9	1015	82.3	1.2	161	0.3
223	3/4/2012		42.0	10.3	24.5	8.6	11.5	1008	84.6	2.6	129	10.2
224	3/5/2012		7.6	3.5	45.6	5.6	7.8	1010	70.7	4.6	162	0.0
225	3/6/2012		21.0	3.9	18.6	4.8	10.3	1018	72.5	1.6	173	0.0
226	3/7/2012		23.6	6.0	25.4	5.2	7.8	1011	76.5	3.8	218	9.8
227	7/17/2012	Teddington, Summer	8.7			19.2	25.2	1001	76.1	0.3	213	0.5
228	7/18/2012		9.1	3.2	35.1	16.4	19.6	991	83.8	0.4	212	1.3
229	7/19/2012		9.0	2.4	26.8	16.4	21.2	994	71.7	0.2	270	0.0
230	7/20/2012		10.5	2.7	25.7	16.2	20.0	1001	69.7	0.7	221	0.3
231	7/21/2012		10.8	2.0	18.1	16.9	22.8	1007	64.9	0.3	189	0.0
232	7/22/2012		10.6	2.5	23.9	18.6	23.8	1007	61.9	0.6	203	0.0
234	7/23/2012		12.7	3.0	23.9	21.4	29.4	1002	57.0	0.4	197	0.0
234	7/24/2012		17.7	3.4	19.1	22.8	30.8	997	56.3	0.3	213	0.0
235	7/25/2012		26.5	5.0	18.8	24.2	32.3	998	47.1	1.0	117	0.0
236	7/26/2012			6.1		21.8	28.3	996	62.0	1.1	125	0.0
237	7/27/2012		20.1	4.8	24.0	19.9	25.1	992	60.4	0.9	256	0.0
238	7/28/2012			1.8		17.1	23.8	992	55.5	0.3	236	0.0
239	7/29/2012			1.7		13.6	19.9	995	78.7	0.2	198	6.1
240	7/30/2012		9.9	1.9	18.9	16.3	22.0	997	66.3	0.3	195	4.3

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-systems



Page 220 of 440

TÜV Rheinland Energie und Umwelt GmbH

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report-No.: 936/21209885/G

Annex 6 Ambient conditions at field test sites Page 9 of 10

No.	Date	Test site	Mean PM2,5-conc.	PM2,5 volatiles	Ratio volatiles / PM2,5	Mean ambient temperature	Max. ambient temperature	Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]
241	7/31/2012	Teddington, Summer	15.3	2.8	18.2	17.2	21.0	994	84.5	0.4	170	0.5
242	8/1/2012	-	12.6	2.5	19.8	18.4	23.3	989	75.5	0.7	185	0.0
243	8/2/2012		12.8	2.3	17.9	17.7	22.6	993	73.1	0.8	195	0.0
244	8/3/2012		12.5	2.4	19.0	17.8	22.7	993	71.6	0.8	180	2.3
245	8/4/2012		10.5	2.5	23.9	16.4	21.0	990	80.7	0.6	200	1.8
246	8/5/2012		9.4	2.0	21.7	17.3	22.4	988	77.6	0.4	210	2.3
247	8/6/2012		7.8	1.5	19.1	16.0	23.3	995	77.5	0.2	190	0.8
248	8/7/2012		7.9	2.1	26.3	17.2	21.1	1003	80.7	0.3	201	0.8
249	8/8/2012		12.3	2.6	20.9	19.0	25.5	1005	73.0	0.2	263	0.0
250	8/9/2012		16.4	4.1	25.0	21.0	28.3	1007	62.7	0.4	202	0.0
251	8/10/2012		20.6	5.9	28.8	21.4	29.4	1005	59.5	0.5	142	0.0
252	8/11/2012		25.9	6.0	23.3	19.8	24.4	997	63.9	1.9	78	0.0
253	8/12/2012		14.5	3.5	24.1	19.8	26.1	992	70.6	0.8	171	0.0
254	8/13/2012		9.2	2.3	25.5	19.2	23.2	992	81.2	0.7	184	1.5
255	8/14/2012		13.8	4.5	32.8	21.1	26.1	991	66.3	0.9	139	0.0
256	8/15/2012		19.7	2.3	11.4	19.0	23.3	989	71.8	1.0	187	0.5
257	8/16/2012		16.1	2.2	13.5	19.8	22.9	996	65.3	1.1	160	0.0
258	8/17/2012		13.8	2.8	20.6	23.4	28.3	993	55.8	0.8	180	0.0
259	8/18/2012		10.8	4.7	43.6	24.2	32.2	995	67.6	0.2	214	0.0
260	8/19/2012		11.0	5.4	49.3	22.7	30.8	997	68.7	0.4	208	0.0
261	8/20/2012		12.5	2.5	19.7	19.7	27.8	1001	77.3	0.2	215	0.0
262	8/21/2012		13.9	2.2	15.5	17.7	23.3	998	76.0	0.1	207	0.3
263	8/22/2012		14.1	2.2	15.3	17.6	23.9	998	69.3	0.2	210	0.0
264	8/23/2012		14.3	2.5	17.4	17.4	22.7	992	69.0	0.2	190	0.0
265	8/24/2012		9.9	2.8	28.6	17.1	20.6	983	81.7	0.8	174	2.8
266	8/25/2012			1.2		16.7	22.5	987	81.9	0.5	243	27.9
267	8/26/2012			2.3		16.9	23.3	999	69.4	0.4	206	0.0
268	8/27/2012			2.2		18.3	21.4	992	74.9	0.8	195	0.8
269	8/28/2012		13.8	2.5	18.4	18.0	23.7	995	74.2	0.5	190	0.3
270	8/29/2012		12.0	1.7	14.3	15.0	20.6	993	85.2	0.6	184	4.1

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-systems

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G



Page 221 of 440

Annex 6 Ambient conditions at field test sites Page 10 of 10

No.	Date	Test site	Mean PM2,5-conc.	PM2,5 volatiles	Ratio volatiles / PM2,5	Mean ambient temperature	Max. ambient temperature	Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]
271	8/30/2012	Teddington, Summer	11.3	1.3	11.0	12.6	17.7	1005	70.1	1.5	302	0.0
272	8/31/2012		13.4	2.3	17.2	15.3	19.4	1010	60.5	0.7	289	0.0
273	9/1/2012		11.7	2.2	18.8	16.6	22.7	1006	75.4	0.2	210	0.0
274	9/2/2012		12.3	3.0	24.1	16.8	19.5	1007	88.3	0.1	238	0.0
275	9/3/2012		14.9	3.5	23.7	18.4	26.9	1006	74.1	0.2	239	0.0
276	9/4/2012		17.2	2.5	14.5	18.9	26.6	1005	64.6	1.1	295	0.0
277	9/5/2012		20.9	2.6	12.4	14.7	21.9	1010	63.9	1.0	144	0.0
278	9/6/2012		24.2	3.5	14.7	16.3	23.2	1008	67.9	0.2	198	0.0
279	9/7/2012					17.5	28.4	1005	63.9	0.1	219	0.0
280	9/8/2012					17.1	28.3	998	64.8	0.1	208	0.0
281	9/9/2012					20.1	27.4	991	66.5	0.8	191	0.0
282	9/10/2012					17.5	21.0	991	75.3	0.9	192	0.0
283	9/11/2012					12.8	19.4	997	63.4	0.4	252	0.0
284	9/12/2012					13.4	20.4	998	72.4	0.5	267	2.5
285	9/13/2012					16.3	21.4	998	63.9	0.3	205	0.0
286	9/14/2012					14.3	21.3	997	70.8	0.7	257	0.0
287	9/15/2012					17.0	24.3	997	71.9	0.2	204	0.0
288	9/16/2012					15.6	19.6	994	75.9	0.2	207	0.0
289	9/17/2012					15.5	20.7	994	67.9	0.2	207	0.0
290	9/18/2012					11.7	19.3	1000	64.2	0.7	278	0.0
291	9/19/2012					12.2	18.3	1004	65.9	0.4	260	0.0
292	9/20/2012					13.3	19.3	1001	70.9	0.2	203	0.0
293	9/21/2012					12.1	17.3	998	77.3	0.4	273	1.3
294	9/22/2012					12.5	17.2	1000	60.6	0.8	89	0.0
		I	1		I		l			1		

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-systems

TÜV Rheinland Energie und Umwelt GmbH Luftreinhaltung



Page 222 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 7 Measured values from additional test site Bornheim, Summer 2013, related to actual conditions

Page 1 of 2

Manufacturer	Thermo Fisher Scientific	
		PM10
Type of instrument	Model 5030i SHARP	Measured values in μg/m³ (ACT)
Serial-No.	SN 3 / SN 4	

No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5	PM2,5	PM10	PM10	PM2,5/PM10	PM10	PM10		
		[µg/m³]	[µg/m³]	[µg/m³]	[µg/m³]	[%]	[µg/m³]	[µg/m³]		
1	6/7/2013	17.0	16.1	28.6	29.9	56.6				Bornheim
2	6/8/2013									
3	6/9/2013	14.0	13.6	20.1	21.3	66.9				
4	6/10/2013	16.1	15.4	26.1	27.1	59.1				
5	6/11/2013	13.0	12.2	20.8	20.7	60.7	21.8	20.1		
6	6/12/2013	7.1	6.4	14.6	14.0	47.4	9.5	10.4		
7	6/13/2013	5.6	5.4	13.4	12.7	42.1	11.9	11.5		
8	6/14/2013	5.0	5.7	10.8	10.8	49.3	10.1	10.2		
9	6/15/2013	5.1	5.3	10.6	10.2	50.0	10.4	9.5		
10	6/16/2013	7.3	7.6	16.7	16.6	44.8	16.6	17.6		
11	6/17/2013	12.2	13.3	21.3	20.9	60.3	18.5	21.2		
12	6/18/2013	17.8	17.3	28.6	29.1	60.9	30.5	30.5		
13	6/19/2013	31.9	32.7	48.7	48.5	66.5	42.3	42.1		
14	6/20/2013	8.7	10.1	15.5	14.9	62.1	12.8	12.7		
15	6/21/2013	4.2	4.5	7.2	6.8	62.2	6.1	5.9		
16	6/22/2013	3.3	4.1	5.7	5.9	63.8	5.0	4.9		
17	6/23/2013	3.1	3.0	4.6	5.5	59.8	6.1	7.3		
18	6/24/2013	8.7	8.0	13.9	13.2	61.8	17.1	17.2		
19	6/25/2013	6.3	6.6	12.9	12.7	50.4	10.7	11.4		
20	6/26/2013	9.1	9.4	14.6	14.5	63.5	16.2	13.7		
21	6/27/2013	9.8	9.6	14.2	13.8	69.2	13.0	13.3		
22	6/28/2013	8.8	8.7	14.2	14.7	60.4	13.5	14.1		
23	6/29/2013	6.0	5.8	11.7	11.5	50.9	11.7	10.9		
24	6/30/2013	7.4	6.9	14.6	14.4	49.4	12.2	13.3		
25	7/1/2013	7.7	7.6	13.4	13.2	57.7	14.8	14.4		
26	7/2/2013	7.9	7.9	12.5	12.0	64.6	12.2	13.8		
27	7/3/2013	3.6	3.8	9.0	9.9	39.1	9.3	9.6		
28	7/4/2013	7.5	7.9	13.5	13.6	56.9	15.4	13.7		
29	7/5/2013	12.9	13.1	20.9	19.9	63.8	22.8	22.8		
30	7/6/2013	13.3	13.1	18.7	18.5	71.1	18.0	20.3		

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G



Page 223 of 440

Annex 7 Measured values from additional test site Bornheim, Summer 2013, related to actual conditions

Page 2 of 2

Manufacturer	Thermo Fisher	Scientific							PM10	
Type of instrumer	nt Model 5030i SH	IARP							Measured values in µg/m³ (ACT)	
Serial-No.	SN 3 / SN 4									
	1			1 2	D (0	.	211.0			·
No.	Date	Ref. 1	Ref. 2	Ref. 1	Ref 2.	Ratio	SN 3	SN 4	Remark	Test site
		PM2,5 [µg/m³]	PM2,5 [µg/m³]	PM10 [µg/m³]	PM10 [µg/m³]	PM2,5/PM10 [%]	PM10 [µg/m³]	PM10 [μg/m³]		
31	7/7/2013	11.3	[μg/π ^ο] 10.7	14.9	14.4	75.1	16.4	16.6		Bornheim
32	7/8/2013	11.3	10.7	16.3	16.1	67.6	16.4	16.8		Bollillellil
33	7/9/2013	14.2	14.5	24.9	22.6	60.4	23.7	25.2		
34	7/10/2013	9.7	10.2	19.1	17.5	54.4	21.0	20.9		
35	7/11/2013	13.6	14.3	26.6	24.9	54.2	27.5	28.3		
36	7/12/2013	16.5	16.8			•	28.6	29.5	Outlier Reference PM10	
37	7/13/2013	15.3	15.3	20.4	20.7	74.5	21.9	22.7		
38	7/14/2013	14.5	14.5	22.2	21.5	66.5	24.4	25.9		
39	7/15/2013	17.4	17.4	26.2	25.6	67.1	27.1	29.7		
40	7/16/2013	20.4	18.4	30.2	28.9	65.5	31.3	33.0		
41	7/17/2013	13.6	13.2	18.7	18.0	72.9	21.1	20.9		
42	7/18/2013			17.0	17.3		17.9	17.5	Outlier reference PM2,5	
43	7/19/2013	9.0	7.3	16.3	14.8	52.7	17.5	17.3		
44	7/20/2013	10.1	9.5	17.3	16.0	58.7	22.1	22.3		
45	7/21/2013	12.9	12.3	18.0	17.7	70.7	18.6	18.8		
46	7/22/2013	15.5	14.8	23.2	22.0	67.2	24.8	23.3		
47	7/23/2013	14.1	13.6	25.4	24.5	55.3	26.5	26.8		
48	7/24/2013	20.3	20.0	31.5	30.3	65.2	31.2	30.4		
49	7/25/2013	11.1	12.1	21.3	20.3	55.7	17.2	18.5		
					1					I



Luftreinhaltung

Page 224 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030 i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Annex 8

Ambient conditions at the additional test site Bornheim, Summer 2013

Page 1 of 2

No.	Date	Test site	Mean PM2,5-conc.	PM2,5 volatiles		Mean ambient temperature		Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]
1	6/7/2013	Bomheim	16.6			21.7	29.1	1010	55.5	1.0	211	0.0
2	6/8/2013					21.1	26.8	1005	62.3	2.1	243	0.0
3	6/9/2013		13.8			15.6	19.2	1001	78.7	1.8	273	4.5
4	6/10/2013		15.7			14.4	18.1	1005	75.9	1.2	253	0.6
5	6/11/2013		12.6	3.2	25.4	18.8	23.8	1008	61.5	0.6	198	0.0
6	6/12/2013		6.8	1.3	19.5	21.1	23.7	1008	67.1	1.0	181	0.0
7	6/13/2013		5.5	0.3	4.7	17.0	27.6	1007	77.9	1.3	209	22.5
8	6/14/2013		5.3	1.1	21.4	16.1	21.2	1009	65.4	0.6	181	0.0
9	6/15/2013		5.2	0.4	6.9	17.2	22.6	1005	63.1	1.4	209	0.0
10	6/16/2013		7.5	0.6	8.6	17.7	23.7	1007	63.9	0.7	226	0.0
11	6/17/2013		12.7	1.7	13.3	23.3	29.7	1004	64.7	0.9	185	0.0
12	6/18/2013		17.6	2.3	13.0	27.2	34.8	1005	61.3	0.4	178	0.0
13	6/19/2013		32.3	4.6	14.3	26.9	35.0	1003	67.8	1.9	244	0.0
14	6/20/2013		9.4	3.0	32.3	20.5	25.1	1003	78.5	1.0	187	34.6
15	6/21/2013		4.3	1.1	24.6	19.0	23.4	1005	69.8	1.6	196	0.3
16	6/22/2013		3.7	1.3	35.0	19.0	23.7	1004	67.8	1.8	198	1.5
17	6/23/2013		3.0	0.4	13.6	16.2	19.2	1005	69.9	1.6	216	0.9
18	6/24/2013		8.4	1.0	12.2	14.2	17.4	1013	76.9	1.8	255	1.5
19	6/25/2013		6.5	0.9	14.6	13.4	16.8	1018	71.1	1.8	259	0.3
20	6/26/2013		9.3	1.9	20.8	13.9	16.7	1018	70.9	1.1	250	9.8
21	6/27/2013		9.7	2.1	21.1	13.2	17.1	1014	78.5	0.7	230	3.9
22	6/28/2013		8.8	2.1	24.3	14.1	16.7	1010	86.1	0.3	174	16.4
23	6/29/2013		5.9	0.7	12.4	14.8	18.8	1012	73.9	2.6	269	1.8
24	6/30/2013		7.2	1.3	18.3	17.7	22.4	1012	66.4	0.6	198	0.0
25	7/1/2013		7.7	1.4	17.9	18.8	25.4	1008	74.9	0.7	215	21.0
26	7/2/2013		7.9	1.6	20.5	21.6	27.1	1003	62.7	0.6	183	0.3
27	7/3/2013		3.7	0.7	19.0	17.5	20.1	1004	85.6	0.2	213	16.0
28	7/4/2013		7.7	0.4	5.3	20.0	24.7	1014	71.1	0.9	232	0.0
29	7/5/2013		13.0	1.3	10.4	19.8	24.8	1020	74.4	0.3	222	0.0
30	7/6/2013		13.2	2.0	15.4	22.4	29.3	1020	65.4	1.0	191	0.0

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-system

Luftreinhaltung

Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G



Page 225 of 440

Annex 8

Ambient conditions at the additional test site Bornheim, Summer 2013

Page 2 of 2

No.	Date	Test site	Mean PM2,5-conc.	PM2,5 volatiles	Ratio volatiles / PM2,5	Mean ambient temperature	Max. ambient temperature	Ambient pressure	Rel. humidity	Wind velocity	Wind direction	Precipitation
			[µg/m³]	[µg/m³]*	[%]	[°C]	[°C]	[hPa]	[%]	[m/s]	[°]	[mm]
31	7/7/2013	Bornheim	11.0	1.1	10.0	23.1	29.7	1020	58.8	1.2	218	0.0
32	7/8/2013		11.0	1.4	12.9	23.0	29.8	1019	59.6	1.4	214	0.0
33	7/9/2013		14.4	2.7	19.2	23.4	29.9	1014	59.4	1.4	237	0.0
34	7/10/2013		10.0	1.8	18.1	19.5	24.2	1012	62.6	3.5	261	0.0
35	7/11/2013		14.0	1.4	10.0	15.7	19.7	1013	70.1	1.7	215	0.0
36	7/12/2013		16.7	3.4	20.4	16.5	21.9	1013	70.8	1.2	250	0.0
37	7/13/2013		15.3	2.8	18.5	17.7	22.9	1014	68.3	1.1	241	0.0
38	7/14/2013		14.5	3.7	25.5	18.9	24.2	1014	69.1	1.7	249	0.0
39	7/15/2013		17.4	2.0	11.3	21.3	27.8	1013	62.9	0.8	188	0.0
40	7/16/2013		19.4	2.7	14.2	22.5	29.2	1013	58.8	0.8	184	0.0
41	7/17/2013		13.4	2.0	14.8	23.2	29.3	1014	59.0	1.2	218	0.0
42	7/18/2013			2.0		24.5	31.6	1014	56.8	1.7	224	0.0
43	7/19/2013		8.2	1.7	21.3	23.5	29.1	1013	58.3	2.3	241	0.0
44	7/20/2013		9.8	1.7	17.5	21.1	26.6	1011	68.5	1.3	226	0.0
45	7/21/2013		12.6	1.8	14.6	25.3	32.3	1009	57.4	1.1	155	0.0
46	7/22/2013		15.2	2.2	14.4	27.6	35.1	1006	52.2	0.9	167	0.0
47	7/23/2013		13.8	1.8	12.8	25.5	33.7	1004	62.0	0.6	159	0.0
48	7/24/2013		20.1	5.0	24.9	21.7	27.6	1006	78.7	0.7	213	3.6
49	7/25/2013		11.6	4.5	38.4	22.5	28.1	1006	81.7	0.7	145	15.1
I												
<u> </u>	l .			l .	l					1	l	

^{*} volatile PM-compounds, determined with parallel operated TEOM-FDMS-system

TÜV Rheinland Energie und Umwelt GmbH Luftreinhaltung



Page 226 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Appendix 2

Filter weighing procedure

A) German test sites (Cologne and Bornheim)

A.1 Carrying out the weighing

All weightings are done in an air-conditioned weighing room. Ambient conditions are 20 °C ± 1 °C and 50 % ± 5 % relative humidity, which conforms to the requirements of Standard EN 14907.

The filters used in the field test are weighed manually. In order to condition the filters (including control filters), they are placed on sieves to avoid overlap.

The specifications for pre- and post-weighing are specified beforehand and conform to the Standard.

Before sampling = pre-weighing	After sampling = post-weighing
Conditioning 48 h + 2 h	Conditioning 48 h + 2 h
Filter weighing	Filter weighing
Re-conditioning 24 h +2 h	Re-conditioning 24 h + 2 h
Filter weighing and immediate packaging	Filter weighing

The balance is always ready for use. An internal calibration process is started prior to each weighing series. The standard weight of 200 mg is weighed as reference and the boundary conditions are noted down if nothing out of the ordinary results from the calibration process. Deviations of prior weighings conform to the Standard and do not exceed 20 μg (refer to Figure 76). All six control filters are weighed afterwards and a warning is displayed for control filters with deviations > 40 μg during evaluation. These control filters are not used for postweighing. Instead, the first three acceptable control filters are used while the others remain in the protective jar in order to replace a defective or deviating filter, if necessary. Figure 77 shows an exemplary process over a period of more than four months.

All filters which display a difference of more than 40 µg between the first and second weighing are excluded from the pre-weighing process. Filters exhibiting deviations of more than 60 µg are not considered for evaluation after post-weighing, as conforming to standards.

Luftreinhaltung



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report-No.: 936/21209885/G

Page 227 of 440

Weighed filters are packed in separate polystyrene jars for transport and storage. These jars remain closed until the filter is placed in. Virgin filters can be stored in the weighing room for up to 28 days before sampling. Another pre-weighing is carried out if this period is exceeded.

Sampled filters can be stored for not more than 15 days at a temperature of 23 °C or less. The filters are stored at 7 °C in a refrigerator.



Page 228 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

A2 Filter evaluation

The filters are evaluated with the help of a corrective term in order to minimise relative mass changes caused by the weighing room conditions.

Equation:

$$Dust = MF_{post} - (M_{Tara} \times (MKon_{post} / MKon_{pre}))$$
 (F1)

MKon_{pre} = average mass of the 3 control filters after 48 h and 72 h pre-weighing

MKon_{post} = average mass of the 3 control filters after 48 h and 72 h post-weighing

M_{Tara} = average mass of the filter after 48 h and 72 h pre-weighing

MF_{post} = average mass of the loaded filter after 48 h and 72 h post-weighing

Dust = corrected dust mass of the filter

This shows that the method becomes independent from weighing room conditions due to the corrective calculation. Influence due to the water content of the filter mass between virgin and loaded filter can be controlled and do not change the dust content of sampled filters. Hence, point 9.3.2.5 of EN 14907 is fulfilled.

The example of the standard weight between November 2008 and February 2009 shows that the permissible difference of max. 20 µg from the previous measurement is not exceeded.

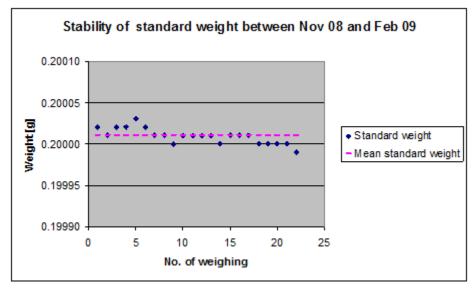


Figure 76: Stability of standard weight

Luftreinhaltung



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report-No.: 936/21209885/G

Page 229 of 440

 Table 42:
 Stability of standard weight

			Difference to
	Weighing	Standard	the previous
Date	No.	weight	weighing
		g	μg
12.11.2008	1	0.20002	
13.11.2008	2	0.20001	-10
10.12.2008	3	0.20002	10
11.12.2008	4	0.20002	0
17.12.2008	5	0.20003	10
18.12.2008	6	0.20002	-10
07.01.2009	7	0.20001	-10
08.01.2009	8	0.20001	0
14.01.2009	9	0.20000	-10
15.01.2009	10	0.20001	10
21.01.2009	11	0.20001	0
22.01.2009	12	0.20001	0
29.01.2009	13	0.20001	0
30.01.2009	14	0.20000	-10
04.02.2008	15	0.20001	10
05.02.2009	16	0.20001	0
11.02.2009	17	0.20001	0
12.02.2009	18	0.20000	-10
18.02.2009	19	0.20000	0
19.02.2009	20	0.20000	0
26.02.2009	21	0.20000	0
27.02.2009	22	0.19999	-10

Marked in yellow = average value Marked in green = lowest value Marked in blue = highest value



Page 230 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

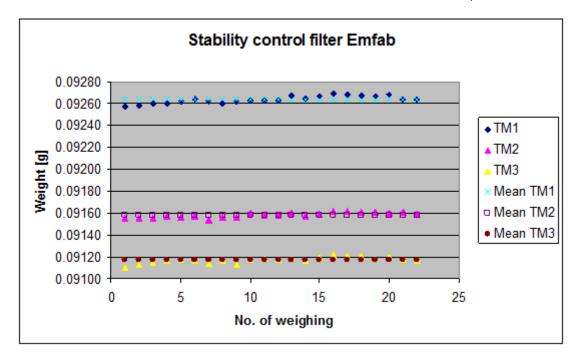


Figure 77: Stability of the control filters

Luftreinhaltung



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM $_{10}$ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM $_{10}$, Report-No.: 936/21209885/G

Page 231 of 440

Table 43: Stability of the control filters

	Control filter No.		
Weighing No.	TM1	TM2	TM3
1	0.09257	0.09155	0.09110
2	0.09258	0.09155	0.09113
3	0.09260	0.09155	0.09115
4	0.09260	0.09157	0.09116
5	0.09262	0.09156	0.09117
6	0.09264	0.09157	0.09116
7	0.09262	0.09154	0.09114
8	0.09260	0.09156	0.09116
9	0.09262	0.09156	0.09113
10	0.09263	0.09160	0.09117
11	0.09263	0.09158	0.09118
12	0.09263	0.09158	0.09117
13	0.09267	0.09160	0.09118
14	0.09265	0.09157	0.09116
15	0.09266	0.09159	0.09119
16	0.09269	0.09162	0.09122
17	0.09268	0.09162	0.09121
18	0.09267	0.09161	0.09121
19	0.09266	0.09161	0.09118
20	0.09268	0.09160	0.09120
21	0.09264	0.09161	0.09117
22	0.09264	0.09159	0.09116
Average	0.09264	0.09158	0.09117
Standard de-			
viation	3.2911E-05	2.4937E-05	2.8558E-05
rel.			
standard de- viation	0.036	0.027	0.031
viation	0.000	0.021	0.031
Median	0.09264	0.09158	0.09117
lowest value	0.09257	0.09154	0.09110
highest value	0.09269	0.09162	0.09122

Marked in yellow = average value Marked in green = lowest value Marked in blue = highest value



Page 232 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

B) UK test site (Teddington)

B.1 Implementation of Weighing Protocols

NPL (National Physical Laboratory) were subcontracted to weigh filters manually for the field study. In line with EN14907 filters were kept in the weighing room for less than 28 days; the glove box used for weighing was maintained at (20 ± 1) °C and (50 ± 5) %; and filters were weighed twice before and after sampling. Table 44 summarises the conditioning and weighing timescales utilised:

Table 44: Conditioning and weighing timescales

Pre Sampling	Post Sampling
Condition minimum of 48 hours	Condition 48 hours
Weigh Filters	Weigh Filters
Condition 24 hours	Condition 24 hours
Weigh Filters	Weigh Filters

At the start of each weighing session the balance was exercised to remove mechanical stiffness, and then calibrated. At the start and end of each batch of filters, a 50 and 200 mg check weight were weighed. In line with the recommendations of the UK PM Equivalence Report [8], filters were weighed relative to a 100 mg check weight, and not a tare filter, as the latter was shown to lose mass over time. Four filters were weighed between check weights, as the balance drift over time had been shown to be small.

Luftreinhaltung



Report on the suitability test of the ambient air quality measuring system Model 5030i SHARP with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G

Page 233 of 440

The Check weight Mass (CM) of the filter was calculated for each weighing session using E A.1 below:

$$CM = \frac{\left(m_{check,Beg} + m_{check,End}\right)}{2}$$
 E A.1

Where:

 $M_{check,bef}$ = Mass of check weight weighed immediately prior to sample filter.

M_{check,aft} = Mass of check weight weighed immediately after sample filter.

The **Relative Mass (RM)** of the filter was calculated for each weighing session using **E A.2** below:

$$RM = m_{filter} - CM$$
 E A.2

Where:

m_{filter} = Mass of sample filter

Particulate Mass (PM) is calculated using the following equation in accordance with EN14907.

$$PM = \left(\frac{RM_{End1} + RM_{End2}}{2}\right) - \left(\frac{RM_{Beg1} + RM_{Beg2}}{2}\right)$$
 E A.3

Where:

Beg1 denotes weighing session 1 prior to sampling

Beg2 denotes weighing session 2 prior to sampling

End1 denotes weighing session 1 after sampling

End2 denotes weighing session 2 after sampling



Page 234 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Pre Spread (S_{Pre}), Post Spread (S_{Post}) and Blank Spread (S_{Blank}) were calculated using the following equations:

$$S_{\text{Pr}e} = RM_{Anf1} - RM_{Anf2}$$
 E A.4

$$S_{Post} = RM_{End1} - RM_{End2}$$
 E A.5

$$S_{Blank} = \left(\frac{CM_{End2} + CM_{End1}}{2}\right) - \left(\frac{CM_{Anf2} + CM_{Anf1}}{2}\right)$$
 E A.6

As with the UK PM Equivalence Report [8], it was not possible to weigh all filters within the 15 day timeframe suggested in EN14907.

However, as filters were removed immediately from the reference samplers and placed in the refrigerator, it was not necessary to determine if T_{Ambient} exceeded 23 °C. It is felt that as 15 days was impractical for a relatively small scale field study, it is less likely to be attainable if this methodology were adopted by a National or Regional network, and as such, the methodology employed herein is representative of how the reference samplers would be operated in practice.

A.2 Analysis of Protocols Employed

The distributions of pre and post weight for all EMFAB filters weighed relative to the tare filter and check weight are shown in Figure 78. If filters lose relative mass between weightings, then the distribution will be shifted to the right, whereas if there is a gain in the relative mass the distribution will shift to the left. EN14907 states that unsampled filters should be rejected if the difference between the masses of the two pre weightings is greater than 40 μ g. Similarly, EN14907 states that sampled filters should be rejected if the difference between the masses of the two post weightings is greater than 60 μ g. Filters were not rejected based on these criteria. The observed distributions of repeat mass measurements are considered unlikely to have had a significant effect on the results.


Luftreinhaltung



Report on the suitability test of the ambient air quality measuring system Model $5030i\,\text{SHARP}$ with PM_{10} pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM_{10} , Report-No.: 936/21209885/G

Page 235 of 440

Figure 78: Distribution for Emfab filters of (A) Pre spread weighed relative to the check weight and (B) Post spread weighed relative to the check weight.

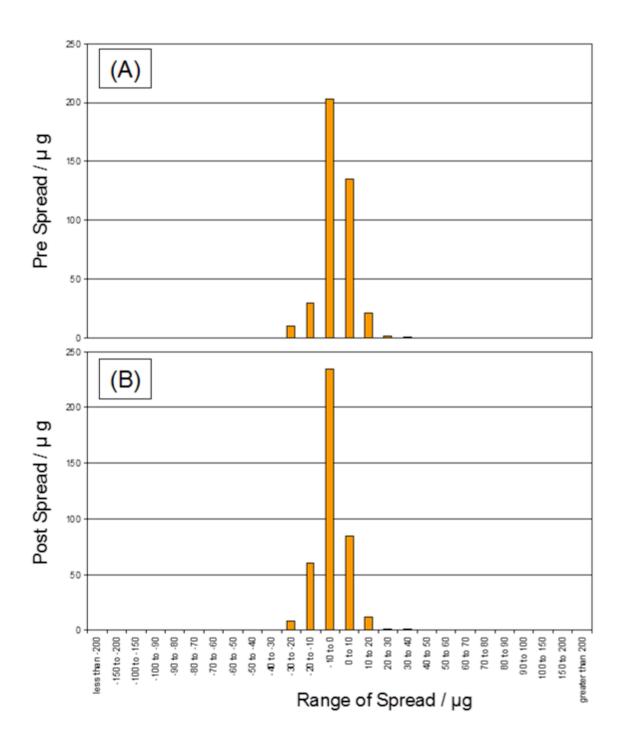



TÜV Rheinland Energie und Umwelt GmbH Luftreinhaltung

Page 236 of 440

Report on the suitability test of the ambient air quality measuring system Model 5030*i* SHARP with PM₁₀ pre-separator of the company Thermo Fisher Scientific for the component suspended particulate matter PM₁₀, Report-No.: 936/21209885/G

Appendix 3

Manuals

Model 5030i SHARP

Instruction Manual

Synchronized Hybrid Ambient Real-time Particulate Monitor Part Number 108148-00 25Mar2014





© 2011 Thermo Fisher Scientific Inc. All rights reserved.

Specifications, terms and pricing are subject to change. Not all products are available in all countries. Please consult your local sales representative for details.

Thermo Fisher Scientific Air Quality Instruments 27 Forge Parkway Franklin, MA 02038 1-508-520-0430 www.thermo.com/aqi

WEEE Compliance

This product is required to comply with the European Union's Waste Electrical & Electronic Equipment (WEEE) Directive 2002/96/EC. It is marked with the following symbol:



Thermo Fisher Scientific has contracted with one or more recycling/disposal companies in each EU Member State, and this product should be disposed of or recycled through them. Further information on Thermo Fisher Scientific's compliance with these Directives, the recyclers in your country, and information on Thermo Fisher Scientific products which may assist the detection of substances subject to the RoHS Directive are available at: www.thermo.com/WEEERoHS.

Thermo Fisher Scientific WEEE Compliance

About This Manual

This manual provides information about installing, operating, maintaining, and servicing the Model 5030i Synchronized Hybrid Ambient Real-time Particulate (SHARP) Monitor. It also contains important alerts to ensure safe operation and prevent equipment damage. The manual is organized into the following chapters and appendices to provide direct access to specific operation and service information.

- Chapter 1 "Introduction" provides an overview of product features, describes the principle of operation, and lists the specifications.
- Chapter 2 "Installation" describes how to unpack, setup, and startup the instrument.
- Chapter 3 "Operation" describes the front panel display screens, the front panel pushbuttons, and the menu-driven firmware.
- Chapter 4 "Calibration" provides the procedures for calibrating the analyzer and describes the required equipment.
- Chapter 5 "Preventive Maintenance" provides maintenance procedures to ensure reliable and consistent instrument operation.
- Chapter 6 "Troubleshooting" presents guidelines for diagnosing analyzer failures, isolating faults, and includes recommended actions for restoring proper operation.
- Chapter 7 "Servicing" presents safety alerts for technicians working on the analyzer, step-by-step instructions for repairing and replacing components, and a replacement parts list. It also includes contact information for product support and technical information.
- Chapter 8 "System Description" describes the function and location of the system components, provides an overview of the firmware structure, and includes a description of the system electronics and input/output connections.
- Chapter 9 "Optional Equipment" describes the optional equipment that can be used with this analyzer.
- Chapter 10 "Model 5014i to 5030i Upgrade Procedures" describes the 5014*i* to 5030*i* upgrade procedures.
- Appendix A "Warranty" is a copy of the warranty statement.

- Appendix B "C-Link Protocol Commands" provides a description of the C-Link protocol commands that can be used to remotely control an analyzer using a host device such as a PC or datalogger.
- Appendix C "MODBUS Protocol" provides a description of the MODBUS Protocol Interface and is supported both over RS-232/485 (RTU protocol) as well as TCP/IP over Ethernet.
- Appendix D "Gesytec (Bayern-Hessen) Protocol" provides a description of the Gesytec (Bayern-Hessen or BH) Protocol Interface and is supported both over RS-232/485 as well as TCP/IP over Ethernet.
- Appendix E "ESM Protocol Commands" provides a description of the ESM Protocol commands (from the prior 5030 platform) that can be used to remotely control an analyzer using a host device such as a PC or datalogger.

Safety

Review the following safety information carefully before using the analyzer. This manual provides specific information on how to operate the analyzer, however, if the analyzer is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Safety and Equipment **Damage Alerts**

This manual contains important information to alert you to potential safety hazards and risks of equipment damage. Refer to the following types of alerts you may see in this manual.

Safety and Equipment Damage Alert Descriptions

Alert		Description
<u>^</u>	DANGER	A hazard is present that could result in death or serious personal injury if the warning is ignored. ▲
\triangle	WARNING	A hazard or unsafe practice could result in serious personal injury if the warning is ignored. ▲
<u>^</u>	CAUTION	A hazard or unsafe practice could result in minor to moderate personal injury if the warning is ignored. ▲
\triangle	Equipment Damage	A hazard or unsafe practice could result in property damage if the warning is ignored. \(\Lambda \)

Safety and Equipment Damage Alerts in this Manual

Alert	Description
WARNING	The Model $5030i$ is supplied with a three-wire grounded power cord. Under no circumstances should this grounding system be defeated. \blacktriangle

If the equipment is operated in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. \blacktriangle The service procedures in this manual are restricted to qualified service personnel only. \blacktriangle The detector assembly should be replaced by a qualified technician knowledgeable in dealing with radiation precautions. By removing the detector assembly, the C-14 radioactive source is partially exposed. Safety glasses must be worn during this replacement procedure. The amount of C-14 meets the USNRC regulations as an exempt amount of radioactive source <100 μCi. Δ The detector pre-amp assembly has a power backup built in. "DO NOT OPEN" caution handeling. Backup power will dissipate after 8 hours. \blacktriangle **CAUTION** The detector window is very fragile. Handle with great care and do not wipe or touch the window. Furthermore, do not touch the solder cable connection (electrode) with your bare fingers. The oils from your skin can damage the detector. Safety glasses must be worn while replacing the detector assembly. If the LCD panel breaks, do not let the liquid crystal contact your skin or clothes. If the liquid crystal contacts your skin or clothes, wash it off immediately using soap and water. **Equipment Damage** Do not attempt to lift the analyzer by the cover or other external fittings. **\(\Lambda \)** Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. **\(\Lambda \)** Disconnect the serial cable before changing the RS-232 and RS-485 selection to prevent damage to any equipment currently connected to the analyzer. \blacktriangle Do not use solvents or other cleaning products to clean the outside case. Do not remove the LCD panel or frame from the LCD module. \blacktriangle The LCD polarizing plate is very fragile, handle it carefully. **\(\Lambda \)** Do not wipe the LCD polarizing plate with a dry cloth, as it may easily scratch the plate. \blacktriangle

Description

Alert

Do not use alcohol, acetone, MEK or other ketone based or aromatic solvent to clean the LCD module, but rather

Alert	Description
	use a soft cloth moistened with a naphtha cleaning solvent. $lack$
	Do not place the LCD module near organic solvents or corrosive gases. $lacktriangle$
	Do not shake or jolt the LCD module. ▲

Electrical/Safety Certifications

The product has been tested and has been documented to be in compliance with the following U.S. and Canadian safety standards:



UL Standard 61010-1:2004 2nd Edition CAN/CSA C22.2 No. 1010-1:2004 2nd Edition IEC 61326-2-3: 2006

Thermo Fisher Scientific certifies that this product operates in compliance with the EC Directive 89/336/EEC in reference to electrical emissions and immunity. Specifically, the equipment meets the requirements of EN 61326-1:1998 for Immunity and Emissions. In addition, the hardware has been tested for personal or fire safety hazards in accordance with EN61010-1:2001 (Safety) in fulfillment of EC Directive 73/23/EEC.

FCC Compliance

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note This equipment has been tested and found to comply within the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his or her own expense. ▲

WEEE Symbol

The following symbol and description identify the WEEE marking used on the instrument and in the associated documentation.

Symbol	Description
X	Marking of electrical and electronic equipment which applies to waste electrical and electronic equipment falling under the Directive 2002/96/EC (WEEE) and the equipment that has been put on the market after 13 August 2005.

Where to Get Help

Service is available from exclusive distributors worldwide. Contact one of the phone numbers below for product support and technical information or visit us on the web at www.thermo.com/aqi.

1-866-282-0430 Toll Free

1-508-520-0430 International

About This Manual

Where to Get Help

Contents

Chapter 1	Introduction	1-1
•	Principle of Operation	1-3
	Specifications	
Chapter 2	Installation	2-1
-	Packaging and Transport	2-1
	Lifting	2-2
	Unpacking and Inspection	2-2
	Acceptance Testing and Startup Procedures	2-3
	Acceptance Test	
	One-Point Temperature Verification	2-7
	One-Point RH Sensor Verification	
	One-Point Barometric Pressure Verification	2-8
	One-Point Volumetric Flow Rate Verification	
	Leak Check Procedure	2-9
	Nephelometer Source Verification	2-9
	Nephelometer Zero Check	2-9
	Setup	2-10
	Inlet System	2-10
	Heater	2-11
	Sample Tube Extension Lengths	2-13
	Rack Mounting Option	2-13
	Monitor Installation	2-13
	Connecting External Devices	
	Terminal Board PCB Assemblies	2-17
	I/O Terminal Board	
	D/O Terminal Board	2-19
	25-Pin Terminal Board	2-20
	Power Connections	
	Startup	2-22
	Data Content	2-23
	Shutdown	2-23
	Important Tips	2-23
Chapter 3	Operation	3-1
	Display	3-1
	Pushbuttons	3-2
	Soft Keys	3-3
	Alphanumeric Entry Screen	

Contents

Firmware Overview	3-4
Power-Up Screen	3-6
Run Screens	3-6
Ambient Conditions Run Screen	3-7
Sample Conditions Run Screen	3-8
Mass Sensor Data Run Screen	3-8
Hybrid Data Run Screen	3-9
Main Menu	3-9
Range Menu	3-10
Concentration Units	
SHARP Range	3-11
Set Custom Ranges	3-12
Custom Ranges	3-13
Integration Time	3-13
24-Hour Average	3-14
24-Hour Average Start Time	3-14
Calibration Factors Menu	3-14
PM Background	3-15
PM Coefficient	3-15
SHARP Background	3-16
SHARP Coefficient	3-16
Nephelometer Background Values	3-16
Nephelometer Mode	3-17
Values	3-17
Restore Previous Values	3-17
Nephelometer Coefficient	3-18
Instrument Controls Menu	3-18
Set Flow/Pump	3-19
Flow	3-19
Pump	3-19
Set Heater	3-20
Control	3-20
RH Threshold	3-20
Temperature Threshold	3-21
Filter Tape Control	3-21
Manual	3-21
Mass Limit	3-22
Next Time	3-22
Period	3-22
Counter	3-23
Tape/Zero Ratio	3-23
Volumetric Conditions	
Temperature Compensation	3-24
Standard Temperature	
Pressure Compensation	3-25
Standard Pressure	

Datalogging Settings	
Select Srec/Lrec	
View Logged Data	3-26
Number of Records	3-27
Date and Time	3-27
Erase Log	3-28
Select Content	
Choose Field Data	3-29
Concentrations	3-29
Other Measurements	
Analog Inputs	
Commit Content	
Reset to Default Content	
Configure Datalogging	
Logging Period Min	
Memory Allocation Percent	
Data Treatment	
Flag Status Data	
Communication Settings	
Serial Settings	
Baud Rate	
Data Bits	
Parity	
Stop Bits	
RS-232/RS-485 Selection	
Instrument ID	
Gesytec Serial Nunber	
Communication Protocol	
Streaming Data ConfigurationStreaming Data Interval	
Choose Stream Data	
Concentrations	
Other Measurements	
Analog Inputs	
TCP/IP Settings	
Use DHCP	
IP Address	
Netmask	
Default Gateway	
Host Name	
Network Time Protocol Server	
I/O Configuration	
Output Relay Settings	
Logic State	
Instrument State	
Alarms	

Non-Alarm	. 3-46
Digital Input Settings	. 3-46
Logic State	. 3-47
Instrument Action	. 3-47
Analog Output Configuration (Select Channel)	. 3-48
Allow Over/Under Range	. 3-48
Analog Output Configuration (Select Action)	. 3-49
Select Range	. 3-49
Minimum and Maximum Value	. 3-49
Choose Signal to Output	. 3-51
Analog Input Configuration	
Descriptor	. 3-53
Units	. 3-53
Decimal Places	. 3-54
Number of Table Points	. 3-54
Table Points	. 3-55
Volts	. 3-55
User Value	. 3-55
Screen Contrast	. 3-56
Service Mode	. 3-56
Date/Time	. 3-57
Timezone	. 3-57
Diagnostics Menu	. 3-58
Program Versions	
Voltages	
Motherboard Voltages	
Interface Board Voltages	
I/O Board Voltages	
Detector Board Voltages	
Nephelometer Board Voltages	
RH/Temperature	
Pressure/Vacuum	
Flow	. 3-61
Detector Status	. 3-62
Nephelometer Status	
CRn	
Analog Input Readings	
Analog Input Voltages	
Digital Inputs	
Relay States	
Test Analog Outputs	
Set Analog Outputs	
Instrument Configuration	
Contact Information	
Alarms Menu	
Instrument Alarms	

Filter Tape Counter	3-67
Max Filter Tape Counter	
Detector Alarms	3-67
Min and Max Alpha Alarms	3-68
Min and Max Beta Alarms	
Nephelometer Alarms	3-68
Nephelometer Temperature	
Min and Max Nephelometer Temperature Limits	
Nephelometer RH	3-70
Min and Max Nephelometer RH Limits	3-70
LED Current	3-70
Min and Max LED Source Current Limits	3-71
Reference Detector Voltage	
RH/Temperature Alarms	
Ambient RH	
Min and Max Ambient RH Limits	
Sample RH	
Min and Max Sample RH Limits	
Ambient Temperature	
Min and Max Ambient Temperature Limits	
Flow Temperature	
Min and Max Flow Temperature Limits	
Board Temperature	
Min and Max Board Temperature Limits	
Pressure/Vacuum Alarms	
Barometric Pressure	
Min and Max Barometric Pressure Limits	
Vacuum	
Min and Max Vacuum Limits	
Flow	
Min and Max Flow Limits	
Flow Alarms	
Flow	
Min and Max Flow Limits	
Concentration Alarms	
Average PM	
Average SHARP	
Min and Max Average SHARP Concentration Limits	
Average Nephelometer	
Min and Max Average Nephelometer Concentration Limits	
Instant PM	
Min and Max Instant PM Concentration Limits	
Instant SHARP	
Min and Max Instant SHARP Concentration Limits	
Instant Nephelometer	3-84

Min and Max Instant Nephelometer Concentration Limits	3-84
Service Menu	3-85
RH/Temperature Calibration	3-85
Ambient Temperature	3-86
Flow Temperature	3-86
Ambient Relative Humidity	3-86
Pressure/Vacuum Calibration	
Barometer Pressure Calibration	3-87
Calibrate Barometer Pressure Offset	3-88
Calibrate Barometer Pressure Span	3-88
Restore Default Calibration	3-88
Vacuum/Flow Calibration	3-89
Calibrate Vacuum/Flow Offset	3-89
Calibrate Vacuum Pressure Span	3-89
Calibrate Flow Pressure Span	3-90
Restore Default Calibration	3-90
Flow Calibration	3-91
Auto Flow Calibration	3-91
Manual Flow Calibration	3-92
Mass Calibration	3-92
Thermal Mass Coefficient	3-92
Vacuum Mass Coefficient	3-93
Barometer Mass Coefficient	3-93
Mass Coefficient	3-93
Auto Mass Coefficient	3-94
Manual Mass Coefficient	3-94
Alpha Efficiency Coefficient	3-94
Detector Calibration	
Auto Detector Calibration	3-95
Manual Detector Calibration	3-96
Beta/Ref/Alpha Counts	3-96
High Voltage	3-96
Beta Ref Threshold	3-97
Alpha Threshold	
Nephelometer Calibration	
Nephelometer RH	
Nephelometer Temperature	
Nephelometer Source Level	
Analog Output Calibration	
Analog Output Calibrate Zero	
Analog Output Calibrate Full-Scale	
Analog Input Calibration	
Analog Input Calibrate Zero	
Analog Input Calibrate Full-Scale	
Display Pixel Test	
Restore User Defaults	

	Restore Factory Defaults	3-102
	Password Menu	3-103
	Set Password	3-103
	Lock Instrument	3-104
	Lock/Unlock and Local/Remote Operation	3-104
	Change Password	3-104
	Remove Password	3-105
	Unlock Instrument	3-105
Chapter 4	Calibration	4-1
-	Frequency of Calibration	
	Equipment Required	
	Pre-Calibration	
	Calibration Procedure	4-2
	RH/Temperature Calibration	
	Ambient Temperature	
	Ambient Relative Humidity	
	Flow Temperature	
	Pressure/Vacuum Calibration	
	Barometer Pressure Calibration	4-4
	Calibrate Vacuum/Flow Zero	
	Calibrate Vacuum Pressure Span	4-5
	Calibrate Flow Pressure Span	
	Flow Calibration	
	Auto Flow Calibration	4-7
	Mass Calibration	4-7
	Mass Coefficient	4-9
	Auto Mass Coefficient	4-9
	Detector Calibration	4-12
	Auto Detector Calibration	4-12
	Nephelometer Calibration	4-13
	Nephelometer RH	4-13
	Nephelometer Temperature	
	Nephelometer Source Level	
Chapter 5	Preventive Maintenance	5-1
-	Safety Precautions	
	Replacement Parts	
	Cleaning the Outside Case	
	Cleaning the Inlets	5-2
	U.S. EPA PM ₁₀ Inlet	
	European PM ₁₀ /PM _{2.5} Inlet	
	Cyclone Maintenance	
	Heater and Sample Tube	
	Weather Proofing	

	Fan Filter Inspection and Cleaning	5-5
	Pump Rebuilding	5-6
	Leak Test	5-6
	Filter Tape Replacement	5-7
	Greasing the Cam	5-8
	External Pump Exhaust Filter	5-8
	Cleaning the SHARP Optics Assembly	5-10
Chapter 6	Troubleshooting	6-1
	Safety Precautions	6-1
	Troubleshooting Guides	6-1
	Board-Level Connection Diagrams	6-8
	Connector Pin Descriptions	
	Service Locations	
Chapter 7	Servicing	7-1
•	Safety Precautions	
	Firmware Updates	
	Accessing the Service Mode	
	Replacement Parts List	
	Cable List	
	External Device Connection Components	
	Removing the SHARP Optics Assembly	
	Removing the Measurement Case Assembly and Lowering the	
	Panel	
	Fuse Replacement	
	Fan/Filter Replacement	
	Detector Amplifier Assembly Replacement	
	Detector Amplifier Board Calibration	
	External Pump Replacement	
	Pressure Board Replacement	
	Pressure Board Calibration	
	Analog Output Testing	
	Analog Output Calibration	
	Analog Input Calibration	
	Calibrating the Input Channels to Zero Volts	
	Calibrating the Input Channels to Full-Scale	
	Themistor Replacement	
	I/O Expansion Board (Optional) Replacement	
	Digital Output Board Replacement	
	Motherboard Replacement	
	Measurement Interface Board Replacement	
	Photo Interrupt Board Replacement	
	Proportional Valve Replacement	
	Detector Assembly Replacement	
	/ L	

	Flow RTD Replacement	7-36
	Transformer Replacement	7-37
	Radius Tube Replacement	7-38
	Ambient RH/Temperature Replacement	7-39
	Front Panel Board Replacement	
	LCD Module Replacement	7-42
	Removing the SHARP Optics Cover	
	External Solenoid Valve Replacement	
	SHARP RH/Temp Sensor Replacement	
	SHARP Interface Board Replacement	
	Delrin Nut Replacement	7-49
	Internal SHARP Cable Assembly Replacement	7-51
	Case Cable Replacement	7-52
	External Zeroing Filter	7-53
	Service Locations	7-54
Chapter 8	System Description	8-1
S p	Hardware	
	Nephelometer Assembly	
	Primary Measurement Head	
	Detector Amplifier	
	Cam Photo Interrupt Board	
	Counter Wheel Interrupt Board Assembly	
	Proportional Valve	
	Cam Motor	
	Tape Motor	
	Pressure Board	
	External Solenoid	8-5
	Pump Intake T-Fitting	8-5
	Firmware	
	Instrument Control	8-5
	Monitoring Signals	8-6
	Output Communication	
	Electronics	8-6
	Motherboard	8-6
	Nephelometer Interface Board	8-7
	Nephelometer interface board connectors	8-7
	Measurement Interface Board	8-7
	Measurement Interface Board Connectors	8-8
	Flow Sensor System	
	Pressure Sensor Assembly	8-8
	Detector Amplifier Assembly	
	Digital Output Board	8-8
	I/O Expansion Board (Optional)	
	Front Panel Connector Board	8-9
	I/O Components	8-9

	Analog Voltage Outputs	8-9
	Analog Current Outputs (Optional)	
	Analog Voltage Inputs (Optional)	
	Digital Relay Outputs	
	Digital Inputs	8-1
	Serial Ports	8-11
	RS-232 Connection	8-11
	RS-485 Connection	8-12
	Ethernet Connection	8-12
	External Accessory Connector	
Chapter 9	Optional Equipment	9-′
	Inlet Assemblies	
	Sampling Tube Extensions	
	I/O Expansion Board Assembly	
	25 Pin Terminal Board Assembly	
	Terminal Block and Cable Kits	
	Cables	
	Mounting Options	
	Roof Flange Assembly	
Chapter 10	Model 5014i to 5030i Upgrade Procedures	10-1
onaptor 10	Instrument Preparation	
	SHARP Connection Bracket Assembly Installation	
	Radius Tube Adapter Installation	
	SHARP External Valve Installation	
	SHARP Optics Assembly Installation	
	Upgrade of the Heater Tube Assembly	
	Model Label Change	
	Power On Instrument	
Appendix A	Warranty	Δ_1
Appelluix A	vvaii aity	
Appendix B	C-Link Protocol Commands	
	Commands	
	Commands List	
	Measurements	
	Alarms	
	Diagnostics	
	Datalogging	
	Calibration	
	Keys/Display	
	Measurement Configuration	B-45 R-51
	mardware Configuration	K-7

	Communications Configuration	B-54
	I/O Configuration	B-61
	Record Layout Definition	B-66
	Format Specifier for ASCII Responses	B-66
	Format Specifier for Binary Responses	
	Format Specifier for Erec Layout	
	Text	
	Value String	B-67
	Value Source	B-67
	Alarm Information	B-68
	Translation Table	B-68
	Selection Table	B-68
	Button Designator	B-68
	Examples	B-69
Appendix C	MODBUS Protocol	
• •	Serial Communication Parameters	
	TCP Communication Parameters	C-2
	Application Data Unit Definition	
	Slave Address	
	MBAP Header	
	Function Code	
	Data	C-3
	Error Check	
	Function Codes	C-3
	(0x01/0x02) Read Coils/Read Inputs	C-3
	(0x03/0x04) Read Holding Registers/Read Input Registers	C-5
	(0x05) Force (Write) Single Coil	
	MODBUS Parameters Supported	
Appendix D	Gesytec (Bayern-Hessen) Protocol	D-1
••	Serial Communication Parameters	
	TCP Communication Parameters	
	Instrument Address	D-2
	Abbreviations Used	D-2
	Basic Command Structure	D-2
	Block Checksum Characters < BCC>	D-3
	Gesytec Commands	D-3
	Instrument Control Command (ST)	D-3
	Data Sampling/Data Query Command (DA)	D-4
	Measurements reported in response to DA command	D-7
	Operating and Error Status	
Appendix E	ESM Protocol Commands	E-1
	ESM Commands Supported	

Contents

Figures

Figure 1-1. SHARP Monitor Sample Path	1-3
Figure 1–2. Nephelometer Sample and Zero Flow Schematic	1-5
Figure 2–1. Remove the Packing Material	2-3
Figure 2–2. Model 5030i Sampling Room Air Under Stable Conditions	2-7
Figure 2–3. Model 5030i Side View—inches [millimeters]	. 2-10
Figure 2-4. Model 5030i Top View—inches [millimeters]	. 2-11
Figure 2–5. Model 5030i Vertical View	. 2-12
Figure 2-6. Heater Assembly	. 2-14
Figure 2–7. Rear Panel Plumbing Schematic	. 2-16
Figure 2–8. I/O Terminal Board Views	. 2-18
Figure 2–9. Pin-Out of Rear Panel Connector	. 2-19
Figure 2–10. D/O Terminal Board Views	. 2-20
Figure 2-11. 25-Pin Terminal Board Views	. 2-21
Figure 3–1. Front Panel Display	3-2
Figure 3–2. Front Panel Pushbuttons	3-2
Figure 3–3. Flowchart of Menu-Driven Firmware	
Figure 3-4. Pin-Out of Rear Panel Connector	. 3-12
Figure 3–5. Common Flags	. 3-31
Figure 3–6. Detector A Flags	
Figure 4–1. Differential Pressure and Vacuum Calibration Ports	
Figure 5–1. U.S. EPA PM ₁₀ Inlet	
Figure 5–2. European PM ₁₀ Inlet	
Figure 5–3. PM _{2.5} Sharp-Cut-Cyclone	
Figure 5–4. Inspecting and Cleaning the Fan	
Figure 5–5. Replacing the Filter Tape	
Figure 5–6. Replacing the External Pump Exhaust Filter	
Figure 6–1. Board-Level Connection Diagram - Common Electronics	
Figure 6–2. Board-Level Connection Diagram - Measurement System	
Figure 6–3. Board-Level Connection Diagram - SHARP	
Figure 7–1. Properly Grounded Antistatic Wrist Strap	
Figure 7–2. Model 5030i Component Layout	
Figure 7–3. SHARP Optics Component Layout	
Figure 7–4. Removing the SHARP Optics Assembly	
Figure 7–5. Removing the Measurement Case Assembly and Lowering the	
Partition Panel	
Figure 7–6. Replacing the Fan	. 7-15

Figure 7–7. Replacing the Detector Amplifier Assembly	7-16
Figure 7–8. Replacing the Pump	7-18
Figure 7–9. Replacing the Pressure Board Assembly	7-19
Figure 7–10. Replacing the Pressure Board Assembly Plumbing Connection	.7-20
Figure 7–11. Rear Panel Analog Input and Output Pins	7-23
Figure 7–12. Replacing the Thermistor	7-27
Figure 7–13. Replacing the I/O Expansion Board (Optional)	7-28
Figure 7–14. Rear Panel Board Connectors	7-29
Figure 7–15. Replacing the Measurement Interface Board	7-32
Figure 7–16. Replacing the Photo Interrupt Board	7-33
Figure 7–17. Replacing the Proportional Valve	7-34
Figure 7–18. Replacing the Detector Assembly	7-36
Figure 7–19. Replacing the RTD	7-37
Figure 7–20. Replacing the Transformer	7-38
Figure 7–21. Replacing the Radius Tube	7-39
Figure 7–22. Replacing the Ambient RH/Temperature Assembly	7-41
Figure 7–23. Replacing the Front Panel Board and the LCD Module	7-42
Figure 7–24. Removing the SHARP Optics Cover	7-44
Figure 7–25. Replacing the External Solenoid Valve	
Figure 7–26. Disconnecting the RH/Temp Connector	7-47
Figure 7–27. SHARP Interface Board Connections	
Figure 7–28. Replacing the SHARP Optics Board	
Figure 7–29. Replacing the Delrin Nut	
Figure 7–30. Replacing the Internal SHARP Cable Assembly	
Figure 7–31. Replacing the Case Cable	
Figure 7–32. Replacing the External Zeroing Filter	
Figure 8–1. Model 5030 <i>i</i> Hardware Components	
Figure 8–2. SHARP Optics Component	
Figure 9–1. Bench Mounting	
Figure 9–2. EIA Rack Mounting	
Figure 9–3. Retrofit Rack Mounting	
Figure 9–4. Rack Mount Option Assembly	
Figure 9–5. Roof Flange Assembly	
Figure 9–6. Securing the Roof Flange	
Figure 10–1. SHARP Optics Connection Bracket	
Figure 10–2. Tape Pick-up Spool Removal	
Figure 10–3. Filter Tape Installation Pathway	
Figure 10—4. Connecting Connection Bracket Wiring to Measurement Inter-	
Board	
Figure 10–5. Radius Tube Adapter Install	IU-6

Figures

Figure 10–6. Radius Tube Adapter Alignment Check	10-6
Figure 10-7. Rear Valve Assembly Installation	10-7
Figure 10–8. Plumbing Diagram	10-8
Figure 10–9. Optics Installation	10-9
Figure 10–10. Connecting the Optics to the Optics Connector	10-9
Figure 10-11. Upgrading 5030i Heater Assembly	10-10
Figure 10–12. Connecting Heater to Optics Assembly Cover	10-11
Figure 10–13. Front Panel Label Replacement	10-11
Figure B–1. Flags Field	B-12

Figures

Tables

Fable 1–1. Model 5030i Specifications	1-8
Fable 2–1. Pressure Units Conversion	2-6
Fable 2–2. I/O Terminal Board Pin Descriptions	2-18
Fable 2–3. Default Analog Outputs	2-19
Fable 2–4. D/O Terminal Board Pin Descriptions	2-20
Fable 2–5. 25-Pin Terminal Board Pin Descriptions	2-21
Fable 3–1. Front Panel Pushbuttons	3-3
Fable 3–2. Standard Ranges	3-11
Fable 3–3. Default Analog Outputs	3-12
Fable 3–4. Analog Output Zero to Full-Scale	3-50
Fable 3–5. Signal Type Group Choices	3-51
Fable 6—1. Troubleshooting - General Guide	6-2
Fable 6–2. Troubleshooting - Alarm Messages	6-5
Fable 6–3. Motherboard Connector Pin Descriptions	6-10
Fable 6–4. Measurement Interface Board Connector Pin Descriptions	6-15
Fable 6–5. Front Panel Board Connector Pin Diagram	6-20
Fable 6—6. I/O Expansion Board (Optional) Connector Pin Descriptions	6-21
Fable 6—7. Digital Output Board Connector Pin Descriptions	6-23
Fable 6—8. SHARP Measurement Interface Board Pin Connections	6-24
Table 7–1. Model 5030i Replacement Parts	7-5
Fable 7–2. Model 5030i Cables	7-7
Fable 7–3. External Device Connection Components	
Fable 7–4. Analog Output Channels and Rear Panel Pin Connections	7-23
Fable 7–5. Analog Input Channels and Rear Panel Pin Connections	7-23
Fable 8–1. RS-232 DB9 Connector Pin Configuration	
Fable 8—2. RS-485 DB9 Connector Pin Configuration	
Fable 9–1. Cable Options	
Fable 9–2. Color Codes for 25-Pin and 37-Pin Cables	
Fable 9–3. Mounting Options	
Fable B–1. Error Response Messages	
Fable B-2. C-Link Protocol Commands	
Fable B–3. Record Output Formats	
Fable B-4. Stream Time Values	
Fable B-5. Standard Ranges	
Fable B–6. Contrast Levels	B-51
Table B-7. Allow Mode Command Values	B-56

Tables

Table B–8. Reply Termination Formats	B-58
Table B-9. Set Layout Ack Values	B-59
Table B-10. Power Up Mode Values	B-60
Table B-11. Analog Current Output Range Values	B-61
Table B–12. Analog Voltage Output Range Values	B-62
Table B–13. Default Analog Output Channel Assignments	B-63
Table C–1. Read Coils for 5030 <i>i</i>	
Table C-2. Read Registers for 5030i	
Table C–3. Write Coils for 5030 <i>i</i>	
Table D-1. Operating Status for Model 5030i	D-8
Table D–2. Error Status for Model 5030 <i>i</i>	D-8
Table E-1. Read Commands for 5030i	E-1
Table E-2. Write Commands for 5030i	E-2
Table E–3. Control Commands for 5030 <i>i</i>	F-2

Chapter 1 Introduction

The Model 5030i Synchronized Hybrid Ambient Real-time Particulate (SHARP) Monitor is a hybrid nephelometric/radiometric particulate mass monitor capable of providing precise, real-time measurements with a superior detection limit. The SHARP Monitor measures the mass concentration of ambient PM₁₀, PM_{2.5}, and PM_{1.0} aerosol in real-time. The SHARP Monitor incorporates a high sensitivity light scattering photometer whose output signal is continuously reference to the time-averaged measurements of an integral beta attenuation mass sensor, as developed on the Model 5014i Beta. This system achieves heretofore-unattained shortterm precision and accuracy. The SHARP Monitor incorporates advanced firmware to optimize the continuous mass calibration of the nephelometric signal, ensuring that the measured mass concentration remains independent of changes in the particle population being sampled.

The SHARP Monitor incorporates a dynamic heating system (DHS) designed to maintain the relative humidity of the air passing through the filter tape of the radiometric stage below the user-defined threshold, typically below the point at which the collected particles accrete and retain liquid water. This DHS system minimizes the internal temperature rise by not heating when sample relative humidity is below the threshold to which the heater is controlling. As the ambient RH increases above the threshold, the applied heating is optimized to maintain the RH threshold at the sample filter tape. The purpose of this heating system is specifically designed to force the continuous mass monitor to agree with the gravimetric reference method and the relative humidity conditions to which the reference filter samples are conditioned. Furthermore, sufficient flexibility is provided within the firmware to configure the heating conditions to satisfy global monitoring protocols.

The measuring range of the Model 5030i is $0-10,000 \mu g/m^3$.

A complete particulate measuring assembly consists of the following main parts:

- SHARP Optics Module
- SHARP Beta Module
- Ambient Inlet Sampling System (PM₁₀, PM_{2.5}, PM_{1.0})
- Dynamic Heater

- Diaphragm Vacuum Pump
- External Ambient T/RH Sensor Assembly
- Internal Data Recording Unit and External Communication Ports
- Optional 6-Foot Sample Extension Tubes
- Optional Tripod Support
- Optional Roof Flange Kit

The Model 5030i combines proven technology, easy to use menu-driven firmware, and advanced diagnostics to offer unsurpassed flexibility and reliability. The Model 5030*i* has the following features:

- 320 x 240 pixels graphics display
- Menu-driven firmware
- Field programmable ranges
- Multiple user-defined analog outputs
- Analog input options
- Linearity through all ranges
- User-selectable digital input/output capabilities
- Standard communications features include RS-232/485 and Ethernet
- C-Link, MODBUS, Geysitech (Bayern-Hessen), ESM Protocol, streaming data, and NTP (Network Time Protocol) protocols. Simultaneous connections from different locations over Ethernet.
- Radon gas activity measurement (Rn-222; noble gas) and mass refinement
- Flexible data storage configurations
- Volumetric air flow rate control with actual standard conditions concentration data output
- Processor controlled calibration of all sensors
- 880 nm near forward scattering nephelometer
- Beta Detector Life ~10 years
- C-14 activity below USA authorized limit values; shipped as nonhazardous material under Code UN2911; easy handling of the source and instrument. No license is needed in most countries.

For details of the analyzer's principle of operation and product specifications, see the following topics:

- "Principle of Operation" on page 1-3
- "Specifications" on page 1-8

Thermo Fisher Scientific is pleased to supply this continuous ambient particulate monitor. We are committed to the manufacture of instruments exhibiting high standards of quality, performance, and workmanship. Thermo service personnel are available for assistance with any questions or problems that may arise in the use of this instrument. For more information on servicing, see the "Servicing" chapter.

Principle of Operation

The Model 5030*i* is based on the principles of aerosol light scattering (nephelometer) and beta attenuation (Model 5014i Beta) to measure precise and accurate ambient aerosol concentrations. The Model 5030i SHARP aerosol sample pathway is shown in Figure 1–1.

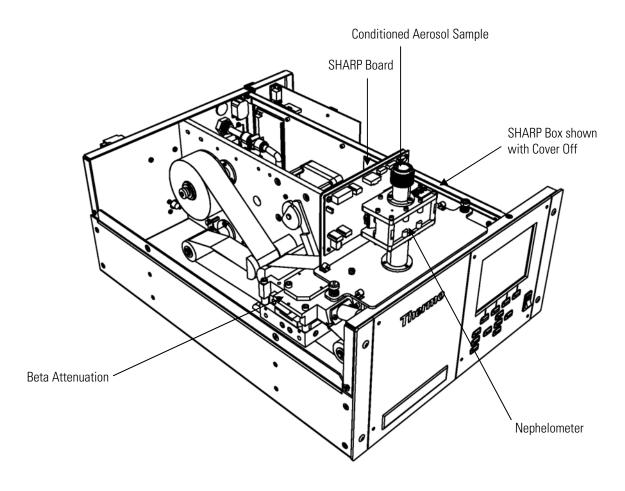


Figure 1–1. SHARP Monitor Sample Path

Introduction

Principle of Operation

The SHARP optical assembly senses the light scattered by the aerosol passing through an 880 nm illumination beam. The nephelometry response is linear with aerosol concentration; independent of sample flow rate; and a running one-minute average and dynamic average are continuously calculated. A relative humidity (RH) measurement is located at the sample filter-tape assuring a representative measurement of the aerosol conditioning prior to real-time mass determination.

Thereafter, the aerosol is deposited onto a glass fiber filter tape. The filter tape will accumulate an aerosol sample towards a threshold value, whereupon the filter tape will automatically advance prior to reaching saturation. During the collection of aerosol onto the filter tape the SHARP Monitor uses the radiometric principle of beta attenuation through a known sample area to continuously collect and detect the deposited mass. Additionally, the beta-attenuation chamber measures alpha emissions from the accumulated aerosol and excludes negative mass artifacts from the presence of daughter nuclides from radon gas decay to achieve a "refined mass" measurement. Simultaneous refined mass measurement and sample volume measurement through a calibrated orifice provide a continuous concentration measurement of the ambient mass concentration.

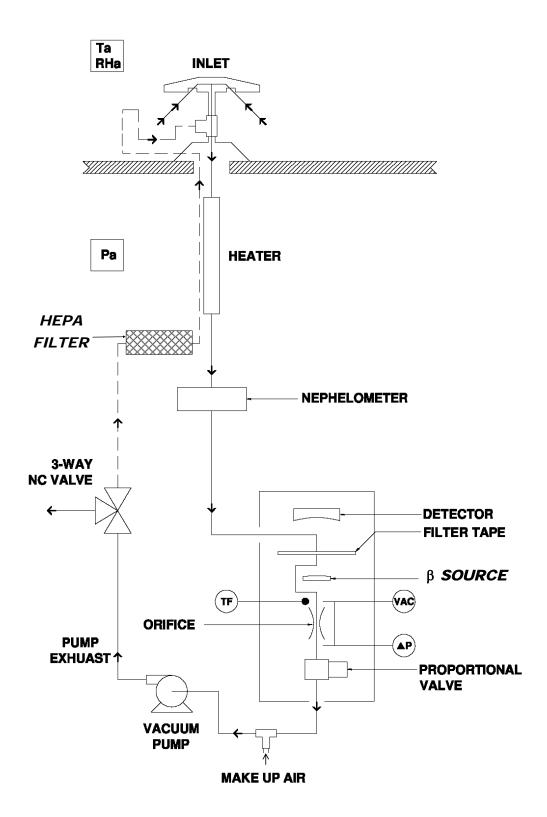


Figure 1–2. Nephelometer Sample and Zero Flow Schematic

Introduction

Principle of Operation

A clean filter spot is introduced by an automatic filter change to the combined sampling and detection chamber at least every 24 hours, usually centered at midnight. However, the official filter tape change frequency for TUV and U.S. EPA testing is for both $PM_{2.5}$ and PM_{10} is every 8 hours. The automatic filter changes are controlled by the instrument firmware which halts the pump operation, lowers the vacuum chamber plate, advances the filter tape a fixed length, raises the vacuum chamber plate, and initiates the pump operation and a zeroing of the sample spot. Immediately after a filter change, a new measurement cycle is initiated with an automatic zero adjustment of the mass signal. The filter change interval and time of day can be user adjusted. Additionally, automatic filter changes will occur if the mass on the filter exceeds 1,500 μ g since the last filter change or if the flow rate through the filter tape is reduced by more than 5% due to potentially restrictive particle deposition.

Using the example of PM_{2.5} monitoring, ambient air is drawn into a 10 micron (µm) size selective inlet which discriminates against 50% of the particles with an equivalent aerodynamic diameter above 10 µm. This inlet has been approved previously through prior U.S. EPA designations (RFPS-0699-130, 131, and 132) and is also listed within 40 CFR Part 50, Appendix L as a 10-MICRON INLET (including model SA246b). Further particle discrimination is achieved by inserting a PM_{2.5} cyclone between the 10-micron inlet and sample tube. European-style inlets are also available with the 5030*i*. The volumetric flow rate at the inlet entrance is 16.67 liters per minute (1 m³/hour). In addition, the ambient temperature and relative humidity is measured via a naturally aspirated radiation shield and standard sensor as part of the volumetric flow control and dynamic heating system.

The ambient particulate is then drawn down a vertically mounted heated sample tube. The heat applied to the sampe is adjustable to either a fixed temperature or a RH-threshold at the filter spot. The purpose of heating the sample is to reduce particle bound water and to decrease the relative humidity (RH) of the sample stream. This is done to reduce positive artifact measurement that can potentially occur as a result of condensation on the filter tape or conditions of elevated humidity. The heater is controlled by the CPU and the power applied is proportional to the conditions.

Downstream of the heated tube, is the nephelometer assembly. The particulate travels through the insulated nephelometer in a laminar pathway and is introduced to the radial tube upstream of the beta attenuation head. The nephelometer assembly contains an 880 nanometer pulsed light source, a reference detector for illumination output control, a hybrid silicon photodetector, temperature sensor, relative humidity sensor, programmable PCB, and communications cable.

The nephelometer assembly has six ranges that are automatically selected to provide the most precise reading possible. During scheduled auto-zeroing

events, a rear-panel mounted zeroing solenoid is activated and HEPAfiltered air is delivered to the nehpelometer, whereby each range is zeroed. The results of the zeroing are available via display and C-Link read commands.

At the location where the nephelometer attaches to the 5030*i* instrument case, a radial insulated tube joins the sampling tube to the collection chamber. The particulate is drawn onto the glass fiber filter tape between the proportional detector and the ¹⁴C beta source. Here, the beta beam passes upwards through the filter tape and accumulated particulate layer. The intensity of the beta beam is attenuated with the increasing mass load resulting in a reduced beta intensity measured by the proportional detector. From a continuously integrated count rate the mass on the filter tape is calculated. During sampling, the mass on the filter spot is always known and the rate of particulate accumulation is observed.

A continuous measurement of the flow rate determines the sample volume. A proportional valve is used to maintain the sample flow rate at its nominal value. From both integrated sample volume and mass detection the particulate concentration is calculated. At any given time the output signal delivers the concentration of particulate in actual or standard conditions.

The Model 5030*i* outputs particulate matter concentrations to the front panel display as SHARP, PM, and NEPH, which are the hybrid, beta attenuation and nephelometer derived particulate concentrations, respectively. Displayed concentrations, analog outputs, also makes the data available over the serial or Ethernet connection.

Additionally, the Model 5030*i* proportional radiation detector is sensitive to natural alpha activity of the aerosol passing through the sampling system. The additional alpha count rate is used to measure the presence of Radon gas and infer the daughter nuclides of Radon gas. These daughter nuclides create a small beta emission. This externally sampled beta emission is perceived by the detector to be a higher count rate and the higher the count rate, the less apparent mass detected. Therefore, by measuring the natural alpha activity due to Radon gas, the proportional beta interference from the daughter nuclide emissions are subtracted from the count rate to provide a refined mass measurement. This potential error from Radon gas interference may be (in lower strength radioactive devices; e.g.; <100 μCi) as high as actual particle concentrations, especially after filter change or when the natural activity concentration changes. The Model 5030i has implemented this procedure to determine separately the natural activity in the aerosol and to eliminate this error. This procedure further allows the Model 5030i to provide a more stable reading at lower ambient particulate concentrations compared to similar methods. Furthermore, from this information the activity concentration of the natural noble gas Radon is derived.

The beta measurement chamber houses an RTD temperature sensor. The T-sensor directly measures the temperature of the incoming sample stream for a continuous air mass compensation, and the flow system. The flow and ambient sensor measurements are combined within a firmware algorithm to maintain an accurate measurement and control of volumetric flow at the inlet and through the differential orifice.

The Model 5030*i* also includes three pressure sensors to measure the differential pressure across a subsonic orifice, vacuum under the filter tape, and barometric pressure. The flow P-sensor is solely used for measurement at the orifice for flow rate control. The vacuum sensor is used for air mass compensation, as an indicator for clogging of the system and is included in the volumetric flow control. The barometric P-sensor is used for air mass compensation and for volumetric flow rate regulation.

The volumetric flow system is built on a calibrated feedback signal from the CPU to the proportional valve signal. By using this flow control, flow stability is easily maintained.

With regard to the hybrid, 5030*i* SHARP Monitor methodology, the nephelometer and beta attenuation concentrations are calculated and both values are digitally filtered (e.g. averaged) with an elastic time constant that is a function of the real-time concentrations. The time constant of this dynamic digital filter will vary with concentrations. It is the ratio of those two digitally filtered concentrations that becomes a dynamic correction factor for the real-time nephelometer, and the product of this correction factor and nephelometer becomes the SHARP Monitor concentrations.

Specifications

Table 1–1 lists the specifications for the Model 5030i.

Table 1–1. Model 5030*i* Specifications

Safety/Electrical Designations

Designed to meet:

CE: EN 61326:1997 + A1:1998 + A2:2001 + A3:2003, EN:61010-1

UL: 61010-1:2004

CSA: C22.2 No. 61010-1:2004

FCC: Part 15 Subpart B, Class B

Source and Detector

IR LED, 6mW, 880 nm Silicon/Hybrid Amplifier Photodetector

β Source: Carbon-14, <3.7 MBq (<100 μCi) Sealed Source Device

Proportional Radiation Detector

Standard System Configuration

Menu-driven software for user interaction via 320 x 420 pixels graphics display

Connecting and Interface Cables, and Vacuum Pump

3-foot heated sample tube

Ambient T/RH Assembly

Consumables for average first year's operation (ambient)

iPort Software for Local or Remote Communication

Sample Heater

3-foot insulated heater tube

Three Modes of Heater Control OFF - Heater is turned off in non condensing environment

TEMP – fixed sample temperature

RH – Dynamic Heating of sample at set sample RH

threshold (e.g., 50% RH)

Instrument Performance (16.67 l/min, 1s, stable conditions)

0 to 1.0, 2.0, 3.0, 5.0, 10.0 mg/m³ Measurement Range:

0 to 100, 1,000, 2,000, 3,000, 5,000, 10,000 μ g/m³

Minimum Detection Limit: $<0.5 \,\mu g/m^3 (1 \text{ hour}) @ 2 \,\sigma$

 $<0.2 \mu g/m^3$ (24-hour) @ 2 σ

Resolution: 0.1 µg/m³ (not to be confused with precision)

Precision: $\pm 2.0 \,\mu g/m^3 < 80 \,\mu g/m^3$; $\pm 5 \,\mu g/m^3 > 80 \,\mu g/m^3$ (24-hour)

Accuracy for Mass Measurement: ±5% using NIST-traceable mass foil set

Data Averaging and Output

Real-time Mass Conc Average: 1 minute

Long-Term Averaging: 60 to 3,600 sec and 24-hour

Data Output Rate: every 1 second

Operating Range

The temperature of the sampled air may vary between -30 and 50 °C. The 5030i units must be weather protected within the range of 4 °C to 50 °C.

An optional Complete Outdoor Enclosure provides complete weather protection.

Non-condensing; <95% RH inside 5030i

Sample Flow

Volumetric flow control system uses a calibrated subsonic precision orifice and the measured ambient temperature and pressure to maintain constant volumetric flow rates.

Nominal Flow Rate: 16.67 L/min

Flow Precision ±2% of measured value

Flow Accuracy <5% of measured value

Data Storage

Internal data logging of user-specified variables; capacity of 190,000 records.

Filter Media

Sample Filter: Glass fiber filter type (width 40 mm; length: 17 m) Whatman, Inc.

Approximately 650 filter tape changes per roll.

Inlet Accessories

European or U.S. EPA PM10 Inlets

European or U.S. EPA PM2.5 Inlet Configurations

PM2.5 VSSC™

PM1.0 SCC

Tripod

Data Output and Input

iPort software to view and change system operation from PC

Outputs: Selectable Voltage, RS232/RS485, TCP/IP, 10 Status Relays, and Power Fail Indication (standard). 0-20 or 4-20 mA Isolated Current Output (optional)

Inputs: 16 Digital Inputs (standard), Eight 0 to 10 VDC Analog Inputs (optional) 8 User-Defined Analog Outputs (0 -1 or 0 -5 VDC)

Protocols: C-Link, MODBUS, Geystitech (Bayern-Hessen), ESM Protocol, streaming data, and NTP (Network Time Protocol) protocols. Simultaneous connections from different locations over Ethernet.

2 User-Defined Contact Closure Alarm Circuits

4 Averaged Analog Inputs (0–5 VDC) with user-defined conversion to engineering units

Data Storage

Maximum of 190,000 Concentration records with date, time, and flags

Up to 32 types of logged data parameters, increased parameters reduces number of records

Power Requirements

Model 5030i: 100-240 VAC, 50-60 Hz (to be specified upon order)

Pump: 115 VAC, 50-60 Hz, 4.25 A

Maximum Power: 805 Watts (115V); 880 Watts (220-240V)

Physical Dimensions

W: 16.75" (42.5 cm) x D: 23" (58.4 cm) x H: 8.62" (21.9 cm)

Weight: 40 lbs. (19 kg)

Optional/Accessories

6-foot extension tubes

Tripod

Outdoor Ambient Shelter with HVAC

Chapter 2 Installation

The following installation procedures for the Model 5030*i* describes packaging, lifting the instrument, unpacking the instrument, setup and installation, including the sample tube and pump, and attaching the analog and/or digital outputs to a recording device. The installation should always be followed by instrument calibration as described in the "Calibration" chapter of this manual.

This chapter provides the following recommendations and procedures for installing the instrument:

- "Packaging and Transport" on page 2-1
- "Lifting" on page 2-2
- "Unpacking and Inspection" on page 2-2
- "Acceptance Testing and Startup Procedures" on page 2-3
- "Setup" on page 2-10
- "Connecting External Devices" on page 2-17
- "Startup" on page 2-22
- "Data Content" on page 2-23
- "Shutdown" on page 2-23
- "Important Tips" on page 2-23

Packaging and **Transport**

The Model 5030*i* instrument, power cord, and operator manual are shipped in an ISTA 2A-certified packaging and all other items/accessories are shipped separately. The ISTA 2A-certified packaging is comprised of the instrument within an inner box which is secured within an outer box using foam end-caps and corner bracing. In this configuration, the packaging is ready for shipping by carrier domestically and internationally. The inner box that the instrument resides in is an ISTA 1A-certified packaging and is appropriate for transporting the instrument on local paved roads to the monitoring site. Precautions should be taken to secure this package from shifting during local transport.

Using the ISTA-2A packaging is strongly recommended for transporting the instrument over poor roads or on highways.

Lifting

When lifting the instrument, use a procedure appropriate to lifting a heavy object, such as bending at the knees while keeping your back straight and upright. Grasp the instrument at the bottom in the front and at the rear of the unit. Although one person may lift the unit, it is desirable to have two persons lifting, one by grasping the bottom in the front and the other by grasping the bottom in the rear.



Equipment Damage Do not attempt to lift the instrument by the cover or other external fittings. ▲

Unpacking and Inspection

If there is obvious damage to the shipping container when the instrument is received, notify the carrier immediately and hold for inspection. The carrier is responsible for any damage incurred during shipment.

Use the following procedure to unpack and inspect the instrument.

- 1. Remove the instrument from its shipping container(s) and set it on a table or bench that allows easy access to both the front and rear.
- 2. Remove the cover to expose the internal components.
- 3. Remove the packing material in the analyzer (Figure 2–1).

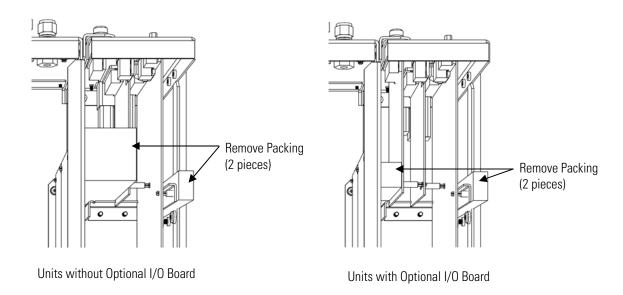


Figure 2–1. Remove the Packing Material

- 4. Check for possible damage during shipment.
- 5. Check that all connectors and circuit boards are firmly attached.
- 6. Re-install the cover.
- 7. Remove any protective plastic material from the case exterior.
- Remove the external pump from its shipping container and place next to the instrument.

Acceptance Testing and Startup **Procedures**

The Model 5030*i* has been bench tested and calibrated at the factory prior to shipping. The mass sensors, RH sensors, flowmeter temperature sensor, external ambient temperature sensor, barometric pressure, and volumetric flow rate have been calibrated to traceable standards. For a quick start, proceed immediately to the "Startup" procedures and skip the "Bench Acceptance Test".

To assure the best quality data, it is recommended that you perform an acceptance test. Furthermore, as part of a quality assurance program acceptance testing will be conducted prior to field installation. This is an excellent opportunity to compare the monitor to the primary and transfer standards utilized by the end-user within their specific monitoring

program. Furthermore, it is an opportunity to assure that the monitor is operating according to the manufacturer specifications.

After acceptance testing, a completed monitoring installation will require final volumetric flow rate verification.

Acceptance Test

Prior to installing the Model 5030i, you should perform the acceptance testing procedures. These tests are conducted to evaluate the out-of-box performance of the instrument, perform any necessary calibrations prior to final site installation, and familiarize the user with the menu structure.

Use the following procedure to perform the bench acceptance test.

Equipment Required:

Model 5030*i*

Power Cord

Ambient Temperature/RH Cable Assembly

Vacuum Pump Assembly

Flow Adapter Assembly

NIST-traceable Thermometer

NIST-traceable Hygrometer

NIST-traceable Barometer

NIST-traceable Manometer(s)

NIST-traceable Volumetric Flow Transfer Standard

(Do not use the heated sample tube assembly at this point.)

1. After unpacking the instrument place the Model 5030*i* and accessories onto a table or bench located within a stable indoor environment. Remove the side-panel cover and inspect the filter tape. Leave cover OFF until after acceptance testing has been completed.

Note Prior to continuing with acceptance testing, the instrumentation and accessories should have sufficient time to equilibrate to room temperature due to temperature variations during shipping and/or storage. ▲

2. Following a sufficient equilibration period, connect the power cord to the rear of the instrument and to a properly grounded power supply.


Note If the Model 5030*i* turns ON at this point, set the power switch to the OFF position and then proceed.

- 3. Connect the pump intake to the vacuum port mounted on the rear panel of the instrument using the 3/8-inch vacuum tubing assembly with the plastic T-fitting. Connect the pump exhaust tube to Port #2 on the 3-way solenoid on the rear panel.
- 4. Connect Port #1 of the rear panel 3-way solenoid to 3/8-inch compression fitting on the 5/8-inch x 3/8-inch reducing T-fitting using the 3/8-inch vacuum tubing assembly with HEPA filter.
- 5. Connect the vacuum pump power cord to the white circular grounded power supply, labeled PUMP, on the rear panel of the instrument.
- 6. Connect the 4-pin Temperature/RH cable to the 4-pin connector labeled RH/TEMP on the rear of the monitor.
- 7. Be sure that the pressure sensor calibration port toggle switches on the rear panel are pushed outward and away from the barbed +/- Delta P.
- 8. Set monitor power switch to the ON position.

During startup, the iSeries splash screen will be shown followed by a mechanical filter tape change and a cycling of the pump power.

To continue with the acceptance testing:

From the Main Menu select Diagnostics > **RH/Temperature**.

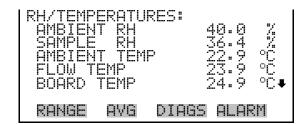


The RH/Temperatures screen (read only) displays the current relative humidity in percent and the temperature readings in °C. The board temperature is the air temperature measured by a sensor located on the measurement interface board.

Installation

Acceptance Testing and Startup Procedures

Press (•) to return to the Diagnostics menu, and choose Pressure/Vacuum.

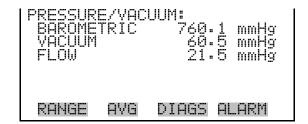

The Pressure/Vacuum screen (read only) displays the barometric, vacuum, and flow pressure readings in mmHg. The pressure is measured by a pressure transducer. The vacuum is the amount of vacuum under the filter tape. The flow pressure is the pressure differential across the orifice.

Table 2–1. Pressure Units Conversion

Pressure Conversions
mmHg = atm x 0.75006
mmHg = inHg x 25.4
mmHg = hPa x 0.75006

Assuming adequate time has passed for thermal equilibration (approximately 1 hour), and the vacuum pump has been drawing room air into the instrument, compare the ambient temperature, sample temperature, and flow temperature to your NIST traceable thermometer placed at the inlet tube (see Figure 2–2).

Note Please be sure that the pump exhaust or any other heat source is not influencing the sensor reading of the temperature/RH cable assembly. Please be sure the side panel has been removed for at least 60 minutes. \triangle

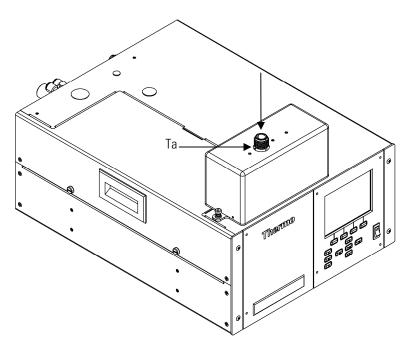


Figure 2–2. Model 5030*i* Sampling Room Air Under Stable Conditions

One-Point Temperature Verification

Record the temperature sensor readings from the Model 5030i and compare to your NIST-traceable thermometer. Each of these measurements should be within ±2 °C tolerance of your NIST-traceable thermometer. Within this tolerance, the temperature sensors have passed the acceptance test.

If the sensors are slightly out of tolerance (±3 °C), the acceptance test should be classified as marginal. If the sensor performance is outside this range, please perform a temperature sensor calibration.

For more information about the temperature sensor calibration, see the "Calibration" chapter.

One-Point RH Sensor Verification

Record the ambient RH sensor and nephelometer RH sensor readings from the Model 5030i and compare to your NIST-traceable Hygrometer. The Model 5030i RH sensors should compare within ±2% RH tolerance of your NIST-traceable hygrometer. If the RH sensor performance is within this tolerance, the acceptance test has passed.

Note The ambient temperature verification should be completed prior to performing the RH-sensor verification due to a thermal compensation applied to the RH-sensor. Furthermore, try to avoid RH comparisons <30% RH and >80% RH. ▲

If the RH sensors are slightly out of tolerance, ±5% RH, the acceptance test should be classified as marginal. If the sensor performance is outside this range, please perform a RH-sensor calibration.

For more information about the RH sensor calibration, see the "Calibration" chapter.

It is recommended that the NIST-traceable hygrometer should also compare well with the RH-measurement used within a gravimetric laboratory that is part of a compliance program.

One-Point Barometric Pressure Verification

Record the Model 5030*i* barometric pressure sensor reading. This value is in units of mmHg. If necessary, using the pressure unit conversion (Table 2–1) to convert your NIST-traceable measurement to units of mmHg for an appropriate comparison. The Model 5030*i* barometric sensor should compare within ±10.0 mmHg tolerance of your NIST-traceable barometer. If the Model 5030*i* sensor performance is within this tolerance, the acceptance test has passed.

If the sensor is slightly out of tolerance, ±12 mmHg, the acceptance test should be classified as marginal. If the sensor performance is outside this range, please perform a sensor calibration.

For more information about the barometric pressure sensor calibration, see the "Calibration" chapter.

One-Point Volumetric Flow Rate Verification

The flow rate of the Model 5030*i* should be verified during this acceptance test. Prior to this test it is important for the previous temperature and pressure acceptance tests to be completed. Should the ambient temperature, flow temperature or barametric sensors require calibration, this should be done prior to the flow rate verification.

Press **l** to return to the Diagnostics menu, and choose **Flows**.



The Flow screen (read only) displays the volumetric flow rate in liters per minute. The flow is measured by the internal pressure board sensors.

Attach the small sample tube adapter to the Model 5030*i* inlet. Depending upon your NIST-traceable volumetric flow transfer standard (FTS), you may either attach your FTS now or add the flow audit adapter to accommodate any flexible tubing that your FTS may require. Allow 60 seconds to stabilize the flow after connecting.

Record the Model 5030i Volumetric Flow Rate as Qm and the FTS flow rate as Qi, assuring that both are being recorded in units of actual liters per minute. Take three readings each from Qm and Qi and average the respective values. Use the following equation to calculate the percent difference:

$$\%D = 100 \times \frac{Qm - Qi}{Qi}$$

If %D is within ±4%, then the Model 5030i volumetric flow rate acceptance test has passed. If the Model 5030i volumetric flow rate is slightly out of tolerance, ±5%, the acceptance test should be classified as marginal. If the volumetric flow rate performance is outside this range, please perform a volumetric flow calibration.

For more information about the volumetric flow rate calibration, see the "Calibration" chapter.

Leak Check Procedure

The leak check of the 5030*i* SHARP is conducted by first measuring the volumetric flow rate at the inlet adapter. Next, place the factory-supplied leak check adapter on top of the inlet adapter and then install the flowmeter on top of the leak check adapter. Compare the volumetric flow rate of the 5030i to the flow meter and calculate the difference. If the difference is less than 0.80 L/min (80 ml/min) then the leak check passes. If it is greater than 80 ml/min, check for leaks in the system by checking the various fittings upstream of the measurement head. If the source of the leak cannot be found, the instrument requires service by a trained technician.

Nephelometer Source Verification

The nephelometer light source has been factory set to a current of approximately 65 milliamps (mA). Should this valve be outside a range of 60–70 mA, the source current should be adjusted in the calibration menu.

Nephelometer Zero Check

The 5030*i* has an auto-zero function and it is common during setup to potentially disturb the zero. To evaluate the zero of the 5030i, place a HEPA filter at the inlet for approximately five minutes, or until the concentration has stabilized. The nephelometer concentration should be ±1 µg/m³. If this is not the case, the HEPA filter should be removed, and a

nephelometer zero should be conducted. After re-zeroing the nephelometer, repeat the zero check steps above.

Setup

Setting up this monitor includes siting the monitor per local government agency requirements, creating a waterproof inlet system installation with vertical support, connecting the inlet system to the instrument through the dynamic heater system, connecting vacuum lines, establishing datalogging setting, and making the power connections.

Inlet System

When siting the inlet system, it is best to first establish the instrument location and height within the air monitoring station. From whatever chosen surface the instrument is to rest on (rack or table top), add approximately 24 inches to that height to allow for overall height of the 5030*i* monitor.

Next allow approximately 40 inches to attach the heated sample tube to the top of the 5030i via 5/8-inch OD tubing unions that use Teflon ferrules.

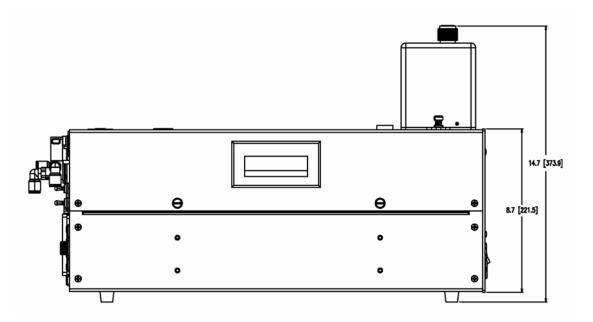


Figure 2–3. Model 5030*i* Side View—inches [millimeters]

It is also important to locate the roof flange installation in vertical alignment with the inlet of the instrument. By reviewing the top view drawing of the instrument (Figure 2–3), the roof flange must be centered in direct alignment with the 5/8-inch OD tube entering the 5030*i* instrument.

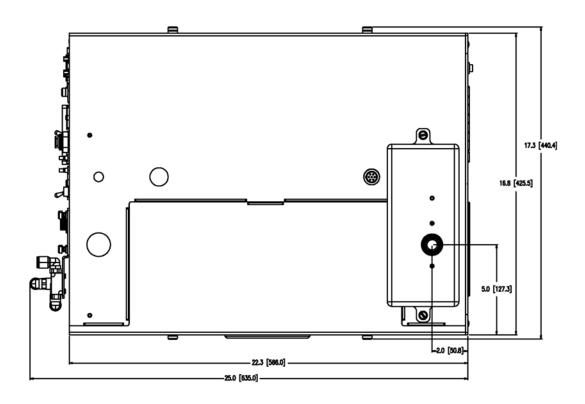


Figure 2–4. Model 5030*i* Top View—inches [millimeters]

Heater

Once the x-y coordinates of the instrument and roof flange system are established and a waterproof flange system has been installed, perform a dry run by attaching the heated sample tube on top of the 5030*i* base. If the heated tube protrudes through the roof flange, either the instrument should be lowered or an elongated PVC sleeve and cap system should cover the heater while maintaining a waterproof seal. However, for the remainder of this description, it is assumed the heater will fit within the ceiling height of the air monitoring station.

Based on the vertical height requirements, use additional 5/8-inch OD stainless tubing and connectors to make up the difference between the desired inlet height and the top of the heater.

Additional routing is necessary for the ambient T/RH sensor assembly.

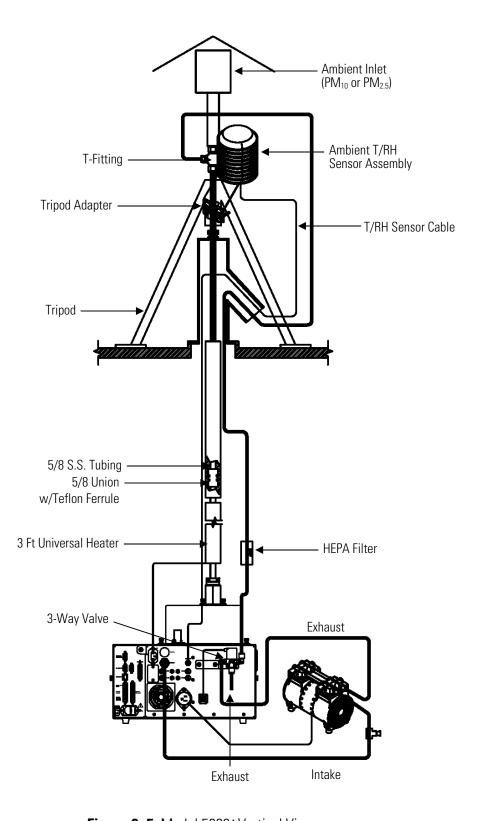


Figure 2–5. Model 5030i Vertical View

Sample Tube Extension Lengths

There is one standard length of heated sample tube at one meter. Sample tube extensions are used for added height.

Rack Mounting Option

One limiting factor when siting the Model 5030i is placement within a standard 19-inch rack mounting. Future planning should be made to reserve the topmost rack mounting position available due to the vertical positioning of the sample tube directly from the roof into the top of the Model 5030i. In addition, modification to the rack cabinet to accommodate the vertical tubing connection also needs to be considered prior to installation. For more information, see Chapter 9 "Optional Equipment".

Review the following installation steps prior to field installation.

Monitor Installation

Once all height requirements are established, the following steps are usually taken to complete the installation.

- 1. Remove cover to the 5030*i* base instrument and inspect for proper filter tape installation.
- 2. Place 5030*i* unit in place of intended operation.
- 3. Attach the insulated heater tube assembly to the 5/8-inch OD tube on top of the 5030*i* (Figure 2–6).

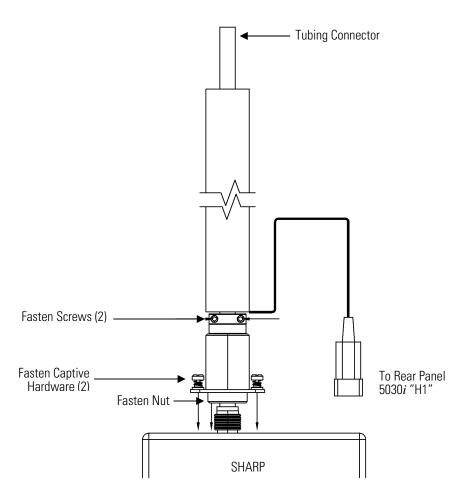


Figure 2–6. Heater Assembly

- 4. Attach a second tubing connector to the top of the heater tube.
- 5. Carefully push additional 5/8-inch OD stainless steel tubing through the roof flange and then drop into the tubing union on top of the heater.
- 6. Any exposed 5/8-inch OD stainless steel tubing should be insulated with additional pipe insulation inside the shelter.
- 7. Sleeve any additional water tight capping over the tubing that now extends above the roof line.
- 8. Sleeve the white Delrin plastic tripod adapter over the 5/8-inch OD tubing to an appropriate height to accommodate the tripod and

- ambient T/RH sensor assembly. Tighten this adapter against the stainless steel tubing using the two setscrews.
- 9. Sleeve the tripod over the tripod adapter to a proper height and tighten. If using a tripod, using the adjustable legs of the tripod, plumb the inlet tube assembly.
- 10. Attach the white ambient T/RH sensor radiation shield assembly onto a portion of the exposed tripod adapter.
- 11. Attach and tighten the 5/8-inch to 3/8-inch reducing T-fitting to the 5/8-inch stainless steel tubing.
- 12. Place the PM₁₀ or PM_{2.5} inlet into the 5/8-inch stainless T-fitting.
- 13. Feed one end of the black 25-foot T/RH cable trough he roof flange assembly and connect to the bottom of the ambient T/RH assembly.
- 14. Connect the other end of the T/RH cable to the back of the instrument (RH Temp).
- 15. Attach the heater power connector to HEATER 1.
- 16. Using the available 3/8-inch green vacuum tubing, connect the intake of the pump to the vacuum fitting at the rear panel of the 5030*i*.
- 17. Plug the pump power chord into the AC PUMP receptacle at the rear of the 5030*i* instrument.

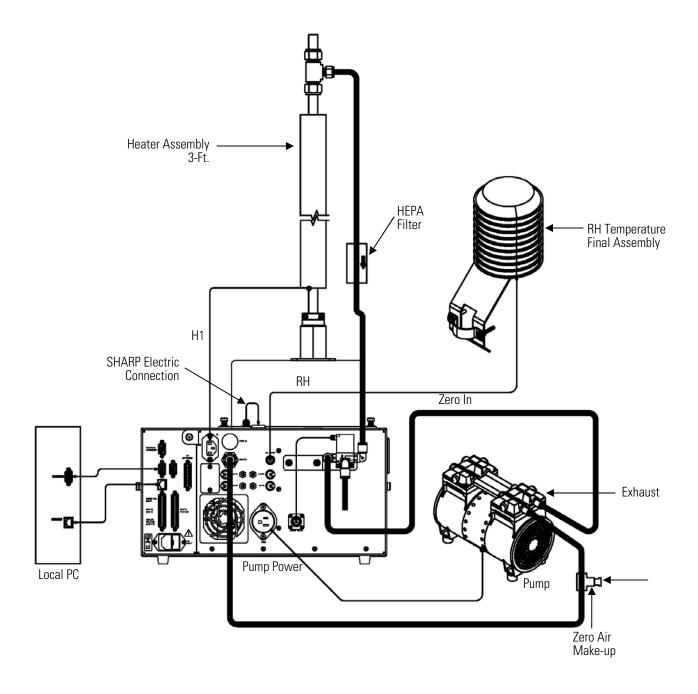


Figure 2–7. Rear Panel Plumbing Schematic

Connecting External Devices

Several components are available for connecting external devices to iSeries instruments.

These connection options include:

- Individual terminal board PCB assemblies (standard)
- Terminal block and cable kits (optional)
- Individual cables (optional)

For detailed information on the optional connection components, refer to the "Optional Equipment" chapter. For associated part numbers, refer to "External Device Connection Components" on page 7-8.

Terminal Board PCB **Assemblies**

The terminal board PCB assemblies are circuit boards with a D-Sub connector on one side and a series of screw terminals on the other side. These assemblies provide a convenient mechanism for connecting wires from a data system to the analyzer's I/O connectors.


The following terminal board PCB assemblies are available for *i*Series instruments:

- I/O terminal board PCB assembly, 37 pin (standard)
- D/O terminal board PCB assembly, 37 pin (standard)
- 25-pin terminal board PCB assembly, (included with optional I/O expansion board)

I/O Terminal Board

Figure 2–8 shows the recommended method for attaching the cable (customer supplied) to the terminal board using the included tie-down and spacer. Table 2–2 identifies the connector pins and associated signals.

Note Not all of the I/O available in the instrument is brought out on the supplied terminal board. If more I/O is desired, an alternative means of connection is required. See optional "Terminal Block and Cable Kits". ▲

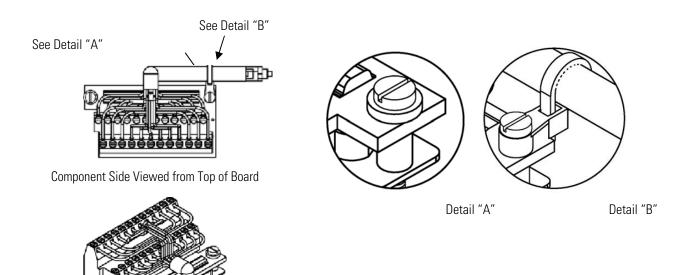

Assembled Connector

Figure 2–8. I/O Terminal Board Views

Table 2–2. I/O Terminal Board Pin Descriptions

Screw	Signal Description	Screw	Signal Description
1	Analog1	13	Power_Fail_NC
2	Analog ground	14	Power_Fail_COM
3	Analog2	15	Power_Fail_NO
4	Analog ground	16	TTL_Input1
5	Analog3	17	TTL_Input2
6	Analog ground	18	TTL_Input3
7	Analog4	19	TTL_Input4
8	Analog ground	20	Digital ground
9	Analog5	21	TTL_Input5
10	Analog ground	22	TTL_Input6
11	Analog6	23	TTL_Input7
12	Analog ground	24	Digital ground

2-18 Model 5030*i* SHARP Instruction Manual Thermo Fisher Scientific

The analog outputs are arranged on the rear panel connector as shown in Figure 2–9. See Table 2–3 for channels and pin connections.

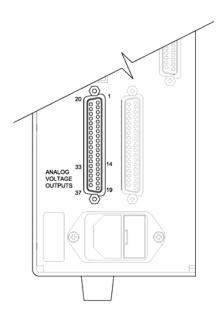


Figure 2-9. Pin-Out of Rear Panel Connector

Table 2–3. Default Analog Outputs

Channel	Connector Pin	I/O Terminal Pin	Description
1	14	1	PM
2	33	3	AVG PM
3	15	5	NEPH
4	34	7	AVG NEPH
5	17	9	SHARP
6	36	11	AVG SHARP
Ground	16, 18, 19, 35, 37	2, 4, 6, 8, 10, 12	Signal Ground

Note All channels are user definable. If any customization has been made to the analog output configuration, the default selections may not apply. \blacktriangle

D/O Terminal Board

Figure 2–10 shows the recommended method for attaching the cable (customer supplied) to the terminal board using the included tie-down and spacer. Table 2–4 identifies the connector pins and associated signals.

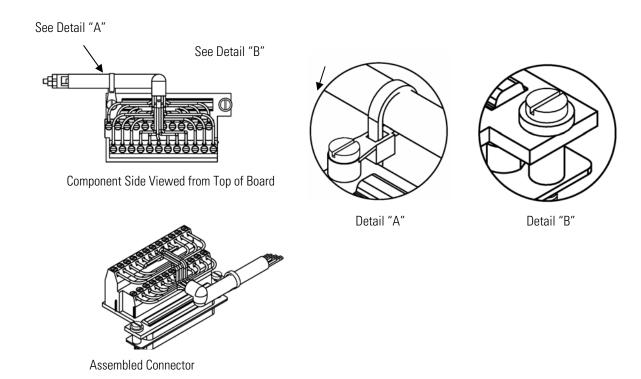


Figure 2–10. D/O Terminal Board Views

Table 2-4. D/O Terminal Board Pin Descriptions


Screw	Signal Description	Screw	Signal Description
1	Relay1_ContactA	13	Relay7_ContactA
2	Relay1_ContactB	14	Relay7_ContactB
3	Relay2_ContactA	15	Relay8_ContactA
4	Relay2_ContactB	16	Relay8_ContactB
5	Relay3_ContactA	17	Relay9_ContactA
6	Relay3_ContactB	18	Relay9_ContactB
7	Relay4_ContactA	19	Relay10_ContactA
8	Relay4_ContactB	20	Relay10_ContactB
9	Relay5_ContactA	21	(not used)
10	Relay5_ContactB	22	+24V
11	Relay6_ContactA	23	(not used)
12	Relay6_ContactB	24	+24V


25-Pin Terminal Board

The 25-pin terminal board is included with the optional I/O Expansion Board. Figure 2-11 shows the recommended method for attaching the cable (customer supplied) to the terminal board using the included tie-

Detail "I

down and spacer. Table 2-5 identifies the connector pins and associated signals.

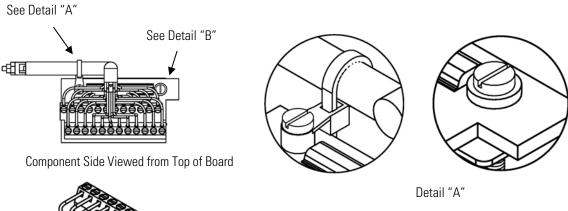

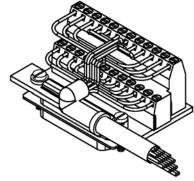

Assembled Connector

Figure 2–11. 25-Pin Terminal Board Views

Table 2–5. 25-Pin Terminal Board Pin Descriptions

Screw	Signal Description	Screw	Signal Description
1	IOut1	13	Analog_In1
2	Isolated ground	14	Analog_In2
3	IOut2	15	Analog_In3
4	Isolated ground	16	Ground
5	IOut3	17	Analog_In4
6	Isolated ground	18	Analog_In5
7	IOut4	19	Analog_In6
8	Isolated ground	20	Ground
9	IOut5	21	Analog_In7
10	Isolated ground	22	Analog_In8
11	IOut6	23	Ground
12	Isolated ground	24	Ground

Power Connections

Before the power is connected, be sure that the front panel power switch is OFF and be sure to verify that the local power matches the label on the back of the analyzer.



WARNING The Model 5030*i* is supplied with a three-wire grounded power cord. Under no circumstances should this grounding system be defeated.

Startup

Use the following procedure when starting the instrument.

- 1. Turn the power ON and allow 12 hours for the beta detector to stabilize.
- 2. Although the instrument has been calibrated at the factory, if the instrument has been equilibrated, temperature sensors may be checked. (Assure that the heater is off and that the instrument is sampling room air at a constant temperature for at least 1-2 hours with the cover removed.)
- 3. After a 12-hour stabilization, the following steps should be performed:
 - a. From the Main Menu, choose **Instrument Controls**. Under **Instrument Controls:**
 - i. Flow should be set to 16.67 LPM
 - ii. Heater Control should be set to RH with a RH Threshold of 50–58%. For lower RH threshold settings, please contact technical support.
 - iii. Filter Tape mass limit should be set to 1,500 μg
 - iv. Filter Tape–Next Time; this should have a start date
 - v. Filter Tape Period should be set to 8 hours for PM_{2.5} and PM₁₀. U.S. EPA applications may adjust this value as high as 24 hours for PM₁₀ only. However, 8 hours is recommended for consistent performance.
 - vi. Volumetric Conditions should be set to ACT for both Temp and Press
 - vii. Lrecs and Srecs should be chosen for datalogging and all parameters should be selected in the order they appear from "Concentrations" to "Other Measurements". Default Lrecs are

set to 60 minute logging with 30% memory and Srecs are 5minute logging with 70% memory allocated. If there are any changes, be sure to Commit Content.

b. From the Main Menu, choose Service. Under Service:

Note If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step. ▲

- i. Check/Calibrate Ambient Temperature, Nephelometer Temperature, and Flow Temperature
- ii. Check/Calibrate Nephelometer Ambient RH
- iii. Check Calibrate Barometric Pressure Span
- iv. Check/Calibrate Flow Calibration
- v. Perform a Beta Auto Detector Calibration (30 minutes)
- vi. Perform a Mass Foil Calibration (factory calibrated)
- vii. Mass Coefficients are set at the factory.
- viii. Perform a Nephelometer Zero Calibration (5 minutes)

Data Content

Please use *i*Port to access data download from the instrument.

Shutdown

Use the following procedure when shutting down the instrument.

- 1. Turn the power OFF.
- 2. Cover instrument ports when not in use.

Important Tips DO NOT

- Do not pressurize the monitor.
- Do not allow liquids to enter the sample port.
- Do not expose the instrument to excessive vibration or magnetic interference.
- Do not remove/adjust the beta attenuation bench of the 5030i.
- Do not remove the C-14 radioactive source at any time.

Installation

Important Tips

DO

- Operate the instrument in a climate-controlled environment (4–50 °C).
- Set DHCP to ON when changing the IP address.

Chapter 3 Operation

This chapter describes the front panel display screens, front panel pushbuttons, and menu-driven firmware. For details, see the following topics:

- "Display" on page 3-1
- "Pushbuttons" on page 3-2
- "Firmware Overview" on page 3-4
- "Range Menu" on page 3-10
- "Integration Time" on page 3-13
- "24-Hour Average" on page 3-14
- "Calibration Factors Menu" on page 3-14
- "Instrument Controls Menu" on page 3-18
- "Diagnostics Menu" on page 3-57
- "Alarms Menu" on page 3-66
- "Service Menu" on page 3-85
- "Password Menu" on page 3-103

Display

The 320 x 240 pixels graphics liquid-crystal display (LCD) shows the sample concentrations, instrument parameters, instrument controls, help, and error messages. Some menus contain more items than can be displayed at one time. For these menus, use \(\bullet \) and \(\bullet \) to move the cursor up and down to each item.

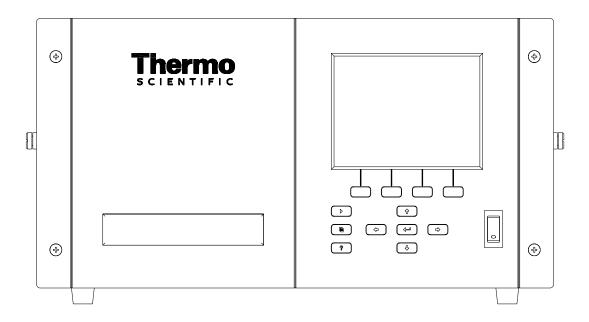


Figure 3–1. Front Panel Display



CAUTION If the LCD panel breaks, do not let the liquid crystal contact your skin or clothes. If the liquid crystal contacts your skin or clothes, wash it off immediately using soap and water. **\(\Lambda \)**

Pushbuttons

The Pushbuttons allow the user to traverse the various screens/menus.

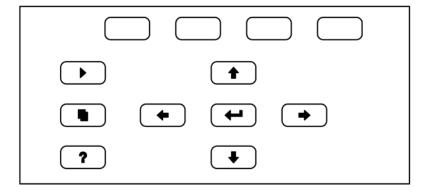


Figure 3–2. Front Panel Pushbuttons

Table 3–1 lists the front panel pushbuttons and their functions.

Table 3–1. Front Panel Pushbuttons

Key Name	Function
= Soft Keys	The (soft keys) are used to provide shortcuts that allow the user to jump to user-selectable menu screens. For more information on processing soft keys, see "Soft Keys" below.
► = Run	The is used to display the Run screen. The Run screen normally displays the current SHARP concentrations, but also has additional Run screens for ambient conditions, sample conditions, and mass sensor data. Press to scroll through the different Run screens.
■ = Menu	The is used to display the Main Menu when in the Run screen, or back up one level in the menu system. For more information about the Main Menu, see "Main Menu" later in this chapter.
? = Help	The is context-sensitive, that is, it provides additional information about the screen that is being displayed. Press for a brief explanation about the current screen or menu. Help messages are displayed using lower case letters to easily distinguish them from the operating screens. Press to return to the Run screen, or any other key to exit a help screen.
◆ = Up, Down	The four arrow pushbuttons (, , , , and) move the cursor up, down, left, and right or change values and states in specific screens.
= Enter	The is used to select a menu item, accept/set/save a change, and/or toggle on/off functions.

Soft Keys

The soft keys are multi-functional keys that use part of the display to identify their function. The function of the soft keys is to provide a shortcut to the most often used menus and screens. They are located directly underneath the display, and user-defined labels in the lower part of the display indicate the function of each key at that time.

To change a soft key, place the menu cursor ">" on the item of the selected menu or screen you wish to set. Press () followed by the selected soft key within 1 second of pressing the right-arrow key. The "edit soft key prompt" will be displayed for configuration of the new label.

Note Not all menu items may be assigned to soft keys. If a particular menu or screen item cannot be assigned, the key assignment screen will not come up upon entering right-arrow-soft key combinations. All items under the Service menu (including the menu itself) cannot be assigned soft keys. ▲



Programmable Soft Key Labels

Alphanumeric Entry Screen

The alphanumeric entry screen is used to enter strings consisting of letters, numbers, and other characters. The cursor may be positioned within the entry line using the (•) and (•) keys. If a character is entered over an existing character, that character will be overwritten. Use the [•] and • keys to switch between the entry line and the keyboard as well as to move within the keyboard. To select a character to add to the string, use the cursor keys to position the cursor over the desired character, and then press the [-] key to add that character to the entry line.

On the right side of the keyboard are special functions. BKSP is used to move the cursor in the entry line one place to the left, deleting the character that was to the left of the cursor and moving any character at or to the right of the cursor one place to the left. PAGE is used to change the keyboard character page. For the English language, this switches between upper and lower-case alphabetic characters. SAVE stores the string from the entry line into the parameter. Alternately, if the active cursor is moved to the entry line, [-] may be pressed to store the string from the entry line into the parameter.



Firmware **Overview**

The Model 5030*i* utilizes the menu-driven firmware as illustrated by the flowchart in Figure 3–3. The Power-Up screen, shown at the top of the flowchart, is displayed each time the instrument is turned on. This screen is displayed while the instrument is warming up and performing self-checks. After the warm-up period, the Run screen is automatically displayed. The Run screen normally displays the current SHARP concentrations, but also has additional Run screens for ambient conditions, sample conditions, and mass sensor data. From the Run screen, the Main Menu can be displayed by pressing [•]. The Main Menu contains a list of submenus. Each

submenu contains related instrument settings. This chapter describes each submenu and screen in detail. Refer to the appropriate sections for more information.


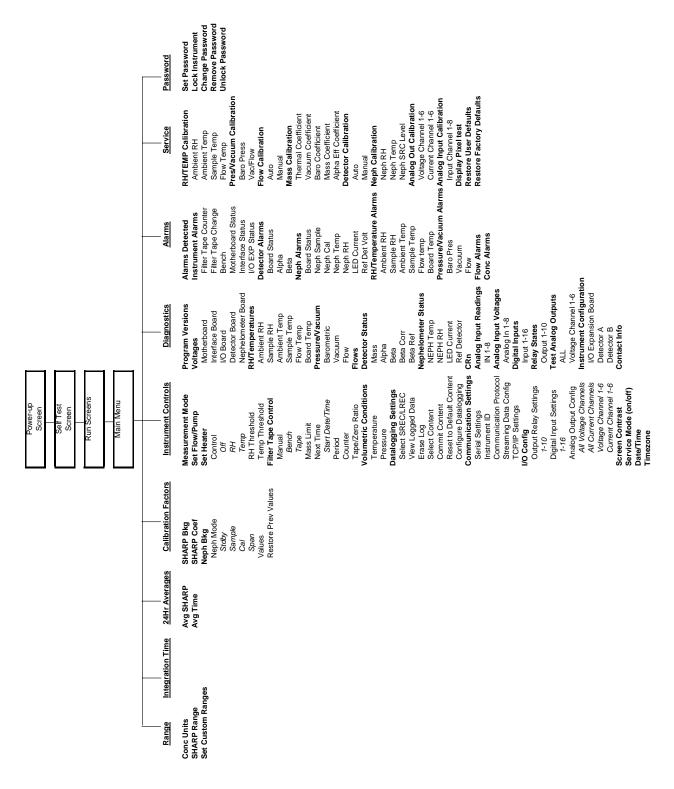


Figure 3–3. Flowchart of Menu-Driven Firmware

Power-Up Screen


The Power-Up screen is displayed when power is applied to the Model 5030i. This screen is displayed while the internal components are warming up and diagnostic checks are being performed.

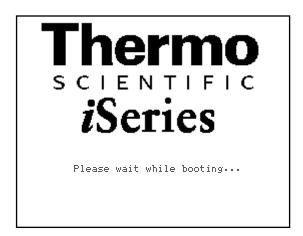


Run Screens

The Run screens display the SHARP concentration, ambient conditions, sample conditions, and mass sensor data. The status bar displays the time (24-hour format), the password (lock) icon, service (wrench) icon, alarm (bell) icon, and optional zero/span sample solenoid valve status, if installed.

Status Bar Icons

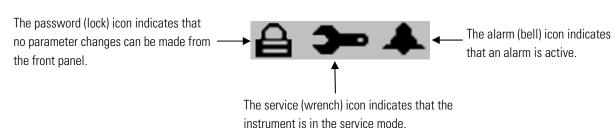


The Run screen normally displays the current SHARP concentrations, but also has additional Run screens for ambient conditions, sample conditions, and mass sensor data. Pressing () and () will scroll through the different Run screens.

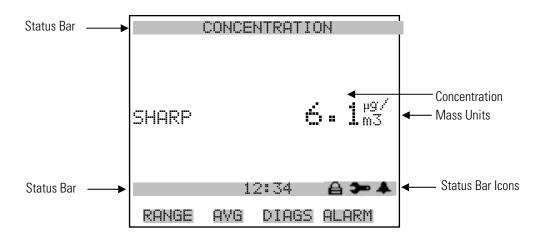


Ambient Conditions Run Screen

The Ambient Conditions Run screen displays the real-time volumetric flow rate at the inlet, the ambient temperature, the barometric pressure, and the ambient relative humidity.

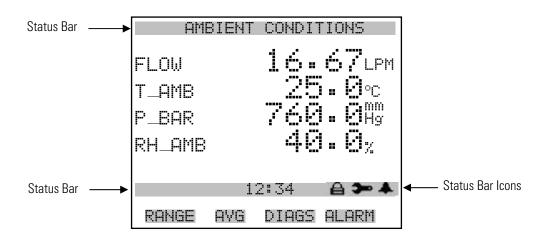


Sample Conditions Run Screen

The Ambient Conditions Run screen displays the sample filter temperature, the sample filter relative humidity, the differential pressure across the orifice, and the vacuum under the filter tape.

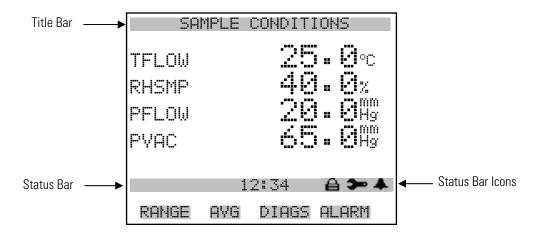


Mass Sensor Data Run Screen

The Mass Sensor Data Run screen displays the real-time beta counts during attenuation and the initial beta counts from a fresh filter spot.

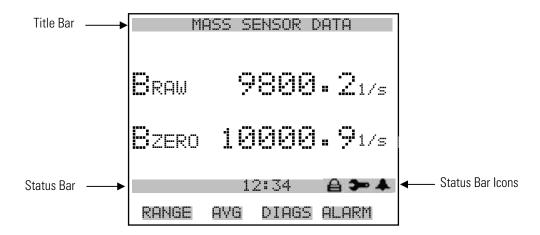

Hybrid Data Run Screen


The Hybrid Data Run screen displays the mass concentration values from the rea-time beta attenuation method (PM) and the real-time nephelometer method (NEPH). These values are entered into the dynamic digital filtering algorithm to calibrate the nephelometer in real-time.

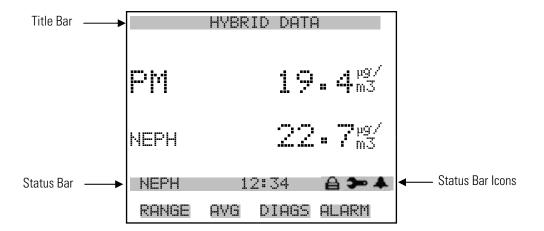

Main Menu

The Main Menu contains a number of submenus. Instrument parameters and settings can be read and modified within the submenus according to their function. The concentration appears above the Main Menu and submenus in every screen. The Service menu is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" later in this chapter.

- Use and to move the cursor up and down.
- Press (to make a selection.
- Press **t** to return to the Main Menu or **t** to return to the Run screen.

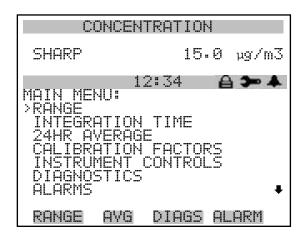

SERVICE **PASSWORD**

Range Menu

The Range menu allows the operator to select the concentration units, PM standard ranges, and to set the custom ranges.

In the Main Menu, choose Range




Concentration Units

The Concentration Units screen defines how the particles concentration readings are expressed. Concentration units of micrograms per cubic meter (μg/m³) and milligrams per cubic meter (mg/m³) are available.

When switching the selected units, the instrument's analog ranges all default to the highest range. For example, when switching from mg/m³ to μg/m³, the ranges default to 10000 μg/m³. Therefore, whenever you change units, you should also check the range settings.

Note If the units change, the instrument should be re-calibrated. A display warning will appear.

In the Main Menu, choose Range > **Conc Units**.

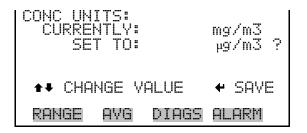

SHARP Range

The SHARP Range screen defines the concentration range of the analog outputs. For example, a SHARP range of 0–100 µg/m³ sets the analog output to concentrations between 0 and 100 μg/m³ by default.

The display shows the current SHARP range. The next line of the display is used to change the range.

Table 3–2 lists the standard ranges.

In the Main Menu, choose Range > **SHARP Range**.

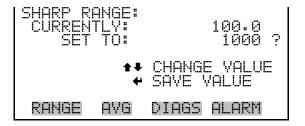


Table 3–2. Standard Ranges

mg/m³	μ g/m ³
0.1	100
1.0	1000
2.0	2000
3.0	3000
5.0	5000
10.00	10000
C1	C1
C2	C2
C3	C3

C1, C2, and C3 are custom ranges. For more information about custom ranges, see "Set Custom Ranges" below.

The analog outputs are arranged on the rear panel connector as shown in Figure 3–4. See Table 3–3 for channels and pin connections.

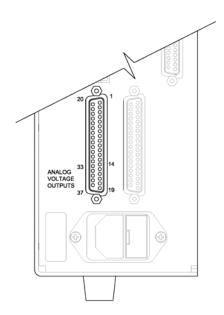


Figure 3-4. Pin-Out of Rear Panel Connector

Table 3–3. Default Analog Outputs


Channel	Connector Pin	I/O Terminal Pin	Description
1	14	1	PM
2	33	3	Neph
3	15	5	Flow
4	34	7	Ambient Temperature
5	17	9	Flow Temperature
6	36	11	Ambient Relative Humidity
Ground	16, 18, 19, 35, 37	2, 4, 6, 8, 10, 12	Signal Ground

Note All channels are user definable. If any customization has been made to the analog output configuration, the default selections may not apply. \blacktriangle

Set Custom Ranges

The Set Custom Ranges menu lists three custom ranges, which are userdefined. In the mg/m³ mode, any value between 0.1 mg/m³ and 10.00 mg/m³ can be specified as a range. In the µg/m³ mode, any value between $100 \mu g/m^3$ and $10000 \mu g/m^3$ can be specified as a range.

In the Main Menu, choose Range > **Set Custom Ranges**.

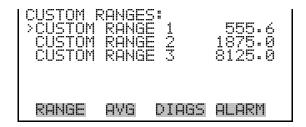

Custom Ranges

The Custom Ranges screen is used to define the custom ranges.

The display shows the current custom range. The next line of the display is used to set the range. For more information about selecting ranges, see "SHARP Range" above.

In the Main Menu, choose Range > Set Custom Ranges > Custom **Range 1, 2, or 3**.

```
HANGE VALUE
             DIAGS ALARM
RANGE
```

Integration Time

The Integration Time screen allows the user to adjust the compounded averaging of the beta attenuation mass and concentration. The default value should be set to 20 minutes and may be adjusted between 15–60 minutes. The display shows the current integration time is set to 15. The next line of the display is used to change the integration time.


In the Main Menu, choose **Integration Time**.



24-Hour Average

The 24-Hour Average screen defines a start time during which concentration measurement is averaged over a daily 24-hours period. The average concentration of the primary readings are calculated for that time period and averaged out. A new 24-hour average concentration is displayed once per day. The display shows the current 24-hour average SHARP concentration. The next line of the display is used to change the 24-hour averaging time.

In the Main Menu, choose **24HR Averages**.

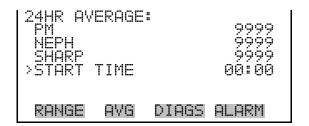

24-Hour Average **Start Time**

The 24-Hour Average Start Time screen allows the user to adjust the 24hour averaging start time.

In the Main Menu, choose 24HR Averages > **Avg Time**.




Calibration Factors Menu

Calibration factors are determined during automatic and manual calibration and are used to correct the concentration readings. The Calibration Factors menu displays the calibration factors as shown below. The instrument can also be calibrated manually using this menu. For more information about calibration, see Chapter 4, "Calibration".

The calibration factors for the SHARP BKG (offset) and SHARP COEF (slope) are set to 0.0 and 1.0 by default. Should regional settings require an adjustment to these values that DO NOT compromise regulatory approvals for this instrument, those values can be adjusted at this point.

In the Main Menu, choose **Calibration Factors**.

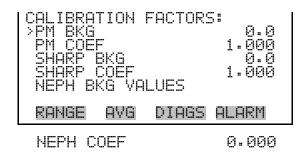

PM Background

The PM Background screen allows the user to manually adjust the PM Intercept. The PM concentration based on the SET BKG TO is displayed to facilitate the setting. The PM concentration displayed in the Run portion of the screen is NOT affected by the SET BKG until the value is saved.


In the Main Menu, choose Calibration Factors > **PM Bkg**.



PM Coefficient

The PM Coefficient screen allows the user to manually adjust the PM coefficient. The PM concentration based on the SET COEF TO is displayed to facilitate setting. The PM concentration displayed in the Run portion of the screen is NOT affected by the SET COEF until the value is saved.

In the Main Menu, choose Calibration Factors > PM Coef.

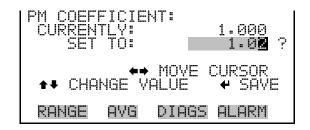

SHARP Background

The SHARP Background screen allows the user to manually adjust the SHARP Intercept. The SHARP concentration based on the SET BKG TO is displayed to facilitate the setting. The SHARP concentration displayed in the Run portion of the screen is NOT affected by the SET BKG until the value is saved.


In the Main Menu, choose Calibration Factors > **SHARP Bkg**.



SHARP Coefficient

The SHARP Coefficient screen allows the user to manually adjust the SHARP coefficient. The SHARP concentration based on the SET COEF TO is displayed to facilitate setting. The SHARP concentration displayed in the Run portion of the screen is NOT affected by the SET COEF until the value is saved.

In the Main Menu, choose Calibration Factors > SHARP Coef.

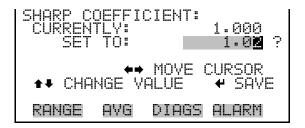

Values

Nephelometer Background The Nephelometer Backgrounds are determined during automatic and manual calibration and are used to maintain a stable zero. The nephelometer background menu is shown below. The instrument can also be calibrated manually using this menu. For more information about calibration, see Chapter 4, "Calibration".

In the Main Menu, choose Calibration Factors > Neph Bkg Values.

```
NEPHELOMETER BKG:
NEPH MODE
   STORE PREV VALUES
        AVG
              DIAGS
```

Nephelometer Mode

The Nephelometer Mode screen allows the user to place the nephelometer into one of three modes. Available modes are Sample, Zero, and Stdby. The sample mode begins photometric detection. The zero mode begins a zeroing process that will begin with a filter tape change and the standby mode (Stdby) mode will stall any measurement by the nephelometer.

In the Main Menu, choose Calibration Factors > Neph Bkg > **Neph** Mode.



Values

The Values screen displays the optional background for each range of the nephelometer. These values can be control-charted by the user to help evaluate any optional drift.


In the Main Menu, choose Calibration Factors > Neph Bkg > Values.

```
2345
RANGE
         AVG
               DIAGS ALARM
```

Restore Previous Values

The Restore Previous Values screen is used to restore the prior background values should a poor zero occur.

In the Main Menu, choose Calibration Factors > Neph Bkg > Restore Prev Values.

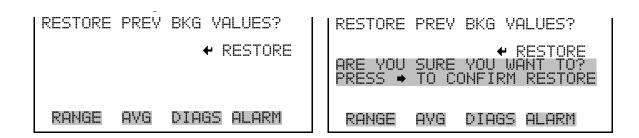

Nephelometer Coefficient

The Nephelometer Coefficient screen allows the user to manually adjust the Nephelometer coefficient. The Nephelometer concentration based on the SET COEF TO is displayed to facilitate setting. The Nephelometer concentration displayed in the Run portion of the screen is NOT affected by the SET COEF until the value is saved.


In the Main Menu, choose Calibration Factors > **Neph Coef**.



Instrument Controls Menu

The Instrument Controls menu contains a number of items that may be selected to control various instrument operational parameters. The firmware controls listed in this menu enable control of the listed instrument functions.

In the Main Menu, choose **Instrument Controls**.

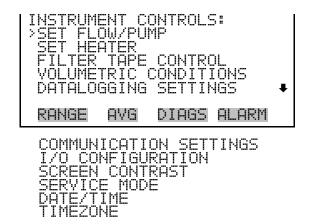

Set Flow/Pump

The Set Flow/Pump menu allows the user to manually adjust the flow values, and to change the operating state of the pump to ON or OFF.

In the Main Menu, choose Instrument Controls > **Set Flow/Pump**.



Flow The Flow screen is used to view and adjust the flow.

> In the Main Menu, choose Instrument Controls > Set Flow/Pump > Flow.



Pump The Pump screen allows the user to toggle the pump to either ON or OFF.


> In the Main Menu, choose Instrument Controls > Set Flow/Pump > Pump.



Set Heater

The Set Heater menu allows the user to set the status of the heater, RH threshold, and temperature threshold in various modes.


In the Main Menu, choose Instrument Controls > **Set Heater**.

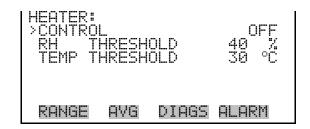

Control

The Control screen is used to set the status of the heater to either ON/OFF, RH threshold, or TEMP threshold.


In the Main Menu, choose Instrument Controls > Set Heater > Control.

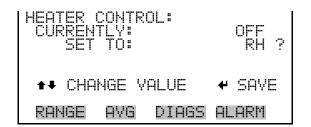

RH Threshold

The RH Threshold screen is used to change the RH threshold value in percent. The RH threshold is typically compatible with the gravimetric method being used for comparison.

In the Main Menu, choose Instrument Controls > Set Heater > **RH** Threshold.

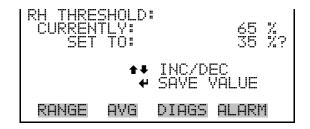

Temperature Threshold

The Temperature Threshold screen is used to change the temperature threshold value.

In the Main Menu, choose Instrument Controls > Set Heater > Temp Threshold.



Filter Tape Control

The Filter Tape Control menu allows the user to manually move or set the next time period for tape control.

In the Main Menu, choose Instrument Controls > Filter Tape Control.



Manual

The Manual screen allows the user to move or stop the filter tape and open or close the measurement bench.

In the Main Menu, choose Instrument Controls > Filter Tape Control > Manual.



Mass Limit

The Mass Limit screen allows the user to set the mass limit. The default is 1,500 µg (or 1.5 mg) and is specified as part of any U.S. EPA and TUV approvals. However, the limit can be increased as much as 5,000 µg for non-regulatory monitoring.

In the Main Menu, choose Instrument Controls > Filter Tape Control > Mass Limit.



Next Time

The Next Time screen is used to view and set the initial date and time (24hour format) for the next filter tape change.


In the Main Menu, choose Instrument Controls > Filter Tape Control > **Next Time**.



Period

The Period screen allows the user to set the period. The next filter tape change would be scheduled after the number of hours the period is set for. The official tape change for TUV and U.S. EPA for PM_{2.5} and PM₁₀ is set for 8 hours.

In the Main Menu, choose Instrument Controls > Filter Tape Control > **Period**.

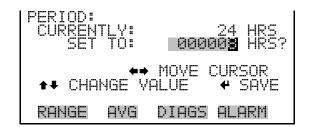

Counter

The Counter screen allows the user to record the current filter tape count and reset the tape count to zero.


In the Main Menu, choose Instrument Controls > Filter Tape Control > **Counter**.



Tape/Zero Ratio

The Tape/Zero Ratio screen allows the user to set the occurrence of nephelometer zeroing after X filter changes. For $PM_{2.5}$ X = 42 and for PM_{10} X = 14 based on a 2-week zeroing cycle. A conservative ratio of 1:1 will zero the nephelometer with every filter tape change.


In the Main Menu, choose Instrument Controls > Filter Tape Control > **Tape/Zero Ratio**.

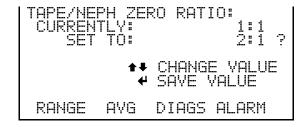

Volumetric Conditions

The Volumetric Conditions menu allows the user to turn temperature/pressure compensation on and off and to set the standard pressure and temperature values in various modes.

In the Main Menu, choose Instrument Controls > Volumetric Conditions.

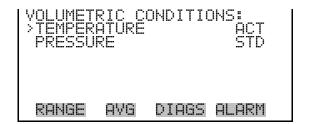

Temperature Compensation

The Temperature screen is used to turn the temperature correction to actual or standard.

Press to toggle and set the temperature compensation to actual or standard.



Standard Temperature

The Standard Temperature screen is used to set the standard temperature.

In the Main Menu, choose Instrument Controls > Volumetric Conditions > Temperature > **Standard**.



Pressure Compensation

The Pressure Compensation screen is used to turn the pressure correction to actual or standard.

Press [•] to toggle and set the pressure compensation to actual or standard.



Standard Pressure

The Standard Pressure screen is used to set the standard pressure.

In the Main Menu, choose Instrument Controls > Volumetric Conditions > Pressure > **Standard**.



Datalogging Settings

The iSeries instruments include a built-in datalogging capability as a standard feature. The operator is allowed to create two different types of records, which for historical reasons, are named lrecs and srecs. Each record can contain up to 32 different fields, or data items, and records can be created at user-defined intervals ranging from 1 to 60 minutes.


Record generation is tied to the instrument's real-time clock. For example, if the logging period for srecs is set to 30 minutes, a new srec will be generated on every hour and every half hour (10:00, 10:30, 11:00 ...). Lrecs and srecs function independent of each other. So, for example, an srec containing just the current SHARP level could be generated every 5 minutes while an lrec containing a full set of diagnostic data could be generated once every hour.

The analyzer's computer system includes three megabytes of flash memory which is enough to store a full lrec containing 32 data items and a full srec

containing 32 items once each minute for a week (>20,000 total records). If logging is limited to the minimum content of date, time, SHARP concentration and error flags, the analyzer can store data once each minute for 4 months (>190,000 total records).

The Datalogging Settings menu allows the user flexibility in how data is stored and recorded.

In the Main Menu, choose Instrument Controls > **Datalogging** Settings.

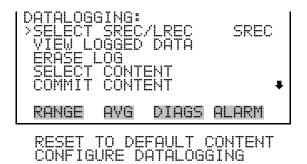

Select Srec/Lrec

The Select Srec/Lrec screen is used to select the log record type for other operations in this menu.

In the Main Menu, choose Instrument Controls > Datalogging Settings > Select Srec/Lrec.



View Logged Data


The View Logged Data screen is used to select the starting point to view the logged data by the number of records or by date and time. Note that both types of records cannot be viewed at the same time, only the selected record type.

In the Main Menu, choose Instrument Controls > Datalogging Settings > **View Logged Data**.



Number of Records

The Number of Records screen is used to select the number of records to view, ending with the most recent. It also shows the total number of records that have been logged for the selected record type.

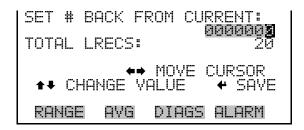

The Record Display screen (read only) displays the selected records.

```
RANGE
       AVG
             DIAGS ALARM
```

Date and Time

The Date and Time screen is used to set a start date and time for which to view logged data. For example, if "20 Jan 2009 10:00" is entered, then the first logged data record that is displayed is the first record after this time. If set to one minute logging, this would be at "20 Jan 2009 10:01".

```
AVG
     DIAGS ALARM
```

The Record Display screen (read only) displays the selected records.



Erase Log The Erase Log screen is used to erase all saved data for the selected record type only (not both srecs and lrecs).


In the Main Menu, choose Instrument Controls > Datalogging Settings > **Erase Log**.



Select Content

The Select Content submenu displays a list of 32 record fields to use to configure the data to be logged. When a field is selected, a submenu list appears of the items to choose from to assign to those fields. Item types are Concentrations, Other Measurements, and Analog Inputs (if the I/O expansion board is installed). These record fields comprise a temporary list of items for the selected record type that must be committed via the datalogging menu before the changes will apply. Note that committing any changes to this list will erase all currently logged data for the selected record type only, as the format of the stored data is changed.


In the Main Menu, choose Instrument Controls > Datalogging Settings > **Select Content**.

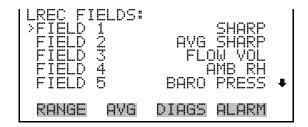

Choose Field Data

The Choose Field Data submenu displays a list of the types of data that can be logged for the current field. Choices are Concentrations, Other Measurements, and Analog Inputs (if the I/O expansion board is installed).

In the Main Menu, choose Instrument Controls > Datalogging Settings > Select Content > **Field 1–32**.

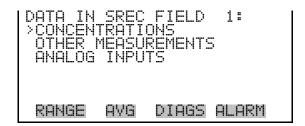

Concentrations

The Concentrations screen allows the user to assign one of the concentrations to the selected record field. The currently selected item is shown by "<--" after it. Note that at this point, pressing [indicates that these are proposed changes as opposed to implemented changes. To change the selected record format and erase record log file data, see "Commit Content" below. The display shows the current heater for the mode selected (PM).


In the Main Menu, choose Instrument Controls > Datalogging Settings > Select Content > select Field > **Concentrations**.



Other Measurements

The Other Measurements screen allows the user to assign one of the other available measurement types to the selected record field. The currently selected item is shown by "<--" after it. Items displayed are determined by the options installed. For Common Flags and Detector A Flags, see Figure 3-5 and Figure 3-6 for data descriptions. Note that at this point, pressing indicates that these are proposed changes as opposed to implemented changes. To change the selected record format and erase record log file data, see "Commit Content" below.

In the Main Menu, choose Instrument Controls > Datalogging Settings > Select Content > select Field > **Other Measurements**.

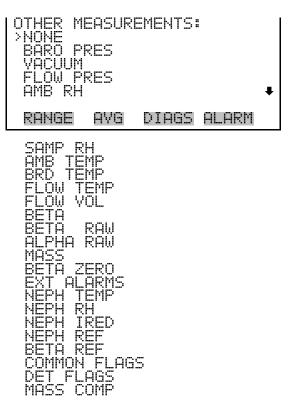

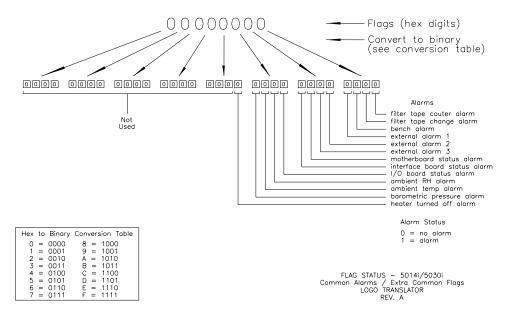


Figure 3–5. Common Flags


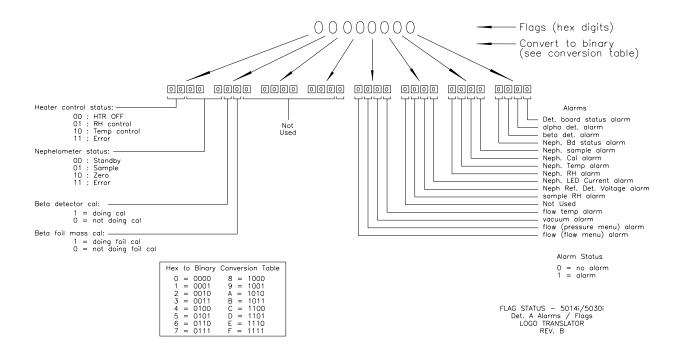


Figure 3–6. Detector A Flags

Analog Inputs The Analog Inputs screen allows the user to select the parameter (none or analog inputs 1-8) to the selected record field. The selected item is shown by "<--" after it. Note that at this point, pressing () indicates that these are proposed changes as opposed to implemented changes. To change the selected record format and erase record log file data, see "Commit Content" below.

In the Main Menu, choose Instrument Controls > Datalogging Settings > Select Content > select Field > **Analog Inputs**.

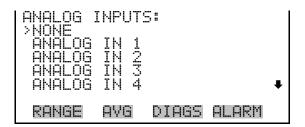

Commit Content

The Commit Content screen is used to save any changes that have been made to any of the record fields for the selected record type. Saving changes will erase record log file data for that record type. If no changes have been made "NO CHANGES TO RECORD LIST!" will appear. For more information about selecting the content of logged data fields, see "Select Content" above.


In the Main Menu, choose Instrument Controls > Datalogging Settings > **Commit Content**.




Reset to Default Content

The Reset to Default Content screen is used to reset all of the datalogging record field items to default values for the selected record type. For more information about selecting the content of logged data fields, see "Select Content" above.

In the Main Menu, choose Instrument Controls > Datalogging Settings > **Reset to Default Content**.

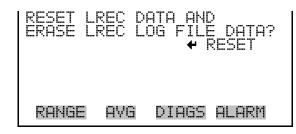


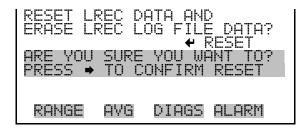

Configure Datalogging

The Configure Datalogging menu deals with datalogging configuration for the currently selected record type.


In the Main Menu, choose Instrument Controls > Datalogging Settings > Configure Datalogging.

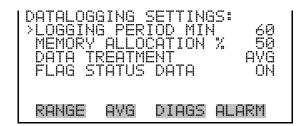

Logging Period Min

The Logging Period Min screen is used to select the logging period in minutes for the selected record format (srec or lrec). List of choices include: off, 1, 5, 15, 30, and 60 minutes (default).


In the Main Menu, choose Instrument Controls > Datalogging Settings > Configure Datalogging > **Logging Period Min**.

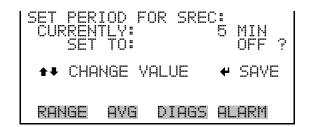

Memory Allocation Percent

The Memory Allocation Percent screen is used to select the percentage of total memory that may be used by the selected record type (lrecs or srecs). Percentages between 0 and 100% are available in increments of 10. Changing this value results in log erasure for both types of records, and changing the percent allocated to one record type will automatically change the other.

In the Main Menu, choose Instrument Controls > Datalogging Settings > Configure Datalogging > **Memory Allocation** %.

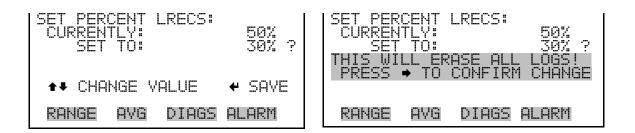


Data Treatment

The Data Treatment screen is used to select the data type for the selected record type: whether the data should be averaged over the interval, the minimum or maximum measured during the interval, or the current value (last value measured). Data treatment doesn't apply to all data, just to the concentration measurement. All other data points log the current value at the end of the interval.

Note This feature is found in all *i*Series instruments, but it is recommended that the data type be set to ONLY the current value (cur), as the datalogging averaging is done in addition to the normal concentration averaging. **A**

In the Main Menu, choose Instrument Controls > Datalogging Settings > Configure Datalogging > **Data Treatment**.

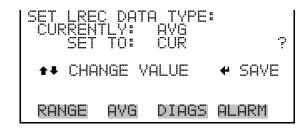

Flag Status Data

The Flag Status Data screen is used to set the flag status data to either ON or OFF for the selected record type.


In the Main Menu, choose Instrument Controls > Datalogging Settings > Configure Datalogging > **Flag Status Data**.



Communication Settings

The Communication Settings menu is used for communications control and configuration.

In the Main Menu, choose Instrument Controls > **Communication** Settings.

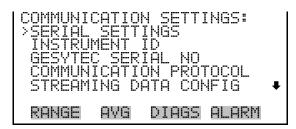

TCP/IP SETTINGS

Serial Settings

The Serial Setting submenu is used for serial communications control and configuration.


In the Main Menu, choose Instrument Controls > Communication Settings > **Serial Settings**.



Baud Rate

The Baud Rate screen is used to set the RS-232/RS-485 interface baud rate. Baud rates of 1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200 are available. The analyzer's default baud rate is set to 9600 to provide backwards compatibility with the older C-series analyzers.

In the Main Menu, choose Instrument Controls > Communication Settings > Serial Settings > **Baud Rate**.

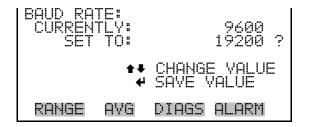

Data Bits

The Data Bits screen is used to set the number of serial data bits to either 7 or 8 (default).

In the Main Menu, choose Instrument Controls > Communication Settings > Serial Settings > **Data Bits**.



Parity

The Parity screen is used to select the parity bit for the serial port to None (default), Even, or Odd.

In the Main Menu, choose Instrument Controls > Communication Settings > Serial Settings > **Parity**.



Stop Bits

The Stop Bits screen is used to set the number of stop bits for the serial port to 1 (default) or 2.

In the Main Menu, choose Instrument Controls > Communication Settings > Serial Settings > **Stop Bits**.



RS-232/RS-485 Selection

The RS-232/RS-485 Selection screen allows the user to choose between the RS-232 or RS-485 specification for serial communication.



Equipment Damage Disconnect the serial cable before changing the RS-232 and RS-485 selection to prevent damage to any equipment currently connected to the analyzer.

In the Main Menu, choose Instrument Controls > Communication Settings > Serial Settings > **RS-232/485 Selection**.





Instrument ID

The Instrument ID screen allows the operator to edit the instrument ID number. The ID is used to identify the instrument when using the C-Link or MODBUS protocols to control the instrument or collect data. It may be necessary to edit the ID number if two or more instruments of the same model are connected to one computer. Valid instrument ID numbers are from 0 to 127. The Model 5030i has a default instrument ID of 14. For more information about the instrument ID, see Appendix B "C-Link Protocol" or Appendix C "MODBUS Protocol".

In the Main Menu, choose Instrument Controls > Communication Settings > **Instrument ID**.



Gesytec Serial Nunber

The Gesytec Serial Number screen is used to set the serial number for the Gesytec protocol. The Gesytec serial number defaults to zero. For more information about the serial number, see Appendix D, "Gesytec (BH) Protocol".


In the Main Menu, choose Instrument Controls > Communication Settings > **Gesytec Serial No**.



Communication Protocol

The Communication Protocol screen is used to change the protocol for serial communications. Possible choices include: C-Link, MODBUS, Gesytec, and Streaming Data.

In the Main Menu, choose Instrument Controls > Communication Settings > **Communication Protocol**.

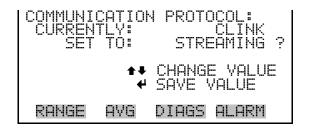

Streaming Data Configuration

The Streaming Data Configuration menu is used to allow for configuration of the 8 streaming data output items, streaming interval, current data format, and current timestamp setting. The Choose Stream Data submenu displays a list of the analog output signal group choices to choose from.

Choices are Concentrations, Other Measurements, and Analog Inputs (if the I/O expansion board option is installed).

In the Main Menu, choose Instrument Controls > Communication Settings > **Streaming Data Config.**



Streaming Data Interval

The Streaming Data Interval screen is used to adjust how frequently a new record will be generated. The following interval times are available: 1, 2, 5, 10, 20, 30, 60, 90, 120, 180, 240, and 300 seconds.

In the Main Menu, choose Instrument Controls > Communication Settings > Streaming Data Config > **Interval**.



Note Add Labels, Prepend Timestamp, and Add Flags are toggle items that change between yes or no when selected. ▲

Choose Stream Data

The Choose Stream Data screen displays a list of the types of data that can be sent via streaming data. Choices are Concentrations, Other Measurements, and Analog Inputs (if the I/O expansion board is installed).

In the Main Menu, choose Instrument Controls > Communication Settings > Streaming Data Config > **Item 1–8**.

```
CHOOSE STREAM DATA:
>CONCENTRATIONS
                    DIAGS ALARM
```

Concentrations

The Concentrations screen allows the user to assign one of the concentrations to the selected streaming data item. The currently selected item is shown by "<--" after it. Once an item is selected, pressing (will save the selected streaming data item.


In the Main Menu, choose Instrument Controls > Communication Settings > Streaming Data Config > select Item > **Concentrations**.



Other Measurements

The Other Measurements screen allows the user to assign one of the other available measurement types to the selected streaming data item. The currently selected item is shown by "<--" after it. Once an item is selected, pressing (•) will save the selected streaming data item. For Common Flags and Detector A Flags, see Figure 3-5 and Figure 3-6 for data descriptions.


In the Main Menu, choose Instrument Controls > Communication Settings > Streaming Data Config > select Item > **Other** Measurements.

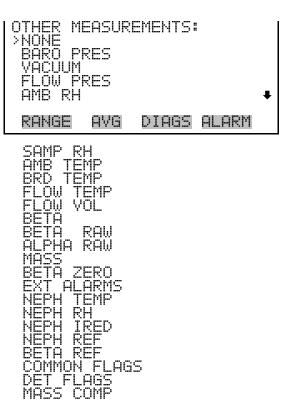

Analog Inputs

The Analog Inputs screen allows the user to assign an analog input signal (none or analog inputs 1–8) to the selected streaming data item. The currently selected item is shown by "<--" after it. Once an item is selected, pressing (will save the selected streaming data item.

In the Main Menu, choose Instrument Controls > Communication Settings > Streaming Data Config > select Item > **Analog Inputs**.

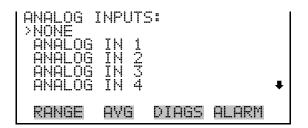

TCP/IP Settings

The TCP/IP Settings menu is used for defining parameters that are required for Ethernet communications.

Note The instrument power must be cycled after any of these parameters have been changed for the change to take effect. **\(\Delta\)**

In the Main Menu, choose Instrument Controls > Communication Settings > **TCP/IP Settings**.



Use DHCP

The Use DHCP screen is used to specify whether to use Dynamic Host Configuration Protocol (DHCP) or not. When DHCP is enabled, the network dynamically provides an IP address for the instrument.

In the Main Menu, choose Instrument Controls > Communication Settings > TCP/IP Settings > **Use DHCP**.



IP Address

The IP Address screen is used to edit the IP address. The IP address can only be changed when DHCP is off. If DHCP is on, the instrument will respond with "NOT SETTABLE IF DHCP IS ON". For more information on DHCP, see "Use DHCP" above.


In the Main Menu, choose Instrument Controls > Communication Settings > TCP/IP Settings > **IP Addr**.

```
RANGE
             DIAGS ALARM
```

Netmask

The Netmask screen is used to edit the netmask. The netmask is used to determine the subnet on which the instrument can directly communicate to other devices. The netmask can only be changed when DHCP is off. If DHCP is on, the instrument will respond with "NOT SETTABLE IF DHCP IS ON". For more information on DHCP, see "Use DHCP" above.

In the Main Menu, choose Instrument Controls > Communication Settings > TCP/IP Settings > **Netmask**.

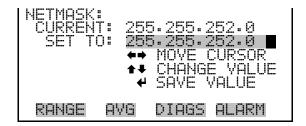

Default Gateway

The Default Gateway screen is used to edit the gateway address. The default gateway can only be changed when DHCP is off. If DHCP is on, the instrument will respond with "NOT SETTABLE IF DHCP IS ON". For more information on DHCP, see "Use DHCP" above. Any traffic to addresses that are not on the local subnet will be routed through this address.

In the Main Menu, choose Instrument Controls > Communication Settings > TCP/IP Settings > **Gateway**.

```
DEFAULT GATEWAY:
 CURRENTÎ
 RANGE
         AVG
              DIAGS ALARM
```

Host Name

The Host Name screen is used to edit the host name. When DHCP is enabled, this name is reported to the DHCP server.

In the Main Menu, choose Instrument Controls > Communication Settings > TCP/IP Settings > **Host Name**.



Network Time Protocol Server

The Network Time Protocol (NTP) Server screen is used to edit the IP address of the NTP server. An NTP server may be used to periodically synchronize the instrument's real-time clock with a standard. More information about the NTP servers and a list of public servers may be found at http://www.ntp.org.

In the Main Menu, choose Instrument Controls > Communication Settings > TCP/IP Settings > **NTP Svr**.



I/O Configuration

The I/O Configuration menu deals with configuration of the analyzer's I/O system. The analog input configuration is displayed only if the I/O expansion board option is installed.

In the Main Menu, choose Instrument Controls > **I/O** Configuration.




Output Relay Settings

The Output Relay Settings menu displays a list of the 10 digital output relays available, and allows the user to select the logic state and instrument parameter for the relay selected.

Note The digital outputs may take up to one second after the assigned state occurs to show up on the outputs. A

In the Main Menu, choose Instrument Controls > I/O Configuration > Output Relay Settings.

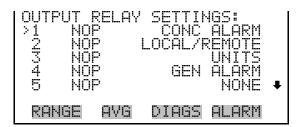

Logic State

The Logic State menu item is used to change the selected I/O relay to either normally open or normally closed. The default state is open, which indicates that a relay connected between the digital output pin and ground is normally open and closes to trigger the digital output action.


Press [•] to toggle and set the logic state to normally open or normally closed.

```
AVG
```

Instrument State

The Instrument State submenu allows the user to select the instrument state that is assigned to the selected relay output. A submenu lists signal types of either alarms or non-alarm to choose from.


In the Main Menu, choose Instrument Controls > I/O Configuration > Output Relay Settings > select Relay > **Instrument State**.

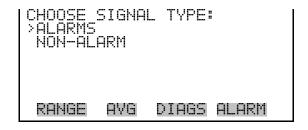

Alarms

The Alarms screen allows the user to select an alarm status for the selected relay output. The currently selected item is shown by "<--" after it. The I/O board status alarm is only present if the I/O expansion board is installed.

In the Main Menu, choose Instrument Controls > I/O Configuration > Output Relay Settings > select Relay > Instrument State > **Alarms**.

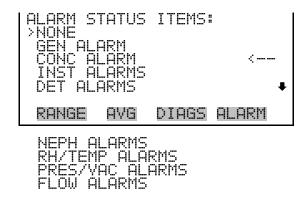

Non-Alarm

The Non-Alarm screen allows the user to select a non-alarm status for the selected relay output. The currently selected item is shown by "<--" after it.

In the Main Menu, choose Instrument Controls > I/O Configuration > Output Relay Settings > select Relay > Instrument State > Non-Alarm.




Digital Input Settings

The Digital Input Settings menu displays a list of the 16 digital inputs available, and allows the user to select the logic state and instrument parameter for the relay selected.

Note The digital inputs must be asserted for at least one second for the action to be activated.

Not all of the I/O available in the instrument are brought out on the supplied terminal board. If more I/O is desired, an alternative means of connection is required. (See optional "Terminal Block and Cable Kits".) ▲

In the Main Menu, choose Instrument Controls > I/O Configuration > Digital Input Settings.

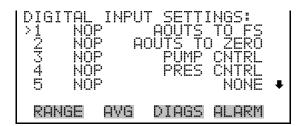

Logic State

The Logic State menu item is used to change the selected I/O relay to either normally open or normally closed. The default state is open, which indicates that a relay connected between the digital input pin and ground is normally open and closes to trigger the digital input action.


Press (•) to toggle and set the logic state to normally open or normally closed.

```
RANGE
       AVG
             DIAGS ALARM
```

Instrument Action

The Instrument Action submenu allows the user to choose the instrument action that is assigned to the selected digital input.

In the Main Menu, choose Instrument Controls > I/O Configuration > Digital Input Settings > select Relay > **Instrument Action**.

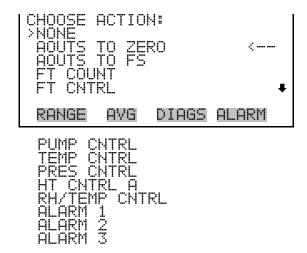

Analog Output Configuration (Select Channel)

The Analog Output Configuration menu displays a list of the analog output channels available for configuration. Channel choices include all voltage channels, all current channels, individual voltage channels 1-6, and individual current channels 1-6 (if the I/O expansion board option is installed).

In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Output Config.



Allow Over/Under Range

The Allow Over/Under Range screen is used to select whether or not the analog outputs are allowed to exceed the maximum selected value of 100 mV, 1 V, 5 V, 10 V, or 20 mA or the minimum selected value of 0 V, 0 mA, or 4 mA. By default, this parameter is set to on and 5% over and under range is allowed for all analog output channels.

In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Output Config > **Allow Over/Under Range**.



Analog Output Configuration (Select Action)

The Analog Output Configuration menu displays a list of the analog output configuration choices, from which the user selects the parameter to adjust for the selected output channel. Configuration choices include selecting range, setting minimum/maximum values, and choosing the signal to output.


In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Output Config > All Voltage Channels, All Current Channels, Voltage Channel 1–6 or Current Channel 1–6.

```
ANALOG OUTPUT CONFIG:
        RANGE
               TO OUTPUT
RANGE
        AYG
              DIAGS ALARM
```

Select Range

The Select Range screen is used to select the hardware range for the selected analog output channel. Possible ranges for the voltage outputs are: 0-100 mV, 0-1, 0-5, and 0-10 V. Possible ranges for the current outputs are: 0-20 mA and 4-20 mA.

In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Output Config > select Channel > **Select Range**.

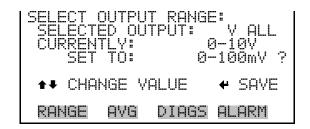

Minimum and Maximum Value

The Minimum and Maximum Value screens are used to edit the zero (0) and full-scale (100) values, respectively, in percentages for the selected

analog output channel. See Table 3-4 for a list of choices. The minimum and maximum output value screens function the same way. The following example shows the set minimum value screen.

In the Main Menu, choose Instrument Controls > IO Configuration > Analog Output Config > select Channel > **Set Minimum** or Maximum Value.

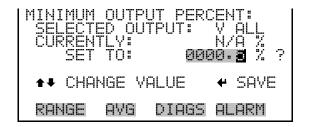


Table 3-4. Analog Output Zero to Full-Scale


Output	Zero (0)% Value	Full-Scale 100% Value
PM	Zero (0)	Range Setting
AVG PM	Zero (0)	Range Setting
Neph	Zero (0)	Range Setting
SHARP	Zero (0)	Range Setting
AVG SHARP	Zero (0)	Range Setting
AVG Neph	Zero (0)	Range Setting
Barometer Pressure	User-set alarm min value	User-set alarm max value
Vacuum	User-set alarm min value	User-set alarm max value
Flow Pressure	User-set alarm min value	User-set alarm max value
Ambient RH	User-set alarm min value	User-set alarm max value
Sample RH	User-set alarm min value	User-set alarm max value
Ambient Temp	User-set alarm min value	User-set alarm max value
Board Temp	User-set alarm min value	User-set alarm max value
Flow Temp	User-set alarm min value	User-set alarm max value
Flow Vol	User-set alarm min value	User-set alarm max value
Beta	User-set alarm min value	User-set alarm max value
Beta Raw	User-set alarm min value	User-set alarm max value
Alpha Raw	User-set alarm min value	User-set alarm max value
Mass	-200	5,000
Beta Zero	0	65,000

Output	Zero (0)% Value	Full-Scale 100% Value
External Alarms	0	7,000
Neph Temp	User-set alarm min value	User-set alarm max value
Neph RH	User-set alarm min value	User-set alarm max value
Neph IRED	User-set alarm min value	User-set alarm max value
Neph Ref	350	2000
Beta Ref	0	65,000
Mass Comp	0	100

Choose Signal to Output

The Choose Signal to Output screen displays a list of the analog output signal choices. Choices are grouped into three categories: Concentrations, Other Measurements, and Analog Inputs (if the I/O expansion board option is installed). This allows the user to select the output signal that will be assigned to each analog channel. The Concentrations screen is shown below. See Table 3–5 for a list of items for each signal group choice.

In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Output Config > select Channel > Choose Signal to Output.

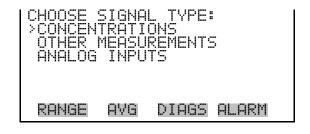

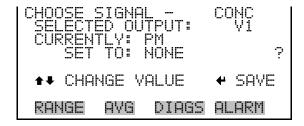



Table 3–5. Signal Type Group Choices

Concentrations	Other Measurements	Analog Inputs
None	None	None
PM	Barometer Pressure	Analog Input 1 (if the I/O expansion

Concentrations	Other Measurements	Analog Inputs
		board is installed)
AVG PM	Vacuum	Analog Input 2 (if the I/O expansion board is installed)
Neph	Flow Pressure	Analog Input 3 (if the I/O expansion board is installed)
SHARP	Ambient RH	Analog Input 4 (if the I/O expansion board is installed)
AVG SHARP	Sample RH	Analog Input 5 (if the I/O expansion board is installed)
AVG Neph	Ambient Temp	Analog Input 6 (if the I/O expansion board is installed)
	Board Temp	Analog Input 7 (if the I/O expansion board is installed)
	Flow Temp	Analog Input 8 (if the I/O expansion board is installed)
	Flow Vol	
	Beta	
	Beta Raw	
	Alpha Raw	
	Mass	
	Beta Zero	
	External Alarms	
	Neph Temp	
	Neph RH	
	Neph IRED	
	Neph Ref	
	Beta Ref	
	Common Flags	
	Det Flags	
	Mass Comp	

Analog Input Configuration The Analog Input Configuration menu displays a list of the 8 analog input channels available for configuration. This screen is only displayed if the I/O expansion board option is installed. Configuration includes entering the Descriptor, Units, Decimal Places, choice of 1-10 points in the table, and corresponding number of points selected.

In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config.

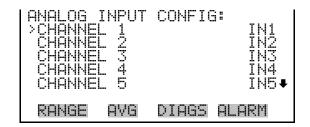



POINT 2

Descriptor

The Descriptor screen allows the user to enter the descriptor, or name, for the selected analog input channel. The descriptor is used in datalogging and streaming data to report what data is being sent out. The descriptor may be from 1 to 3 characters in length, and defaults to IN1 to IN8 (user input channel number).

In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > select Channel > **Descriptor**.



Units

The Units screen allows the user to enter the units for the selected analog input channel. The units are displayed on the diagnostic screen and in datalogging and streaming data. The units may be from 1 to 3 characters in length, and defaults to V (volts).

In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > select Channel > **Units**.



Decimal Places

The Decimal Places screen allows the user to select how many digits are displayed to the right of the decimal point, from 0 to 6, with a default of 2.

In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > select Channel > **Decimal Places**.



Number of Table Points

The Number of Table Points screen allows the user to select how many points are used in the analog input conversion table for the selected channel. The instrument uses linear interpolation between the points in this table to determine what the reading value is based on the analog input voltage. Each point in the table consists of an analog input voltage value (0–10.5 V) and a corresponding reading value. Only two points are necessary for linear inputs, however a larger number of points may be used to approximate non-linear inputs. The points range from 2 to 10, with a default of 2.


• In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > select Channel > **Table Points**.



Table Points

The Table Point submenu allows the user to set up an individual table point.


In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > select Channel > **Point 1–10**.

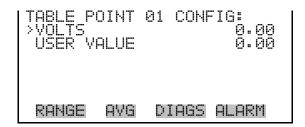

Volts

The Volts screen allows the user to set the input voltage for the selected table point in the conversion table, from 0.00 to 10.50. The default table is a two-point table with point 1: 0.00 V = 000.0 U and point 2: 10.00 V = 10.0 U, where U is the previously entered unit of measure.

In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > select Channel > select Point > **Volts**.

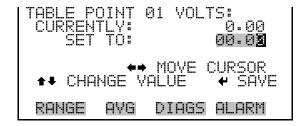

User Value

The User Value screen allows the user to set the output value for the corresponding input voltage for the selected table point in the conversion table, from -9999999 to 99999999. The default table is a two-point table with point 1: 0.00 V = 000.0 U and point 2: 10.00 V = 10.0 U, where U is the previously entered unit of measure.

In the Main Menu, choose Instrument Controls > I/O Configuration > Analog Input Config > select Channel > select Point > **User Value**.



Screen Contrast


The Screen Contrast screen is used to change the contrast of the display. Intensities between 0 and 100% in increments of 5 are available. Changing the screen contrast may be necessary if the instrument is operated at extreme temperatures.

Note The optimal contrast will change with changes in temperature.

Note The optimal contrast will change from one LCD to another. If the LCD is replaced, the contrast may need to be reset.

Note If the display contrast is not optimal, but the content on the screen is visible, select Instrument Controls > **Screen Contrast** and adjust the screen contrast. If the content on the screen is not visible, use the "set contrast 10" C-Link command to set the screen contrast to mid-range, then optimize the contrast. See "contrast levels" in Appendix B, "C-Link Protocol Commands" for more information on this command. A

In the Main Menu, choose Instrument Controls > **Screen Contrast**.

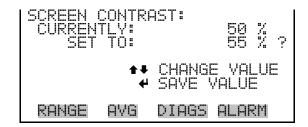

Service Mode

The Service Mode screen is used to turn the service mode on or off. Turning service mode "ON" locks out any remote actions and allows access to parameters and functions that are useful when making adjustments or diagnosing the Model 5030i. The service (wrench) icon on the status bar is shown when service mode is on. For more information about the service mode, see "Service Menu" later in this chapter.

Note The service mode should be turned off when finished, as it prevents remote operation.

In the Main Menu, choose Instrument Controls > **Service Mode**.



Date/Time

The Date/Time screen allows the user to view and change the system date and time (24-hour format). The internal clock is powered by its own battery when instrument power is off.

In the Main Menu, choose Instrument Controls > **Date/Time**.





Timezone

The Timezone screen is used to set the timezone for the Network Time Protocol (NTP) server. This should be set to the timezone that the instrument is located in. If the exact timezone is not shown in the list, it may be entered via the C-LINK "tz" command (see Appendix B). The selections are: UTC (GMT), EST (GMT+5), CST (GMT+6), MST (GMT+7), PST (GMT+8), YST (GMT+9), HST (GMT+10), NST (GMT+11), DLW (GMT+12), CET (GMT-1), EET (GMT-2), BST (GMT-3), DLT (GMT-4), ECH (GMT-5), FOX (GMT-6), GLF (GMT-7), CCT (GMT-8), JST (GMT-9), GST (GMT-10), LMA (GMT-11), DLE (GMT-12), EDT (GMT+5/4), CDT (GMT+6/5), MDT (GMT+7/6), and PDT (GMT+8/7).


Note The current timezone may say NULL before the timezone is set for the first time, or if the timezone was cleared with a C-Link command. **\(\Delta\)**

In the Main Menu, choose Instrument Controls > **Timezone**.



Diagnostics Menu The Diagnostics menu provides access to diagnostic information and functions. This menu is useful when troubleshooting the instrument. The analog input readings and analog input voltages are only displayed if the I/O expansion board option is installed.

In the Main Menu, choose **Diagnostics**.

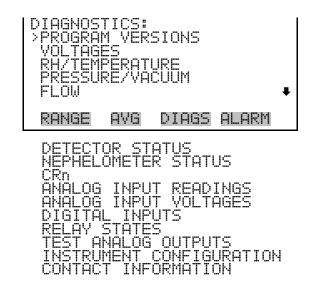

Program Versions

The Program Versions screen (read only) shows the version numbers of the programs installed. Prior to contacting the factory with any questions regarding the instrument, please note the product model name and the program version numbers.

In the Main Menu, choose Diagnostics > **Program Versions**.

```
PROGRAM VERSIONS: PRODUCT: MOD
                    MODEL
                   DIAGS
            AVG
                            ALARM
```

Voltages

The Voltages menu displays the current diagnostic voltage readings. This screen enables the power supply to be quickly read for low or fluctuating voltages without having to use a voltage meter. The I/O board item is only displayed if the I/O expansion board option is installed.

In the Main Menu, choose Diagnostics > **Voltages**.

```
MOTHERBOARD
INTERFACE B
    ECTOR BOARD
RANGE
         AVG
                DIAGS
                        ALARM
```

Motherboard Voltages

The Motherboard screen (read only) is used to display the voltage readings on the motherboard.

In the Main Menu, choose Diagnostics > Voltages > **Motherboard**.

```
AVG
     DIAGS
            ALARM
```

Interface Board Voltages

The Interface Board screen (read only) is used to display the voltage readings on the measurement interface board.


In the Main Menu, choose Diagnostics > Voltages > **Interface** Board.



I/O Board Voltages

The I/O Board screen (read only) is used to display the voltage readings on the I/O expansion board. This menu is only displayed if the I/O expansion board option is installed.

In the Main Menu, choose Diagnostics > Voltages > **I/O Board**.

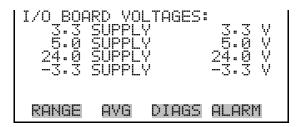

Detector Board Voltages

The Detector Board screen (read only) is used to display the voltage readings on the measurement interface board.

In the Main Menu, choose Diagnostics > Voltages > **Detector Board**.



Nephelometer Board Voltages

The Nehpelometer Board screen (read only) is used to display the voltage readings on the nephelometer board.


In the Main Menu, choose Diagnostics > Voltages > **Nephelometer** Board.



RH/Temperature

The RH/Temperature screen (read only) displays the current relative humidity and temperature readings. The board temperature is the air temperature measured by a sensor located on the measurement interface board.


In the Main Menu, choose Diagnostics > **RH/Temperature**.

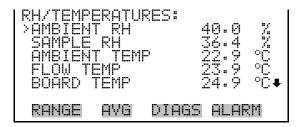

Pressure/Vacuum

The Pressure/Vacuum screen (read only) displays the current pressure readings. The pressure is measured by a pressure transducer. The vacuum is the amount of vacuum under the filter tape. The flow pressure is the pressure differential across the orifice.


In the Main Menu, choose Diagnostics > **Pressure/Vacuum**.

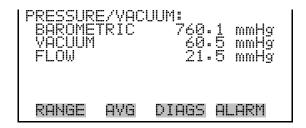

Flow

The Flow screen (read only) displays the current sample flow reading. The flow is measured by the internal pressure board sensors.

In the Main Menu, choose Diagnostics > **Flow**.

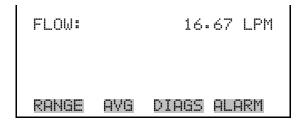

Detector Status

The Detector Status screen (read only) displays the current sample mass reading, alpha counts, and beta counts.

Note A mass value will only be calculated when the flowrate is within acceptable limits. However, when in Service Mode, a mass value will be calculated if the pump is turned OFF. **\(\Delta\)**

In the Main Menu, choose Diagnostics > **Detector Status**.



Nephelometer Status

The Nephelometer Status screen (read only) displays the current nephelometer reading.


In the Main Menu, choose Diagnostics > Nephelometer Status.



CRn

The CRn screen (read only) displays the current CRn reading.


In the Main Menu, choose Diagnostics > **CRn**.

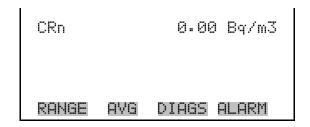

Analog Input Readings

The Analog Input Readings screen (read only) displays the 8 user-scaled analog readings (if the I/O expansion board option is installed).

In the Main Menu, choose Diagnostics > **Analog Input Readings**.

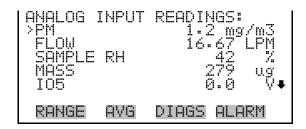

Analog Input Voltages

The Analog Input Voltages screen (read only) displays the 8 raw analog voltage readings (if the I/O expansion board option is installed).


In the Main Menu, choose Diagnostics > **Analog Input Voltages**.

```
Ý.
        AVG
              DIAGS
                      ALARM
RANGE
```

Digital Inputs

The Digital Inputs screen (read only) displays the state of the 16 digital inputs. Pull-ups are provided on all of the inputs, so if nothing they will read (1), if an input is brought to ground, it will read (0).

In the Main Menu, choose Diagnostics > Digital Inputs.

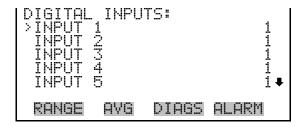

Relay States

The Relay States screen displays the state of the 10 digital outputs and allows toggling of the state to either on (1) or off (0). The relays are restored to their original states upon exiting this screen.


- In the Main Menu, choose Diagnostics > **Relay States**.
- Press () to toggle and set the relay state to open or closed for the selected digital output.



Test Analog Outputs

The Test Analog Outputs menu is used to set each of the analog output channels to zero or full-scale. Channel choices include all analog outputs, 6 voltage channels, and 6 current channels (if the I/O expansion board option is installed).

In the Main Menu, choose Diagnostics > **Test Analog Outputs**.

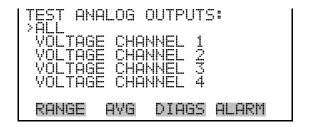

Set Analog Outputs

The Set Analog Outputs screen contains three choices: Set to full-scale, set to zero, or reset to normal. Full-scale sets the analog outputs to the fullscale voltage, zero sets the analog outputs to 0 volts, and reset returns the output to normal operation. The analog outputs are returned to normal

operation upon exiting this screen. The following example shows the screen when all analog outputs are set to "normal" operating mode.

In the Main Menu, choose Diagnostics > Test Analog Outputs > ALL, Voltage Channel 1-6, or Current Channel 1-6.



Instrument Configuration

The Instrument Configuration screen displays information on the hardware configuration of the instrument.

Note If the analyzer is in service mode, pressing [will toggle the selected item between yes and no. ▲


In the Main Menu, choose Diagnostics > **Instrument** Configuration.



Contact Information

The Contact Information screen displays the customer service information.

In the Main Menu, choose Diagnostics > **Contact Information**.

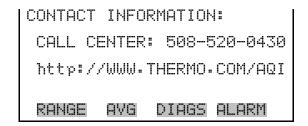

Alarms Menu


The alarms menu allows the user to view a set of alarms for different boards and displays a list of items that are monitored by the analyzer. The number of alarms detected is displayed to indicate how many alarms have occurred. If no alarms are detected, the number zero is displayed.

If the item being monitored goes outside the lower or upper limit, the status of that item will go from "OK" to either "LOW" or "HIGH", respectively. If the alarm is not a level alarm, the status will go from "OK" to "FAIL". The number of alarms detected is displayed to indicate how many alarms have occurred. If no alarms are detected, the number zero is displayed.

Items displayed are determined by the options installed. To see the actual reading of an item and its minimum and maximum limits, move the cursor to the item and press —. If the readings go beyond either the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

If any alarms are active, the alarm (bell) icon is displayed on the right side of the status bar.


• In the Main Menu, choose **Alarms**.

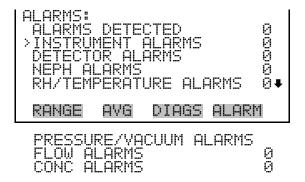

Instrument Alarms

The Instrument Alarms submenu allows the user to view a set of alarms for different boards. The filter tape change, heater power, and bench items (motherboard, interface board and I/O expansion board) are read only. The motherboard status, interface board status, and I/O expansion board status (if installed) indicate that the power supplies are working and connections are successful. There are no setting screens for these alarms.

• In the Main Menu, choose Alarms > **Instrument Alarms**.

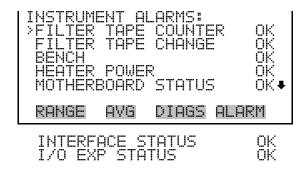

Filter Tape Counter

The Filter Tape Counter screen displays the current filter tape counter value and sets the maximum alarm limit. If the filter tape counter reading goes beyond the maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Instrument Alarms > Filter Tape Counter.



Max Filter Tape Counter

The Maximum Filter Tape Counter screen is used to change the maximum filter tape counter alarm limit (480 = 90% usage, 10% remaining).

In the Main Menu, choose Alarms > Instrument Alarms > Filter Tape Counter > **Max**.



Detector Alarms

The Detector Alarms submenu allows the user to view a set of alarms for detector boards. Board status indicates that the power supplies are working and connections are successful. There are no setting screens for this alarm.

In the Main Menu, choose Alarms > **Detector Alarms**.

```
TECTOR ALARMS:
```

Min and Max Alpha **Alarms**

The Alpha Alarms screen allows the user to view the minimum and maximum alarm parameters. Acceptable alarm limits range from 0 to 100. If the alpha count reading goes beyond the maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Detector Alarms > **Alpha**.



Min and Max Beta **Alarms**

The Beta Alarms screen allows the user to view the minimum and maximum alarm parameters. Acceptable alarm limits range from 5000 to 20000. If the beta count reading goes beyond the maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.


In the Main Menu, choose Alarms > Detector Alarms > **Beta**.



Nephelometer Alarms

The Nephelometer Alarms submenu allows the user to view and set the nephelometer alarm parameters. Board status indicates that the power supplies are working and connections are successful. The nephelometer temperature, nephelometer RH, LED current, and reference detector voltage all have adjustable alarms pre-set in the factory.

In the Main Menu, choose Alarms > **Neph Alarms**.

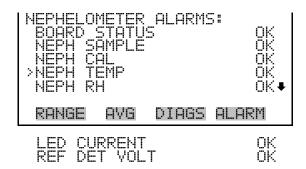

Nephelometer Temperature

The Nephelometer Temperature screen displays the current nephelometer temperature value and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 0 to 60 °C. If the nephelometer temperature reading goes beyond the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Neph Alarms > Neph Temp.

```
NEPHELOMETER TEMP
 RANGE
        AVG
              DIAGS ALARM
```

Min and Max **Nephelometer Temperature Limits**

The Minimum Nephelometer Temperature alarm limit screen is used to change the minimum nephelometer temperature alarm limit. The minimum and maximum nephelometer temperature screens function the same way.

In the Main Menu, choose Alarms > Neph Alarms > Neph Temp > Min or Max.



Nephelometer RH

The Nephelometer RH screen displays the current nephelometer relative humidity value and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 5 to 95%. If the nephelometer RH reading goes beyond the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Neph Alarms > Neph RH.



Min and Max **Nephelometer RH Limits**

The Minimum Nephelometer RH alarm limit screen is used to change the minimum nephelometer RH alarm limit. The minimum and maximum nephelometer RH screens function the same way.

In the Main Menu, choose Alarms > Neph Alarms > Neph RH > Min or Max.



LED Current

The LED Current screen displays the current nephelometer source current value and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 50 to 70 mA. If the LED current reading goes beyond

the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Neph Alarms > **LED Current**.

```
65.0
50.0
70.0
               mΑ
DIAGS
         ALARM
```

Min and Max LED Source Current Limits

The Minimum LED Source Current alarm limit screen is used to change the minimum LED source current alarm limit. The minimum and maximum LED Source Current screens function the same way.

In the Main Menu, choose Alarms > Neph Alarms > LED Current > Min or Max.

```
AVG
     DIAGS ALARM
```

Reference Detector Voltage

The Reference Detector Voltage screen displays the current nephelometer reference detector voltage value and the minimum and maximum alarm limits. Acceptable alarm limits range 350 to 2000 mV. If the reference detector voltage reading goes beyond the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu. There is no "set" mode for this value.


In the Main Menu, choose Alarms > Neph Alarms > **Ref Det Volt**.

```
RANGE
       AVG
             DIAGS ALARM
```

RH/Temperature Alarms

The RH/Temperature Alarms submenu allows the user to view and set the relative humidity or temperature alarm parameters.

In the Main Menu, choose Alarms > **RH/Temperature Alarms**.

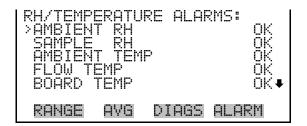

Ambient RH

The Ambient RH screen displays the current ambient relative humidity value and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 5 to 95%. If the ambient RH reading goes beyond the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > RH/Termperature Alarms > Ambient RH.



Min and Max Ambient RH Limits

The Minimum Ambient RH alarm limit screen is used to change the minimum ambient RH alarm limit. The minimum and maximum ambient RH screens function the same way.

In the Main Menu, choose Alarms > RH/Temperature Alarms > Ambient RH > Min or Max.



Sample RH

The Sample RH screen displays the current sample relative humidity value and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 5 to 95%. If the sample RH reading goes beyond the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > RH/Termperature Alarms > Sample RH.



Min and Max Sample RH Limits

The Minimum Sample RH alarm limit screen is used to change the minimum ambient RH alarm limit. The minimum and maximum sample RH screens function the same way.

In the Main Menu, choose Alarms > RH/Temperature Alarms > Sample RH > **Min** or **Max**.



Ambient Temperature

The Ambient Temperature screen displays the current ambient temperature value and sets the minimum and maximum alarm limits. Acceptable alarm limits range from -30 °C to 60 °C. If the ambient temperature reading goes beyond the minimum or maximum limit, an alarm is activated and the

alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > RH/Termperature Alarms > Ambient Temp.

```
AVG
             DIAGS ALARM
RANGE
```

Min and Max Ambient Temperature Limits

The Minimum Ambient Temperature alarm limit screen is used to change the minimum ambient temperature alarm limit. The minimum and maximum ambient temperature screens function the same way.

In the Main Menu, choose Alarms > RH/Temperature Alarms > Ambient Temp > **Min** or **Max**.

```
AMBIENT TEMPERATURE:
ACTUAL MIN: -30
SET MIN TO: -20
                           DIAGS ALARM
```

Flow Temperature

The Flow Temperature screen displays the current ambient temperature value and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 5 to 60 °C. If the flow temperature reading goes beyond the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > RH/Termperature Alarms > Flow Temp.

```
LOW TEMP:
RANGE
       AVG
             DIAGS
                   ALARM
```

Min and Max Flow **Temperature Limits**

The Minimum Flow Temperature alarm limit screen is used to change the minimum flow temperature alarm limit. The minimum and maximum flow temperature screens function the same way.

In the Main Menu, choose Alarms > RH/Temperature Alarms > Flow Temp > **Min** or **Max**.



Board Temperature

The Board Temperature screen displays the current board temperature value and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 5 to 60 °C. If the board temperature reading goes beyond the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > RH/Termperature Alarms > Board Temp.

```
AVG
                    ALARM
RANGE
             DIAGS
```

Min and Max Board **Temperature Limits**

The Minimum Board Temperature alarm limit screen is used to change the minimum board temperature alarm limit. The minimum and maximum board temperature screens function the same way.

In the Main Menu, choose Alarms > RH/Temperature Alarms > Board Temp > **Min** or **Max**.



Pressure/Vacuum **Alarms**

The Pressure/Vacuum Alarms submenu allows the user to view and set the pressure alarm parameters.


In the Main Menu, choose Alarms > **Pressure/Vacuum Alarms**.



Barometric Pressure

The Barometric Pressure screen displays the current pressure reading and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 400 to 800 mmHg. If the barometric pressure reading goes beyond the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Pressure/Vacuum Alarms > Baro Pres.

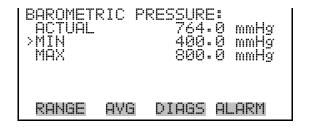

Min and Max Barometric **Pressure Limits**

The Minimum Barometric Pressure alarm limit screen is used to change the minimum barometric pressure alarm limit. The minimum and maximum barometric pressure screens function the same way.

In the Main Menu, choose Alarms > Pressure/Vacuum Alarms > Baro Pres > **Min** or **Max**.

```
BAROMETRIC PRESSURE: ACTUAL MIN: 400.0
                      400.0 mm<u>H</u>g
                              mmHg?
                   INC/DEC
                   SAVE VALUE
                   DIAGS ALARM
```

Vacuum

The Vacuum screen displays the current vacuum reading and sets the minimum and maximum alarm limits. Acceptable alarm limits range from -5 mmHg to 250 mmHg. If the vacuum reading goes beyond the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Pressure/Vacuum Alarms > Vacuum.

```
5.0 mmHg
                     mmHq
RANGE
       AVG
             DIAGS ALARM
```

Min and Max Vacuum Limits

The Minimum Vacuum alarm limit screen is used to change the minimum vacuum alarm limit. The minimum and maximum vacuum screens function the same way.

Note The maximum vacuum value should not be changes, as this is also used as a protective feature for the instrument. **\(\Delta\)**


In the Main Menu, choose Alarms > Pressure/Vacuum Alarms > Vacuum > **Min** or **Max**.

```
DIAGS ALARM
RANGE
       AVG
```

Flow

The Flow screen displays the current flow reading and sets the minimum and maximum alarm limits. Acceptable alarm limits range from -5 mmHg to 40 mmHg. If the flow reading goes beyond the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Pressure/Vacuum Alarms > Flow.

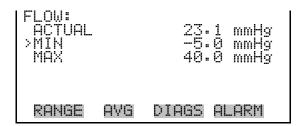

Min and Max Flow Limits

The Minimum Flow alarm limit screen is used to change the minimum flow alarm limit. The minimum and maximum flow screens function the same way.

In the Main Menu, choose Alarms > Pressure/Vacuum Alarms > Flow > **Min** or **Max**.



Flow Alarms

The Flow Alarms submenu allows the user to view and set the flow alarm parameters.


In the Main Menu, choose Alarms > **Flow Alarms**.



Flow

The Flow screen displays the current flow and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 16.00 to 17.34 LPM. If the flow reading goes beyond the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Flow Alarms > Flow.

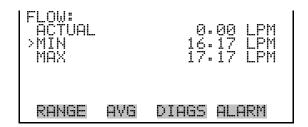

Min and Max Flow Limits

The Minimum Flow alarm limit screen is used to change the minimum flow alarm limit. The minimum and maximum flow screens function the same way.

In the Main Menu, choose Alarms > Flow Alarms > Flow > **Min** or Max.



Concentration Alarms

The Concentration Alarms submenu allows the user to view and set the 24hour average concentration and the instant concentration for PM, SHARP, and nephelometer alarm parameters.

In the Main Menu, choose Alarms > **Conc Alarms**.



Average PM

The Average PM screen displays the current average PM concentration and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 0 to 10000 μg/m³ or 0 to 10 mg/m³. If the average PM concentration goes beyond either the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.


In the Main Menu, choose Alarms > Conc Alarms > Avg PM.



Min and Max Average **PM Concentration Limits**

The Minimum Average PM Concentration alarm limit screen is used to change the minimum average PM concentration alarm limit. The minimum and maximum average PM concentration screens function the same way.

In the Main Menu, choose Alarms > Conc Alarms > Avg PM > **Min** or Max.

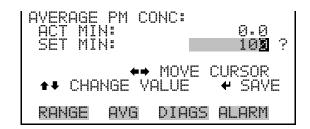

Average SHARP

The Average SHARP screen displays the current average SHARP concentration and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 0 to 10000 µg/m³ or 0 to 10 mg/m³. If the average SHARP concentration goes beyond either the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Conc Alarms > **Avg SHARP**.



Min and Max Average **SHARP Concentration** Limits

The Minimum Average SHARP Concentration alarm limit screen is used to change the minimum average SHARP concentration alarm limit. The minimum and maximum average SHARP concentration screens function the same way.

In the Main Menu, choose Alarms > Conc Alarms > Avg SHARP > Min or Max.



Average Nephelometer

The Average Nephelometer screen displays the current average Nephelometer concentration and sets the minimum and maximum alarm limits. Acceptable alarm limits range from 0 to 10000 µg/m³ or 0 to 10 mg/m³. If the average nephelometer concentration goes beyond either the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.


In the Main Menu, choose Alarms > Conc Alarms > **Avg Neph**.

```
AVERAGE NEPH CONC:
                        0.0
                      10000
        AVG
```

Min and Max Average Nephelometer **Concentration Limits**

The Minimum Average Nephelometer Concentration alarm limit screen is used to change the minimum average nephelometer concentration alarm limit. The minimum and maximum average nephelometer concentration screens function the same way.

In the Main Menu, choose Alarms > Conc Alarms > Avg Neph > Min or Max.

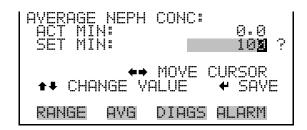

Instant PM

The Instant PM screen displays the current instant PM concentration and sets the minimum and maximum alarm limits. Acceptable alarm limits range from -10 to 10000 μg/m³ or -.01 to 10 mg/m³. If the instant PM concentration goes beyond either the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Conc Alarms > **Inst PM**.



Min and Max Instant PM **Concentration Limits**

The Minimum Instant PM Concentration alarm limit screen is used to change the minimum instant PM concentration alarm limit. The

minimum and maximum instant PM concentration screens function the same way.

In the Main Menu, choose Alarms > Conc Alarms > Inst PM > **Min** or Max.



Instant SHARP

The Instant SHARP screen displays the current instant SHARP concentration and sets the minimum and maximum alarm limits. Acceptable alarm limits range from -10 to 10000 μg/m³ or -.01 to 10 mg/m³. If the instant SHARP concentration goes beyond either the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Conc Alarms > Inst SHARP.



Min and Max Instant **SHARP Concentration** Limits

The Minimum Instant SHARP Concentration alarm limit screen is used to change the minimum instant SHARP concentration alarm limit. The minimum and maximum instant SHARP concentration screens function the same way.

In the Main Menu, choose Alarms > Conc Alarms > Inst SHARP > Min or Max.



Instant Nephelometer

The Instant Nephelometer screen displays the current instant nephelometer concentration and sets the minimum and maximum alarm limits. Acceptable alarm limits range from -10 to 10000 µg/m³ or -.01 to 10 mg/m³. If the instant nephelometer concentration goes beyond either the minimum or maximum limit, an alarm is activated and the alarm (bell) icon appears in the status bar on the Run screen and in the Main Menu.

In the Main Menu, choose Alarms > Conc Alarms > **Inst Neph**.



Min and Max Instant Nephelometer Concentration Limits

The Minimum Instant Nephelometer Concentration alarm limit screen is used to change the minimum instant nephelometer concentration alarm limit. The minimum and maximum instant nephelometer concentration screens function the same way.

In the Main Menu, choose Alarms > Conc Alarms > Inst Neph > Min or Max.



Service Menu

The Service menu appears only when the instrument is in the service mode. When the service mode is active, the service (wrench) icon is displayed on the right side of the status bar. To put the instrument into the service mode:

In the Main Menu, choose Instrument Controls > **Service Mode**.

Advanced diagnostic functions are included in the service mode. Meaningful data should not be collected when the instrument is in the service mode.

In the Main Menu, choose **Service**.



RH/Temperature Calibration

The RH/Temperature Calibration submenu allows the user to view and set the relative humidity and temperature sensor calibration. The RH/temperature calibration submenu is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in this chapter.

Note This adjustment should only be performed by an instrument service technician.

In the Main Menu, choose Service > **RH/Temp Calibration**.

```
RH/TEMP_CALIBRATION:
```

Ambient Temperature

The Ambient Temperature screen allows the user to view and calibrate ambient temperature. Adjust the zero offset until the ambient temperature agrees with your treaceable standard.

In the Main Menu, choose Service > RH/Temp Calibration > Ambient Temp.



Flow Temperature

The Flow Temperature screen allows the user to view and calibrate flow temperature. Be sure to have the cover removed and equilibrated to room temperature.


In the Main Menu, choose Service > RH/Temp Calibration > Flow Temp.

```
DIAGS ALARM
```

Ambient Relative Humidity

The Ambient Relative Humidity screen allows the user to view and calibrate relative humidity. Adjust the zero offset until the RH agrees with your treaceable standard.

In the Main Menu, choose Service > RH/Temp Calibration > Ambient RH.

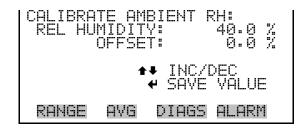

Pressure/Vacuum **Calibration**

The Pressure/Vacuum Calibration submenu allows the user to view and calibrate the pressure sensor and vacuum flow sensor. The pressure/vacuum calibration submenu is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in this chapter.

Note This adjustment should only be performed by an instrument service technician.

In the Main Menu, choose Service > **Pres/Vacuum Calibration**.



Barometer Pressure Calibration

The Barometer Pressure Calibration submenu is used to calibrate the barometer pressure offset, span or reset default values.

In the Main Menu, choose Service > Pres/Vacuum Calibration > Baro Pres.



Calibrate Barometer Pressure Offset

The Calibrate Barometer Pressure Offset screen allows the user to calibrate the pressure sensor at offset pressure.

Note The operator should use an independent barometer to measure the ambient pressure and enter the value on this screen before calibrating. ▲

In the Main Menu, choose Service > Pres/Vacuum Calibration > Baro Pres Calibration > Offset.



Calibrate Barometer Pressure Span

The Calibrate Barometer Pressure Span screen allows the user to view and pressure sensor calibration span point.

Note The operator should use an independent barometer to measure the ambient pressure and enter the value on this screen before calibrating. ▲


In the Main Menu, choose Service > Pres/Vacuum Calibration > Baro Pres Calibration > Span.



Restore Default Calibration

The Restore Default Calibration screen allows the user to reset the default values.

In the Main Menu, choose Service > Pres/Vacuum Calibration > Baro Pres Calibration > Set Defaults.

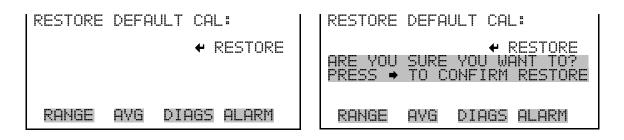

Vacuum/Flow Calibration

The Vacuum/Flow Calibration submenu is used to calibrate the vacuum/flow offset, vacuum/flow span, or reset default values.

In the Main Menu, choose Service > Pres/Vacuum Calibration > Vac/Flow.

```
.0000
AVG
     DIAGS
            ALARM
```

Calibrate Vacuum/Flow Offset

The Calibrate Vacuum/Flow Offset screen calibrates the vacuum/flow sensor offset value.

In the Main Menu, choose Service > Pres/Vacuum Calibration > Vac/Flow > Vac/Flow Offset.


```
RANGE
       AVG
             DIAGS ALARM
```

Calibrate Vacuum Pressure Span

The Calibrate Vacuum Pressure Span screen allows the user to view and set the flow sensor calibration span point.

Note The operator should use an independent manometer capable of measuring approximately 100 mmHg of vacuum. Measure the vacuum under the filter tape from the positive ΔP port on the rear panel of the instrument and enter the value on this screen before calibrating. **\(\Delta\)**

In the Main Menu, choose Service > Pres/Vacuum Calibration > Vac/Flow > Vac Pres Span.

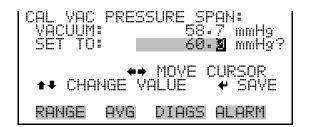


Calibrate Flow Pressure Span

The Flow Pressure Span screen allows the user to view and set the flow sensor calibration span point.

Note The operator should use an independent manometer, capable of 30 mmHg ΔP , to measure the differential pressure across the orifice using the positive and negative ΔP ports on the rear panel, and enter the value on this screen before calibrating. ▲

In the Main Menu, choose Service > Pres/Vacuum Calibration > Vac/Flow > Flow Pres Span.

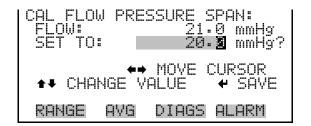

Restore Default Calibration

The Restore Default Calibration screen allows the user to reset the default values.

Note Be sure to close the toggle switch after calibration is complete. **\(\Delta\)**

In the Main Menu, choose Service > Pres/Vacuum Calibration > Vac/Flow > Set Defaults.



Flow Calibration

The Flow Calibration submenu is used to view and set the flow calibration flow point. The flow calibration screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

Note This adjustment should only be performed by an instrument service technician.

In the Main Menu, choose Service > **Flow Calibration**.



Auto Flow Calibration

The Auto Flow Calibration screen allows the user to view and set the correct flow rate. The span value is automatically calculated.


In the Main Menu, choose Service > Flow Calibration > **Auto**.



Manual Flow Calibration

The Manual Flow Calibration screen allows the user to view and incrementally set the flow sensor calibration span factor.

In the Main Menu, choose Service > Flow Calibration > Manual.

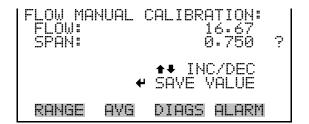

Mass Calibration

The Mass Calibration submenu is used to view and set the mass calibration point. The mass calibration screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

Note This adjustment should only be performed by an instrument service technician.


In the Main Menu, choose Service > Mass Calibration.



Thermal Mass Coefficient

The Thermal Mass Coefficient screen allows the user to view and set the thermal coefficient using manual calibration mode. (Factory set.)


In the Main Menu, choose Service > Mass Calibration > **Thermal** Coefficient.

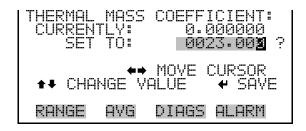

Vacuum Mass Coefficient

The Vacuum Mass coefficient screen allows the user to view and set the vacuum coefficient using manual calibration mode. (Factory set.)


In the Main Menu, choose Service > Mass Calibration > **Vacuum** Coefficient.

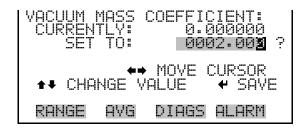

Barometer Mass Coefficient

The Barometer Mass Coefficient screen allows the user to view and set the barometer coefficient using manual calibration mode. (Factory set.)

In the Main Menu, choose Service > Mass Calibration > **Baro** Coefficient.

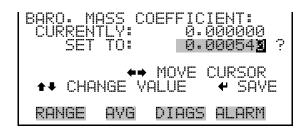

Mass Coefficient

The Mass Coefficient submenu allows the user to view and set the mass coefficient using manual or auto mode. (Factory set.)

In the Main Menu, choose Service > Mass Calibration > Mass Coefficient.

```
MASS COEFFICIENT:
 MANUAL
```

Auto Mass Coefficient

The Auto Mass Coefficient screen allows the user to conduct a mass foil calibration.

Note After pressing () a series of screens will walk you through the mass foil calibration procedure. For details, see "Auto Mass Coefficient" on page 4-9. ▲

In the Main Menu, choose Service > Mass Calibration > Mass > Auto.



Manual Mass Coefficient

The Manual Mass Coefficient screen allows the user to adjust the mass coefficient used in beta attenuation.

In the Main Menu, choose Service > Mass Calibration > Mass > Manual.




Alpha Efficiency Coefficient

The Alpha Efficiency Coefficient screen allows the user to view and set the alpha efficiency value.

Note This value is set in the factory and should not be adjusted. **\(\Delta\)**

In the Main Menu, choose Service > Mass Calibration > **Alpha Eff** Coefficient.

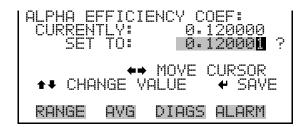


Detector Calibration

The Detector Calibration submenu is used to view and set the detector calibration. The detector calibration screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

Note This adjustment should only be performed by an instrument service technician on a defined service interval and at least once per year, or if the detector is replaced. ▲

In the Main Menu, choose Service > **Detector Calibration**.

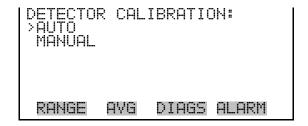

Auto Detector Calibration

The Auto Detector Calibration screen allows the user to conduct a detector optimization routine that will establish the optimal plateau for detector performance. This process takes approximately 30 minutes and will set a high voltage and thresholds for alpha and beta reference counts.


In the Main Menu, choose Service > Detector Calibration > **Auto**.

```
DETECTOR AUTO
HIGH VOLT:
BETA CNT :
           TO START AUTO CAL
            AVG
                   DIAGS
                            ALARM
 RANGE
```

Manual Detector Calibration

The Mass Coefficient submenu allows the user to perform a mass foil calibration using a zero (null) and span foil set.


In the Main Menu, choose Service > Detector Calibration > **Manual**.

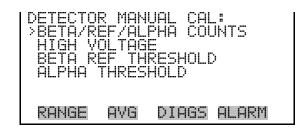

Beta/Ref/Alpha Counts

The Beta/Ref/Alpha Counts screen allows the user to view the real-time alpha and beta counts.

In the Main Menu, choose Service > Detector Calibration > Manual > Beta/Ref/Alpha Counts.

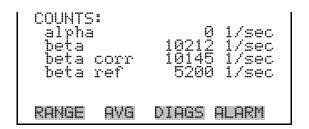

High Voltage

The High Voltage screen allows the user to view and set the high voltage value.


In the Main Menu, choose Service > Detector Calibration > Manual > High Voltage.



Beta Ref Threshold

The Beta Ref Threshold screen allows the user to view and set the detector operating voltage manually.

In the Main Menu, choose Service > Detector Calibration > Manual > Beta Ref Threshold.

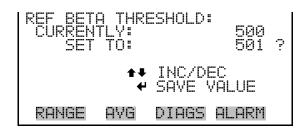

Alpha Threshold

The Alpha Threshold screen allows the user to view and set the alpha threshold manually.

In the Main Menu, choose Service > Detector Calibration > Manual > Alpha Threshold.



Nephelometer Calibration

The Nephelometer Calibration submenu is used to view and set the nephelometer calibration. The nephelometer calibration screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

Note This adjustment should only be performed by an instrument service technician.

In the Main Menu, choose Service > **Nephelometer Calibration**.



Nephelometer RH

The Nephelometer RH screen allows the user to view and calibrate the nephelometer relative humidity.

In the Main Menu, choose Service > Neph Calibration > **Neph RH**.



Nephelometer **Temperature**

The Nephelometer Temperature screen allows the user to view and calibrate the nephelometer temperature sensor calibration.

In the Main Menu, choose Service > Neph Calibration > **Neph** Temp.



Nephelometer Source Level

The Nephelometer Source Level screen allows the user to view and calibrate the source level.

In the Main Menu, choose Service > Neph Calibration > **Neph Src** Level.




Analog Output Calibration

The Analog Output Calibration menu provides access to the 6 voltage channels and 6 current channels for calibration. Current channels are visible only if the I/O expansion board is installed. The analog output calibration menu is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in this chapter.

Note This adjustment should only be performed by an instrument service technician.

In the Main Menu, choose Service > **Analog Out Calibration**.



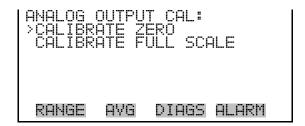

Analog Output Calibrate Zero

The Analog Output Calibrate Zero screen allows the user to calibrate the zero state of the selected analog output. The operator must connect a volt meter to the output and adjust the output until it reads 0.0 V on the meter for a voltage channel, or either 0 or 4 mA for a current channel (depending on the selected range). See the "set output to:" field on the display.

In the Main Menu, choose Service > Analog Out Cal > select Channel > **Calibrate Zero**.

```
ANALOG OUTPUT CAL: CONNECT METER TO
                                   100
                     DIAGS
                               ALARM
```

Analog Output Calibrate Full-Scale

The Analog Output Calibrate Full-Scale screen allows the user to calibrate the full-scale state of the selected analog output. The operator must connect a volt meter to the output and adjust the output until the meter reads the value shown in the "set output to:" field, in either V or mA, depending on the selected output channel.

In the Main Menu, choose Service > Analog Out Cal > select Channel > Calibrate Full Scale.

```
ANALOG OUTPUT CAL: SPA
CONNECT METER TO OUTPUT
SELECTED OUTPUT: ___Y1
                                 DIAGS
```

Analog Input Calibration

The Analog Input Calibration menu is used to calibrate the 8 analog input channels at both zero and full-scale. The analog input calibration menu is visible only when the I/O expansion board is installed and when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in this chapter.

Note This adjustment should only be performed by an instrument service technician.

In the Main Menu, choose Service > **Analog Input Calibration**.



```
AVG
RANGE
             DIAGS ALARM
```

Analog Input Calibrate Zero

The Analog Input Calibrate Zero screen allows the user to calibrate the zero state of the selected analog input.


In the Main Menu, choose Service > Analog Input Cal > select Channel > **Calibrate Zero**.

```
ANALOG INPUT CAL:
DISCONNECT SELECTED
SELECTED INPUT:
 CURRENTLY:
    CALIBRATE INPUT TO ZERO
 RANGE
            AVG
                    DIAGS
                             ALARM
```

Analog Input Calibrate Full-Scale

The Analog Input Calibrate Full-Scale screen allows the user to calibrate the full-scale state of the selected analog input.

In the Main Menu, choose Service > Analog Input Cal > select Channel > Calibrate Full Scale. (Hook up a voltage source of 10 V to the analog input channel.)

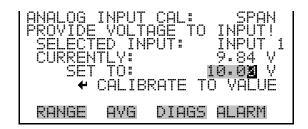

Display Pixel Test

The Display Pixel Test screen is used to test the LCD display, by toggling between all pixels on and all pixels off to ensure that they are functioning properly. The display pixel test screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in this chapter.

In the Main Menu, choose Service > **Display Pixel Test**.



Restore User Defaults The Restore User Defaults screen is used to reset the user calibration and configuration values to factory defaults. The restore user defaults screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in this chapter.


In the Main Menu, choose Service > **Restore User Defaults**.



Defaults

Restore Factory The Restore User Defaults screen is used to reset the user calibration and configuration values to factory defaults. The restore user defaults screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in this chapter.

In the Main Menu, choose Service > **Restore User Defaults**.

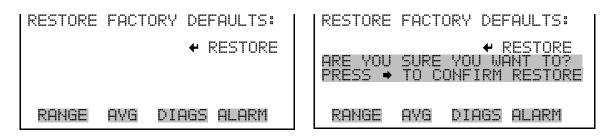

Password Menu

The Password menu allows the user to configure password protection. If the instrument is "locked", none of the settings may be changed via the front panel user interface, but they can still be changed via remote operation. When the front panel is locked, the user can still navigate the menu and view data, instrument parameters, and settings, but nothing can be changed. The password (lock) icon on the right side of the status bar indicates that the password lock is active. The items visible under the Password menu are determined by the instrument's password status.

In the Main Menu, choose **Password**.



Set Password

The Set Password screen is used to set the password that is used to unlock the front panel, and is shown if the instrument is unlocked and the password is not set.

In the Main Menu, choose Password > **Set Password**



Lock Instrument

The Lock Instrument screen is used to lock the instrument's front panel so users cannot change any settings from the front panel. The lock instrument screen is shown if the instrument is unlocked and the password is set.

In the Main Menu, choose Password > **Lock Instrument**



Lock/Unlock and **Local/Remote Operation**

If the instrument is locked via the front panel using Password > **Lock Instrument**, the instrument reports being in Remote mode. In this mode, the front panel is "locked", where data can be viewed, settings can be viewed but not changed using the front panel interface, and the remote "Set" commands are active.

If the instrument keyboard is unlocked via the front panel using Password > **Unlock Instrument**, the instrument reports being in Local mode, the front panel interface is unlocked, and settings can be changed from the front panel.

Refer to "C-Link Protocol Commands" appendix for detailed information about "mode", "allow mode", and "power up mode" commands.

Change Password

The Change Password screen is used to change the password used to unlock the instrument's front panel. The change password screen is shown if the instrument is unlocked.

In the Main Menu, choose Password > **Change Password**



Remove Password

The Remove Password screen is used to erase the current password and disable password protection. The remove password screen is shown if the instrument is unlocked and the password is set.

In the Main Menu, choose Password > Remove Password



Unlock Instrument

The Unlock Instrument screen is used to enter the password to unlock the front panel. The unlock instrument screen is shown if the instrument is locked.

In the Main Menu, choose Password > Unlock Instrument



Chapter 4 Calibration

The Model 5030i is an instrument that can make accurate mass concentration measurements of PM₁₀, PM_{2.5} and PM_{1.0}. However, with all electronic instruments, the accuracy of the measurements depends on proper calibration.

In general terms, calibration, also called standardization, is the process that establishes the relationship between sensor output signals and the parameter the operator is attempting to measure. The 5030*i* instrument uses sensors that measure temperature, humidity, pressure, and radiation. This chapter describes the procedures for performing the necessary sensor calibrations. This chapter is also a follow-up to the Acceptance Testing outlined in the "Installation" chapter and a continuation of the menu display descriptions in the "Operation" chapter.

Frequency of **Calibration**

Each instrument is calibrated and tested for accuracy at the factory. The mass calibration is conducted with a set of NIST-traceable mass calibration foils. The radiation detector is calibrated against certified check sources for beta and alpha emissions. The temperature, relative humidity, pressure and flow rate are all calibrated against NIST traceable standards.

It is recommended that the instrument be calibrated once per year and encounter quality checks on a periodic basis in accordance with the users specific quality assurance project plan. For example, volumetric flow checks on a two-week basis are common in some air monitoring agencies and with full-scale quarterly audits for flow and mass. The Quality Assurance *Handbook for Air Pollution Measurement Systems*, published by the U.S. EPA, Research Triangle Park, NC 27711, can be consulted for detailed quality assurance guidelines.

Equipment Required

Optional mass transfer standards are available from Thermo Fisher Scientific for performing an annual mass calibration. However, additional specialized equipment is needed to calibrate the Model 5030*i* for temperature, relative humidity, barometric pressure, and volumetric flow. The following equipment should be used:

A thermistor or thermocouple thermometer capable of measuring ambient temperatures in a range of -20 to 50 °C, readable to the

nearest 0.1 °C. This thermometer should be referenced to within an accuracy of ±0.5 °C to NIST-traceable precision thermometers. Multiple thermometers may be used to cover the temperature range as long as each thermometer meets the accuracy and readability specifications described above.

- A barometer capable of measuring barometric pressure over a range of 600 to 800 mmHg (80 to 106 kilo Pascals [kPa]) and readable to the nearest 1 mmHg. At least once a year, this barometer should be calibrated to within ±5 mmHg of a NIST-traceable barometer of known accuracy.
- Flow-rate Transfer Standard (FTS) measurement equipment capable of calibrating, or verifying, the volumetric flow rate measurement with an accuracy of ±2 percent. This flow rate standard must be a separate, stand-alone device. It must have its own certification and be traceable to a NIST primary standard for volume or flow rate. Dry-piston meters and bubble flow meters should only be used under controlled laboratory conditions. Ambient field measurements should use a NISTtraceable low pressure drop orifice/venturi flow meter (such as, BGI Delta-Cal) or a Streamline Pro[™] Model SX Kit (2-25 L/min).
- A relative humidity (RH) standard capable of measuring in the range of 35-75% RH, readable to the nearest 0.5% RH and accurate to within 2% RH.

Pre-Calibration

Prior to calibration, be sure the Model 5030*i* is operating properly. The Model 5030i's internal diagnostics makes this a quick and simple process. Turn on the instrument and allow it to stabilize for one hour prior to calibrating. If you are receiving this instrument for the first time, the optional acceptance testing in the "Installation" chapter should also be reviewed. If the internal flow temperature sensor requires calibration, the dynamic heating system should be turned OFF, the cover should be removed, and the instrument should sample room temperature air at least one hour prior to calibrating.

Calibration Procedure

The order of calibration described below is preferred for optimal performance of the 5030i and comes from many years of experience working with and developing ambient particulate monitoring instrumentation. The Calibration submenus allow the user to view and calibrate the instrument. All calibration submenus are visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in Chapter 3.

RH/Temperature Calibration

All screens that appear in this chapter have been referenced in the previous chapter.

Ambient Temperature


Using a NIST-traceable thermometer as a reference collocated next to the ambient RH/temperature sensor assembly, measure and compare three individual readings between both the reference and the 5030*i* response. Taking an average of both sets of readings, calculate the average difference between the two readings and record that as your offset. This offset (ZERO) should now be entered in the screen below:



Be sure to save the entry and compare the values once more. If it appears that the temperature has shifted into the wrong direction, change the sign of your offset value.

Ambient Relative Humidity

Using a NIST-traceable hygrometer as a reference collocated next to the ambient RH/temperature sensor assembly, measure and compare three individual readings between both the reference and the 5030*i* response. Taking an average of both sets of readings, calculate the average difference between the two readings and record that as your offset. This offset (ZERO) should now be entered in the screen below:

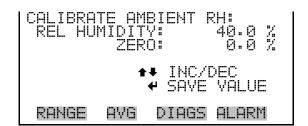


Be sure to save the entry and compare the values once more. If it appears that the temperature has shifted into the wrong direction, change the sign of your offset value.

Flow Temperature

Assuming the instrument cover has been removed, the heater has been turned off and removed from the instrument and the instrument has been sampling room temperature air for 1-hour, this calibration can now proceed.

Using a NIST-traceable thermometer as a reference collocated next to the small sample tube inlet on top of the instrument, measure and compare three individual readings between both the reference and the 5030i response. Taking an average of both sets of readings, calculate the average difference between the two readings and record that as your offset. This offset (ZERO) should now be entered in the screen below:

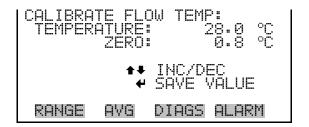



Be sure to save the entry and compare the values once more. If it appears that the temperature has shifted into the wrong direction, change the sign of your offset value.

Pressure/Vacuum There are three pressure sensors that can be calibrated, however, the **Calibration** primary sensor to be calibrated is the barometric pressure sensor. Both the vacuum sensor and pressure flow sensors are re-zeroed automatically with every filter tape change.

Barometer Pressure Calibration

Using a NIST-traceable barometer, measure the barometric pressure (and convert as necessary) in units of millimetres of mercury (mmHg). Use the SPAN feature from the barometric calibration submenu.

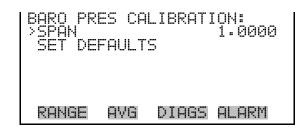


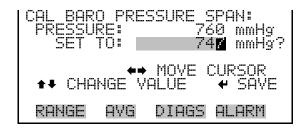

Be sure to save the entry and compare the values once more. Repeat as necessary to within 2 mmHg.

Calibrate Vacuum/Flow Zero

The Calibrate Vacuum/Flow Zero screen calibrates the vacuum/flow sensor at zero value. This is done automatically with every filter tape change. However, if for any reason this needs to be done, proceed to the following screen below to execute a zeroing filter tape change.

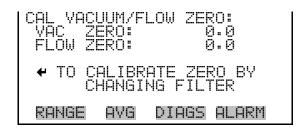

Calibrate Vacuum Pressure Span

The Calibrate Vacuum Pressure Span screen allows the user to view and set the vacuum sensor calibration span point.

To calibrate the vacuum sensor, zero a digital manometer (capable of measuring up to 100 mmHg) and attach to the $+\Delta PA$ port on the rear panel. Then push the toggle switch on the right inward to open (see Figure 4–1). The manometer reading can now be used to calibrate the vacuum sensor.


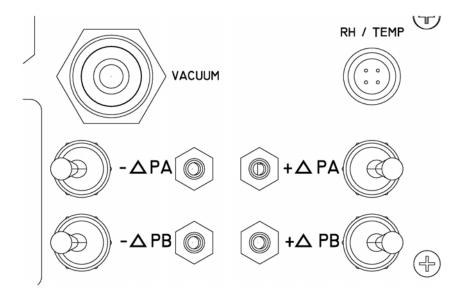


Figure 4–1. Differential Pressure and Vacuum Calibration Ports


In the Main Menu, choose Service > Pres/Vacuum Calibration > Vac/Flow > Vac Pres Span.

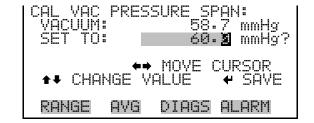

Calibrate Flow Pressure Span

The Flow Pressure Span screen allows the user to view and set the flow sensor calibration span point.

To calibrate the flow pressure sensor span point, the instrument must be pulling an active flow through the filter tape. By use of a manometer, connect the respective +/- ports of your NIST-traceable manometer to the respective rear panel +/- ports. (Please be certain to zero any digital manometers prior to connecting!) Open the ports by pressing the toggle switches inward. Calculate an average reading from the reference manometer in units of mmHg. Enter this span value into the screen below: In the Main Menu, choose Service > Pres/Vacuum Calibration > Vac/Flow > Flow Pres Span.

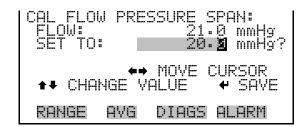

Be sure to save the entry and compare the values once more. Repeat as necessary to within 2 mmHg.

Flow Calibration

The preferred method of flow rate calibration is the Auto Flow Calibration.

Auto Flow Calibration

Place a NIST-traceable volumetric flow meter on top of the instrument after complete installation (reassembled heater tube, sample tubes, and inlets). Allow approximately 1-minute for the flow to stabilize. Once stable, measure and average three individual readings from the reference. This average observed flow rate from your reference meter should now be entered in the screen below:



Be sure to save the entry and compare the values once more. Repeat as necessary to within +/- 2 %.

Perform the "Leak Test" procedure on page 5-6 to verify no leaks.

Mass Calibration

The Model 5030i SHARP is calibrated for mass in the factory using a series of null and span foils. The mass transfer standard foil sets are available from Thermo Fisher Scientific, and should be used as part of a QA Program for performing a QC check on the mass measurements. This mass foil calibration procedure can be used for QC checks, auditing, and calibration.

The Mass Calibration submenu is used to view and set the mass calibration point. The mass calibration screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

Note This adjustment should only be performed by an instrument service technician.

In the Main Menu, choose Service > Mass Calibration>Mass Coefficient.



It is recommended to perform an annual Mass Coefficient on the Model 5030i Beta Monitor.

- The foil sets must be kept in a clean container. **Do not** touch the foil window with your fingers.
- The foils must **not** be wiped, otherwise a loss or gain of mass can occur thereby biasing the mass calibration.
- Foils sets can be returned to Thermo Fisher Scientific for recalibration as necessary.
- Separate foil sets are recommended for periodic QC checks, auditing, and calibration.
- Should the user suspect the foil window(s) has been damaged, scratched, or coated, these foil sets should be returned to Thermo Fisher Scientific for re-calibration.

The null foil has the same approximate mass as a clean filter spot and the span foil is a calibrated mass increase above the null foil. Therefore, the foils come in a set and must not be mixed with other sets since a bias in mass calibration will occur.

Since the beta attenuation method is linear with mass increase, the Model 5030*i* need not be calibrated in the exact range of beta attenuation per filter spot. What is important, is calibrating the corresponding beta count reduction with an increase of calibrated mass.

Note To achieve the most accurate mass calibration, the flow temperature should be as stable as possible and therefore the instrument should have the heating system turned off, and the instrument should be allowed to equilibrate to shelter or ambient temperature. If the Model 5030i Beta is mounted within an ambient shelter, then the most stable time of day to perform a mass calibration would be either early morning or late afternoon.

Mass Coefficient

The preferred method of mass coefficient calibration is the Auto Mode.

In the Main Menu, choose Service > Mass Calibration > **Mass** Coefficient.



Auto Mass Coefficient

The Auto Mass Coefficient screen allows the user to conduct a mass calibration of the measurement head and will walk you through the process.

Use the following procedure to conduct a mass calibration:

- 1. In the Main Menu, choose Service > Mass Calibration > Mass > **Auto**.
- 2. Enter the SPAN foil value (e.g., 1,328 µg) using the keypad and press to save the foil value and to open the bench. The beta attenuation chamber should now open.




Calibration

Calibration Procedure

3. Cut/break the filter tape and remove from the bench. Then insert the Foil Holder from the calibration kit and press (while maintaining a slight sideward pressure on the filter holder.



proceed with the foil calibration, or press [•] to stop the foil.

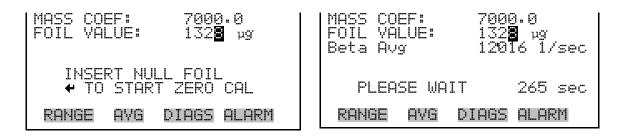

The auto zero procedure of mass will begin and last approximately 270 seconds. When the zero is complete, the beta attenuation measurement will remain closed and an average Beta count rate is displayed.



5. Remove the zero/null foil and insert with the Span foil (e.g., 1328 ug) and press (to begin the span calibration, or press (to stop the foil.





The span foil calibration procedure is now active and after another 270 seconds the calibration procedure should end, whereby a new Mass Coef value is shown and the percent difference is shown from the last foil calibration to the current calibration. This percent difference can also be used to directly audit the mass coefficient value since a percent difference in a mass coefficient is the same percent mass difference overall.

```
COEF:
FOIL
      VALUE:
Beta Avg
diff<u>erenc</u>e
    REMOVE
       TO CONTINUE
 RANGE
           AVG
                 DIAGS ALARM
```

6. After the span calibration, the screen will ask you to press (\(\bigsim\) to accept the new calibration. Otherwise press [•] to keep the old Mass Coef value. Remove the span foil and press (-). The bench will now open. Remove the filter holder, replace the filter tape and press (to confirm the calibration routine has now been competed.

```
MASS COEF:
     VALUE:
FOIL
                       i/sec
Beta Avg
difference
  REMOVE, HOLDE:
                 INSERT
 RANGE
        AVG
              DIAGS ALARM
```


```
difference
       ACCEPT NEW VALUES
        AVG
             DIAGS
```

Detector Calibration

The Detector Calibration submenu is used to view and set the detector calibration. The detector calibration screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

Note This adjustment should only be performed by an instrument service technician.

In the Main Menu, choose Service > **Detector Calibration**.

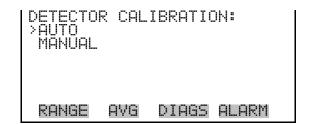

Auto Detector Calibration

The Auto Detector Calibration screen allows the user to optimize the detector performance. This should be done at least once per year and as often as once per quarter.

In the Main Menu, choose Service > Detector Calibration > **Auto**.

```
TO START AUTO CAL
            DIAGS ALARM
RANGE
```

This procedure will take approximately 30 minutes until completed. Thereafter, a high voltage (HV), beta reference threshold and alpha threshold will be assigned a new valve.

Nephelometer Calibration

The Nephelometer Calibration submenu is used to view and set the nephelometer calibration. The nephelometer calibration screen is visible only when the instrument is in service mode. For more information on the service mode, see "Service Mode" earlier in the chapter.

Note This adjustment should only be performed by an instrument service technician.

In the Main Menu, choose Service > **Nephelometer Calibration**.




Nephelometer RH

The Nephelometer RH screen allows the user to view and calibrate the nephelometer relative humidity.

Note Calibration of the nephelometer RH must be done with the heater in the "OFF" position. ▲

In the Main Menu, choose Service > Neph Calibration > **Neph RH**.

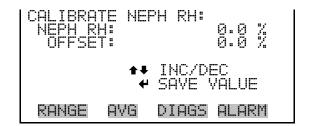

Nephelometer Temperature

The Nephelometer Temperature screen allows the user to view and calibrate the nephelometer temperature sensor calibration.

Note Calibration of the nephelometer temperature must be done with the heater in the "OFF" position. ▲

In the Main Menu, choose Service > Neph Calibration > **Neph Temp**.



Nephelometer Source Level

The Nephelometer Source Level screen allows the user to view and calibrate the source level. This should be within 60-70 mA. If it is outside of this range, please adjust the % SRC Level until the IRED reads 65 mA

In the Main Menu, choose Service > Neph Calibration > **Neph Src** Level.



Chapter 5

Preventive Maintenance

This chapter describes the periodic maintenance procedures that should be performed on the instrument to ensure proper operation. Since usage and environmental conditions vary greatly, you should inspect the components frequently until an appropriate maintenance schedule is determined.

This chapter includes the following preventive maintenance information:

- "Safety Precautions" on page 5-1
- "Replacement Parts" on page 5-2
- "Cleaning the Outside Case" on page 5-2
- "Cleaning the Inlets" on page 5-2
- "Fan Filter Inspection and Cleaning" on page 5-5
- "Pump Rebuilding" on page 5-6
- "Leak Test" on page 5-6
- "Filter Tape Replacement" on page 5-7
- "Greasing the Cam" on page 5-8
- "External Pump Exhaust Filter" on page 5-8
- "Cleaning the SHARP Optics Assembly" on page 5-10

Safety **Precautions**

Read the safety precautions before beginning any procedures in this chapter.



WARNING If the equipment is operated in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. ▲



Replacement **Parts**

See the "Servicing" chapter for a list of replacement parts and the associated replacement procedures.



WARNING If the equipment is operated in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. ▲

Cleaning the Outside Case

Clean the outside case using a damp cloth being careful not to damage the labels on the case.



Equipment Damage Do not use solvents or other cleaning products to clean the outside case.

Cleaning the Inlets

The inlet assemblies can include a TSP inlet, a U.S. EPA compatible PM₁₀ inlet, or a Digital PM₁₀ or PM_{2.5} inlet. Cleaning schedules and routine maintenance of assembly components should be in accordance with a good quality assurance plan.

In general, it is recommended that the inlet assemblies be cleaned on a quarterly interval with mild soap solution, a thorough rinsing, and dried with a lint free cloth. If any impaction surfaces require impactor grease, it should be applied prior to reassembly. Furthermore, a general inspection, and replacement as necessary, of O-rings should be done.



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. For more information about appropriate safety precautions, see the "Servicing" chapter. ▲

U.S. EPA PM₁₀ Inlet

The water collector bottle located on the PM₁₀ inlet should be inspected at least every five sampling days (Figure 5–1). Remove any accumulated water, clean the interior of the bottle, inspect the seals, and replace the bottle in the holder.

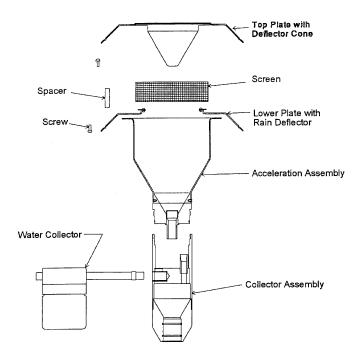


Figure 5–1. U.S. EPA PM₁₀ Inlet

Once a month the sampler inlet should be dismantled and cleaned. Mark each assembly point of the sampler inlet with a pen or pencil to provide reference marks during reassembly.

Disassemble the sample inlet unit according to Figure 5–1. If the assembly screws are frozen, apply penetrating oil or commercial lubricant to make removal easier. Clean all interior surfaces and the bug screen with a general purpose cleaner or compressed air, paying particular attention to small openings and cracks. Cotton swabs and/or a small brush are helpful. Completely dry all components.

Also monthly, check the O-rings for distortion, cracks, fraying, or other problems and replace as necessary. Apply small amounts of grease to the rings before assembling the unit.

Reassemble the unit in accordance with the previously scribed match marks. Particular care should be taken to ensure that all O-rings seals are properly seated and that all screws are uniformly tightened.

European PM₁₀/PM_{2.5} Inlet

The same schedule should be used for the European PM₁₀ Inlet (e.g. Leckel), at approximately a 1-2 month interval. The components of the inlet should be inspected and cleaned as necessary. Figure 5-2 provided below provides an image and design drawing of the inlet, with references to parts.

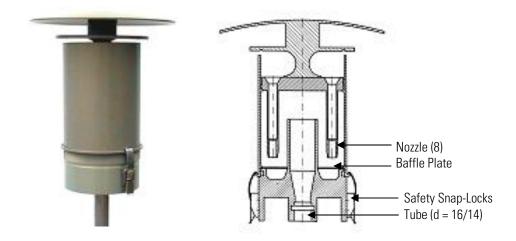


Figure 5–2. European PM₁₀ Inlet

 PM_{10} size selective inlet $(1 \text{ m}^3/\text{h})$ for 5030i Beta:

- Same construction as the EN reference inlet, but with 1 m³/h
- With special surface protection using an aluminium EMATAL surface
- With special water separator and easy exchangeable impactor baffle plate
- Standard tube connection: d = 16 mm for connecting a continuous monitor
- Easy converting to PM_{2.5} using the PM_{2.5} nozzle plate (8 nozzles)
- Easy converting to PM₁ using the PM₁ nozzle plate (8 nozzles)

Cyclone Maintenance

If a Sharp-Cut Cyclone (SCC) or a BGI Very Sharp-Cut Cyclone is being used for PM_{2.5} sampling (Figure 5–3), once every 2-3 weeks the dust pot should be unscrewed, emptied, and cleaned with a lint-free cloth. Once every three months, the entire SCC assembly should be inspected and cleaned, O-rings checked for distortion, cracks, fraying, or other problems. Replace O-rings as necessary.



Figure 5–3. PM_{2.5} Sharp-Cut-Cyclone

Heater and Sample Tube

On at least an annual basis (more frequently in heavily polluted environments) the sample tube that attaches to the inlet and to the Model 5030*i* Beta module should be removed and cleaned. The use of a bottle brush and string will allow you to remove any deposits within the sample tube. This same procedure also applies to the heater tube.

Weather Proofing

The "Installation" chapter covers detailed installation instructions. After proper installation, it is recommended to check the weather-proof installation at all interfaces exposed to ambient conditions. Ensure that the condition of the roof flange and silicone caulking will prevent any precipitation from entering the shelter and possibly damaging the instrument's electronics.

Fan Filter Inspection and Cleaning

Use the following procedure to inspect and clean the fan filter (Figure 5– 4).

- 1. Remove the fan guard from the fan and remove the filter.
- 2. Flush the filter with warm water and let dry (a clean, oil-free purge will help the drying process) or blow the filter clean with compressed air.
- 3. Re-install the filter and fan guard.



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. For more information about appropriate safety precautions, see the "Servicing" chapter. ▲

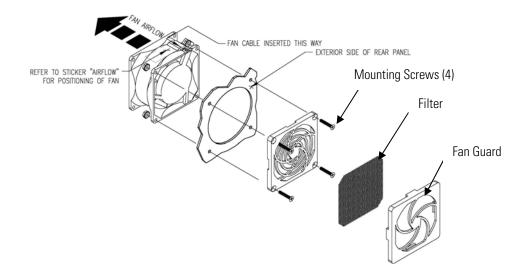


Figure 5–4. Inspecting and Cleaning the Fan

Pump Rebuilding

Rebuild the sample pump once every 12–18 months, or as necessary depending on the environment is is used in. The pump repair kit contains instructions for rebuilding the pump. See the "Servicing" chapter for a list of replacement parts. Perform the "Leak Test" procedure that follows.

Leak Test

This leak test procedure uses a volumetric flow meter and a custom leak check adapter. Use the following procedure to verify no leaks.

- 1. Place a reference volumetric flow meter (e.g., BGI Delta Cal) onto the inlet adapter and calibrate the 5030i SHARP so that the reference flow meter and the 5030i SHARP Monitor read the same flow rate.
- 2. Install the custom leak check adapter onto the inlet adapter and then place the reference flow meter onto the leak check adapter.

3. Record the reference volumetric flow meter reading and the instant flow reading. If the difference between both readings is less than 0.42 L/min (±2.5%), the leak check passes.

Filter Tape Replacement

Use the following procedure to replace the filter tape in case of breaks or if the tape runs out.



- 1. Remove left side panel.
- 2. From the main menu choose Instrument Controls > Filter Tape
- 3. Loosen both reel nuts on tape spindler. Remove used filter tape and empty tape spool from tape spindles.
- 4. Insert new filter tape on left tape spindle and tighten reel nut.
- 5. Insert new blank pick up spool on right tape spindle.
- 6. Route tape according to Figure 5–5.
- 7. Attach end of tape to blank tape spool on right tape spindle with 2-inch of tape.
- 8. Turn blank tape spool until there is two complete wrappings of tape.
- 9. Tighten right reel nut. From Filter Tape Control > Manual > choose **Tape** and press [←] to MOVE tape.
- 10. From the main menu choose Alarms > **Instrument Alarms** to verify that there are no filter tape alarms.
- 11. Replace left side cover.

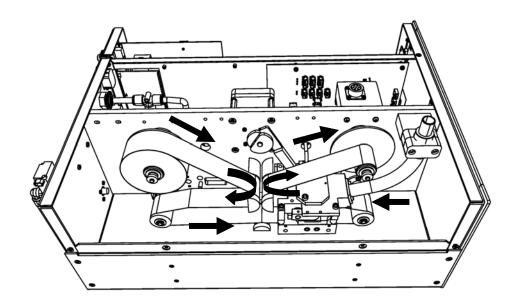


Figure 5–5. Replacing the Filter Tape

Greasing the Cam

Use the following procedure to grease the cam.

Equipment Required:

Dow Corning Molykote G-N

1. Apply metal assembly paste around the parameter of the cam.

External Pump Exhaust Filter

It is recommended to replace the external pump exhaust filter every six months. On an annual basis, remove top plate of optics and vacuum out optic chamber per the following procedure or send it for service and recalibration.



- 1. Turn the Heater OFF: From the Main Menu, choose Instrument Controls > Set Heater > **Control**. Use (↑) until the value reads OFF, and press (-).
- 2. Disconnect RH/temperature connector.
- 3. From the SHARP MIB Board J1, remove the five socket-heads from the top end cap and lift off.
- 4. Remove sealing gasket (note: may be stuck to bottomside of top-end plate).
- 5. Carefully vacuum out optic chamber.
- 6. Re-assemble in reverse order—note careful placement of the sealing gasket.

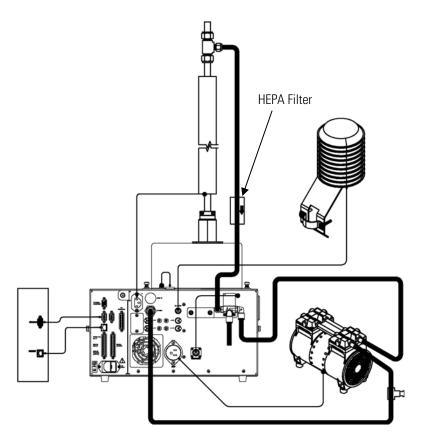


Figure 5–6. Replacing the External Pump Exhaust Filter

Cleaning the **SHARP Optics Assembly**

Use the following procedure to inspect and clean the SHARPoptics assembly. On an annual basis the SHARP optics assembly should be removed and cleaned.

Equipment Required:

Philips screwdriver

Adjustable wrench

Hex wrench



- 1. Turn the instrument OFF, unplug the power cord, and remove the SHARP optics assembly. Refer to "Removing the SHARP Optics Assembly" on page 7-11.
- 2. Remove the two philips screws and remove the SHARP optics cover. Refer to "Removing the SHARP Optics Cover" on page 7-44.
- 3. Disonnect the RH/Temp connector from the SHARP interface board.
- 4. Remove the eight socket head screws from the upper end plate.
- 5. Gently remove the end plate. Carefully remove the sealing gasket.
- 6. Carefully vacuum out the optics chamber using **caution** not to scrap the interior of the optics chamber.
- 7. Re-assemble following the previous steps. Take extra caution in realigning the sealing gasket to avoid air leaks.

Chapter 6 Troubleshooting

This instrument has been designed to achieve a high level of reliability. In the event of problems or failure, the troubleshooting guidelines, board-level connection diagrams, connector pin descriptions, and testing procedures presented in this chapter should be helpful in isolating and identifying problems.

The Technical Support Department at Thermo Fisher Scientific can also be consulted in the event of problems. See "Service Locations" on page 6-25 for contact information. In any correspondence with the factory, please note both the serial number and program number of the instrument.

This chapter provides the following troubleshooting and service support information:

- "Safety Precautions" on page 6-1
- "Troubleshooting Guides" on page 6-1
- "Board-Level Connection Diagrams" on page 6-8
- "Connector Pin Descriptions" on page 6-10
- "Service Locations" on page 6-25

Safety Precautions

Read the safety precautions in the Preface and "Servicing" chapter before performing any actions listed in this chapter.

Troubleshooting Guides

The troubleshooting guides presented in this chapter are designed to help isolate and identify instrument problems.

Table 6–1 provides general troubleshooting information and indicates the checks that you should perform if you experience an instrument problem.

Table 6–2 lists all the alarm messages you may see on the graphics display and provides recommendations about how to resolve the alarm condition.

 Table 6–1. Troubleshooting - General Guide

Malfunction	Possible Cause	Action	
No power	Main fuses are blown are missing	Check voltages from power supply.	
	Digital electronics defective	Check that all boards and connectors are seated properly.	
		Replace with spare boards to isolate the problem.	
No automatic filter change	Reel nuts not tight	Tighten reel nuts.	
	No more filter tape	Replace with new filter tape.	
	Filter not properly adhered or broken	Adhere filter tape to take-up reel and wind over itself once.	
	Filter tape transport drive motor defective	Replace motor.	
	Optical tape counter defective	Replace optical tape transport sensor.	
Pressure sensor(s) board do not hold calibration	Valves closed	Verify ΔP valves on rear panel are in the closed position.	
	Loose plumbing	Verify all plumbing connections.	
	Pressure board defective	Replace pressure printed circuit board.	
Highly variable concentration	Recorder noise	Replace or repair recorder and/or leads.	
	Sample concentration varying	Run Model 5030 <i>i</i> on a zero filter — if quiet, there is no malfunction.	
	Foreign material in optical bench	Clean optical bench.	
	Digital electronics defective	Replace board with a spare board.	
Instrument does not calibrate properly	System leak	Find and repair leak.	
	Pressure or temperture out of calibration	Re-calibrate pressure or temperature.	
	Digital electronics defective	Replace one board at a time with a spare board to isolate the defective board.	
	Flow	Verify ΔP valves on rear panel are in the closed position.	
		Re-calibrate.	
Display is off	Wrong contrast setting	Adjust contrast setting.	

Check connection and cable integrity. Replace display. Change the main circuit board. Check and repair. Check HV. Change detector.
Change the main circuit board. Check and repair. Evalue Check HV.
Change the main circuit board. en Check and repair. e value Check HV.
check and repair. Check HV.
value Check HV.
Chango detector
Change detector.
cect Check filter transport motor and mechanics. Make sure tape is adhered to take-up reel and intact.
unning Check pump power supply and wires.
nge parameter Adjust filter change parameters. value for the en, the monitor
Adjust contrast.
Change LCD.
les from the Replace display ribbon cable. broken
eters wrong Check air flow rate parameters.
with plug (25) Put in the plug (pump regulation input).
ork properly Clean inside parts of pump change.
ion or blocking Clean air passage. ge
ration valve are Close valves. on
not connected Check cable connection.
ot connected. Check cable connection.
ource/Ref Check cable connection.

Malfunction	Possible Cause	Action
No SHARP Concentration	Disconnected Scat Det cable	Check cable connection.
No Zero Air Flow	Rear solenoid valve normally closed	Check rear panel connection—replace valve.
	Clogged in-line filter or internal filter	Replace filter.
	Pump unplugged	Plug in pump.
	Internal solenoid valve normally closed	Check cable connection—replace valve.
	Check zero in bulkhead-tubing connection	Kinked tube—insert tube.
	Check pump exhaust connection	Insert tube in "Y" fitting or pump.
	Check internal "T" fitting for plug or tubing not connected	Insert blocking port plug connect tubing.
Ref Det Voltage	Low or high source current	Check source current level Adjust to 62–67 mA
		Check min and max values/LED current 65mA
Neph Cal	Bad Zero	Re-zero
Neph Temp	High/Low	Check min and max values/ Re-calibrate
Neph RH	Low/High	Check min and max values/ Re-calibrate
Led Current	High/Low	Check min and max values/Verify 65mA ± 5mA

6-4 Model 5030*i* SHARP Instruction Manual Thermo Fisher Scientific

Table 6–2. Troubleshooting - Alarm Messages

Alarm Message	Possible Cause	Action
Instrument Alarms – Filter Tape Counter	Loose reel nuts	Tighten reel nuts.
	Broken tape	Replace tape.
	Loose photo interrupt cable	Verify connections.
Instrument Alarms – Filter Tape Change	Loose reel nuts	Tighten reel nuts.
	Broken tape	Replace tape.
	Tape motor nut turning	Verify connection to measurement interface board.
		Replace tape motor.
Instrument Alarms – Bench	Cam working not functioning	Verify connector to measurement interface board.
		Replace motor.
	Motor turning, cam not	Verify setscrews on cam coupling.
Instrument Alarms – Motherboard Status	Internal cables not connected properly	Check that all internal cables are connected properly. Re-cycle AC power to instrument. If still alarming, change board.
Instrument Alarms – Interface Status	Board defective	Replace board.
Instrument Alarms – I/O Exp Status		
Detector Alarms – Alpha	Detector	Re-calibrate detector.
	Settings	Verify alarm settings are between 0 minimum and 100 maximum.
Detector Alarms – Beta	Disconnected cable	Verify cable connections.
	Defective detector	Replace detector-Beta counts trending towards zero.
	Settings	Verify alarm settings are between 5000 minimum and 20000 maximum.
Nephelometer Alarms – Board Status	Disconnected cable	Verify cable harness is connected to the base.
		WARNING If disconnected, turn off AC power to the base before reconnecting.
Nephelometer Alarms – Neph Sample	Bad zero	Re-zero.

Alarm Message	Possible Cause	Action
	Settings	Verify settings.
Nephelometer Alarms – Neph Cal	Bad zero	Re-zero.
	No flow	Verify values.
Nephelometer Alarms — Neph Temp	Disconnected cable	Verify cable connections.
Nephelometer Alarms – Neph RH	Error in calibrating	Re-calibrate.
	Defective sensor	Replace board.
Nephelometer Alarms — LED Current	Current settings too low	Set LED current to 65 m
	Disconnected cable from base	Verify cable connection.
	Disconnected cable from SHARP optics board	Verify cable connection.
Nephelometer Alarms – Ref Det Volt	Current settings too low	Set LED current to 65 mA.
	Disconnected cable from base	Verify cable connection.
	Disconnected cable from SHARP optics board	Verify cable connection.
RH/Temperature Alarms – Ambient RH	Disconnect cable (external) on rear panel	Verify cable connection.
	Disconnect cable (internal)	Verify cable connection.
RH/Temperature Alarms – Sample RH	Disconnected heater	Verify cable connection.
RH/Temperature Alarms – Ambient Temp	Disconnect cable (external) on rear panel	Verify cable connection.
	Disconnect cable (internal)	Verify cable connection.
RH/Temperature Alarms – Flow Temp	Disconnected cable	Verify connection to measurement interface board.
	Sensor defective	Replace sensor.
RH/Temperature Alarms — Board Temp	Disconnected cable	Verify connection to measurement interface board.
	Sensor defective	Replace sensor.

Alarm Message	Possible Cause	Action
Pressure/Vacuum Alarms — Barometer Pressure	Disconnected cable	Verify cable connections. Replace board.
Pressure/Vacuum Alarms – Vacuum	Disconnected plumbing	Verify plumbing connections.
	Disconnected cable	Verify cable connection.
	Sensor defective	Replace pressure board.
Pressure/Vacuum Alarms — Flow	Disconnected plumbing	Verify plumbing connections
	Disconnected cable	Verify cable connection.
	Sensor defective	Replace pressure board.
	ΔP valve open	Verify valve is in close position.
Flow Alarms – Flow	Low flow	Check that pump is connected.
		Verify that both ΔP valves are in the closed position.
	No flow	Verify proportional valve plumbing.
		Verify connection to measurement interface board.
Conc Alarms – PM	Conc negative	Check heater and Beta counts.
	Conc alarm setting	Verify conc alarm settings.
Conc Alarms – AVG SHARP	Conc negative	Re-zero
	Conc alarm setting	Verify conc alarm settings.

Board-Level Connection Diagrams

Figure 6-1 and Figure 6-2 are board-level connection diagrams for the common electronics and measurement system. These illustrations can be used along with the connector pin descriptions in Table 6–3 through Table 6–7 to troubleshoot board-level faults.

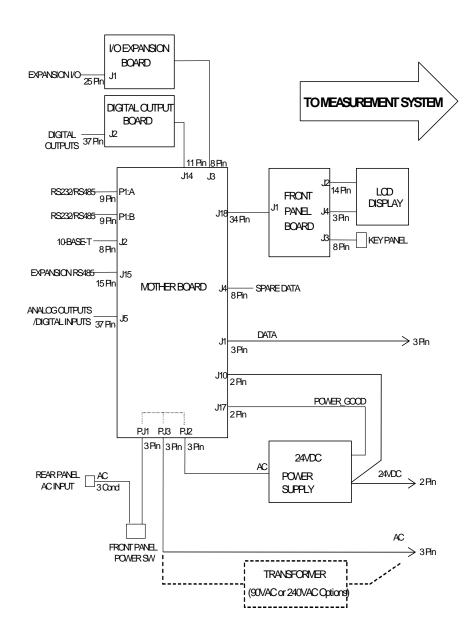


Figure 6-1. Board-Level Connection Diagram - Common Electronics

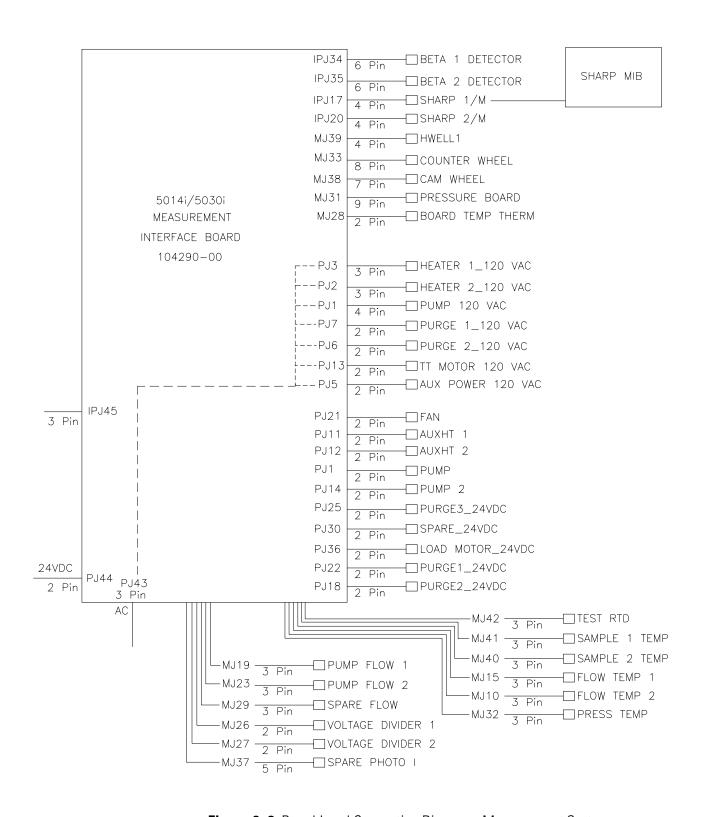


Figure 6-2. Board-Level Connection Diagram - Measurement System

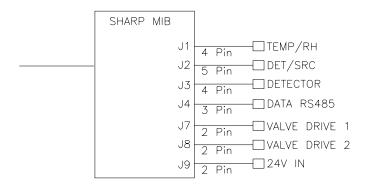


Figure 6–3. Board-Level Connection Diagram - SHARP

Connector Pin Descriptions

The connector pin descriptions in Table 6–3 through Table 6–7 can be used along with the board-level connection diagrams to troubleshoot board-level faults.

Table 6–3. Motherboard Connector Pin Descriptions

Connector Label	Reference Designator	Pin	Signal Description
INTF DATA	J1	1	Ground
		2	+RS485 to Interface Board
		3	-RS485 to Interface Board
10-BASE-T	J2	1	Ethernet Output (+)
		2	Ethernet Output (-)
		3	Ethernet Input (+)
		4	NC
		5	NC

[&]quot;Motherboard Connector Pin Descriptions" on page 6-10

[&]quot;Measurement Interface Board Connector Pin Descriptions" on page 6-15

[&]quot;Front Panel Board Connector Pin Diagram" on page 6-20

[&]quot;I/O Expansion Board (Optional) Connector Pin Descriptions" on page 6-21

[&]quot;Digital Output Board Connector Pin Descriptions" on page 6-23

[&]quot;SHARP Measurement Interface Board Pin Connections" on page 6-24

Connector Label	Reference Designator	Pin	Signal Description
		6	Ethernet Input (-)
		7	NC
		8	NC
EXPANSION BD	J3	1	+5V
		2	+24V
		3	+24V
		4	Ground
		5	Ground
		6	Ground
		7	+RS485 to Expansion Board
		8	-RS485 to Expansion Board
INTERFACE 24V	J4	1	+24V
		2	Ground
I/O	J5	1	Power Fail Relay N.C. Contact
		2	Digital Ground
		3	TTL Input 1
		4	TTL Input 2
		5	Digital Ground
		6	TTL Input 5
		7	TTL Input 7
		8	TTL Input 8
		9	TTL Input 10
		10	Ground
		11	TTL Input 13
		12	TTL Input 15
		13	Digital Ground
		14	Analog Voltage 1
		15	Analog Voltage 3
		16	Analog Ground
		17	Analog Voltage 5
		18	Analog Ground
		19	Analog Ground
		20	Power Fail Relay COM
		21	Power Fail Relay N.O. Contact

Connector Label	Reference Designator	Pin	Signal Description
		22	Digital Ground
		23	TTL Input 3
		24	TTL Input 4
		25	TTL Input 6
		26	Digital Ground
		27	TTL Input 9
		28	TTL Input 11
		29	TTL Input 12
		30	TTL Input 14
		31	TTL Input 16
		32	Digital Ground
		33	Analog Voltage 2
		34	Analog Voltage 4
		35	Analog Ground
		36	Analog Voltage 6
		37	Analog Ground
VOLTAGE TEST	J6	1	+5V
		2	+3.3V
			+15V
			-15V
SER EN	J7	1	Serial Enable Jumper
		2	+3.3V
24V IN	J10	1	+24V
		2	Ground
RESET PROC	J12	1	Reset-Proc
		2	Ground
DIGITAL I/O	J14	1	+5V
		2	+24V
		3	+24V
		4	Ground
		5	Ground
		6	Ground
		7	SPI Reset
		8	SPI Input

Connector Label	Reference Designator	Pin	Signal Description
		9	SPI Output
		10	SPI Board Select
		11	SPI Clock
EXT. RS485	J15	1	-RS485 to Rear Panel
		2	-RS485 to Rear Panel
		3	+5V
		4	+5V
		5	+5V
		6	Ground
		7	Ground
		8	Ground
		9	NC
		10	NC
		11	+24
		12	+24
		13	+24
		14	+24
		15	+24
24 MONITOR	J17	1	24V Power Monitor
		2	Ground
FRONT PANEL BD	J18	1	Ground
		2	Ground
		3	LCLK – LCD Signal
		4	Ground
		5	Ground
		6	LLP - LCD Signal
		7	LFLM — LCD Signal
		8	LD4 – LCD Signal
		9	LDO – LCD Signal
		10	LD5 – LCD Signal
		10 11	LD5 — LCD Signal LD1 — LCD Signal

Connector Label	Reference Designator	Pin	Signal Description
		14	LD7 – LCD Signal
		15	LD3 – LCD Signal
		16	LCD Bias Voltagel
		17	+5V
		18	Ground
		19	Ground
		20	LCD_ONOFF - LCD Signal
		21	Keypad Row 2 Input
		22	Keypad Row 1 Input
		23	Keypad Row 4 Input
		24	Keypad Row 3 Input
		25	Keypad Col 2 Select
		26	Keypad Col 1 Select
		27	Keypad Col 4 Select
		28	Keypad Col 3 Select
		29	Ground
		30	Ground
		31	Ground
		32	Ground
		33	+24V
		34	+24V
RS232/RS485:A	P1:A	1	NC
		2	Serial Port 1 RX (-RS485 IN)
		3	Serial Port 1 TX (-RS485 OUT)
		4	NC
		5	Ground
		6	NC
		7	Serial Port 1 RTS (+RS485 OUT)
		8	Serial Port 1 CTS (+RS485 IN)
		9	NC
RS232/RS485:B	P1:B	1	NC
		2	Serial Port 2 RX (-RS485 IN)
		3	Serial Port 2 TX (-RS485 OUT)
		4	NC

Connector Label	Reference Designator	Pin	Signal Description
		5	Ground
		6	NC
		7	Serial Port 2 RTS (+RS485 OUT)
		8	Serial Port 2 CTS (+RS485 IN)
		9	NC
AC IN	PJ1	1	AC-HOT
		2	AC-NEUT
		3	AC-Ground
AC 24VPWR	PJ2	1	AC-HOT
		2	AC-NEUT
		3	AC-Ground
AC INTF BD	PJ3	1	AC-HOT
		2	AC-NEUT
		3	AC-Ground

Table 6–4. Measurement Interface Board Connector Pin Descriptions

Connector Label	Reference Designator	Pin	Signal Description
PUMP	J1	1	AC+
		2	Pump_AC-
		3	AC-Ground
		4	NC
HEATER 2	J2	1	AC+
		2	Heater2_AC-
		3	AC-Ground
HEATER 1	J3	1	AC+
		2	Heater1_AC-
		3	AC-Ground
WDT DISABLE	J4	1	Input
		2	Ground
AUX PWR 120V	J5	1	AC+
		2	AC-
PURGE 2	J6	1	AC+

Connector Label	Reference Designator	Pin	Signal Description
		2	Purge2_AC-
PURGE 1	J7	1	AC+
		2	Purge1_AC-
PUMP 1	J8	1	+24V
		2	Pump1_On/Off
JTAG INTF	J9	1	TD0
		2	NC
		3	TD1
		4	NC
		5	TMS
		6	NC
		7	TCK
		8	NC
		9	Ground
		10	NC
		11	NC
		12	NC
		13	NC
		14	NC
FLOW TEMP 2	J10	1	Flow2A_RTD
		2	Flow2B_RTD
		3	Ground
AUX HT 1	J11	1	AC+
		2	AuxHT_1_AC-
AUX HT 2	J12	1	AC+
		2	AuxHT_2_AC-
TT MOTOR	J13	1	AC+
		2	TT Motor_AC-
PUMP 2	J14	1	+24V
		2	Pump2_On/Off
FLOW TEMP 1	J15	1	Flow1A_RTD
		2	Flow1B_RTD
		3	Ground
SHARP 1	J17	1	+24V

Connector Label	Reference Designator	Pin	Signal Description
		2	+RS485
		3	-RS485
		4	Ground
PURGE 2 DC	J18	1	+24V
		2	Purge2_DC
PUMP FLOW 1	J19	1	+24V
		2	Aout_Pump1_Flow
		3	Ground
SHARP 2	J20	1	+24V
		2	+RS485
		3	-RS485
		4	Ground
FAN	J21	1	+24V
		2	Fan_Power
PURGE 1 DC	J22	1	+24V
		2	Purge1_DC
PUMP FLOW 2	J23	1	+24V
		2	Aout_Pump2_Flow
		3	Ground
PURGE 3 DC	J25	1	+24V
		2	Spare1_Sol
VD1	J26	1	AIN_VD-1
		2	Ground
VD2	J27	1	AIN_VD-2
		2	Ground
BOARD TEMP	J28	1	Board_Therm
		2	Ground
SPARE FLOW	J29	1	+24V
		2	Aout_Spare_Flow
		3	Ground
PURGE 4 DC	J30	1	+24V
		2	Spare2_Sol
PRESS BD	J31	1	-15V

Connector Label	Reference Designator	Pin	Signal Description
		2	AIN_30PSIA
		3	AIN_FLOW_1
		4	AIN_VAC_2
		5	AIN_FLOW_2
		6	AIN_VAC_1
		7	+5V
		8	+15V
		9	Ground
PRESS TEMP	J32	1	Press_RTD
		2	Press_RTD
		3	Ground
CNTR WHEEL	J33	1	+5V
		2	Ground
		3	Ground
		4	Ground
		5	VOA3
		6	+5V
		7	NC
		8	NC
BETA 1	J34	1	Ground
		2	+RS485
		3	-RS485
		4	Ground
		5	+5V
		6	Ground
BETA 2	J35	1	Ground
		2	+RS485
		3	-RS485
		4	Ground
		5	+5V
		6	Ground
LOAD MOTOR	J36	1	+24V
		2	Load_Motor_On
SP PHOTO	J37	1	+5V

Connector Label	Reference Designator	Pin	Signal Description
		2	Ground
		3	Ground
		4	+5V
		5	VO_SP
CAM WHEEL	J38	1	+5V
		2	Ground
		3	Ground
		4	NC
		5	Dig_Slit
		6	+5V
		7	NC
HWELL 1	J39	1	AIN_RTDP
		2	+5V
		3	AIN_RHP_Hum
		4	Ground
SAMPLE 2 TEMP	J40	1	Sample2A_RTD
		2	Sample2B_RTD
		3	Ground
SAMPLE 1 TEMP	J41	1	Sample1A_RTD
		2	Sample1B_RTD
		3	Ground
TEST RTD	J42	1	SpareA_RTD
		2	SpareB_RTD
		3	Ground
AC IN	J43	1	AC+
		2	AC-
		3	AC-Ground
24V IN	J44	1	+24V
		2	Ground
DATA	J45	1	Ground
		2	+RS485
		3	-RS485

Table 6–5. Front Panel Board Connector Pin Diagram

Connector Label	Reference Designator	Pin	Signal Description
MOTHERBOARD	J1	1	Ground
		2	Ground
		3	LCLK – LCD Signal
		4	Ground
		5	Ground
		6	LLP - LCD Signal
		7	LFLM – LCD Signal
		8	LD4 – LCD Signal
		9	LDO – LCD Signal
		10	LD5 – LCD Signal
		11	LD1 – LCD Signal
		12	LD6 – LCD Signal
		13	LD2 – LCD Signal
		14	LD7 – LCD Signal
		15	LD3 – LCD Signal
		16	LCD Bias Voltagel
		17	+5V
		18	Ground
		19	Ground
		20	LCD_ONOFF - LCD Signal
		21	Keypad Row 2 Input
		22	Keypad Row 1 Input
		23	Keypad Row 4 Input
		24	Keypad Row 3 Input
		25	Keypad Col 2 Select
		26	Keypad Col 1 Select
		27	Keypad Col 4 Select
		28	Keypad Col 3 Select
		29	Ground
		30	Ground
		31	Ground
		32	Ground
		33	+24V

6-20 Model 5030*i* SHARP Instruction Manual Thermo Fisher Scientific

Connector Label	Reference Designator	Pin	Signal Description
		34	+24V
LCD DATA	J2	1	LD0_5V – LCD Signal
		2	LD1_5V – LCD Signal
		3	LD2_5V – LCD Signal
		4	LD3_5V – LCD Signal
		5	LCD_ONOFF_5V - LCD Signal
		6	LFLM_5V - LCD Signal
		7	NC
		8	LLP_5V — LCD Signal
		9	LCLK_5V - LCD Signal
		10	+5V
		11	Ground
		12	-25V
		13	LCD Bias Voltage
		14	Ground
KEYBOARD	J3	1	Keypad Row 1 Input
		2	Keypad Row 2 Input
		3	Keypad Row 3 Input
		4	Keypad Row 4 Input
		5	Keypad Col 1 Select
		6	Keypad Col 2 Select
		7	Keypad Col 3 Select
		8	Keypad Col 4 Select
LCD BACKLIGHT	J4	1	+5V Supply
		2	NC
		3	Ground

Table 6–6. I/O Expansion Board (Optional) Connector Pin Descriptions

Connector Label	Reference Designator	Pin	Signal Description
EXPANSION I/O	J1	1	Analog Voltage Input 1
		2	Analog Voltage Input 2
		3	Analog Voltage Input 3

Connector Label	Reference Designator	Pin	Signal Description
		4	Ground
		5	Analog Voltage Input 4
		6	Analog Voltage Input 5
		7	Analog Voltage Input 6
		8	Ground
		9	Analog Voltage Input 7
		10	Analog Voltage Input 8
		11	Ground
		12	NC
		13	Current Output Return
		14	Ground
		15	Current Output 1
		16	Current Output Return
		17	Current Output 2
		18	Current Output Return
		19	Current Output 3
		20	Current Output Return
		21	Current Output 4
		22	Current Output Return
		23	Current Output 5
		24	Current Output Return
		25	Current Output 6
MOTHER BD	J2	1	+5V
		2	+24V
		3	+24V
		4	Ground
		5	Ground
		6	Ground
		7	+RS485 to Motherboard
		8	-RS485 to Motherboard

Table 6–7. Digital Output Board Connector Pin Descriptions

Connector Label	Reference Designator	Pin	Signal Description
MOTHER BD	J1	1	+5V
		2	+24V
		3	+24V
		4	Ground
		5	Ground
		6	Ground
		7	SPI Reset
		8	SPI Input
		9	SPI Output
		10	SPI Board Select
		11	SPI Clock
DIGITAL OUTPUTS	J2	1	Relay 1 Contact a
		2	Relay 2 Contact a
		3	Relay 3 Contact a
		4	Relay 4 Contact a
		5	Relay 5 Contact a
		6	Relay 6 Contact a
		7	Relay 7 Contact a
		8	Relay 8 Contact a
		9	Relay 9 Contact a
		10	Relay 10 Contact a
		11	NC
		12	Solenoid Drive Output 1
		13	Solenoid Drive Output 2
		14	Solenoid Drive Output 3
		15	Solenoid Drive Output 4
		16	Solenoid Drive Output 5
		17	Solenoid Drive Output 6
		18	Solenoid Drive Output 7
		19	Solenoid Drive Output 8
		20	Relay 1 Contact b

Connector Label	Reference Designator	Pin	Signal Description
		21	Relay 2 Contact b
		22	Relay 3 Contact b
		23	Relay 4 Contact b
		24	Relay 5 Contact b
		25	Relay 6 Contact b
		26	Relay 7 Contact b
		27	Relay 8 Contact b
		28	Relay 9 Contact b
		29	Relay 10 Contact b
		30	+24V
		31	+24V
		32	+24V
		33	+24V
		34	+24V
		35	+24V
		36	+24V
		37	+24V

Table 6–8. SHARP Measurement Interface Board Pin Connections

Connector Label	Reference Designator	Pin	Signal Description
TEMP/RH	J1	1	GNDA
		2	+5V
		3	Temp
		4	RH
DET SRC	J2	1	ADC1
		2	IRED
		3	PHD-A
		4	PHD-K
		5	NC
DETECTOR	J3	1	GNDA
		2	Det-Out
		3	-5V

Connector Label	Reference Designator	Pin	Signal Description
		4	+5V
DATA RS485	J4	1	Ground
		2	+RS485
		3	-RS485
VALVE DRIVE 1	J7	1	+24V DC
		2	Drive 1
VALVE DRIVE 2	J8	1	+24V DC
		2	Drive 2
24V IN	J9	1	+24V DC
		2	Ground

Service Locations

For additional assistance, service is available from exclusive distributors worldwide. Contact one of the phone numbers below for product support and technical information or visit us on the web at www.thermo.com/aqi.

1-866-282-0430 Toll Free

1-508-520-0430 International

Chapter 7 Servicing

This chapter explains how to replace the Model 5030*i* subassemblies. It assumes that a subassembly has been identified as defective and needs to be replaced (or is an "expendable" item, not covered under warranty. Expendable items are indicated with an asterisk (*) in the "Model 5030i Replacement Parts" table.

For fault location information, refer to the "Preventive Maintenance" chapter and the "Troubleshooting" chapter in this manual.

The service mode section in the "Operation" chapter also includes parameters and functions that are useful when making adjustments or diagnosing problems.

For additional service assistance, see "Service Locations" at the end of this chapter.

This chapter includes the following parts information and component replacement procedures:

- "Safety Precautions" on page 7-3
- "Firmware Updates" on page 7-4
- "Accessing the Service Mode" on page 7-4
- "Replacement Parts List" on page 7-5
- "Cable List" on page 7-6
- "External Device Connection Components" on page 7-8
- "Removing the Measurement Case Assembly and Lowering the Partition Panel" on page 7-12
- "Fuse Replacement" on page 7-14
- "Fan/Filter Replacement" on page 7-14
- "Detector Amplifier Assembly Replacement" on page 7-15
- "Detector Amplifier Board Calibration" on page 7-17
- "External Pump Replacement" on page 7-17
- "Pressure Board Replacement" on page 7-18

- "Pressure Board Calibration" on page 7-20
- "Analog Output Testing" on page 7-21
- "Analog Output Calibration" on page 7-24
- "Analog Input Calibration" on page 7-25
- "Themistor Replacement" on page 7-26
- "I/O Expansion Board (Optional) Replacement" on page 7-27
- "Digital Output Board Replacement" on page 7-29
- "Motherboard Replacement" on page 7-30
- "Measurement Interface Board Replacement" on page 7-31
- "Photo Interrupt Board Replacement" on page 7-32
- "Proportional Valve Replacement" on page 7-33
- "Detector Assembly Replacement" on page 7-34
- "Flow RTD Replacement" on page 7-36
- "Transformer Replacement" on page 7-37
- "Radius Tube Replacement" on page 7-38
- "Ambient RH/Temperature Replacement" on page 7-39
- "Front Panel Board Replacement" on page 7-41
- "LCD Module Replacement" on page 7-42
- "Removing the SHARP Optics Cover" on page 7-44
- "External Solenoid Valve Replacement" on page 7-45
- "SHARP RH/Temp Sensor Replacement" on page 7-46
- "SHARP Interface Board Replacement" on page 7-47
- "Delrin Nut Replacement" on page 7-49
- "Internal SHARP Cable Assembly Replacement" on page 7-51
- "Case Cable Replacement" on page 7-52
- "External Zeroing Filter" on page 7-53
- "Service Locations" on page 7-54

Safety Precautions

Read the safety precautions before beginning any procedures in this chapter.



WARNING The service procedures in this manual are restricted to qualified service representatives.

If the equipment is operated in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. ▲

The detector assembly should be replaced by a qualified technician knowledgeable in dealing with radiation precautions. By removing the detector assembly, the C-14 radioactive source is partially exposed. Safety glassed must be worn during this replacement procedure. The amount of C-14 meets the U.S. NRC regulations as an exempt amount of radioactive source <100 μCi. ▲

The detector pre-amp assembly has a power backup built in. "DO NOT OPEN" caution handeling. Backup power will dissipate after 8 hours. **\(\Delta\)**



CAUTION The detector window is very fragile. Handle with great care and do not wipe or touch the window. Furthermore, do not touch the solder cable connection (electrode) with your bare fingers. The oils from your skin can damage the detector.

Safety glasses must be worn while replacing the detector assembly. **\(\Delta\)**

If the LCD panel breaks, do not let the liquid crystal contact your skin or clothes. If the liquid crystal contacts your skin or clothes, wash it off immediately using soap and water. ▲



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component (Figure 7–1). If an antistatic wrist strap is not available, be sure to touch the instrument chassis before touching any internal components. When the instrument is unplugged, the chassis is not at earth ground. ▲

Do not remove the LCD panel or frame from the LCD module. \triangle

The LCD polarizing plate is very fragile, handle it carefully.

Do not wipe the LCD polarizing plate with a dry cloth, as it may easily scratch the plate. **\(\Delta\)**

Do not use alcohol, acetone, MEK or other Ketone based or aromatic solvents to clean the LCD module, but rather use a soft cloth moistened with a naphtha cleaning solvent. ▲

Do not place the LCD module near organic solvents or corrosive gases. **\(\Delta\)**

Do not shake or jolt the LCD module. **\(\Delta\)**

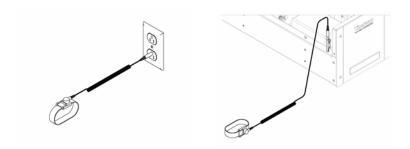


Figure 7–1. Properly Grounded Antistatic Wrist Strap

Firmware Updates

The firmware can be updated by the user in the field via the serial port or over the Ethernet. This includes both the main processor firmware and the firmware in all low-level processors. Refer to the *iPort* manual for the firmware update procedure.

Accessing the **Service Mode**

If the Service menu is not displayed on the Main Menu, use the following procedure to display it.

- 1. From the Main Menu, choose Instrument Controls > **Service Mode**. The Service Mode screen appears.
- 2. Press (←) to toggle the Service Mode to ON.
- to return to the Main Menu.
- 4. Return to the procedure.

Replacement Parts List

Table 7-1 lists the replacement parts for the Model 5030i major subassemblies. Refer to Figure 7-2 to identify the component location.

Table 7–1. Model 5030*i* Replacement Parts

Part Number	Description
100480-00	Front Panel Pushbutton Board
110570-00	Processor Board (new iPort and *.cramfs required)
100533-00	Motherboard
100539-00	Digital Output Board
100542-00	I/O Expansion Board (optional)
102340-00	Front Panel Connector Board
102496-00	Front Panel Display
106926-00	Transformer, Step-Down, 220-240 VAC (optional)
104290-00	Measurement Interface Board
105869-00	Detector Assembly (LND4335)
105938-00	Photo Interrupt Board Assembly
106611-00	Rear Flow RTD Assembly
106536-00	RH Temperature Assembly
106535-00	Heater Tube Assembly, Three Feet
106037-00	Load Motor Assembly
106032-00	Tape Motor Assembly
106470-00	Proportional Valve Assembly
106946-00	Pressure Board Assembly (w/tubing assembly)
425454008	Detector Amp Assembly
106923-00	Pressure Valves
106540-00	Extension tubes w/fitting
101055-00	AC Receptacle Assembly
101681-00	Power Supply Assembly, 24 VDC (with base plate and screws)
101688-00	Ambient Temperature Thermistor (with connector)
100907-00	Fan, 24 VDC
8630	Filter Guard Assembly (with foam)*
109612-00	Fuse, 250 VAC, 10.0 Amp, SlowBlow (for 110 VAC and 115 VAC models)*
109613-00	Fuse, 250 VAC, 5.0 Amp, SlowBlow (for 220-240 VAC models)*

Part Number	Description
10-001403	External Pump Assembly
59-008630	Pump Rebuild Kit
24-000483	Pump Tubing, External 3/8-inch
106994-00	Tubing, Internal 3/8-inch*
104401-00	Tape Guides
106443-00	Filter Tape
108183-00	Tape Hardware Kit
112298-00	Replacement O-ring Kit*
106531-00	Cover Assembly
106988-00	Handles (front, cover)
FH125C14	Calibration Kit (Cal Foils)
10-000447	Modified Shoe for Tripod
106445-00	Metal Assembly Paste
107000-00	Fitting, 5/8 Union w/Nylon Ferrules
107001-00	Tubing, 5/8 Stainless Steel
109583-00	Roof Flange Assembly
57-002758	Large Bypass Filter Assembly*
110504-00	SHARP Radius Tube Adapter Final Assembly
108154-00	SHARP Connector Bracket Assembly
109408-00	Tubing Assembly, Zero-In 3/8-inch*
108151-00	SHARP Assembly
110489-00	Final SHARP Cover Assembly w/Insulation
109489-00	Inlet Dust Cover
110084-00	Delrin Nut
104961-00	Gasket Extrusion Chamber
104955-00	RH/Temp Board Gasket
110481-00	SHARP 3-way Ext Solenoid Valve Final Assembly
110086-00	Heater Adapter CE Kit
110082-00	Custom Gasket for Inlet

^{*}Expendable item, not covered by warranty

Cable List

Table 7–2 lists the Model 5030*i* cables. See the "Troubleshooting" chapter for associated connection diagrams and board connector pin descriptions.

Table 7–2. Model 5030*i* Cables

Part Number	Description
101349-00	AC Power Cable (115 VAC, US)
8926	AC Power Cable (220 VAC, EU)
101036-00	DC Power Supply 24 V Output
101037-00	115 VAC Supply to Measurement Interface Board
101048-00	RS-485/Data
101038-00	AC Power Switch to Motherboard
101364-00	DC Power Supply Status Monitor
101054-00	Motherboard to Front Panel Board
101035-00	DC Power Supply AC Input
101055-00	Main AC from Receptacle Assembly
101377-00	AC to Power Switch
101267-00	Fan Power Assembly
106028-00	RH Temperature Connector Assembly
106030-00	Heater Cable to Heater Assembly
106029-00	Pump Cable to Pump Plug Assembly
106844-00	Rear Solenoid Cable Assembly
106027-00	Pressure to Interrupt Board Cable Assembly
105952-00	Cam Photo Interrupt Cable Assembly
106189-00	Counter Wheel Photo Interrupt Cable Assembly
106400-00	External RH Temperature Cable Assembly
108156-00	SHARP to Measurement Interface Board Cable Assembly
108170-00	SHARP Case Cable Assembly

External Device Connection Components

Table 7-3 lists the standard and optional cables and components used for connecting external devices such as PCs and dataloggers to an iSeries instrument.

Table 7–3. External Device Connection Components

Part Number	Description
102562-00	Terminal Block and Cable Kit (DB25) (optional)
102556-00	Terminal Block and Cable Kit (DB37) (optional)
102645-00	Cable, DB37M to Open End Cable, Six Feet (optional)
102646-00	Cable, DB37F to Open End, Six Feet (optional)
102659-00	Cable, DB25M to Open End, Six Feet (optional)
6279	Cable, RS-232, Six Feet (optional)
102888-00	Terminal Board PCB Assembly, DB37F (standard)
102891-00	Terminal Board PCB Assembly, DB37M (standard)
103084-00	Terminal Board PCB Assembly, DB25M (included with optional I/O Expansion Board)
105968-00	SHARP PCB Assembly
104100-00	RH/Temperature PCB Assembly

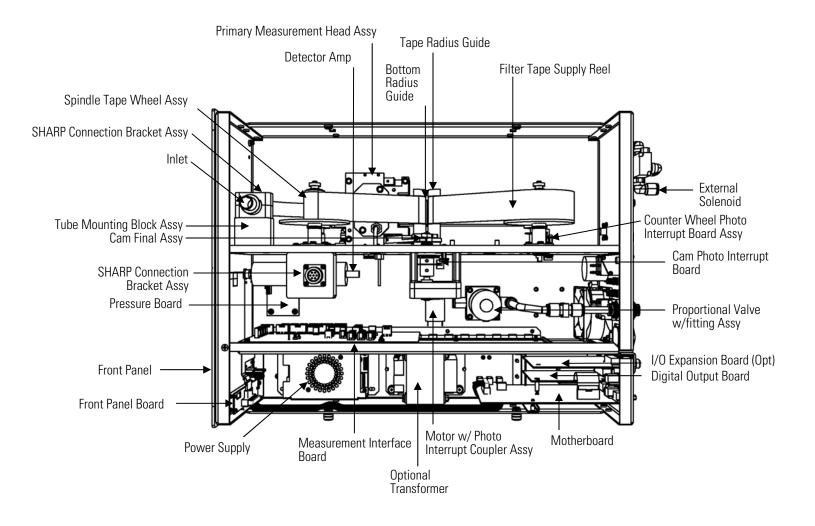


Figure 7–2. Model 5030*i* Component Layout

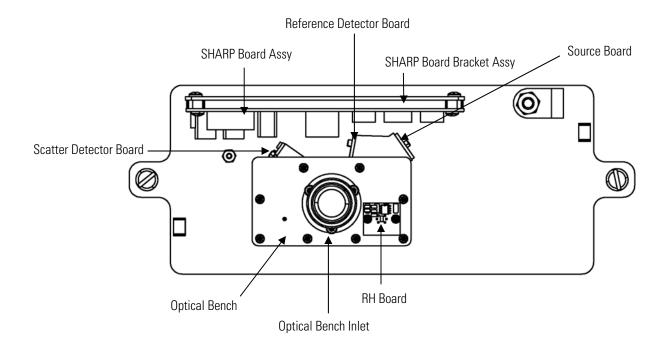


Figure 7–3. SHARP Optics Component Layout

Removing the SHARP Optics Assembly

The SHARP optics assembly can be removed from the measurement case assembly. Refer to the following steps when a procedure requires lowering the partition panel (Figure 7–4).

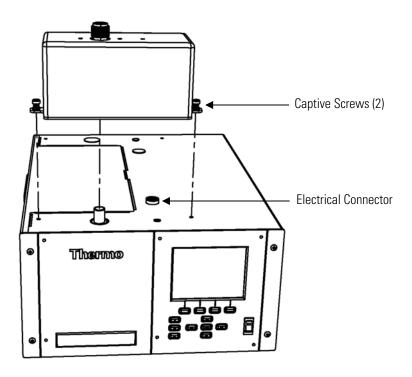


Figure 7–4. Removing the SHARP Optics Assembly

Equipment Required:

Philips screwdriver



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Turn the instrument OFF and unplug the power cord.
- 2. If the instrument is mounted in a rack, remove it from the rack.
- 3. Disconnect the electrical connector.
- 4. Unfasten the two captive hardware screws.

- 5. Pull the cover in an upward direction.
- 6. Replace the SHARP optics assembly by following the previous steps in reverse.

Removing the Measurement Case Assembly and Lowering the Partition Panel

The measurement case assembly can be removed and the partition panel can be lowered to improve access to connectors and components. Refer to the following steps when a procedure requires lowering the partition panel (Figure 7–5).

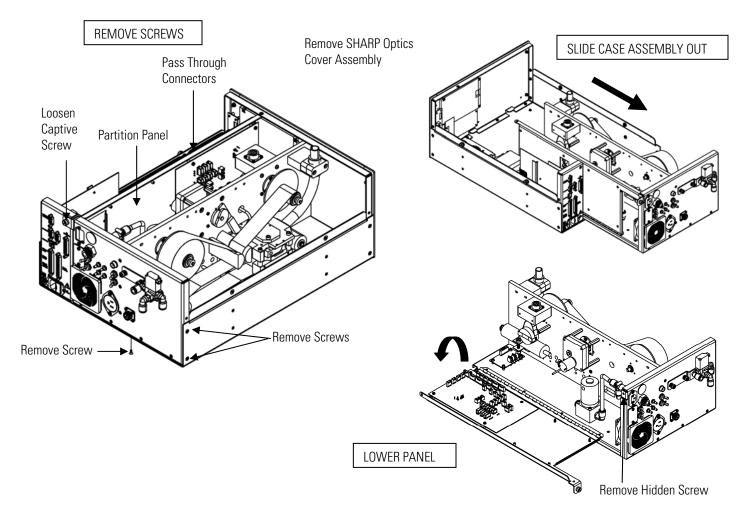


Figure 7–5. Removing the Measurement Case Assembly and Lowering the Partition Panel

Equipment Required:

Philips screwdriver

7-12 Model 5030*i* SHARP Instruction Manual Thermo Fisher Scientific



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Turn the instrument OFF and unplug the power cord.
- 2. If the instrument is mounted in a rack, remove it from the rack.
- 3. Remove the SHARP optics cover assembly, then proceed to the next step below. Refer to "Removing the SHARP Optics Assembly" described previously,
- 4. Disconnect the plumbing connections at the rear of the measurement case assembly.
- 5. Disconnect the connectors that pass through the center of the partition panel.
- 6. Remove two screws from the left side rear of the case (viewed from the front).
- 7. Remove one screw from the bottom rear of the case.
- 8. Remove one screw from the top front of the partition panel.
- 9. While holding the case securely, loosen the captive screw at the rear of the measurement case assembly, and pull the measurement case assembly from the rear of the case.
- 10. Remove the screw at the top rear of the partition panel that secures the top of the panel to the measurement case assembly, and lower the panel, being careful not to put excessive tension on the cables.
- 11. Replace the measurement case assembly by following the previous steps in reverse.

Fuse Replacement

Use the following procedure to replace the fuse.

Equipment Required:

Replacement fuses (refer to the "Replacement Parts List" in this chapter).

- Turn the instrument OFF and unplug the power cord.
- Remove the fuse drawer, located on the AC power connector.
- 3. If either fuse is blown, replace both fuses.
- 4. Insert fuse drawer and re-connect power cord.

Fan/Filter Replacement

Use the following procedure to replace the fan and the fan filter (Figure 7–

Equipment Required:

Fan

Fan filter

Philips screwdriver

Cable cutter (for tie-wrap removal)



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- Turn the instrument OFF, unplug the power cord, and remove the cover.
- Remove the fan guard and filter from the fan by unsnapping it.
- 3. If the fan is not being replaced, install the new filter, and snap it back into place, and skip the remaining steps.
- 4. Disconnect the fan power cable from the fan. Do not lose the four nuts.

- 5. Remove the four fan mounting screws and remove the fan.
- 6. Install a new fan following the previous steps in reverse.

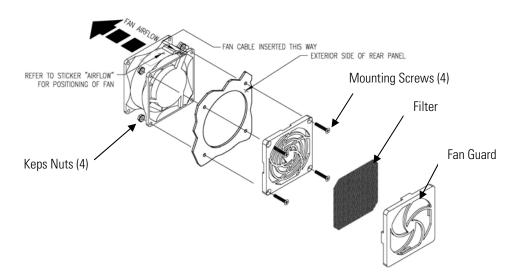


Figure 7–6. Replacing the Fan

Detector Amplifier Assembly Replacement

Use the following procedure to replace the detector/preamplifier assembly (Figure 7–7).

Equipment Required:

Detector amplifier assembly

Philips screwdriver

Adjustable wrench



WARNING The detector pre-amp assembly has a power backup built in. "DO NOT OPEN" caution handeling. Backup power will dissipate after 8 hours.



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

1. Turn the instrument OFF and unplug the power cord.

- 2. Remove the SHARP optics cover assembly and the measurement case assembly, as described earlier.
- 3. Disconnect the cable from the detector amplifier assembly connector on the measurement interface board and disconnect the SHV connector from the detector amplifier.
- 4. Remove the one screw holding the detector amplifier mounting bracket and slide out the detector amplifier assembly.

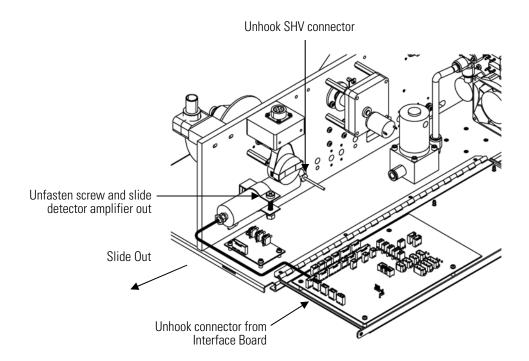


Figure 7–7. Replacing the Detector Amplifier Assembly

- 5. Install the new detector amplifier assembly by following the previous steps in reverse.
- 6. Calibrate the detector amplifier board. Refer to the "Detector Amplifier Board Calibration" procedure that follows.

Note If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step. ▲

7. Calibrate the instrument. Refer to the "Calibration" chapter in this manual.

Detector Amplifier Board Calibration

Calibrate the detector amplifier after replacing the detector amplifier board.

Note This adjustment should only be performed by an instrument service technician.

- 1. Let the instrument sample zero air for about 90 minutes.
- 2. From the Main Menu, choose Service > Detector Calibration > **Auto.** The Auto Detector Calibration screen appears.

Note If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step. ▲

3. At the Detector Calibration screen, press [to start the auto detector calibration.

External Pump Replacement

Use the following procedure to replace the pump (Figure 7–8).

Pump

Adjustable wrench

Equipment Required:



- 1. Turn the instrument OFF, unplug the power cord, and remove the cover.
- 2. Disconnect the pump power cable from the rear panel.
- 3. Remove both lines from the pump.

- 4. Install the new pump by following the previous steps in reverse.
- 5. Perform a leak test as described in the "Preventive Maintenance" chapter.

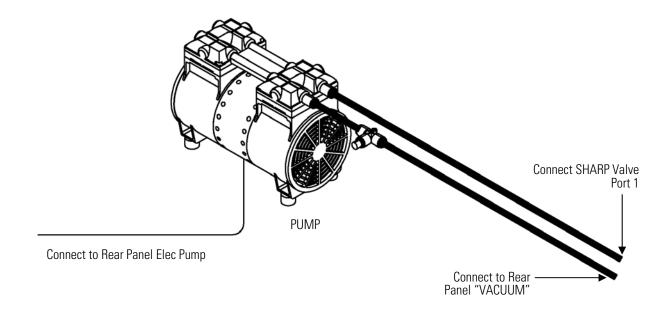


Figure 7–8. Replacing the Pump

Pressure Board Replacement

Use the following procedure to replace the pressure board (Figure 7–9).

Equipment Required:

Pressure board

Philips screwdriver, #2



- Turn the instrument OFF, unplug the power cord, and remove the cover.
- 2. Disconnect plumbing from the pressure board assembly (Figure 7–10). Note the plumbing connections to facilitate reconnection.

- 3. Disconnect the pressure board from the floor plate on the measurement interface board.
- 4. Remove the four pressure board assembly retaining screws and remove the pressure board assembly (Figure 7–9).

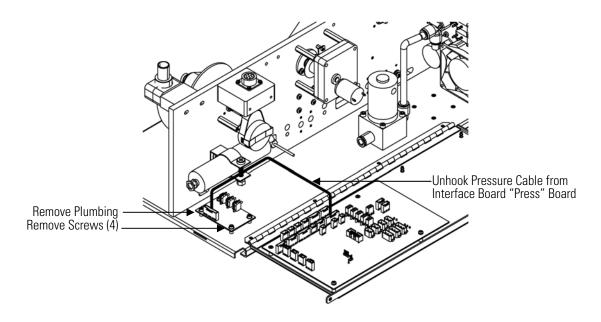


Figure 7–9. Replacing the Pressure Board Assembly

5. To install the pressure board assembly, follow the previous steps in reverse.

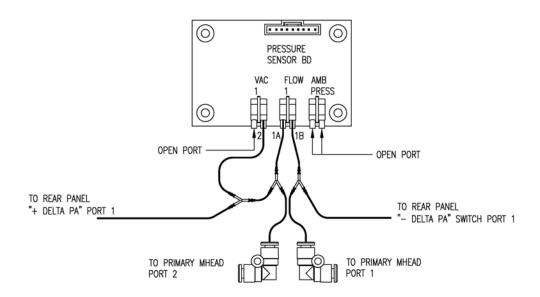


Figure 7–10. Replacing the Pressure Board Assembly Plumbing Connection

- 6. Calibrate the pressure sensor. Refer to the "Pressure Board Calibration" procedure that follows.
- 7. After calibration, perform a leak test as described in the "Preventive Maintenance" chapter.

Pressure Board Calibration

Use the following procedure to calibrate the pressure board assembly. Equipment Required:

Manometer

1. From the Main Menu, choose Service > Pres/Vacuum Calibration > **Baro Pres**. Adjust the barometer pressure span by entering the actual barometric pressure value.

Note If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step. ▲

- 2. Return to the Pres/Vacuum Calibration, choose Vac/Flow > Flow Pres **Span**. Calibrate the flow pressure span according to the following:
 - a. Place digital manometer on bench.

- b. Turn on manometer and allow to self calibrate. **Do not move** manometer while self-calibrating.
- c. After zeroing the digital manometer, connect the "+" side of the manometer to the Delta-P Δ + port on the rear panel.
- d. Connect the "-" side of the manometer to the Delta-P Δ port on the rear panel.
- e. Open both Delta-P Δ + and Δ toggle valves to open flow through the manometer.
- Cal Flow Pres Span by entering the actual value read by the manometer.
- g. Press (←) to save value.
- h. Turn off the manometer; this meter does **not** have an automatic turn off feature.
- 3. Return to the Pres/Vacuum Calibration, choose Vac/Flow > Vac Pres **Span**. Calibrate the vacuum pressure span according to the following:
 - a. Use an acceptable vacuum manometer. If using a blue Druck manometer, place blue manometer on bench.
 - b. Turn on manometer and let manometer self calibrate. **Do not move** manometer while self-calibrating.
 - c. Connect the "+" side of the manometer to the Delta-P Δ + port on the rear panel.
 - d. Open Delta-P Δ + toggle vales to open flow through the manometer.
 - e. Cal Vac Pressure Span by entering the actual value from the reference manometer.
 - f. Press to save value.

Analog Output Testing

The analog outputs should be tested if the concentration value on the front panel display disagrees with the analog outputs. To check the analog outputs, connect a meter to an analog output channel (voltage or current) and compare the meter reading with the output value set on the Test Analog Outputs screen.

Equipment Required:

Multimeter

Use the following procedure to test the analog outputs.

- 1. Connect a meter to the channel to be tested. Figure 7–11 shows the analog output pins and Table 7-4 identifies the associated channels.
- 2. From the Main Menu, choose Diagnostics > **Test Analog Outputs**. The Test Analog Outputs screen appears.
- 3. Press (▶) to scroll to the desired channel corresponding to the rear panel terminal pins where the meter is connected, and press (The Set Analog Outputs screen appears.
- 4. Press (▶) to set the output to zero. The Output Set To line displays Zero.
- 5. Check that the meter is displaying the zero value. If the meter reading differs by more than one percent of the full-scale output, the analog outputs should be adjusted. Refer to the "Analog Output Calibration" procedure that follows.
- 6. Press to set the output to full-scale. The Output Set To line displays Full-Scale.
- 7. Check that the meter is displaying a full-scale value. If the meter reading differs by more than one percent of the full-scale output, the analog outputs should be adjusted. Refer to the "Analog Output Calibration" procedure that follows.
- 8. Press () to reset the analog outputs to normal.

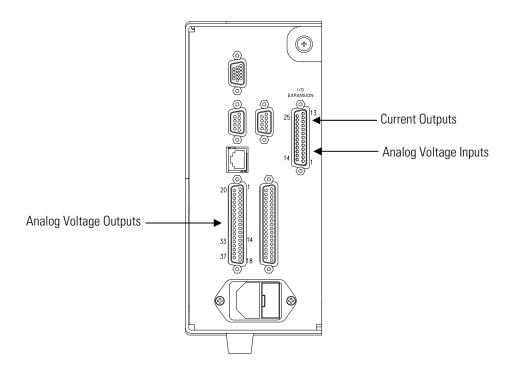


Figure 7–11. Rear Panel Analog Input and Output Pins

Table 7-4. Analog Output Channels and Rear Panel Pin Connections

Voltage Channel	Pin	Current Channel	Pin
1	14	1	15
2	33	2	17
3	15	3	19
4	34	4	21
5	17	5	23
6	36	6	25
Ground	16, 18, 19, 35, 37	Current Output Return	13, 16, 18, 20, 22, 24

Table 7–5. Analog Input Channels and Rear Panel Pin Connections

Input Channel	Pin
1	1
2	2
3	3

Input Channel	Pin
4	5
5	6
6	7
7	9
8	10
Ground	4, 8, 11, 14

Analog Output Calibration

Use the following procedure to calibrate the analog outputs if a meter reading in the "Analog Output Testing" procedure differed by more than one percent or after replacing the optional I/O expansion board.

Equipment Required:

Multimeter

- 1. Connect a meter to the channel to be adjusted and set to voltage or current as appropriate. Figure 7–11 shows the analog output pins and Table 7–4 identifies the associated channels.
- 2. From the Main Menu, choose Service > **Analog Out Cal**. The Analog Output Cal screen appears.

Note If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step. \triangle

- 3. At the Analog Output Cal menu, press (to scroll to the desired voltage channel or current channel corresponding to the rear panel terminal pin where the meter is connected, then press [
- 4. With the cursor at Calibrate Zero, press (←). The Analog Output Cal line displays Zero.

Note When calibrating the analog output, always calibrate zero first and then calibrate full-scale.

• until the meter reads the value shown in the Set Output To line (0.0 V, or 0.0 or 4.0 mA), then press (\leftarrow) to save the value.

- 6. Press to return to the previous screen.
- 7. Press [**↓** to select Calibrate Full-Scale.
- 8. Use [• until the meter reads the value shown in the Set Output To line, then press () to save the value.

Analog Input **Calibration**

Use the following procedures to calibrate the analog inputs after replacing the optional I/O expansion board. These procedures include selecting analog input channels, calibrating them to zero volts, and then calibrating them to full-scale using a known voltage source.

Calibrating the Input Channels to Zero Volts

Use the following procedure to calibrate the input channels to zero volts.

1. From the Main Menu, choose Service > **Analog Input Cal**. The Analog Input Cal screen appears.

Note If Service Mode is not displayed, refer to "Accessing the Service Mode" on page 7-4, then return to the beginning of this step. ▲

- 2. At the Analog Input Cal screen, press () to scroll to a channel, and press [
- 3. With the cursor at Calibrate Zero, press (The screen displays the input voltage for the selected channel.
- 4. Make sure that nothing is connected to the channel input pins and press () to calibrate the input voltage on the selected channel to zero volts.

The screen displays 0.00 V as the voltage setting.

- 5. Press > to return to the Analog Input Cal screen and repeat Steps 2 through 4 to calibrate other input channels to zero as necessary.
- 6. Continue with the "Calibrating the Input Channels to Full-Scale" procedure that follows.

Calibrating the Input Channels to Full-Scale

Use the following procedure to calibrate the input channels to full-scale by applying a known voltage to the channels.

Equipment Required:

DC voltage source (greater than 0 volts and less than 10 volts)

- 1. Connect the known DC voltage source to the input channel (1-8) to be calibrated. Figure 7–11 shows the analog input pins and Table 7–5 identifies the associated channels.
- 2. From the Main Menu, choose Service > **Analog Input Cal**. The Analog Input Cal screen displays input channels 1-8.
- 3. At the Analog Input Cal screen, press (▶) to scroll to the channel selected in Step 1, and press (
- 4. Press (▶) to scroll to Calibrate Full-scale, and press (←) The screen displays the input voltage for the selected channel.
- to enter the source voltage, and press → and (🕶) to calibrate the input voltage for the selected channel connected to the source voltage.
- 6. Press () > () to return to the input channels display and repeat Steps 3-5 to calibrate other input channels to the source voltage as necessary.

Themistor Replacement

Use the following procedure to replace the optional ambient temperature thermistor (Figure 7–12).

Equipment Required:

Thermistor assembly



- 1. Turn the instrument OFF, unplug the power cord, and remove the cover.
- 2. Squeeze the thermistor latch and pull the thermistor assembly from the AMB TEMP connector on the measurement interface board.
- 3. Snap the new thermistor into the AMB TEMP connector.

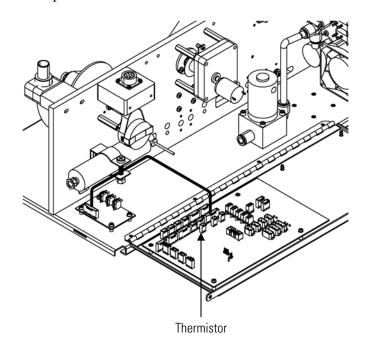


Figure 7–12. Replacing the Thermistor

I/O Expansion Board (Optional) Replacement

Use the following procedure to replace the optional I/O expansion board (Figure 7–13).

Equipment Required:

I/O expansion board

Nut driver, 3/16-inch



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

1. Turn the instrument OFF, unplug the power cord, and remove the cover.

- 2. Unplug the I/O expansion board cable from the EXPANSION BD connector on the motherboard.
- 3. Remove the two standoffs holding the I/O expansion board connector to the rear panel (Figure 7-14).
- 4. Pop the board off of the mounting studs and remove the board.
- To install the I/O expansion board, follow the previous steps in reverse.
- 6. Calibrate the analog current outputs and analog voltage inputs as defined earlier in this chapter.

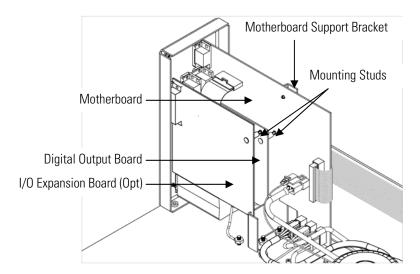


Figure 7–13. Replacing the I/O Expansion Board (Optional)

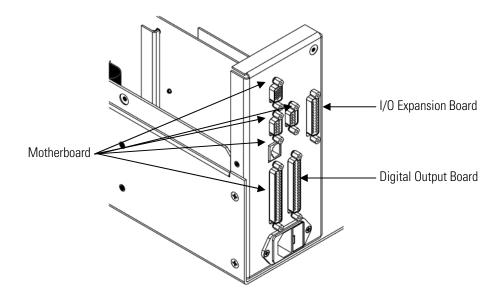


Figure 7–14. Rear Panel Board Connectors

Digital Output Board Replacement

Use the following procedure to replace the digital output board (Figure 7– 13).

Equipment Required:

Digital output board

Nut driver, 3/16-inch



- Turn the instrument OFF, unplug the power cord, and remove the cover.
- 2. Remove the I/O expansion board (optional), if used. See the "I/O Expansion Board (Optional) Replacement" procedure in this chapter.
- 3. Disconnect the digital output board ribbon cable from the motherboard.
- 4. Using the nut driver, remove the two standoffs securing the board to the rear panel (Figure 7–14).

- 5. Pop the digital output board off of the mounting studs and remove the board.
- 6. To install the digital output board, follow the previous steps in reverse.

Motherboard Replacement

Use the following procedure to replace the motherboard (Figure 7-13). Equipment Required:

Motherboard

Philips screwdriver

Nut driver, 3/16-inch



- 1. Turn the instrument OFF, unplug the power cord, and remove the cover.
- 2. Remove the I/O expansion board (optional), if used. See the "I/O Expansion Board (Optional) Replacement" procedure in this chapter.
- 3. Remove the digital output board. See the "Digital Output Board Replacement" procedure in this chapter.
- 4. Unplug all connectors from the motherboard. Note connector locations to facilitate re-connection.
- 5. Using the nut driver, remove the six standoffs securing the board to the rear panel (Figure 7–14).
- 6. Pop the motherboard off of the support bracket, and remove the motherboard.
- 7. To install the motherboard, follow the previous steps in reverse.
- 8. Calibrate the analog voltage outputs as defined earlier in this chapter (all ranges).

Measurement **Interface Board** Replacement

Use the following procedure to replace the measurement interface board (Figure 7–15).

Equipment Required:

Measurement interface board

Philips screwdriver



- 1. Lower the partition panel, then proceed to the next step below. Refer to "Removing the Measurement Case Assembly and Lowering the Partition Panel" in this chapter.
- 2. Unplug all connectors from the measurement interface board. Note the locations of the connectors to facilitate re-connection.
- 3. Unscrew the two screws at the top of the measurement interface board. Pop the measurement interface board off from the two bottom mounting studs and remove the board.
- 4. To install the measurement interface board, follow the previous steps in reverse.
- 5. Re-install the measurement case assembly.
- 6. Calibrate the instrument. Refer to the "Calibration" chapter in this manual.

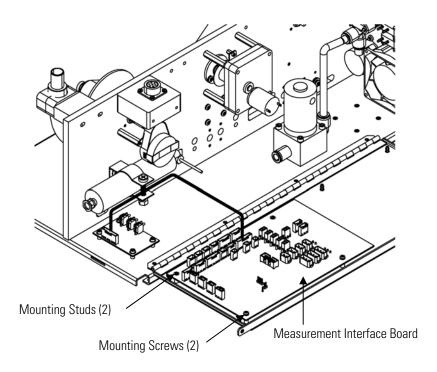


Figure 7–15. Replacing the Measurement Interface Board

Board Replacement

Photo Interrupt Use the following procedure to replace the photo interrupt board (Figure 7–16).

Equipment Required:

Photo interrupt board

Hex driver, 3/32-inch

Philips head screwdriver, #1



- 1. Turn the instrument OFF, unplug the power cord, and remove the cover.
- Disconnect cable.
- 3. Remove mounting screws.

- 4. Remove board.
- 5. Re-install the photo interrupt board by following the previous steps in reverse.

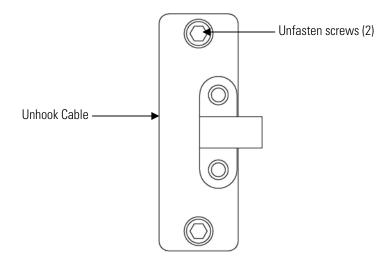


Figure 7–16. Replacing the Photo Interrupt Board

Proportional Valve Replacement

Use the following procedure to replace the proportional valve (Figure 7– 17).

Equipment Required:

Proportional valve assembly

Hex driver, 3/32-inch



- 1. Turn the instrument OFF, unplug the power cord, and remove the cover.
- 2. Refer to "Removing the Measurement Case Assembly and Lowering the Partition Panel" in this chapter to lower the partition panel, then proceed to the next step below.
- 3. Disconnect connector from the measurement interface board.

- 4. Disconnect plumbing.
- 5. Remove four mounting screws and remove proportional valve assembly.
- 6. Replace the proportional valve assembly by following the previous steps in reverse.
- 7. Perform a leak test as described in the "Preventive Maintenance" chapter.

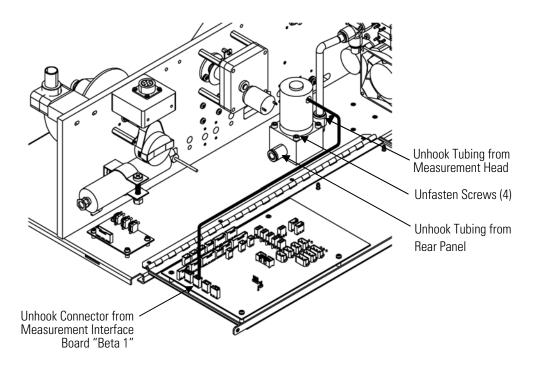


Figure 7–17. Replacing the Proportional Valve

Detector Assembly Replacement

Use the following procedure to replace the detector assembly (Figure 7–18).

Equipment Required:

Detector assembly

Hex driver, 4 mm

Safety glasses



WARNING The detector assembly should be replaced by a qualified technician knowledgeable in dealing with radiation precautions. By removing the detector assembly, the C-14 radioactive source is partially exposed. Safety glassed must be worn during this replacement procedure. The amount of C-14 meets the USNRC regulations as an exempt amount of radioactive source <100 µCi. ▲

The service procedures in this manual are restricted to qualified representatives. **\(\Lambda \)**

If the equipment is operated in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. ▲



CAUTION The detector window is very fragile. Handle with great care and do not wipe or touch the window. Furthermore, **do not** touch the solder cable connection (electrode) with your bare fingers. The oils from your skin can damage the detector.

Safety glasses must be worn while replacing the detector assembly. **\(\Delta\)**



- 1. Turn the instrument OFF, unplug the power cord, and remove the cover.
- 2. Disconnect the SHV connector from the detector amplifier assembly and slide throught the wall plate.
- 3. Loosen both detector mounting screws and slowly lift the detector assembly.
- 4. Install the new detector assembly by following the previous steps in reverse, while taking special care not to puncture the mylar.
- 5. Calibrate the detector assembly. Refer to the "Detector Calibration" procedure on page 4-12.

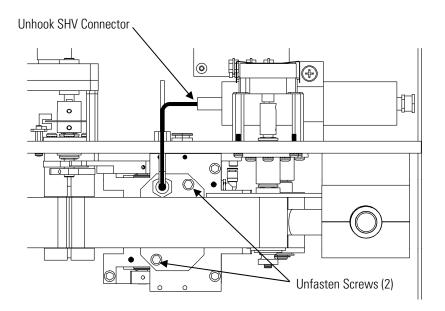


Figure 7–18. Replacing the Detector Assembly

Flow RTD Replacement

Use the following procedure to replace the flow resistive temperature diction (RTD) (see Figure 7-19).

Equipment Required:

Sample flow RTD

Adjustable wrench



- 1. Turn the instrument OFF, unplug the power cord, and remove the cover.
- 2. Refer to "Removing the Measurement Case Assembly and Lowering" the Partition Panel" in this chapter to lower the partition panel, then proceed to the next step below.
- 3. Loosen the kynar fittings using the wrench and slide out sample flow RTD.

- 4. Unplug the RTD connector from the measurement interface board "flowtemp1".
- 5. Carefully install the new RTD by following the previous steps in reverse. Match the marked black line on the RTD to be flush with the fitting.

Note The black line is the pre-measured depth for the RTD. \blacktriangle

6. Calibrate the instrument. Refer to the "Calibration" chapter in this manual.

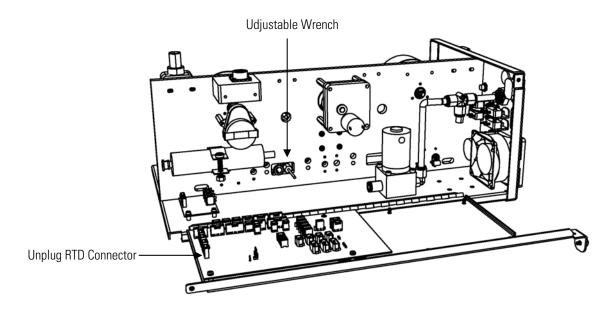


Figure 7–19. Replacing the RTD

Transformer Replacement

Use the following procedure to replace the transformer (Figure 7–20).

Equipment Required:

Transformer assembly

Philips screwdriver, #2



- 1. Turn the instrument OFF, unplug the power cord, and remove the cover.
- 2. Disconnect cables from the measurement interface board and motherboard.
- 3. Unscrew the four mounting screws and lift out the transformer assembly.
- 4. Install the new transformer by following the previous steps in reverse.

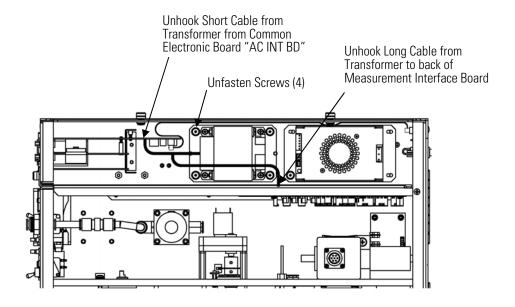


Figure 7–20. Replacing the Transformer

Replacement Equipment Required:

Radius Tube Use the following procedure to replace the radius tube (Figure 7–21).

Radius tube assembly

Hex driver, 9/16-inch

Hex driver, 7/64-inch



- 1. Turn the instrument OFF, unplug the power cord, and remove the cover.
- 2. Loosen the two screws of the radius mounting block using a 9/16-inch hex driver.
- 3. Remove radius tube SHARP adapter.
- 4. Loosen the two mounting screws on the measurement head assembly. Remove tube by slightly turning side-to-side, while pulling.
- 5. Verify the sealing o-ring is in position before sliding the new radius tube assembly into the measurement head.
- 6. Install the new radius tube assembly by following the previous steps in reverse.

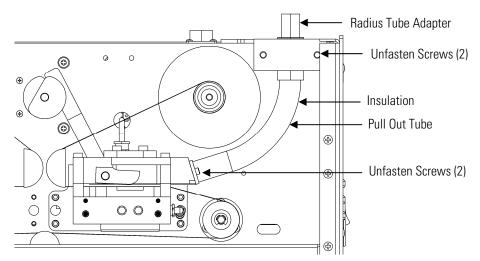


Figure 7–21. Replacing the Radius Tube

Ambient RH/Temperature Replacement

Use the following procedure to replace the ambient RH/temperature assembly (Figure 7-22).

Equipment Required:

Ambient RH/temperature assembly

Adjustable wrench

Pliers



- 1. Turn the instrument OFF, unplug the power cord, and remove the
- 2. Remove the cable from the bottom of the radiation shield assembly that houses the ambient RH/temperature assembly.
- 3. Remove the two mounting nuts on the mounting clamp of the radiation shield assembly. Remove the radiation shield assembly.
- 4. Turn over the radiation shield assembly and remove the three thumb screws.
- 5. Remove the three spacers and mounting bracket.
- 6. Slide out the ambient RH/temperature assembly.
- 7. Slide in the new ambient RH/temperature assembly by following the previous steps in reverse.
- 8. Calibrate the instrument. Refer to the "Calibration" chapter in this manual.

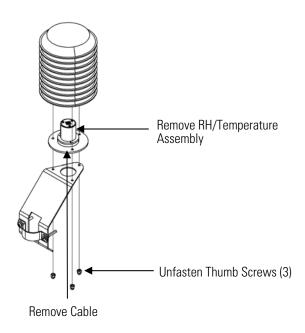


Figure 7–22. Replacing the Ambient RH/Temperature Assembly

Front Panel Board Replacement

Use the following procedure to replace the front panel board (Figure 7– 23).

Equipment Required:

Front panel board



- 1. Turn the instrument OFF, unplug the power cord, and remove the
- 2. Remove the three ribbon cables and the two-wire connector from the front panel board.
- 3. Pop the board off of the two top mounting studs and remove the board by lifting it up and off the slotted bottom support.
- 4. Replace the front panel board by following the previous steps in reverse.

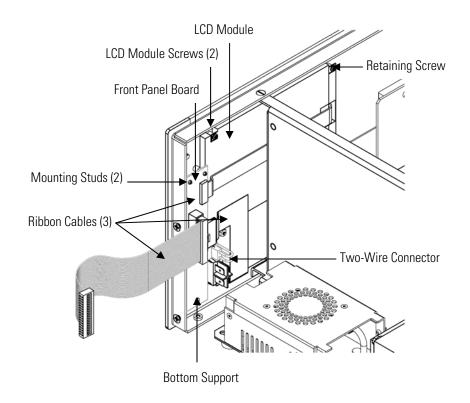


Figure 7–23. Replacing the Front Panel Board and the LCD Module

LCD Module Replacement

Use the following procedure to replace the LCD module (Figure 7–23).

Equipment Required:

LCD module

Philips screwdriver



CAUTION If the LCD panel breaks, do not let the liquid crystal contact your skin or clothes. If the liquid crystal contacts your skin or clothes, wash it off immediately using soap and water. **\(\Delta\)**



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

Do not remove the LCD panel or frame from the LCD module. \blacktriangle

The LCD polarizing plate is very fragile, handle it carefully. ▲

Do not wipe the LCD polarizing plate with a dry cloth, as it may easily scratch the plate. **\(\Lambda \)**

Do not use alcohol, acetone, MEK or other Ketone based or aromatic solvents to clean the LCD module, but rather use a soft cloth moistened with a naphtha cleaning solvent. ▲

Do not place the LCD module near organic solvents or corrosive gases. **\(\Delta\)**

Do not shake or jolt the LCD module. **\(\Delta\)**

- 1. Turn the instrument OFF, unplug the power cord, and remove the cover.
- 2. Disconnect the ribbon cable and the two-wire connector from the front panel board.
- 3. Remove the four screws at the corners of the LCD module.
- 4. Slide the LCD module out towards the center of the instrument.
- 5. Replace the LCD module by following the previous steps in reverse.

Note The optimal contrast will change from one LCD screen to another. After replacing the LCD screen, the contrast may need to be reset. If the content on the screen is visible, select Instrument Controls > **Screen Contrast** and adjust the screen contrast. If the content on the screen is not visible, use the "set contrast 10" C-Link command to set screen constrast to mid range, then optimize the contrast. See the "C-Link Protocol Commands" appendix for more information on this command.

Removing the SHARP Optics Cover

The SHARP optics cover can be removed from the SHARP optics. Refer to the following steps when a procedure requires access to the SHARP optics assembly (Figure 7–24).

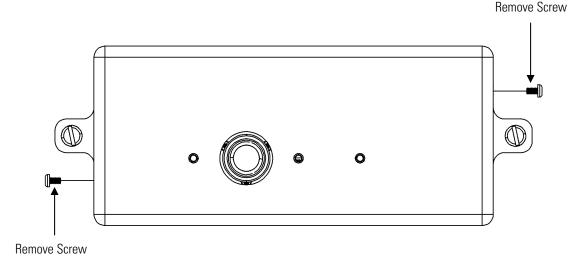


Figure 7–24. Removing the SHARP Optics Cover

Equipment Required:

Philips screwdriver



- 1. Turn the instrument OFF and unplug the power cord.
- 2. If the instrument is mounted on a rack, remove it from the rack.
- 3. Unfasten the two screws.
- 4. Lift cover in an upward direction.
- 5. Replace the SHARP optics cover by following the previous steps in reverse.

External Solenoid Valve Replacement

Use the following procedure to replace the external solenoid valve (Figure 7–25).

Equipment Required:

External solenoid valve



- Turn the instrument OFF, unplug the power cord.
- 2. Disonnect all vacuum tubing from the solenoid.
- 3. Disconnect the solenoid electrical connector from the rear panel connector.
- 4. Unfasten the two captive hardware screws from the rear panel.
- 5. Replace the solenoid valve by following the previous steps in reverse.

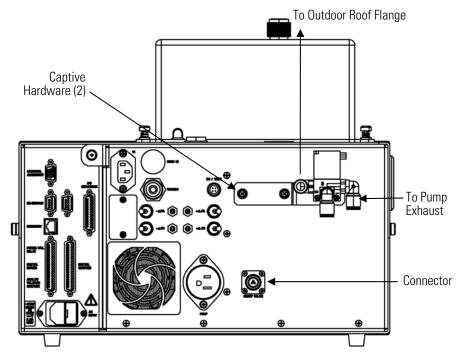


Figure 7–25. Replacing the External Solenoid Valve

SHARP RH/Temp Sensor Replacement

Use the following procedure to replace the SHARP RH/Temp sensor (Figure 7–26).



- Turn the instrument OFF, unplug the power cord, and remove the nephelometer from the base instrument.
- 2. Remove the two side cover screws, and remove cover.
- 3. Disconnect the RH/Temp connector from the SHARP MIB board "TEMP/RH".
- 4. Remove the two socket-head screws from the RH/Temp board assembly from the upper optic chamber endplate.
- 5. Remove the RH/Temp gasket from the old RH/Temp board assembly and add it to the new RH/Temp board assembly.
- 6. Slide in the new RH/Temp assembly by following the previous steps.
- 7. Calibrate the RH/Temp sensor. Refer to the "Calibration" chapter in this manual.

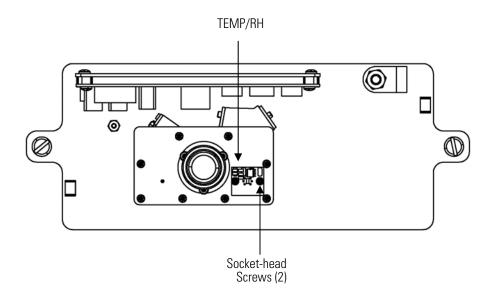


Figure 7–26. Disconnecting the RH/Temp Connector

SHARP Interface Board Replacement

Use the following procedure to replace the SHARP interface board (Figure 7–27 and Figure 7–28).

Equipment Required:

SHARP interface board

Philips screwdriver, #2



- 1. Document the Nephelometer Coefficient: From the Main Menu, choose Calibration Factors > **Neph Coef**. Record the nephelometer coefficient value.
- 2. Document the Nephelometer Calibration: From the Main Menu, choose Service > Neph Calibration. Record the nephelometer RH value, the nephelometer temperature value, and the nephelometer source level value.
- 3. Turn the instrument OFF, unplug the power cord, and remove the SHARP otpics cover.

- 4. Unplug all connectors from the SHARP interface board. Note the locations of the connectors to facilitate re-connection.
- 5. Loosen the two screws from the bottom of the rear board panel and remove.
- 6. Unfasten the two screws at the top of the SHARP interface board. Slide the SHARP interface board up from the two bottom mounting studs and remove the board.
- 7. To install the SHARP interface board, follow the previous steps in reverse.
- 8. Restore the nephelometer coefficient value previously documented.
- 9. Restore the nephelometer RH value, the nephelometer temperature value, and the nephelometer source level value previously documented.
- 10. Calibrate the instrument. Refer to the "Calibration" chapter in this manual.

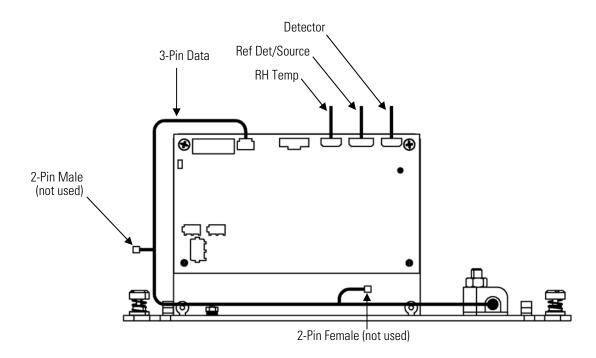


Figure 7–27. SHARP Interface Board Connections

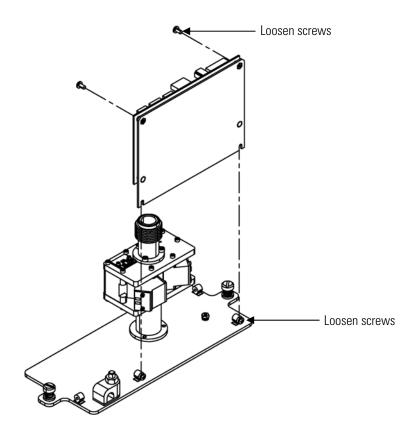


Figure 7–28. Replacing the SHARP Optics Board

Delrin Nut Replacement

Use the following procedure to replace the Delrin nut (Figure 7–29).

Equipment Required:

Delrin nut

Philips screwdriver

Set of standard hex drives

Adjustable wrench



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

1. Turn the Pump Flow OFF: From the Main Menu, choose Instrument Controls > Set Flow/Pump > **Pump**. Press ← to toggle and set the pump flow to OFF.

- 2. Turn the Heater OFF: From the Main Menu, choose Instrument Controls > Set Heater > **Control**. Use (↑) until the value reads OFF, and press (
- 3. Loosen the two hex screws from the collar of the heater adapter cover.
- 4. Loosen the two captive screws of the heater adaptor cover and slide up.
- 5. Loosen the bottom 5/8-inch union nut and remove the tube adapter.
- Slide off the heater tube adapter down.
- Slide off ferrite bead upward off the heater tube adapter.
- Slide off delrin nut upward off the heater tube adapter.
- 9. Replace the delrin nut by following the previous steps in reverse.

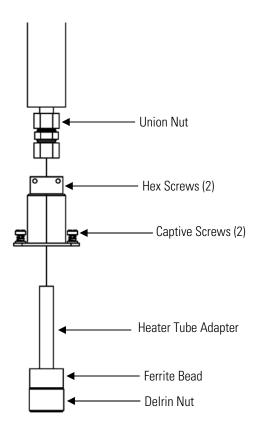


Figure 7–29. Replacing the Delrin Nut

Internal SHARP Cable Assembly Replacement

Use the following procedure to replace the case cable (Figure 7–30).

Equipment Required:

Internal SHARP Cable Assembly

Philips screwdriver



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- 1. Turn the instrument OFF and unplug the power cord.
- 2. If the instrument is mounted in a rack, remove it from the rack.
- 3. Refer to "Removing the Measurement Case Assembly and Lowering" the Partition Panel" in this chapter to lower the partition panel, then proceed to the next step below.
- 4. Disconnect the electrical connector labeled "SHARP 1".
- 5. Unfasten the four screws.
- 6. Pull connect up and out and install electrical connector by following the previous steps in reverse.

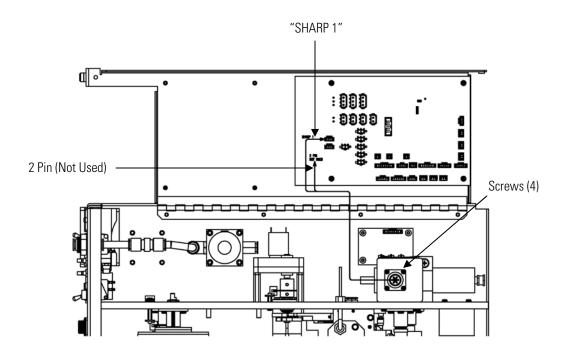


Figure 7–30. Replacing the Internal SHARP Cable Assembly

Case Cable Replacement

Use the following procedure to replace the case cable (Figure 7–31).

Equipment Required:

Case Cable

Philips screwdriver

Adjustable wrench



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component.

- Turn the instrument OFF, unplug the power cord, remove the electrical connector, loosen the two captive screws on the SHARP optics base plate, and remove the SHARP assembly from the base unit.
- Remove the two SHARP cover screws and remove the cover.
- 3. Remove the hex nut from the cable clamp.

4. Replace the case cable assembly by following the previous steps in reverse.

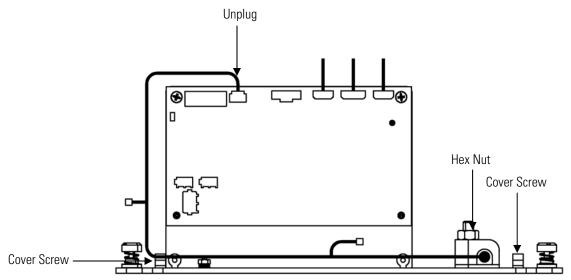


Figure 7–31. Replacing the Case Cable

External Zeroing Filter

Use the following procedure to replace the external zeroing filter (Figure 7– 32).

Equipment Required:

Adjustable wrench



Equipment Damage Some internal components can be damaged by small amounts of static electricity. A properly grounded antistatic wrist strap must be worn while handling any internal component. **\(\Delta\)**

- 1. Note the orientation of the arrow on the filter assembly. See Figure 2–7 for orientation.
- 2. Compress the collar of the quick connect fitting and remove the tubing from fittings.
- 3. Install filter assembly by following the previous steps in reverse.

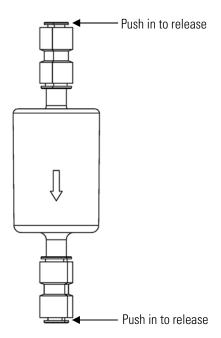


Figure 7–32. Replacing the External Zeroing Filter

Service Locations For additional assistance, service is available from exclusive distributors worldwide. Contact one of the phone numbers below for product support and technical information or visit us on the web at www.thermo.com/aqi.

1-866-282-0430 Toll Free

1-508-520-0430 International

Chapter 8 System Description

This chapter describes the function and location of the system components, provides an overview of the firmware structure, and includes a description of the system electronics and input/output connections and functions as follows:

- "Hardware" on page 8-1
- "Firmware" on page 8-5
- "Electronics" on page 8-6
- "I/O Components" on page 8-9

Hardware

Model 5030*i* hardware (Figure 8-1) includes:

- Nehpelometer assembly
- Primary measurement head
- Detector amplifier
- Cam photo interrupt board assembly
- Counter wheel interrupt board assembly
- Proportional valve
- Cam motor
- Tape motor
- Pressure board
- External solenoid
- Pump intake T-fitting

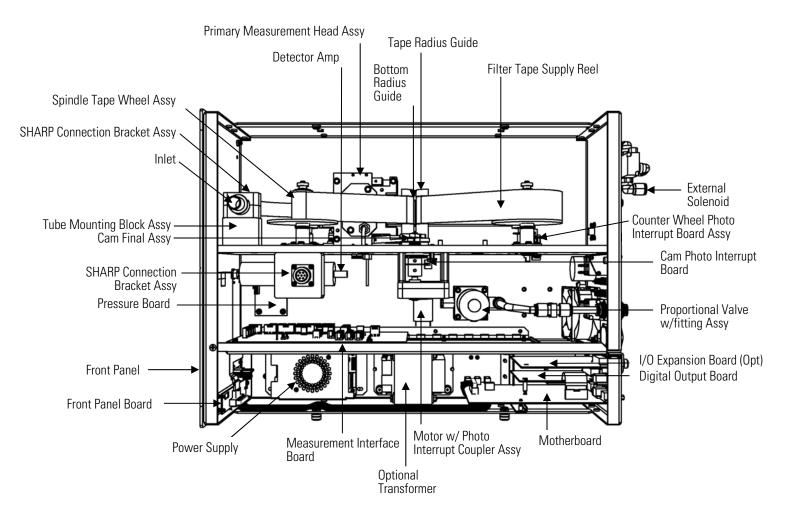


Figure 8–1. Model 5030*i* Hardware Components

8-2 Model 5030*i* SHARP Instruction Manual Thermo Fisher Scientific

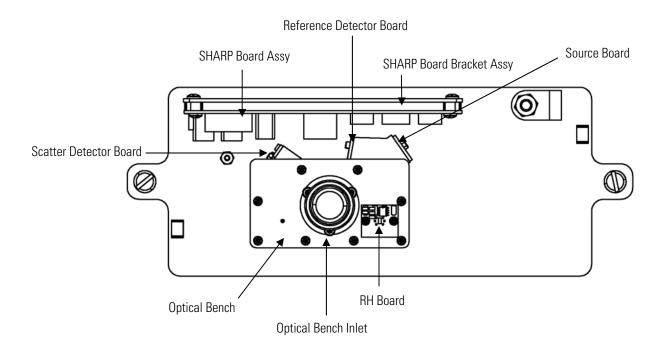


Figure 8–2. SHARP Optics Component

Nephelometer Assembly

The nephelometer assembly uses an 880 nanometer incident light source and hybrid silicon photodetector to measure the intensity of scattered light in the presence of aerosol. This assembly houses a nephelometer, temperature sensor, relative humidity sensor, and PCB interface.

Primary Measurement Head

The primary measurement head uses a beta source and proportional alpha/beta detector to measure the attenuation of beta particles by sampled aerosol across a glass fiber filter and to discriminate against any naturally occurring beta interferences from the daughter nuclides of alpha decay products.

Detector Amplifier

This cylindrical tube houses a printed circuit board, provides power to the proportional detector and amplifies the beta and alpha counts prior to being sent to the 5030*i* measurement interface board.

Cam Photo Interrupt Board

This small printed circuit board includes a photo-interrupter to detect the closed position of the measurement head. This is connected to a motor assembly used to open and close the measurement head.

Counter Wheel Interrupt Board Assembly

This small printed circuit board is mounted onto a chopper wheel that measures the amount of filter tape advanced during a filter tape change.

Proportional Valve

The proportional valve is a proportional solenoid valve that is used as a means of flow control. In response to the measured flow across a subsonic orifice, the proportional valve will either partially open or close to make a flow adjustment in real-time.

Cam Motor

This motor is used to drive the cam to rotate. By rotating the cam, the measurement head lever arm is raised and lowered for opening and closing the measurement head during a filter tape change.

Tape Motor

After the measurement head is opened, this motor is used to advance the filter tape a fixed amount prior to initiating another beta attenuation event on a fixed sample spot.

Pressure Board

This PCB assembly is mounted on the floor plate and has three pressure sensors attached. The pressure board is used to measure the barometric pressure, differential pressure across the orifice and vacuum under the filter tap. All tubing attached to the pressure board is numbered in case of the need to swap out this board.

External Solenoid

The external solenoid is used to permit the pump to either exhaust normally, or to deliver filtered air to the instrument during the nephelometer zero.

Pump Intake T-Fitting

The pump intake T-fitting provides excess air specifically for periods of nephelometer zeroing.

Firmware

The processor firmware tasks are organized into four areas:

- Instrument control
- Monitoring signals
- Measurement calculations
- Output communication

Instrument Control

Low-level embedded processors are used to control the various functions on the boards, such as analog and digital I/O. These processors are controlled over a serial interface with a single high-level processor that also controls the front-panel user interface. The low-level processors all run a common piece of firmware that is bundled with the high-level firmware and loaded on power-up if a different version is detected.

Each board has a specific address that is used to identify to the firmware what functions are supported on that board. This address is also used for the communications between the low-level processors and the high-level processor.

Every tenth of a second, the frequency counters, analog I/O, and digital I/O are read and written to by the low-level processors. The counters are accumulated over the past second and the analog inputs are averaged over that second. The high-level processor polls the low-level processors once per second to exchange the measurement and control data.

Monitoring Signals

Signals are gathered from the low-level processors once per second, and then processed by the high-level processor to produce the final measurement values. The one-second accumulated counts are accumulated and reported for the user-specified averaging time. If this averaging time is greater than ten seconds, the measurement is still reported every 10 seconds. The one-second average of the other analog inputs are reported directly (no additional signal conditioning is performed by the high-level processor).

Output Communication

The front panel display, serial and Ethernet data ports, and analog outputs are the means of communicating the results of the above calculations. The front panel display presents the concentrations simultaneously. The display is updated every 1-10 seconds, depending on the averaging time.

The analog output ranges are user selectable via firmware. The analog outputs are defaulted based on the measurement range. Negative concentrations can be represented as long as they are within -5% of full-scale. The zero and span values may be set by the user to any desired value.

Electronics

All electronics operate from a universal switching supply, which is capable of auto-sensing the input voltage and working over the all specified ranges.

External pumps and heaters all operate on 110 VAC. An optional transformer is required if operating on the 210-250 range.

An on/off switch controls all power to the analyzer and is accessible on the front panel.

Motherboard

The motherboard contains the main processor, power supplies, and a sub-processor, and serves as the communication hub for the instrument. The motherboard receives operator inputs from the front panel function keys and/or over I/O connections on the rear panel. The motherboard sends commands to the other boards to control the functions of the instrument and to collect measurement and diagnostic information. The motherboard outputs instrument status and measurement data to the graphics display and to the rear-panel I/O. The motherboard also contains I/O circuitry and the associated connector to monitor external digital status lines and to output analog voltages that represent the measurement data. Connectors located on the motherboard include:

External connectors include:

- **External Accessory**
- RS-232/485 Communications (two connectors)
- **Ethernet Communications**
- I/O connector with Power Fail Relay, 16 Digital Inputs, and 6 Analog Voltage Outputs.

Internal connectors include:

- Function Key Panel and Display
- Measurement Interface Board
- I/O Expansion Board
- Digital Output Board
- AC Distribution

Nephelometer Interface Board

The nephelometer interface board serves as the circuitry for the nephelometer measurement, an internal valve control, and on board processing of zero and particle concentration by photometry.

Nephelometer interface board connectors

Connectors located on the nephelometer interface board include:

- RS485
- 24 VDC Supply
- LED Source Current
- Reference Detector
- Scattering Detector
- T/RH Sensor

Measurement Interface Board

The measurement interface board serves as a central connection area for all measurement electronics in the instrument. It contains power supplies and interface circuitry for sensors and control devices in the measurement system. It sends status data to the motherboard and receives control signals from the motherboard.

Measurement Interface **Board Connectors**

Connectors located on the measurement interface board include:

- Data communication with the motherboard
- 24 V and 120 VAC power supply inputs
- Fan and solenoid outputs
- 120 VAC output and thermistor input from the sample heater
- Flow and pressure sensor inputs
- Proportional valve output
- Optical pickup input
- Pre-amp board
- Ambient temperature/RTD and RH
- Flow RTDs

Flow Sensor System

The flow sensor system consists of a subsonic orifice inside the primary measurement head, a differential pressure and vacuum sensors, and a flow temperature RTD. The flow system output is produced by measuring the pressure difference across a precision orifice. This unit is used for measuring the flow of sample gas in the measurement system.

Pressure Sensor Assembly

The pressure sensor assembly consists of a board containing three pressure transducers with tube connections. The pressure transducer output is produced by measuring the pressure difference between the sample gas pressure and ambient air pressure.

Detector Amplifier Assembly

The detector amplifier assembly amplifies the signal from the proportional detector that receives beta particle emissions from the C-14 source through the sample and filter tape. The output of the detector amplifier is fed to the measurement interface board. A coaxial cable from the detector amplifier supplies power and grounding to the detector.

Digital Output Board

The digital output board connects to the motherboard and provides solenoid driver outputs and relay contact outputs to a connector located on the rear panel of the instrument. Ten relay contacts, normally open (with power off), are provided, which are electrically isolated from each other. Eight solenoid driver outputs (open collector) are provided along with a corresponding +24 VDC supply pin on the connector.

I/O Expansion Board (Optional)

The I/O expansion board connects to the motherboard and adds the capability to input external analog voltage signals and to output analog currents via a connector located on the rear panel of the instrument. It contains local power supplies, a DC/DC isolator supply, a sub-processor and analog circuits. Eight analog voltage inputs are provided with an input voltage range of 0V to 10 VDC. Six current outputs are provided with a normal operating range of 0 to 20 mA.

Front Panel Connector Board

The front panel connector board interfaces between the motherboard and the function key panel and graphics display. It serves as a central location to tie the three connectors required for the function key panel, the graphics display control lines, and the graphics display backlight to a single ribbon cable extending back to the motherboard. This board also includes signal buffers for the graphics display control signals and a high voltage power supply for the graphics display backlight.

I/O Components

External I/O is driven from a generic bus that is capable of controlling the following devices:

- Analog output (voltage and current)
- Analog input (voltage)
- Digital output (TTL levels)
- Digital input (TTL levels)

Note The instrument has spare solenoid valve drivers and I/O support for future expansion.

Analog Voltage Outputs

The instrument provides six analog voltage outputs. Each may be firmware configured for any one of the following ranges, while maintaining a minimum resolution of 12 bits:

- 0-100 mV
- 0-1 V
- 0-5 V
- 0-10 V

The user can calibrate each analog output zero and span point through the firmware. At least 5% of full-scale over and under range are also supported, but may be overridden in the firmware, if required.

The analog outputs may be assigned to any measurement or diagnostic channel with a user-defined range in the units of the selected parameter. The voltage outputs are independent of the current outputs.

Analog Current Outputs (Optional)

The optional I/O expansion board includes six isolated current outputs. These are firmware configured for any one of the following ranges, while maintaining a minimum resolution of 11 bits:

- 0-20 mA
- 4-20 mA

The user can calibrate each analog output zero and span point through the firmware. At least 5% of full-scale over and under range are also supported, but may be overridden in the firmware, if required.

The analog outputs may be assigned to any measurement or diagnostic channel with a user-defined range in the units of the selected parameter. The current outputs are independent of the voltage outputs. The current outputs are isolated from the instrument power and ground, but they share a common return line (Isolated GND).

Analog Voltage Inputs (Optional)

The optional I/O expansion board includes eight analog voltage inputs. These inputs are used to gather measurement data from third-party devices such as meteorological equipment. The user may assign a label, unit, and a conversion table (2 to 10 points). Each point in the conversion table consists of an analog input voltage value (0-10.5 V) and a corresponding user-defined reading value. Only two points are necessary for linear inputs, however, a larger number of points may be used to approximate non-linear inputs. All voltage inputs have a resolution of 12 bits over the range of 0 to 10 volts.

Digital Relay Outputs

The instrument includes one power fail relay on the motherboard and ten digital output relays on the digital output board. These are reed relays rated for at least 500 mA @ 200 VDC.

The power fail relay is Form C (both normally opened and normally closed contacts). All other relays are Form A (normally opened contacts) and are used to provide alarm status and mode information from the analyzer, as well as remote control to other devices, such as for controlling valves during calibration. The user may select what information is sent out from each relay and whether the active state is opened or closed.

Digital Inputs

Sixteen digital inputs are available, which may be programmed to signal instrument modes and special conditions including:

- Filter tape change
- Turn pump off
- Turn pump on
- Analog outputs to zero
- Analog outputs to full-scale

The actual use of these inputs will vary based on analyzer configuration.

The digital inputs are TTL level compatible and are pulled up within the analyzer. The active state can be user defined in firmware.

Serial Ports

Two serial ports allow daisy chaining so that multiple analyzers may be linked using one PC serial port.

The standard bi-directional serial interface can be configured for either RS-232 or RS-485. The serial band rate is user selectable in the firmware for standard speeds from 1200 to 115200 baud. The user can also set the data bits, parity, and stop bits. The following protocols are supported:

- C-Link
- **MODBUS Slave**
- Gesytec (Bayern-Hessen)
- Streaming Data
- **ESM**

The Streaming Data protocol transmits user-selected measurement data via the serial port in real-time for capture by a serial printer, datalogger, or PC.

RS-232 Connection

A null modem (crossed) cable is required when connecting the analyzer to an IBM-compatible PC. However, a straight cable (one to one) may be required when connecting the analyzer to other remote devices. As a general rule, when the connector of the host remote device is female, a straight cable is required and when the connector is male, a null modem cable is required.

Data Format:

1200, 2400, 4800, 9600, 19200, 38400, 57600, or 115200 BAUD

7 or 8 data bits

1 or 2 stop bits

No, odd, or even parity

All responses are terminated with a carriage return (hex 0D)

Refer to Table 8–1 for the DB9 connector pin configuration.

Table 8–1. RS-232 DB9 Connector Pin Configuration

DB9 Pin	Function
2	RX
3	TX
7	RTS
8	CTS
5	Ground

RS-485 Connection

The instrument uses a four wire RS-485 configuration with automatic flow control (SD). Refer to Table 8-2 for the DB9 connector pin configuration.

Table 8–2. RS-485 DB9 Connector Pin Configuration

DB9 Pin	Function
2	+ receive
8	- receive
7	+ transmit
3	- transmit
5	ground

Ethernet Connection

An RJ45 connector is used for the 10Mbs Ethernet connection supporting TCP/IP communications via standard IPV4 addressing. The IP address may be configured for static addressing or dynamic addressing (set using a DHCP server).

Any serial port protocols may be accessed over Ethernet in addition to the serial port. Up to three simultaneous connections are allowed per protocol.

External Accessory Connector

The external accessory connector is not used in the Model 5030*i* analyzer.

This port is used in other models to communicate with smart external devices that may be mounted hundreds of feet from the analyzer using an RS-485 electrical interface.

Chapter 9 Optional Equipment

The Model 5030*i* is available with the following options:

- "Inlet Assemblies" on page 9-1
- "Sampling Tube Extensions" on page 9-1
- "I/O Expansion Board Assembly" on page 9-1
- "25 Pin Terminal Board Assembly" on page 9-1
- "Terminal Block and Cable Kits" on page 9-2
- "Cables" on page 9-2
- "Mounting Options" on page 9-3
- "Roof Flange Assembly" on page 9-8

Inlet Assemblies

The Model 5030*i* can be used for different applications. Using different inlet configurations (PM₁₀, PM_{2.5}, PM₁ Inlets), several particle size fractions can be monitored. The main application is the measurement of PM₁₀ and PM_{2.5} for ambient air quality monitoring and health effect studies.

Sampling Tube Extensions

Often the most compatible way to install the Model 5030*i* at air quality monitoring sites is to collocate the inlet at the same height as other similaruse inlets. The "Installation" chapter discusses specific siting criteria. In addition to using the optional inlets, extending the sample downtube length is necessary using a rigid sample tube.

I/O Expansion Board **Assembly**

The I/O expansion board provides six analog current output channels (0-20 mA or 4-20 mA) and eight analog voltage inputs (0-10 V). The DB25 connector on the rear panel provides the interface for these inputs and outputs.

25 Pin Terminal **Board Assembly**

The 25-pin terminal board assembly is included with the optional I/O expansion board. Refer to "Terminal Board PCB Assemblies" in the "Installation" chapter for information on attaching the cable to the

connector board. For associated part numbers, refer to the "Servicing" chapter.

Terminal Block and Cable Kits

The optional terminal block and cable kits provide a convenient way to connect devices to the instrument. These kits break out the signals on the rear panel connector to individual numbered terminals.

Two types of terminal block and cable kits are available. One kit is for the DB37 connectors and can be used for either the analog output connector or the relay output connector. The other kit is for the DB25 connector and can be used for the optional I/O expansion board. For associated part numbers, refer to "External Device Connection Components" on page 7-8.

Each kit consists of:

- one six-foot cable
- one terminal block
- one snap track

Note Supporting all of the connections on units with the optional I/O expansion board requires:

- two DB37 kits
- one DB25 kit

Cables

Table 9–1 identifies the optional individual cables that are available for the instrument and Table 9-2 provides the cable color codes. For associated part numbers, refer to "External Device Connection Components" on page 7-8.

Note Table 9–2 provides the color coding for both 25-pin cables and 37pin cables. Color codes for pins 1-25 are for 25-pin cables; color codes for pins 1–37 are for 37-pin cables. \blacktriangle

Table 9–1. Cable Options

Description	Cable Length
DB37M to open end	Six feet
DB37F to open end	Six feet
DB25M to open end	Six feet
RS-232	Six feet

Table 9–2. Color Codes for 25-Pin and 37-Pin Cables

Pin	Color	Pin	Color	
1	BLACK	20	20 RED/BLACK	
2	BROWN	21	ORANGE/BLACK	
3	RED	22	YELLOW/BLACK	
4	ORANGE	23	GREEN/BLACK	
5	YELLOW	24	24 GRAY/BLACK	
6	GREEN	25	PINK/BLACK	
7	BLUE	End color codes for 25-pin cables continue for 37-pin cables.		
8	VIOLET	26	PINK/GREEN	
9	GRAY	27	PINK/RED	
19	WHITE	28	28 PINK/VIOLET	
11	PINK	29	LIGHT BLUE	
12	LIGHT GREEN	30	LIGHT BLUE/BROWN	
13	BLACK/WHITE	31	LIGHT BLUE/RED	
14	BROWN/WHITE	32	LIGHT BLUE/VIOLET	
15	RED/WHITE	33	LIGHT BLUE/BLACK	
16	ORANGE/WHITE	34	GRAY/GREEN	
17	GREEN/WHITE	35	GRAY/RED	
18	BLUE/WHITE	36	GRAY/VIOLET	
19	VIOLET/WHITE	37	LIGHT GREEN/BLACK	

Mounting Options

The analyzer can be installed in the configuration described in Table 9–3 and shown in Figure 9-1 through Figure 9-4.

Table 9–3. Mounting Options

Mounting Type	Description
Bench	Positioned on bench, includes mounting feet and front panel sidetrim handles.
EIA rack (top position)	Mounted in an EIA-style rack, includes mounting slides and front panel EIA-rack mounting handles.
Retrofit rack (top position)	Mounted in an EIA-style rack, includes mounting slides and front panel EIA-rack mounting handles. This configuration is intended for direct replacement of a C-series instrument in an existing rack. The rail mounting location is lower on the case and the front mounting screw slots have non-standard EIA locations.

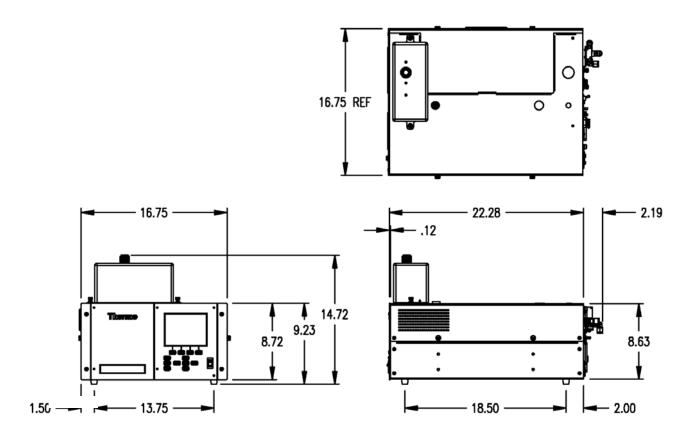


Figure 9–1. Bench Mounting

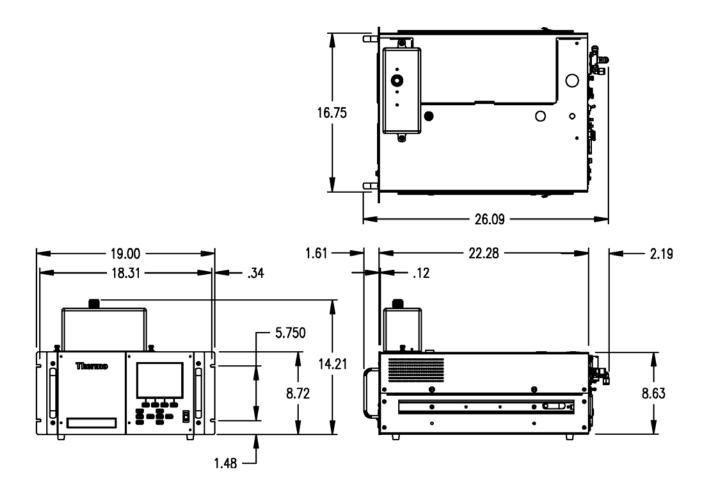


Figure 9–2. EIA Rack Mounting

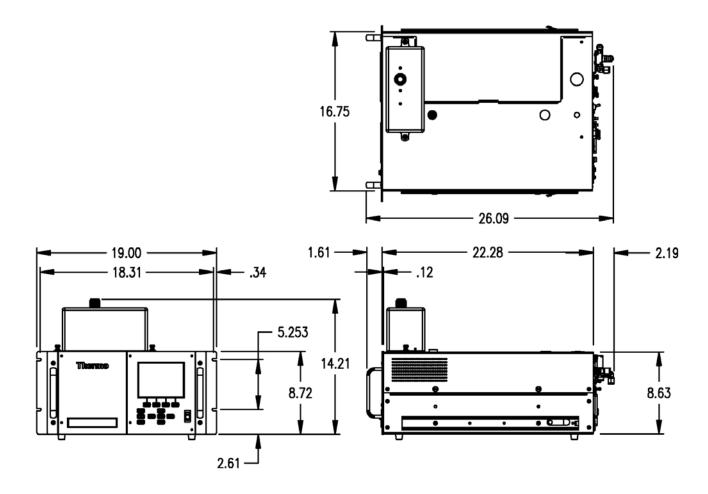


Figure 9–3. Retrofit Rack Mounting

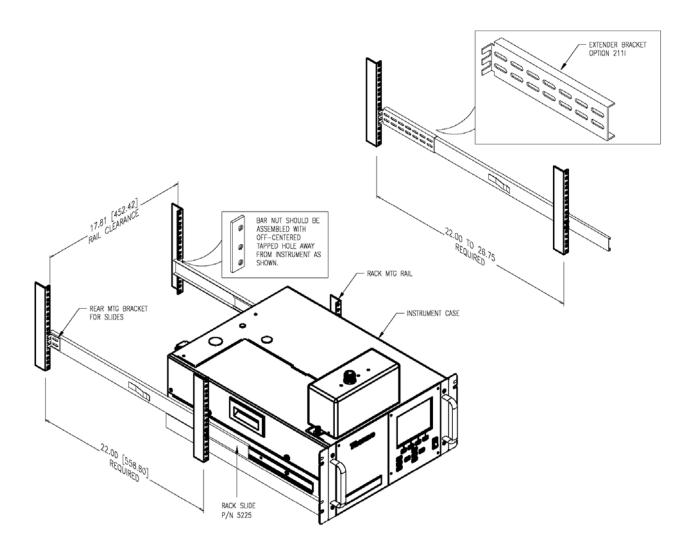


Figure 9-4. Rack Mount Option Assembly

Roof Flange Assembly

An optional roof flange assembly can be used with flat roof applications, as shown in Figure 9–5. This roof flange assembly uses 3" PVC tubing, fittings and roof flange with gasketing. The installer must assure a water tight installation when using a flange of this design. A 2-1/2" circular hole should be drilled through the roofline of the the enclosure, or building, if it has a flat roof. The roof surface should be clean and swept of all debris. The flange should be centered over the hole that has been drilled. A generous bead of RTV or silicone sealent should be applied to the circumfernce of the ponts shown in Figure 9–5.

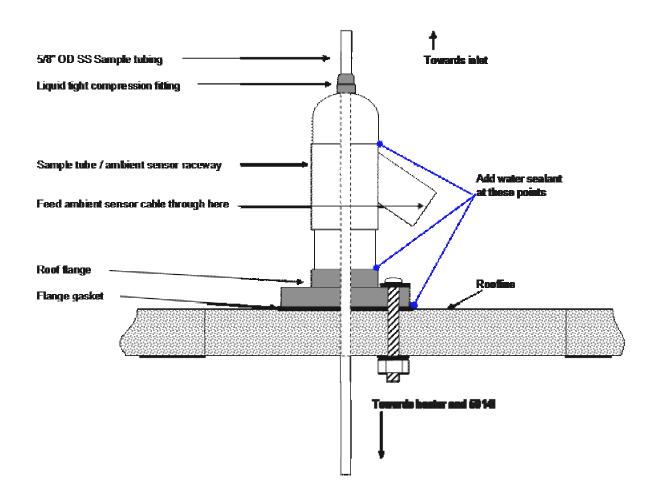


Figure 9–5. Roof Flange Assembly

The flange design also has four holes that can be used to secure the flange to the roof surface by the use of carriage bolts, washers and nuts. The length of the carriage bolts depends on the thickness of the roofline. Figure 9–6 shows a picture of the roof flange that is used with this assembly.



Figure 9–6. Securing the Roof Flange

Chapter 10 Model 5014*i* to 5030*i* Upgrade **Procedures**

This chapter describes the 5014*i* to 5030*i* upgrade procedures. For details, see the following topics:

- "Instrument Preparation" on page 10-1
- "SHARP Connection Bracket Assembly Installation" on page 10-2
- "Radius Tube Adapter Installation" on page 10-5
- "SHARP External Valve Installation" on page 10-7
- "SHARP Optics Assembly Installation" on page 10-9
- "Upgrade of the Heater Tube Assembly" on page 10-10
- "Model Label Change" on page 10-11
- "Power On Instrument" on page 10-11

Instrument **Preparation**

Use the following procedure to prepare the instrument.

- 1. If upgrading at an installed site, take the appropriate measures to secure the sample downtube and remove the instrument heater assembly and set aside.
- 2. From Instrument Panel, select Main Menu, select Instrument Controls and then Service Mode. Toggle to "Service Mode On".
- 3. From Instrument Panel, select Filter Tape, and then Manual, and select the BENCH to open.
- 4. From Instrument Panel, select Diagnostics, Instrument Configuration, and change the DETECTOR configuration from BETA to SHARP.
- 5. Turn instrument power off with the measurement head in the open position.

6. Unplug instrument from AC power source.



SHARP Connection Bracket Assembly Installation

Use the following procedure for SHARP connection bracket assembly installation.

1. Locate the Connection Bracket (Figure 10–1) and remove two screws and set aside.

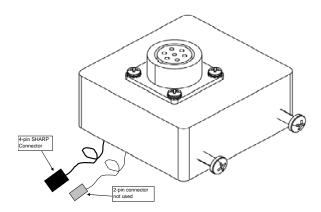


Figure 10–1. SHARP Optics Connection Bracket

2. Remove both sides of the Cover. Remove the tape pick up spool (Figure 10–2) by removing the thumb screw, washer, filter tape, spacers, o-rings and rear filter support guide plate.

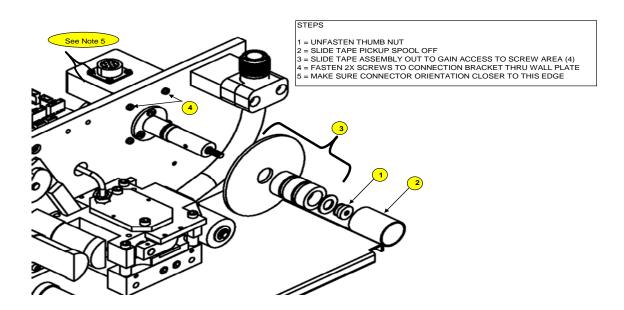


Figure 10–2. Tape Pick-up Spool Removal

- 3. Remove the two Philips screws from the connection bracket and align the bracket onto the wall plate, as shown above in Step 4, and insert the two screws through the wall plate and tighten.
- 4. Reinstall the tape pickup spool in the reverse order of removal in Step 2 by sliding all the spacers, O-rings and rear support guide plate into its original assembly order.
- 5. Install the filter tape following the filter tape path shown in Figure 10– 3. Use adhesive tape to adhere the filter tape to the take up spool and wind the tape over itself at least once.

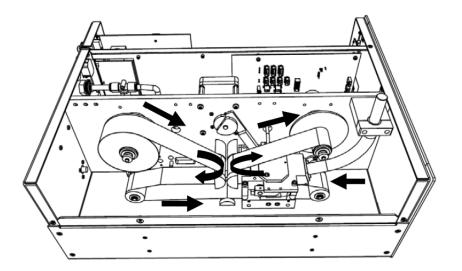


Figure 10–3. Filter Tape Installation Pathway

6. Complete the installation of the SHARP Optics Connection Bracket by connecting the 4-pin connector to the "SHARP 1" connector on the measurement interface board as shown below in Figure 10-4.

Note It should not be necessary to remove the electronics from the instrument case to achieve this connection and the spare 2-pin connector is not used. ▲

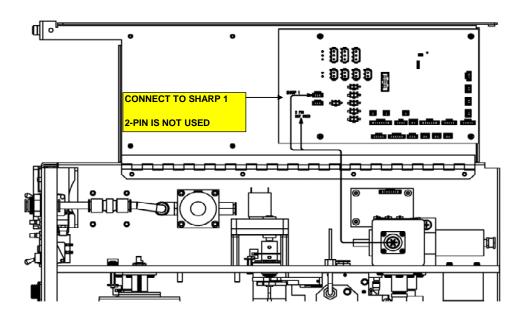


Figure 10–4. Connecting Connection Bracket Wiring to Measurement Interface Board

Radius Tube Adapter Installation

Use the following procedure for radius tube adapter installation.

- 1. Loosen the Radius Tube Mounting bracket screws.
- 2. Slide back bracket downwards.
- 3. Slowly remove the existing Radius Face Seal by pulling straight up with a twisting action.
- 4. Slowly insert the Radius Tube Adapter onto the Radius Tube and push down with a slight twist until it is seated.
- 5. Tighten the radius tube mounting bracket screws as shown in Figure 10-5.

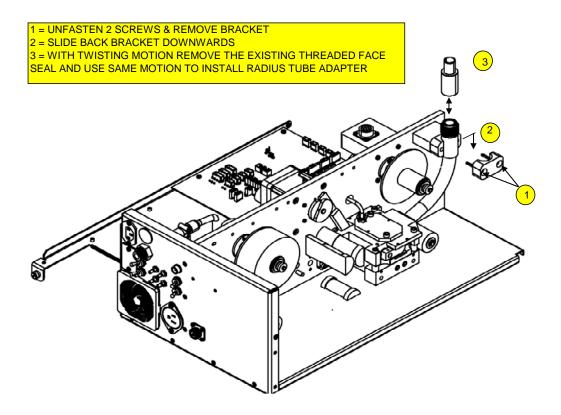


Figure 10–5. Radius Tube Adapter Install

6. Reassemble the two covers of the instrument in reverse order and check alignment of radius tube adapter through the hole in the cover as shown in Figure 10-6. Be sure to remove the old dust cover cap and the large plastic hole cover.

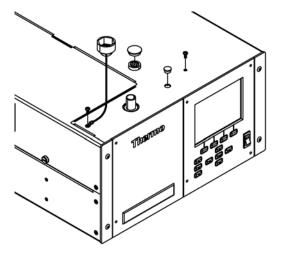


Figure 10–6. Radius Tube Adapter Alignment Check

SHARP External Valve Installation

Use the following procedure for SHARP external valve installation.

1. Attach the SHARP External Valve Assembly (which includes the to the Rear Panel using the captive hardware on bracket and attach the 3-pin connector to the rear panel labeled valve (Figure 10–7).

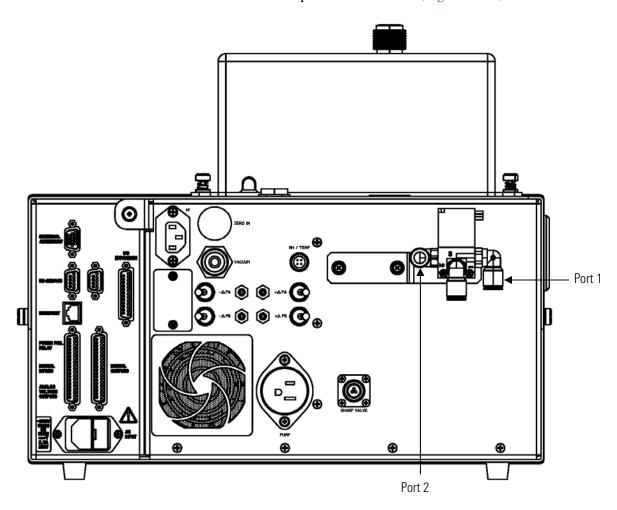


Figure 10–7. Rear Valve Assembly Installation

- 2. Follow the following plumbing procedure in accordance with Figure 10-8 below.
 - a. Attach the 3/8" vacuum tubing between pump intake and the vacuum port on rear panel and include the push-to-connect "T" fitting with the 0.040" thru-hole on the T-side in this line.
 - b. From the valve assembly that is now attached to the rear panel, connect the threaded fitting to the pump exhaust.

Connect the 3/8" tubing with inline HEPA filter to the available port (Port #1) on the external valve assembly using the available push connect fitting.

Note This step can also be delayed until after the zero air delivery tube and T-fitting are installed at the sample intake. **\(\Delta\)**

- d. At the sample inlet, attach the stainless steel T-fitting to the sample downtube and tighten the swagelok fitting with Teflon ferrules do not overtighten these ferrules.
- Snake the green vacuum tubing downwards towards the rear valve assembly and attach to Port #1 of the valve. If this is a field installation, proper water sealants should be used to avoid any leakage into the instrument.

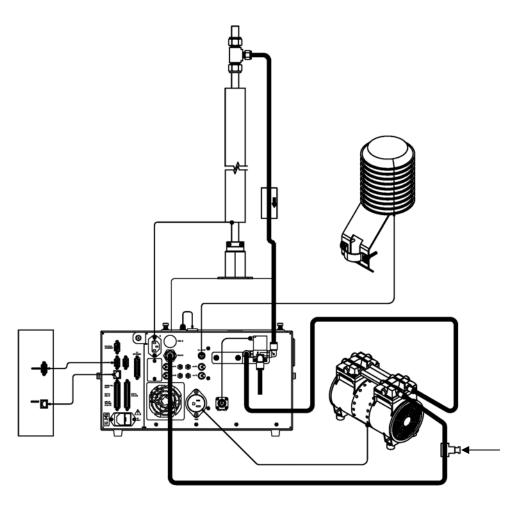


Figure 10–8. Plumbing Diagram

SHARP Optics Assembly Installation

Use the following procedure for SHARP external valve installation.

- 1. Remove the SHARP Optics Assembly port protection caps and plugs.
- 2. Align the radius tube adapter with the open port on the bottom of the optics assembly as per Figure 10-9 and gently push down and then screw down the two tabs using the captive hardware.

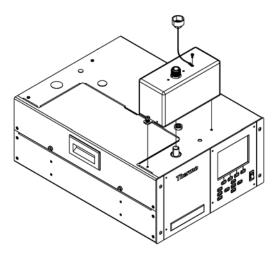


Figure 10–9. Optics Installation

3. Connect the cable assembly from the rear panel of the Optical assembly and secure it to the optics connector that was installed in Step 3 of this procedure and as shown in Figure 10-10.

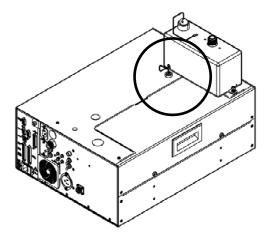



Figure 10–10. Connecting the Optics to the Optics Connector

Upgrade of the Heater Tube Assembly

Use the following procedure for upgrade of the heater tube assembly.

1. The heater assembly needs to be revised for the 5030*i* SHARP to include a ferrite bead and a small faraday cage. The four steps shown below in Figure 10–11 and Figure 10–12 should be used to modify the heater assembly.

Note The sample downtube should be slightly loose at the roof line to allow vertical play while working on this assembly. If the tubing height has changed and needs to be cut back, please cut and clean the tubing before attaching to the optical assembly. ▲

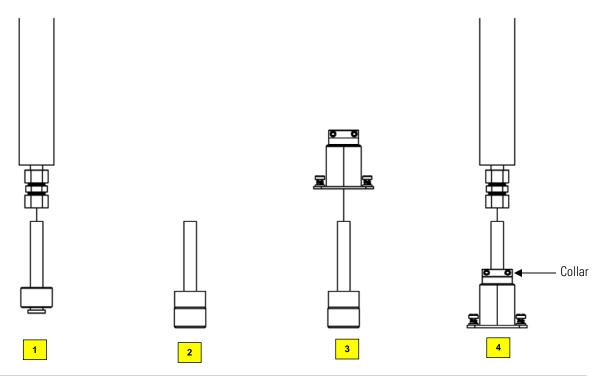

- 1) Remove existing stainless knurled nut from heater assembly
- 2) Install black plastic knurled nut on top of optical assembly and tighten firmly; and slide ferrite bead around short stainless tube.
- Slide black housing over both ferrite bead and black plastic nut and attach the two captive screws to the top of the optical assembly.
- 4) Tighten both hex screws to close collar.
- 5) Connect the heater tube assembly to the top of the stainless tube and tighten the Teflon ferrule swage fitting..

Figure 10–11. Upgrading 5030*i* Heater Assembly

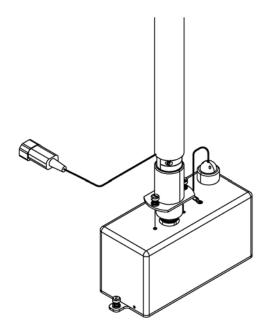


Figure 10-12. Connecting Heater to Optics Assembly Cover

Model Label Change

Use the following procedure for model label change.

1. Remove the 5014*i* label and replace with the new 5030*i* SHARP Label on the front panel Front Panel in accordance with Figure 10-13 below.

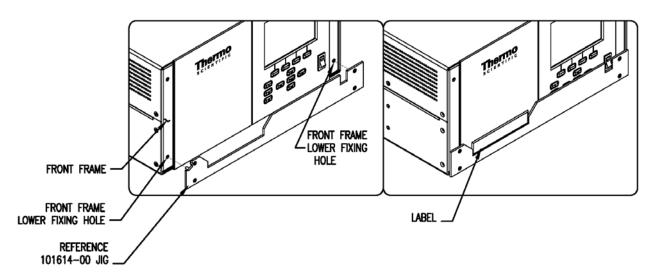


Figure 10-13. Front Panel Label Replacement

Power On Instrument

Upgrade is complete.

Appendix A Warranty

Seller warrants that the Products will operate or perform substantially in conformance with Seller's published specifications and be free from defects in material and workmanship, when subjected to normal, proper and intended usage by properly trained personnel, for the period of time set forth in the product documentation, published specifications or package inserts. If a period of time is not specified in Seller's product documentation, published specifications or package inserts, the warranty period shall be one (1) year from the date of shipment to Buyer for equipment and ninety (90) days for all other products (the "Warranty Period"). Seller agrees during the Warranty Period, to repair or replace, at Seller's option, defective Products so as to cause the same to operate in substantial conformance with said published specifications; provided that (a) Buyer shall promptly notify Seller in writing upon the discovery of any defect, which notice shall include the product model and serial number (if applicable) and details of the warranty claim; (b) after Seller's review, Seller will provide Buyer with service data and/or a Return Material Authorization ("RMA"), which may include biohazard decontamination procedures and other product-specific handling instructions; and (c) then, if applicable, Buyer may return the defective Products to Seller with all costs prepaid by Buyer. Replacement parts may be new or refurbished, at the election of Seller. All replaced parts shall become the property of Seller. Shipment to Buyer of repaired or replacement Products shall be made in accordance with the Delivery provisions of the Seller's Terms and Conditions of Sale. Consumables, including but not limited to lamps, fuses, batteries, bulbs and other such expendable items, are expressly excluded from the warranty under this warranty.

Notwithstanding the foregoing, Products supplied by Seller that are obtained by Seller from an original manufacturer or third party supplier are not warranted by Seller, but Seller agrees to assign to Buyer any warranty rights in such Product that Seller may have from the original manufacturer or third party supplier, to the extent such assignment is allowed by such original manufacturer or third party supplier.

In no event shall Seller have any obligation to make repairs, replacements or corrections required, in whole or in part, as the result of (i) normal wear and tear, (ii) accident, disaster or event of force majeure, (iii) misuse, fault or negligence of or by Buyer, (iv) use of the Products in a manner for which

Warranty

Warranty

they were not designed, (v) causes external to the Products such as, but not limited to, power failure or electrical power surges, (vi) improper storage and handling of the Products or (vii) use of the Products in combination with equipment or software not supplied by Seller. If Seller determines that Products for which Buyer has requested warranty services are not covered by the warranty hereunder, Buyer shall pay or reimburse Seller for all costs of investigating and responding to such request at Seller's then prevailing time and materials rates. If Seller provides repair services or replacement parts that are not covered by the warranty provided in this warranty, Buyer shall pay Seller therefor at Seller's then prevailing time and materials rates. ANY INSTALLATION, MAINTENANCE, REPAIR, SERVICE, RELOCATION OR ALTERATION TO OR OF, OR OTHER TAMPERING WITH, THE PRODUCTS PERFORMED BY ANY PERSON OR ENTITY OTHER THAN SELLER WITHOUT SELLER'S PRIOR WRITTEN APPROVAL, OR ANY USE OF REPLACEMENT PARTS NOT SUPPLIED BY SELLER, SHALL IMMEDIATELY VOID AND CANCEL ALL WARRANTIES WITH RESPECT TO THE AFFECTED PRODUCTS.

THE OBLIGATIONS CREATED BY THIS WARRANTY STATEMENT TO REPAIR OR REPLACE A DEFECTIVE PRODUCT SHALL BE THE SOLE REMEDY OF BUYER IN THE EVENT OF A DEFECTIVE PRODUCT. EXCEPT AS EXPRESSLY PROVIDED IN THIS WARRANTY STATEMENT, SELLER DISCLAIMS ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, ORAL OR WRITTEN, WITH RESPECT TO THE PRODUCTS, INCLUDING WITHOUT LIMITATION ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. SELLER DOES NOT WARRANT THAT THE PRODUCTS ARE ERROR-FREE OR WILL ACCOMPLISH ANY PARTICULAR RESULT.

Appendix B

C-Link Protocol Commands

This appendix provides a description of the C-Link protocol commands that can be used to remotely control a Model 5030i analyzer using a host device such as a PC or a datalogger. C-Link protocol may be used over RS-232, RS-485, or Ethernet. C-Link functions can be accessed over Ethernet using TCP port 9880.

Streaming data is sent out the serial port or the Ethernet port on a userdefined periodic basis. Streaming data over Ethernet is only generated when a connection is made on TCP port 9881.

Up to three simultaneous connections per protocol may be made over Ethernet.

For details, see the following topics:

- "Instrument Identification Number" on page B-1
- "Commands" on page B-2
- "Measurements" on page B-11
- "Alarms" on page B-14
- "Diagnostics" on page B-23
- "Datalogging" on page B-27
- "Calibration" on page B-34
- "Keys/Display" on page B-44
- "Measurement Configuration" on page B-45
- "Hardware Configuration" on page B-51
- "Communications Configuration" on page B-54
- "I/O Configuration" on page B-61
- "Record Layout Definition" on page B-66

Instrument Identification Number

Each command sent to the analyzer over the serial port must begin with the American Standard Code for Information Interchange (ASCII) symbol or byte value equivalent to the instrument's identification number plus 128.


Commands

For example, if the instrument ID is set to 25, then each command must begin with the ACSII character code 153 decimal. The analyzer ignores any command that does not begin with its instrument identification number. If the instrument ID is set to 0, then this byte is not required. For more information on changing Instrument ID, see Chapter 3, "Operation".

Commands

The analyzer must be in the remote mode and service mode not active in order to change instrument parameters remotely. However, the command "set mode remote" can be sent to the analyzer to put it in the remote mode. Report commands (commands that don't begin with "set") can be issued either in the remote or local mode, regardless of the service mode setting. For information on changing modes, see Chapter 3, "Operation".

The commands are not case sensitive. Each command must begin with the proper instrument identification number (ASCII) character. The command in the following example begins with the ASCII character code 153 decimal, which directs the command to the Model 5030i, and is terminated by a carriage return "CR" (ASCII character code 13 decimal).



Many of the commands have two forms. One form reads parameter from the instrument's memory, and the other writes, or updates, a parameter. The syntax for a write command adds the word "set" in front of the command and provides an argument. Command responses are generally echoed with a data element appended.

Note If the Service Mode is active, C-Link "set" commands are not allowed. This is to prevent parameters from being changed remotely while the unit is being serviced locally. **\(\rightarrow\)**

If an incorrect command is sent, an error message is generated. The list of error responses is shown in Table B-1. The following example sends the incorrect command "set unit mg/m3" instead of the correct command "set conc unit mg/m3."

Send: set unit mg/m3

Receive: set unit mg/m3 bad cmd

Table B–1. Error Response Messages

Command Response	Description
bad cmd	Command is not recognized
too high	Supplied value is higher than the upper limit
too low	Supplied value is lower than the lower limit
invalid string	Supplied string invalid (typically because a letter was detected when the value should be numeric)
data not valid	Supplied value is not acceptable for entered command
can't, wrong settings	Command not allowed for current measurement mode
can't, mode is service	Command not allowed while instrument is in service mode
feature not enabled	I/O expansion board is not detected
flags no alarm active	No measurement alarms are active

The "save" and "set save params" commands (duplicated for backward compatibility) store parameters in FLASH memory. It is important that this command be sent each time instrument parameters are changed. If changes are not saved, they will be lost in the event of a power failure.

Commands List

Table B-2 lists the 5030i C-Link protocol commands. The interface will respond to the command strings outlined below.

Table B–2. C-Link Protocol Commands

Command	Description	Page
1	Simulates pressing soft key 1 pushbutton	B-44
2	Simulates pressing soft key 2 pushbutton	B-44
3	Simulates pressing soft key 3 pushbutton	B-44
4	Simulates pressing soft key 4 pushbutton	B-44
addr dns	Reports/sets domain name server address for Ethernet port	B-54
addr gw	Reports/sets default gateway address for Ethernet port	B-54
addr ip	Reports/sets IP address for Ethernet port	B-54
addr nm	Reports/sets netmask address for Ethernet port	B-55
addr ntp	Reports/sets IP address for network time protocol server	B-55
alarm alpha count max	Reports alpha count alarm maximum value	B-14
alarm alpha count min	Reports alpha count alarm minimum value	B-14
alarm amb rh max	Reports/sets ambient relative humidity alarm maximum value	B-14

Command	Description	Page
alarm amb rh min	Reports/sets ambient relative humidity alarm minimum value	B-14
alarm amb temp max	Reports/sets ambient temperature alarm maximum value	B-15
alarm amb temp min	Reports/sets ambient temperature alarm minimum value	B-15
alarm baro pres max	Reports/sets barometric pressure alarm maximum value	B-15
alarm baro pres min	Reports/sets barometric pressure alarm minimum value	B-15
alarm bench status	Reports the bench status	B-15
alarm beta count max	Reports beta count alarm maximum value	B-15
alarm beta count min	Reports beta count alarm minimum value	B-15
alarm board temp max	Reports/sets board temperature alarm maximum value	B-16
alarm board temp min	Reports/sets board temperature alarm minimum value	B-16
alarm conc avg neph max	Reports/sets average nephelometer concentration alarm maximum value	B-16
alarm conc avg neph min	Reports/sets average nephelometer concentration alarm minimum value	B-16
alarm conc avg pm max	Reports/sets average PM concentration alarm maximum value	B-17
alarm conc avg pm min	Reports/sets average PM concentration alarm minimum value	B-17
alarm conc avg sharp max	Reports/sets average SHARP concentration alarm maximum value	B-17
alarm conc avg sharp min	Reports/sets average SHARP concentration alarm minimum value	B-17
alarm conc inst neph max	Reports/sets instant nephelometer concentration alarm maximum value	B-17
alarm conc inst neph min	Reports/sets instant nephelometer concentration alarm minimum value	B-17
alarm conc inst pm max	Reports/sets instant PM concentration alarm maximum value	B-18
alarm conc inst pm min	Reports/sets instant PM concentration alarm minimum value	B-18
alarm conc inst sharp max	Reports/sets instant sharp concentration alarm maximum value	B-18
alarm conc inst sharp min	Reports/sets instant sharp concentration alarm minimum value	B-18

Command	Description	Page
alarm filter tape status	Reports the filter tape status	B-19
alarm flow max	Reports/sets flow alarm maximum value	B-19
alarm flow min	Reports/sets flow alarm minimum value	B-19
alarm flow pres max	Reports/sets flow pressure alarm maximum value	B-19
alarm flow pres min	Reports/sets flow pressure alarm minimum value	B-19
alarm flow temp max	Reports/sets flow temperature alarm maximum value	B-20
alarm flow temp min	Reports/sets flow temperature alarm minimum value	B-20
alarm ib status	Reports the interface board status	B-20
alarm io status	Reports the I/O expansion board status	B-20
alarm mb status	Reports the motherboard status	B-20
alarm nb status	Reports the status of the nephelometer interface board	B-20
alarm ncal status	Reports the status of the last nephelometer auto-zero calibration	B-21
alarm neph led cur max	Reports/sets current nephelometer LED alarm maximum value	B-21
alarm neph led cur min	Reports/sets current nephelometer LED alarm minimum value	B-21
alarm neph rh max	Reports/sets nephelometer relative humidity alarm maximum value	B-21
alarm neph rh min	Reports/sets nephelometer relative humidity alarm minimum value	B-21
alarm neph temp max	Reports/sets nephelometer temperature alarm maximum value	B-22
alarm neph temp min	Reports/sets nephelometer temperature alarm minimum value	B-22
alarm sample rh max	Reports/sets sample relative humidity alarm maximum value	B-22
alarm sample rh min	Reports/sets sample relative humidity alarm minimum value	B-22
alarm status det	Reports the detector status	B-22
alarm tape counter max	Reports/sets tape counter alarm maximum value	B-23
alarm vac pres max	Reports/sets vacuum pressure alarm maximum value	B-23
alarm vac pres min	Reports/sets vacuum pressure alarm minimum value	B-23
allow mode cmd	Reports/sets the current "set" allow mode command	B-55

Command	Description	Page
alpha eff	Reports/sets the current value of alpha efficiency for the detector	B-34
alpha th	Reports/sets the current value of alpha threshold for the detector	B-34
amb rh	Reports the ambient relative humidity	B-23
amb rh offset	Reports/sets the current ambient relative humidity offset	B-35
amb temp	Reports the current ambient temperature	B-23
amb temp offset	Reports/sets the current ambient temperature offset	B-35
analog iout range	Reports/sets analog current output range per channel	B-61
analog vin	Retrieves analog voltage input data per channel	B-61
analog vout range	Reports/sets analog voltage output range per channel	B-61
avg24 time	Reports/sets 24-hour averaging time to start averaging the concentration	B-11
baro mass coef	Reports/sets the current barometric mass coefficient	B-35
baro pres	Reports the current barometric pressure	B-24
baro span	Reports/sets the current barometric pressure span	B-36
baud	Reports/sets current baud rate	B-56
beta th	Reports/sets the current reference beta threshold for the detector	B-36
bkg pm	Reports/sets current PM background	B-36
bkg sharp	Reports/sets current SHARP background	B-37
board temp	Reports the current board temperature	B-24
cal baro pres span	Automatically calculates the span coefficient	B-37
cal flow pres span	Automatically sets the flow pressure span	B-37
cal flow span	Automatically sets the flow span	B-37
cal vac flow offset	Automatically triggers the filter change and sets the vacuum and flow offset	B-38
cal vac pres span	Automatically sets the vacuum pressure span	B-38
clr lrecs	Clears away only Irecs that have been saved	B-27
clr records	Clears away all logging records that have been saved	B-27
clr srecs	Clears away only srecs that have been saved	B-27
coef pm	Reports/sets current PM coefficient	B-39
coef sharp	Reports/sets current SHARP coefficient	B-38
conc unit	Reports/sets current concentration units	B-45
contrast	Reports/sets current screen contrast	B-51

	Description	Page
copy Irec to sp	Sets/copies current lrec selection into the scratch pad	B-28
copy sp to Irec	Sets/copies current selections in scratch pad into Irec list	B-27
copy sp to srec	Sets/copies current selections in scratch pad into srec list	B-27
copy sp to stream	Sets/copies current selections in scratch pad into stream list	B-27
copy srec to sp	Sets/copies current srec selection into the scratch pad	B-28
copy stream to sp	Sets/copies current streaming data selection into the scratch pad	B-28
crn	Reports the current radon concentration	B-24
custom	Reports/sets defined custom range concentration	B-46
data treatment lrec	Reports/sets data treatment for concentration values in Irecs	B-28
data treatment srec	Reports/sets data treatment for concentration values in srecs	B-28
date	Reports/sets current date	B-52
default params	Sets parameters to default values	B-52
det	Reports/sets the status of the detector board	B-53
det status	Reports the current mass for the detector	B-24
dhcp	Reports/sets state of use of Dynamic Host Configuration Protocol (DHCP)	B-57
diag volt det	Reports diagnostic voltage levels on the detector board	B-24
diag volt iob	Reports diagnostic voltage levels on the I/O expansion board	B-24
diag volt mb	Reports diagnostic voltage levels on the motherboard	B-24
diag volt mib	Reports diagnostic voltage levels on the measurement interface board	B-25
diag volt neph	Reports diagnostic voltage levels on the nephelometer interface board	B-25
dig in	Reports status of the digital inputs	B-62
din	Reports/sets digital input channel and active state	B-62
do (down)	Simulates pressing down pushbutton	B-44
dout	Reports/sets digital output channel and active state	B-63
dtoa	Reports outputs of the digital to analog converters per channel	B-63
en (enter)	Simulates pressing enter pushbutton	B-44
er	Returns a brief description of the main operating conditions in the format specified in the commands	B-28
erec	Returns a snapshot of the main operating conditions (measurements and status) in the specified format	B-28
erec format	Reports/sets erec format	B-30

Command	Description	Page
erec layout	Reports current layout of erec data	B-31
filter period	Reports/sets the number of hours to be added to filter next time for the filter tape change	B-46
filter time	Reports/sets the next date and time of the filter tape change	B-47
flags	Reports current active measurement status flags in HEX	B-12
flow	Reports the current sample flow	B-25
flow pres	Reports the current flow pressure	B-25
flow pres span	Reports/sets the flow pressure span	B-39
flow pres offset	Reports the flow pressure offset	B-39
flow span	Reports/sets the current flow span	B-39
flow target	Reports/sets the current flow	B-47
flow temp	Reports the current flow temperature	B-25
flow temp offset	Reports/sets offset for flow temperature	B-39
format	Reports/sets current reply termination format	B-57
he (help)	Simulates pressing help pushbutton	B-44
high volt	Reports/sets the current high voltage for the detector	B-40
host name	Reports/sets host name string	B-58
ht control	Reports/sets the current status of the heater	B-47
instr name	Reports instrument name	B-58
instrument id	Reports/sets instrument id	B-58
int time	Reports/sets mass and concentration integration time	B-48
io bd	Reports/sets the presense of the I/O expansion board	B-25
isc (iscreen)	Retrieves framebuffer data used for the display	B-44
layout ack	Reports/disables stale layout/layout changed indicator ('*')	B-59
le (left)	Simulates pressing left pushbutton	B-44
list din	Lists current selection for digital inputs	B-64
list dout	Lists current selection for digital outputs	B-64
list lrec	Lists current selection Irec logging data	B-29
list sp	Lists current selection in the scratchpad list	B-29
list srec	Lists current selection srec logging data	B-29
list stream	Lists current selection streaming data output	B-29
list var aout	Reports list of analog output, index numbers, and variables	B-64
list var din	Reports list of digital input, index numbers, and variables	B-64
list var dout	Reports list of digital output, index numbers, and variables	B-64

Command	Description	Page
list var log	Reports a list of datalogging index numbers and variables	B-64
lr	Reports the last Irec stored	B-29
Irec	Reports maximum number of Irecs	B-29
Irec format	Reports/sets output format for Irecs (ASCII or binary)	B-30
Irec layout	Reports current layout of Irec data	B-31
Irec mem size	Reports maximum number of Irecs that can be stored	B-31
Irec per	Reports/sets Irec logging period	B-31
malloc lrec	Reports/sets memory allocation for Irecs	B-32
malloc srec	Reports/sets memory allocation for srecs	B-32
mass	Reports the presence of mass	B-26
mass coef	Reports/sets the current mass coefficient	B-40
mass limit	Reports/sets the current filter mass limit	B-48
me (menu)	Simulates pressing menu pushbutton	B-44
neph	Reports the 1-minute running average nephelometer concentration	B-12
neph 24avg	Reports the last calculated 24-hour average nephelometer concentration	B-12
neph bkg	Reports the current nephelometer background	B-26
neph cal bkg	Sets the nephelometer into an auto-zero calibration routine	B-41
neph coef	Reports/sets the nephelometer span coefficient	B-41
neph led current	Reports the nephelometer LED current	B-13
neph mode	Reports the current operating mode of the nephelometer	B-26
neph prev bkg	Reports the previous nephelometer background	B-26
neph raw	Reports the raw, unaveraged, nephelometer concentration	B-13
neph ref det	Reports the nephelometer reference detector voltage	B-13
neph reset bkg	Resets measured background to zero	B-41
neph restore bkg	Restores background to the previous background values	B-42
neph rh	Reports the nephelometer relative humidity	B-13
neph rh offset	Reports/sets the nephelometer relative humidity sensor offset	B-42
neph src level	Reports the nephelometer source level	B-42
neph temp	Reports the nephelometer temperature sensor	B-13
neph temp offset	Reports/sets the nephelometer temperature sensor offset	B-42
neph thermal coef	Reports/sets the nephelometer thermal coefficient	B-43
no of Irec	Reports number of Irecs stored in memory	B-32

Command	Description	Page
no or srec	Reports number of srecs stored in memory	B-32
pm	Reports the measured PM concentration	B-13
pm 24avg	Reports the 24-hour average PM concentration	B-13
power up mode	Reports/sets the power up mode as local or remote	B-59
pres comp	Reports/sets pressure compensation to actual or standard	B-48
pres std	Reports/sets the standard pressure	B-49
program no	Reports analyzer program number	B-60
pump	Reports/sets pump on or off	B-53
push	Simulates pressing a key on the front panel	B-44
range	Reports/sets current PM range	B-49
relay	Sets relay logic status for the designated relay(s)	B-65
relay stat	Reports relay logic status for all relay(s)	B-65
reset tape counter	Resets the tape count to zero	B-26
rh th	Reports/sets the current relative humidity threshold for the detector	B-50
ri (right)	Simulates pressing right pushbutton	B-44
ru (run)	Simulates pressing run pushbutton	B-44
sample rh	Reports the sample relative humidity	B-26
save	Stores parameters in FLASH	B-53
save params	Stores parameters in FLASH	B-53
sc (screen)	C-series legacy command that reports a generic response (Use iscreen instead)	B-45
sharp	Reports the 1-minute running average SHARP monitor concentration	B-14
sharp24avg	Reads the last calculated 24-hour average SHARP monitor concentration	B-14
sp field	Reports/sets item number and name in scratch pad list	B-33
sr	Reports the last srec stored	B-29
srec	Reports maximum number of srecs	B-29
srec format	Reports/sets output format for srecs (ASCII or binary)	B-30
srec layout	Reports current layout of srec data	B-31
srec mem size	Reports maximum number of srecs that can be stored	B-31
srec per	Reports/sets srec logging period	B-31
stream per	Reports/sets current time interval for streaming data	B-33
stream time	Reports/sets a time stamp to streaming data or not	B-34

Command	Description	Page
tape counter	Reports the number of counts corresponding to the filter tape movement	B-27
tape to ncal ratio	Reports/sets the ratio of filter tape changes per nephelometer auto-zero	B-43
temp comp	Reports/sets temperature compensation to actual or standard	B-50
temp std	Reports/sets the standard temperature	B-50
temp th	Reports/sets the temperature threshold for the detector	B-51
thermal mass coef	Reports/sets the current thermal mass coefficient	B-40
time	Reports/sets current time (24-hour format)	B-53
tz	Reports/sets the timezone string for the NTP server	B-60
up	Simulates pressing up pushbutton	B-44
vac mass coef	Reports/sets the current vacuum mass coefficient	B-41
vac pres	Reports the current vacuum pressure	B-27
vac pres span	Reports/sets the vacuum pressure span	B-43
vac pres offset	Reports the vacuum pressure offset	B-44
vf pres cal def	Sets vacuum and flow pressure calibration defaults	B-44

Measurements

avg24 time

This command reports the 24-hour averaging time in hours and minutes. The following example shows that the averaging time is set to 18:30.

Send: avg24 time Receive: avg24 time 18:30

set avg24 time hh:mm

hh = hours (01 to 23)mm = minutes (01 to 59)

This command sets the 24-hour averaging time to start averaging the concentration from hh:mm until next 24 hours. It is then set to next 24 hours automatically. The following example sets the 24-hour averaging time to 17:50.

set avg24 time 17:50 Send: Receive: set avg24 time 17:50 ok Measurements

flags

This reports 8 hexadecimal digits (or flags) that represent the status of the mode, pressure and temperature compensation status, concentration units, concentration modes and alarms. To decode the flags, each hexadecimal digit is converted to binary as shown in the Figure B-1. It is the binary digits that define the status of each parameter.

Send: flags

flags 00000000 Receive:

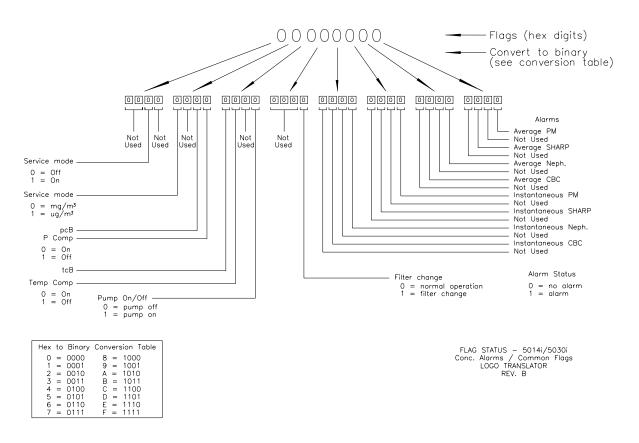


Figure B–1. Flags Field

neph

This command reports the 1-minute running average nephelometer concentration. The following example reports the 1-minute running average value.

Send: neph

Receive: neph 1.405E+01 μ g/m3

neph 24avg

This command reports the last calculated 24-hour average nephelometer concentration (which defaults to 9,999 µg/m³ if 24 hours has not passed). Send: neph 24avg

Receive: neph 24avg 9.999E+03 μg/m3

neph led current

This command reports the nephelometer LED current. The following example shows that the LED current is 65.7 mA.

Send: neph led current

Receive: neph led current 65.7 mA

neph raw

This command reports the raw, unaveraged, nephelometer concentration. The following example reports the raw, unaveraged concentration value.

Send: neph raw

Receive: neph raw 1.331E+01 μ g/m3

neph ref det

This command reports the nephelometer reference detector voltage. The following example reports that the reference detector voltage is 1096 mV.

Send: neph ref det

Receive: neph ref det 1096 mV

neph rh

This command reports the nephelometer relative humidity. The following example reports that the relative humidity is 27.2%.

Send: neph rh

Receive: neph rh 27.2 %

neph temp

This command reports the nephelometer temperature sensor. The following example reports that the temperature sensor is 27.2 °C.

Send: neph temp

Receive: neph temp 27.2 degC

pm

This command reports the measured PM concentration. The following example reports that the PM concentration is 14.1 mg/m³.

Send: pm

Receive: pm 1.410E+01 mg/m3

pm 24avg

This command reports the 24 hour averaging PM concentration. The following example reports the 24 hour PM concentration value.

Alarms

Send: pm 24avg

Receive: pm 24avg 10.000E+00 ug/m3

sharp

This command reports the 1-minute running average SHARP concentration. The following example reports the 1-minute running average value.

Send: sharp

Receive: sharp 1.187E+01 μ g/m3

sharp 24avg

This command reports the last calculated 24-hour average SHARP concentration (which defaults to 9,999 µg/m³ if 24 hours has not passed).

Send: sharp 24avg

Receive: sharp 24avg 9.999E+03 μg/m3

Alarms

alarm alpha count min alarm alpha count max

These commands report the current alpha count alarm minimum and maximum value settings. The following example reports that the alpha count alarm minimum value is 200.

Send: alarm alpha count min Receive: alarm alpha count min 200

alarm amb rh min alarm amb rh max

These commands report the current ambient relative humidity alarm minimum and maximum value settings. The following example reports the ambient relative humidity alarm minimum value is 35.0%.

Send: alarm amb rh min

alarm amb rh min 35.0 % Receive:

set alarm amb rh min value set alarm amb rh max value

These commands set the ambient relative humidity alarm minimum and maximum values to value, where value is a floating-point number representing ambient relative humidity alarm limits in percent. The following example sets the ambient relative humidity alarm maximum value to 55%.

Send: set alarm amb rh max 55 set alarm amb rh max 55 ok Receive:

alarm amb temp min alarm amb temp max

These commands report the current ambient temperature alarm minimum and maximum value settings. The following example reports that the ambient temperature alarm minimum value is 4.0 °C.

Send: alarm amb temp min

Receive: alarm amb temp min 4.0 degC

set alarm amb temp min value set alarm amb temp max value

These commands set the ambient temperature alarm minimum and maximum values to value, where value is a floating-point number representing ambient temperature alarm limits in °C. The following example sets the ambient temperature alarm maximum value to 38 °C.

Send: set alarm amb temp max 38 Receive: set alarm amb temp max 38 ok

alarm baro pres min alarm baro pres max

These commands report the current barometric pressure alarm minimum and maximum value settings. The following example reports that the barometric pressure alarm minimum value is 500.0 mmHg.

Send: alarm baro pres min

Receive: alarm baro pres min 500.0 mmHg

set alarm baro pres min value set alarm baro pres max value

These commands set the barometric pressure alarm minimum and maximum values to value, where value is a floating-point number representing barometric pressure alarm limits in millimeters of mercury. The following example sets the barometric pressure alarm maximum value to 800.0 mmHg.

Send: set alarm baro pres max 800 Receive: set alarm baro pres max 800 ok

alarm bench status

This command reports the current status of the bench as FAIL or OK. The following example reports that the bench status is OK.

Send: alarm bench status Receive: alarm bench status ok

alarm beta count min alarm beta count max

These commands report the current beta count alarm minimum and maximum value settings. The following example reports that the beta count alarm minimum value is 5000.

Send: alarm beta count min Receive: alarm beta count min 5000

alarm board temp min alarm board temp max

These commands report the current board temperature alarm minimum and maximum value settings. The following example reports that the board temperature alarm minimum value is 0 °C.

Send: alarm board temp min

Receive: alarm board temp min 0.0 degC

set alarm board temp min value set alarm board temp max value

These commands set the board temperature alarm minimum and maximum values to value, where value is a floating-point number representing board temperature alarm limits in °C. The following example sets the board temperature alarm maximum value to 38 °C.

Send: set alarm board temp max 38 Receive: set alarm board temp max 38 ok

alarm conc avg neph min alarm conc avg neph max

These commands report the current 24-hour average nephelometer concentration alarm minimum and maximum values setting. The following example reports that the average nephelometer concentration minimum is $0 \mu g/m^3$.

Send: alarm conc avg neph min

alarm conc avg neph min 0.000E+00 μg/m3 Receive:

set alarm conc avg neph min value set alarm conc avg neph max value

These commands set the 24-hour average nephelometer concentration alarm minimum and maximum values to value, where value is a floatingpoint representation of the concentration alarm limits. Values must be in the units that are currently set for use. The following example sets the average nephelometer concentration alarm maximum value to 10000 $\mu g/m^3$.

set alarm conc avg neph max 10000 Send: Receive: set alarm conc avg neph max 10000 ok

alarm conc avg pm min alarm conc avg pm max

These commands report the current 24-hour average PM concentration alarm minimum and maximum values setting. The following example reports that the average PM concentration minimum is 100 μg/m³.

Send: alarm conc avg pm min

Receive: alarm conc avg pm min 1.000E+02 μg/m3

set alarm conc avg pm min value set alarm conc avg pm max value

These commands set the 24-hour average PM concentration alarm minimum and maximum values to *value*, where *value* is a floating-point representation of the concentration alarm limits. Values must be in the units that are currently set for use. The following example sets the average PM concentration alarm maximum value to 10000 mg/m³.

Send: set alarm conc avg pm max 10000 Receive: set alarm conc avg pm max 10000 ok

alarm conc avg sharp min alarm conc avg sharp max

These commands report the current 24-hour average SHARP concentration alarm minimum and maximum values setting. The following example reports that the average SHARP concentration minimum is 0.0 $\mu g/m^3$.

Send: alarm conc avg sharp min

Receive: alarm conc avg sharp min 0.000E+00 μg/m3

set alarm conc avg sharp min value set alarm conc avg sharp max value

These commands set the 24-hour average SHARP concentration alarm minimum and maximum values to *value*, where *value* is a floating-point representation of the concentration alarm limits. Values must be in the units that are currently set for use. The following example sets the average SHARP concentration alarm maximum value to 10,000 µg/m³.

Send: set alarm conc avg sharp max 10000 Receive: set alarm conc avg sharp max 10000 ok

alarm conc inst neph min alarm conc inst neph max

These commands report the current 24-hour instant nephelometer concentration alarm minimum and maximum values setting. The following example reports that the instant nephelometer concentration minimum is 0 $\mu g/m^3$.

C-Link Protocol Commands

Send: alarm conc inst neph min

alarm conc inst neph min 0.000E+00 μg/m3 Receive:

set alarm conc inst neph min value set alarm conc inst neph max value

These commands set the 24-hour instant nephelometer concentration alarm minimum and maximum values to value, where value is a floatingpoint representation of the concentration alarm limits. Values must be in the units that are currently set for use. The following example sets the instant nephelometer concentration alarm maximum value to 10000 $\mu g/m^3$.

Send: set alarm conc inst neph max 10000 Receive: set alarm conc inst neph max 10000 ok

alarm conc inst pm min alarm conc inst pm max

These commands report the current 24-hour instant PM concentration alarm minimum and maximum values setting. The following example reports that the instant PM concentration minimum is 100 µg/m³.

Send: alarm conc inst pm min

Receive: alarm conc inst pm min 1.000E+02 μg/m3

set alarm conc inst pm min value set alarm conc inst pm max value

These commands set the 24-hour instant PM concentration alarm minimum and maximum values to *value*, where *value* is a floating-point representation of the concentration alarm limits. Values must be in the units that are currently set for use. The following example sets the instant PM concentration alarm maximum value to 10000 µg/m³.

Send: set alarm conc inst pm max 10000 Receive: set alarm conc inst pm max 10000 ok

alarm conc inst sharp min alarm conc inst sharp max

These commands report the current 24-hour instant SHARP concentration alarm minimum and maximum values setting. The following example reports that the instant SHARP concentration minimum is 0 µg/m³.

Send: alarm conc inst sharp min

Receive: alarm conc inst sharp min 0.000E+00 μg/m3

set alarm conc inst sharp min value set alarm conc inst sharp max value

These commands set the 24-hour instant SHARP concentration alarm minimum and maximum values to *value*, where *value* is a floating-point representation of the concentration alarm limits. Values must be in the units that are currently set for use. The following example sets the instant SHARP concentration alarm maximum value to 10000 µg/m³.

Send: set alarm conc inst sharp max 10000 Receive: set alarm conc inst sharp max 10000 ok

alarm filter tape status

This command reports the status of the filter tape as FAIL or OK. The following example reports that the filter tape status is OK.

Send: alarm filter tape status Receive: alarm filter tape status ok

alarm flow min

alarm flow max

These commands report the current flow alarm minimum and maximum value settings. The following example reports that the flow alarm minimum value is 16.0 LPM.

Send: alarm flow min

Receive: alarm flow min 16.00 LPM

set alarm flow min value set alarm flow max value

These commands set the flow alarm minimum and maximum values to value, where value is a floating-point number representing flow alarm limits in liters per minute/liters per hour. The following example sets the flow alarm maximum value to 17.34 LPM.

Send: set alarm flow max 17.34 Receive: set alarm flow max 17.34 ok

alarm flow pres min alarm flow pres max

These commands report the current flow pressure alarm minimum and maximum value settings. The following example reports that the flow pressure alarm minimum value is -10.0 mmHg.

Send: alarm flow pres min

Receive: alarm flow pres min -10.0 mmHg

set alarm flow pres min value set alarm flow pres max value

These commands set the flow pressure alarm minimum and maximum values to *value*, where *value* is a floating-point number representing flow pressure alarm limits in millimeters of mercury. The following example sets the flow pressure alarm maximum value to 50.0 mmHg.

C-Link Protocol Commands

Send: set alarm flow pres max 50 set alarm flow pres max 50 ok Receive:

alarm flow temp min alarm flow temp max

This command reports the current flow temperature alarm maximum value setting. The following example reports that the flow temperature alarm maximum value is 20.0 °C.

Send: alarm flow temp max

alarm flow temp max 20.0 degC Receive:

set alarm flow temp min value set alarm flow temp max value

This command sets the flow temperature alarm maximum value to *value*, where *value* is a floating-point number representing flow temperature alarm limits in °C. The following example sets the flow temperature alarm maximum value to 70 °C.

Send: set alarm flow temp max 70 set alarm flow temp max 70 ok Receive:

alarm ib status

This command reports the status of the interface board as FAIL or OK. The following example reports that the interface board status is OK.

Send: alarm ib status Receive: alarm ib status ok

alarm io status

This command reports the status of the I/O expansion board as FAIL or OK. The following example reports that the I/O expansion board status is OK.

Send: alarm io status Receive: alarm io status ok

alarm mb status

This command reports the status of the motherboard as FAIL or OK. The following example reports that the motherboard status is OK.

Send: alarm mb status alarm mb status ok Receive:

alarm nb status

This command reports the status of the nephelometer interface board as FAIL or OK. The following example reports that the nephelometer interface board status is OK.

Send: alarm nb status alarm nb status ok Receive:

alarm neal status

This command reports the status of the last nephelometer auto-zero calibration. The following example reports that the neal is functional.

Send: alarm ncal status Receive: alarm ncal status ok

alarm neph led cur min alarm neph led cur max

These commands report the current nephelometer LED alarm minimum and maximum value settings. The following example reports that the nephelometer LED alarm minimum value is 50 mA.

Send: alarm neph led cur min

Receive: alarm neph led cur min 50.0 mA

set alarm neph led cur min value set alarm neph led cur max value

These commands set the nephelometer LED alarm minimum and maximum values to value, where value is a floating-point number representing nephelometer LED alarm limits in mA. The following example sets the nephelometer LED alarm maximum value to 75.0 mA.

Send: set alarm neph led cur min 75 Receive: set alarm neph led cur min 75 ok

alarm neph rh min alarm neph rh max

These commands report the current nephelometer relative humidity alarm minimum and maximum value settings. The following example reports that the nephelometer relative humidity alarm minimum value is 5.0%.

Send: alarm neph rh min Receive: alarm neph rh min 5.0 %

set alarm neph rh min value set alarm neph rh max value

These commands set the nephelometer relative humidity alarm minimum and maximum values to *value*, where *value* is a floating-point number representing nephelometer relative humidity alarm limits in percent. The following example sets the nephelometer relative humidity alarm maximum value to 95%.

Send: set alarm neph rh min 95 Receive: set alarm neph rh min 95 ok

alarm neph temp min alarm neph temp max

This command reports the current nephelometer temperature alarm maximum value setting. The following example reports that the nephelometer temperature alarm maximum value is 5.0 °C.

Send: alarm neph temp max

Receive: alarm neph temp max 5.0 degC

set alarm neph temp min value set alarm neph temp max value

This command sets the nephelometer temperature alarm maximum value to value, where value is a floating-point number representing nephelometer temperature alarm limits in °C. The following example sets the nephelometer temperature alarm maximum value to 40.0 °C.

Send: set alarm neph temp max 40 Receive: set alarm neph temp max 40 ok

alarm sample rh min alarm sample rh max

These commands report the current sample relative humidity alarm minimum and maximum value settings. The following example reports that the sample relative humidity alarm minimum value is 5%.

alarm sample rh min Send: Receive: alarm sample rh min 5.0 %

set alarm sample rh min value set alarm sample rh max value

These commands set the sample relative humidity alarm minimum and maximum values to value, where value is a floating-point number representing sample relative humidity alarm limits in percent. The following example sets the sample relative humidity alarm maximum value to 40%.

Send: set alarm sample rh min 40 Receive: set alarm sample rh min 40 ok

alarm status det

This command reports the board status of the detector as FAIL or OK. The following example reports that the detector board status is OK.

alarm status det Send: alarm status det ok Receive:

alarm tape counter max

This command reports the current filter tape count alarm maximum value setting. The following example reports that the filter tape count alarm maximum value is 480.

Send: alarm tape counter max Receive: alarm tape counter max 480

set alarm tape counter max value

This command sets the filter tape count alarm maximum *value*, where *value* is an integer number representing filter tape alarm limits. The following example sets the filter tape count alarm maximum value to 490.

Send: set alarm tape counter max 490 Receive: set alarm tape counter max 490 ok

alarm vac pres min

alarm vac pres max

These commands report the current vacuum pressure alarm minimum and maximum value settings. The following example reports that the vacuum pressure alarm minimum value is -20.0 mmHg.

Send: alarm vac pres min

Receive: alarm vac pres min -20.0 mmHg

set alarm vac pres min value set alarm vac pres max value

These commands set the vacuum pressure alarm minimum and maximum values to *value*, where *value* is a floating-point number representing vacuum pressure alarm limits in millimeters of mercury. The following example sets the vacuum pressure alarm maximum value to 250.0 mmHg.

Send: set alarm vac pres max 250 Receive: set alarm vac pres max 250 ok

Diagnostics

amb rh

This command reports the ambient RH, in percent. The following example reports that the ambient RH is 30%.

Send: amb rh

Receive: amb rh 30.0 %

amb temp

This command reports the current ambient temperature, in degrees C. The following example reports that the ambient temperature is 15 °C.

amb temp Send:

Receive: amb temp 15.0 degC

baro pres

This command reports the current barometric pressure, in mmHg. The following example reports that the barometric pressure is 722 mmHg.

Send: baro pres

Receive: baro pres 722.0 mmHg

board temp

This command reports the current board temperature, in degrees C. The following example reports that the board temperature is 15 °C.

Send: board temp

Receive: board temp 15.0 degC

crn

This command reports the current radon concentration for the detector. The following example reports that the radon concentration is 1.2 Bq/m³.

Send: crn

Receive: crn 1.20 Bq/m3

det status

This command reports the current mass for the detector. The sequence is: α , β , β_C , β_{REF} . Each value is separated by a space.

Send: det status

Receive: det status 1 9657 9600 4623

diag volt det

This command reports the diagnostic voltage measurements on the detector board. The voltage is positive 5.

Send: diag volt det Receive: diag volt det 4.9

diag volt iob

This command reports the diagnostic voltage measurements on the I/O expansion board. The sequence of voltages is: Positive 24, positive 5, positive 3.3, and negative 3.3. Each voltage value is separated by a space.

Send: diag volt iob

Receive: diag volt iob 24.10 4.90 3.20 -3.20

diag volt mb

This command reports the diagnostic voltage measurements on the motherboard. The sequence of voltages is: Positive 24, positive 15, positive 5, positive 3.3, and negative 3.3. Each voltage value is separated by a space.

Send: diag volt mb

diag volt mb 24.10 14.90 4.90 3.20 -3.20 Receive:

diag volt mib

This command reports the diagnostic voltage measurements on the measurement interface board. The sequence of voltages is: Positive 24, positive 15, negative 15, positive 5, and positive 3.3. Each voltage value is separated by a space.

Send: diag volt mib

Receive: diag volt mib 24.98 14.80 -14.90 4.96 3.20

diag volt neph

This command reports the current voltage readings of the nephelometer interface board. The following example reports the nephelometer interface board values.

diag volt neph Send:

diag volt mib 3.3 3.3 5.0 7.2 -5.0 -7 Receive:

flow

This command reports the current sample flow. The following example reports that the sample flow is 16.69 LPM.

Send: sample flow

Receive: sample flow 16.69 LPM

flow pres

This command reports the current flow pressure for the detector, in mmHg. The following example reports that the flow pressure is 24.1 mmHg.

Send: flow pres

Receive: flow pres 24.1 mmHg

flow temp

This command reports the current flow temperature for the detector, in degrees C. The following example reports that the flow temperature is 22.3 °C.

Send: flow temp

Receive: flow temp 22.3 deg

io bd

This command reports the presence of the I/O expansion board (yes/no). The following example reports the I/O expansion board is present (yes).

Diagnostics

Send: io bd Receive: io bd yes

mass

This command reports the presence of mass. The following example reports that the mass is 0.1 mg/m³.

Send: mass

Receive: mass 0.100E+00

neph bkg

This command reports the current nephelometer background values stored on the nephelometer interface board. The following example reports the nephelometer auto-ranging background values.

Send: neph bkg

Receive: neph bkg1 0.00272 0.00272 0.01099 0.04351 0.17430

0.65535

neph mode

This command reports the current operating mode of the nephelometer. The following example shows that the nephelometer is in sample mode.

Send: neph mode

Receive: neph mode sample

neph prev bkg

This command reports the previous nephelometer background values stored on the nephelometer interface board. The following example reports the previous nephelometer auto-ranging background values.

Send: neph prev bkg

Receive: neph prev bkg 0.00272 0.00272 0.01094 0.04357 0.17422

0.65535

set reset tape counter

This command resets the tape count to zero.

Send: set reset tape counter set reset tape counter ok Receive:

sample rh

This command reports the sample RH, in percent. The following example reports that the sample RH is 20%.

Send: sample rh

sample rh 20.0 % Receive:

tape counter

This command reports the number counts which corresponds to the filter tape movement. The following example reports that the tape count is 250.

Send: tape counter Receive: tape counter 250

vac pres

This command reports the current vacuum pressure for the detector, in mmHg. The following example reports that the vacuum pressure is 100 mmHg.

Send: vac pres

Receive: vac pres 100.0 mmHg

Datalogging

clr records

This command will clear all lrecs and srecs that have been saved.

Send: clr records Receive: clr records ok

set clr lrecs set clr srecs

These commands will clear only the lrecs or only the srecs that have been saved. The following example clears srecs.

Send: set clr srecs Receive: set clr srecs ok

set copy sp to lrec

set copy sp to srec

set copy sp to stream

These commands copy the current selections in scratch pad (sp) into the lrec, srec, or streaming data list.

The scratch pad is a temporary memory area which is used to set up lists of selections for Irec, srec, or streaming data items. The user can copy any of these lists to the scratch pad, modify individual elements in the list, then save the scratch pad back to the original list. For more information on how to edit the scratch pad, see the "sp field" command.

The following example copies the current list in scratch pad into the lrecs list.

Send: set copy sp to lrec Receive: set copy sp to lrec ok Datalogging

```
set copy lrec to sp
set copy srec to sp
set copy stream to sp
```

These commands copy the current contents of the lrec, srec, or streaming data list into the scratch pad (sp). These commands are useful in easy modification of current lrec, srec, or streaming data lists.

The scratch pad is a temporary memory area which is used to set up lists of selections for lrec, srec, or streaming data items. The user can copy any of these lists to the scratch pad, modify individual elements in the list, then save the scratch pad back to the original list. For more information on how to edit the scratch pad, see the "sp field" command.

The following example copies the current list of lrecs into the scratch pad.

set copy lrec to sp Send: Receive: set copy lrec to sp ok

data treatment lrec data treatment srec

These commands report the current selection of data treatment for concentrations in the lrecs or srecs. The following example reports the data treatment for concentrations in lrec as minimum.

data treatment lrec Send: Receive: data treatment lrec min

```
set data treatment lrec string
set data treatment srec string
string = | cur | avg | min | max |
```

These commands set the data treatment to current, average, minimum, or maximum for the concentration values recorded in the lrecs or srecs. The following example sets the data treatment for concentrations in lrec as minimum.

Send: set data treatment lrec min Receive: set data treatment lrec min ok

erec

erxy

x = |0|1|: Reply termination format (see "set format format" command)

y = |0| 1 |2|: Output format (see "set erec format format" command)

These commands return a snapshot of the main operating conditions (measurements and status) at the time the command is issued. The following example shows a typical response.

The format is defined within the command (in the case of erxy) by the current settings of the "format" and "erec format" commands (in the case of erec). For details on erec formatting, see the "Record Layout Definition" section at the end of this appendix. For details on how to decode the flag fields within these records, see the "flags" command.

Send: erec Receive: erec

> 07:53 05-04-09 flags 110000 PM 0.000 1 24Hr Avg PM 0.000 1 Coef A 1.000 Bkg A 0.000 Range A 10000.000 Flow A 0.000 6 5 3 1 1 1 0 Temp Threshold A 30.000 Temp

Threshold A 35.000

list lrec list srec list stream list sp

These commands report the list of current selections for lrec logging data, srec logging data, streaming data output, or the scratch pad (sp) list.

The scratch pad is a temporary memory area which is used to set up lists of selections for lrec, srec, or streaming data items. The user can copy any of these lists to the scratch pad, modify individual elements in the list, then save the scratch pad back to the original list. Refer to the "sp field" command for information on how to edit the scratch pad.

The following example shows the list for streaming data output.

Send: list stream Receive: list stream

field index variable

X x time

lrec srec lrec rec num srec rec num lrxy rec num srxy rec num lrec aa:bb oo-pp-qq yy srec aa:bb oo-pp-qq yy *rec* = The starting record index number (1=most recent) *num* = The number of records to return (1 to 10) : Reply termination format (see "set format format" x = |0|1|command) y = |0| |1| |2|: Output format (see "set lrec/srec format format") command) aa = hours (01 to 23)

C-Link Protocol Commands

Datalogging

```
bb = minutes (01 to 59)
oo = month (01 to 12)
pp = day (01 \text{ to } 31)
qq = year
```

These commands output lrec or srec logged data. The output format is determined by the "set lrec format", and "set srec format" commands. The logging time is determined by the "set lrec per" and "set srec per" commands.

In the following example, assume there are 740 lrecs currently stored in memory. When the command "lrec 100 5" is sent, the instrument counts back 100 records from the last record collected (record 740), and then returns 5 records: 640, 641, 642, 643, and 644. For details on how to decode the flag fields within these records, see the "flags" command.

lrec 5 Send: Receive: lrec 100 5

> 08:28 05-04-09 flags 00110000 pm 0.000 baro 0.000 vac -260.000 pflow -52.000 ambrh 0.000 srh 0.000 ambtemp -32.000 stemp -41.000 fvol 0.000 cflg 00001F86 aflg 0000FC0C

> 08:29 05-04-09 flags 00110000 pm 0.000 baro 0.000 vac -260.000 pflow -52.000 ambrh 0.000 srh 0.000 ambtemp -32.000 stemp -41.000 fvol 0.000 cflg 00001F86 aflg 0000FC0C

> 08:30 05-04-09 flags 00110000 pm 0.000 baro 0.000 vac -260.000 pflow -52.000 ambrh 0.000 srh 0.000 ambtemp -32.000 stemp -41.000 fvol 0.000 cflg 00001F86 aflg 0000FC0C

> 08:31 05-04-09 flags 00110000 pm 0.000 baro 0.000 vac -260.000 pflow -52.000 ambrh 0.000 srh 0.000 ambtemp -32.000 stemp -41.000 fvol 0.000 cflg 00001F86 aflg 0000FC0C

> 08:32 05-04-09 flags 00110000 pm 0.000 baro 0.000 vac -260.000 pflow -52.000 ambrh 0.000 srh 0.000 ambtemp -32.000 stemp -41.000 fvol 0.000 cflg 00001F86 aflg 0000FC0C

lrec format srec format erec format

These commands report the output format for lrecs and srecs, and erec data in various formats such as ASCII without text, ASCII with text, or binary. The following example shows the output format for lrecs is ASCII with text, according to Table B-3.

Send: lrec format lrec format 1 Receive:

set lrec format format set srec format format set erec format format

These commands set the output format for lrecs and srecs, and erec data, according to Table B-3. The following example sets the lrec output format to ASCII with text.

set lrec format 1 Send: Receive: set lrec format 1 ok

Table B–3. Record Output Formats

Format	Output Format	
0	ASCII no text	
1	ASCII with text	
2	Binary data	

lrec layout srec layout erec layout

These commands report the layout (string indicating the data formats) for data that is sent out in response to the lrec, srec, erec, and related commands. For details on how to interpret the strings, see "Record Layout Definition" later in this appendix.

Send: lrec layout

Receive: lrec layout %s %s %lx %f %lx

t D L fffffffff A A

flags pm baro vac pflow ambrh srh ambtemp stemp fvol

dflg aflg

lrec mem size

srec mem size

These commands report the number of lrecs and srecs that can be stored with the current settings and the number of blocks reserved for lrecs and srecs. The following example shows that 1075 blocks were reserved for lrecs and the maximum number of lrecs that can be stored in memory is 241979. Memory allocation can be changed using the "malloc" command.

Send: lrec mem size

Receive: lrec mem size 241979 recs, 1075 blocks

lrec per srec per

Datalogging

These commands report the lrecs and srecs logging period. The following example shows that the srec logging period is 5 minutes.

Send: srec per Receive: srec per 5 min

set lrec per value set srec per value *value* = | 1 | 5 | 15 | 30 | 60 |

These commands set the lrecs and srecs logging period to *value* in minutes. The following example sets the lrec logging period to 15 minutes.

Send: set lrec per 15 set lrec per 15 ok Receive:

malloc lrec

malloc srec

These commands report the currently set memory allocation for lrecs and srecs in percent of total memory.

Send: malloc lrec Receive: malloc lrec 10 %

set malloc lrec value set malloc srec value value = 0 to 100

These commands set the percent of memory space allocated for lrecs and sreco to value, where value is a floating-point number representing percent. The following example sets the memory allocation for lrecs to 10%.

Note Issuing these commands will clear all the logged data in memory. All the existing records should be retrieved using appropriate commands, if required.

Send: set malloc lrec 10 set malloc lrec 10 ok Receive:

no of lrec

no of srec

These commands report the number of lrec and srecs stored memory. The following example shows that 50 lrecs have been stored in the memory.

Send: no of lrec

no of lrec 50 recs Receive:

sp field *number*

This command reports the variable *number* and name stored at the index in the scratch pad list.

The scratch pad is a temporary memory area which is used to set up lists of selections for Irec, srec, or streaming data items. The user can copy any of these lists to the scratch pad, modify individual elements in the list, then save the scratch pad back to the original list.

The following example shows that field 1 in the scratch pad is set to index number 3, which is for the variable PM concentration pressure.

sp field 1 Send: Receive: sp field 1 3 PM

set sp field number value

number = 1-32 for lrec and srec lists, 1-8 for streaming data lists

This command sets the scratch pad field *number* (item number in scratch pad list) to *value*, where *value* is the index number of a variable in the analog output variable list. Available variables and their corresponding index numbers may be obtained using the command "list var aout". The "set sp field" command is used to create a list of variables which can then be transferred into the lrec, srec, or streaming data lists, using the "set copy sp to lrec", "set copy sp to srec", or "set copy sp to stream" commands.

Send: set sp field 1 34 set sp field 1 34 ok Receive:

stream per

This command reports the current time interval in seconds for streaming data. The following example reports the streaming period is set to 10 seconds.

Send: stream per Receive: stream per 10 sec

set stream per number value

```
number value = | 1 | 2 | 5 | 10 | 20 | 30 | 60 | 90 | 120 | 180 | 240 | 300 |
```

This command sets the time interval between two consecutive streaming data strings to *number value* in seconds. The following example sets the number value to 10 seconds.

Send: set stream per 10 Receive: set stream per 10 ok

stream time

This command reports if the streaming data string will have a time stamp attached to it or not, according to Table B-4. The following example reports that the streaming data shall not include a time stamp.

Send: stream time Receive: stream time 0

set stream time value

This command enables value, where value is to attach or disable time stamp to streaming data string, according to Table B-4. The following example attaches a time stamp to streaming data.

Send: set stream time 1 Receive: set stream time 1 ok

Table B–4. Stream Time Values

Value	Stream Time
0	Disables time stamp to streaming data string
1	Attaches time stamp to streaming data string

Calibration

alpha eff

This command reports the current value of alpha efficiency for the detector. The following example reports that the alpha efficiency is 0.12.

Send: alpha eff Receive: alpha eff 0.120

set alpha eff value

This command sets the alpha efficiency for the detector to value, where value is a floating-point number representing the alpha efficiency for the detector. The following example sets the alpha efficiency to.0.15.

Send: set alpha eff 0.15 Receive: set alpha eff 0.15 ok

alpha th

This command reports the current value of alpha threshold for the detector. The following example reports that the alpha threshold is 1220.

Send: alpha th alpha th 1220 Receive:

set alpha th value

This command sets the alpha threshold for the detector to value, where *value* is a floating-point number representing the alpha threshold for the detector. The following example sets the alpha threshold to 1250.

set alpha th 1250 Send: Receive: set alpha th 1250 ok

amb rh offset

This command reports the current ambient RH offset, in percent. The following example reports that the ambient RH offset is 0.6%.

Send: amb rh offset Receive: amb rh offset 0.6 %

set amb rh offset value

This command sets the ambient RH offset to value, where value is a floating-point number representing ambient RH offset in percent. The following example sets the ambient RH offset to 7%.

set amb rh offset 7 Send: Receive: set amb rh offset 7 ok

amb temp offset

This command reports the current ambient temperature offset, in degrees C. The following example reports that the ambient temperature offset is 5 °C.

Send: amb temp offset

Receive: amb temp offset 5.0 degC

set amb temp offset value

This command sets the ambient temperature offset to *value*, where *value* is a floating-point number representing ambient temperature offset in degrees C. The following example sets the ambient temperature offset to 3 °C.

Send: set amb temp offset 3 Receive: set amb temp offset 3 ok

baro mass coef

This command reports the current barometric mass coefficient. The following example reports that the barometric mass coefficient is 0.000540.

Send: baro mass coef

Receive: baro mass coef 0.000540 Calibration

set baro mass coef value

This command sets the barometric mass coefficient to user-defined values to value, where value is a floating-point representation of the coefficient. The following example sets the barometric mass coefficient to 0.000630.

Send: set baro mass coef 0.000630 Receive: set baro mass coef 0.000630 ok

baro span

This command reports the current barometric pressure span recorded at the time of calibration. The following example reports that the barometric span is 1.0.

Send: baro span Receive: baro span 1.0000

set baro span value

This command requires to manually specifying the span value for the barometric pressure span, where *value* is a floating-point representation of barometric pressure span. The following example successfully sets the barometric span to 1.023.

Send: set baro span 1.023 Receive: set baro span 1.023 ok

beta th

This command reports the current reference beta threshold for the detector. The following example reports that the beta threshold is 440.

Send: beta th Receive: beta th 440

set beta th value

This command sets the reference beta threshold for the detector to *value*, where *value* is a floating-point representation of the beta threshold. The following example sets the beta threshold to 500.

Send: set beta th 500 set beta th 500 ok Receive:

bkg pm

This command reports the current PM backgrounds. The following example reports that the PM background is 4 µg/m³.

Send: bkg pm

bkg pm 4.000E+00 μ g/m3 Receive:

set bkg pm value

This command is used to set PM backgrounds to user-defined values to *value*, where *value* is a floating-point representation of the background in current selected units. The following example sets the PM background to $5.2 \,\mu g/m^3$.

Send: set bkg pm 5.2 Receive: set bkg pm 5.2 ok

bkg sharp

This command reports the current SHARP backgrounds. The following example reports that the SHARP background is 4 µg/m³.

Send: bkg sharp

Receive: bkg sharp 4.000E+00 μg/m3

set bkg sharp value

This command is used to set SHARP backgrounds to user-defined values to value, where value is a floating-point representation of the background in current selected units. The following example sets the SHARP background to $5.2 \mu g/m^3$.

Send: set bkg sharp 5.2 Receive: set bkg sharp 5.2 ok

set cal baro pres span

This command automatically calculates the span coefficient based on the entered target pressure value. The following example sets the calibration pressure to 720.5 mmHg.

Send: set cal baro pres span 720.5 Receive: set cal baro pres span 720.5 ok

set cal flow pres span value

This command automatically sets the flow pressure span based on the flow pressure entered at the time of calibration. The following example successfully sets the new *value* for flow span based on the flow pressure to 50.5 mmHg.

Send: set cal flow pres span 50.5 Receive: set cal flow pres span 50.5 ok

set cal flow span value

This command automatically sets the new value for flow span based on the corrected flow entered. The following example sets the new value for flow span based on the corrected flow to 17.2 LPM.

Calibration

Send: set cal flow span 17.2 set cal flow span 17.2 ok Receive:

set cal vac pres span value

This command automatically sets the vacuum span based on the vacuum pressure entered at the time of calibration. The following example successfully sets the new value for vacuum span based on the vacuum pressure to 120.5 mmHg.

Send: set cal vac pres span 120.5 set cal vac pres span 120.5 ok Receive:

set cal vac flow offset

This command automatically triggers the filter change and sets the new value for vacuum and flow offset. The following example successfully sets the vacuum and flow offset.

set cal vac flow offset Send: set cal vac flow offset ok Receive:

coef pm

This command reports PM coefficient. The following example reports that the PM coefficient is 1.200.

Send: coef pm Receive: coef pm 1.200

set coef pm value

This command sets the PM coefficient to user-defined values to *value*, where *value* is a floating-point representation of the coefficient. The following example sets the PM coefficient to 1.200.

Send: set coef pm 1.200 set coef pm 1.200 ok Receive:

coef sharp

This command reports SHARP coefficient. The following example reports that the SHARP coefficient is 1.05.

Send: coef sharp Receive: coef sharp 1.050

set coef sharp value

This command sets the SHARP coefficient to user-defined values to *value*, where value is a floating-point representation of the coefficient. The following example sets the SHARP coefficient to 1.04.

Send: set coef sharp 1.04 set coef sharp 1.04 ok Receive:

flow pres span

This command reports the flow pressure span recorded at the time of calibration. The following example reports that the flow span is 1.2.

Send: flow pres span Receive: flow pres span 1.200

set flow pres span value

This command sets the flow pressure span to *value*, where *value* is a floating-point representation of the pressure span specified at the time of calibration. The following example successfully sets the new value for flow pressure to 1.5.

Send: set flow pres span 1.5 Receive: set flow pres span 1.5 ok

flow pres offset

This command reports the flow pressure offset for the detector at the time of calibration. The following example reports that the flow pressure offset is 3.0.

Send: flow pres offset Receive: flow pres offset 3.0

flow span

This command reports the current flow span at the time of calibration. The following example reports that the flow at calibration is 1.00.

Send: flow span Receive: flow span 1.000

set flow span value

This command sets the current flow span to the *value*, where *value* is a floating-point representation of the flow span specified at the time of calibration. The following example sets the flow span to 1.5.

Send: set flow span 1.5 Receive: set flow span 1.5 ok

flow temp offset

This command reports offset for flow temperature, in degrees C. The following example reports that the flow temperature offset is 5 °C.

Send: flow temp offset

flow temp offset 5.0 degC Receive:

Calibration

set flow temp offset value

This command sets the offset *value* for flow temperature, where *value* is a floating-point number representing flow temperature offset in degrees C. The following example sets the flow temperature offset to 7 °C.

set flow temp offset 7 Send: Receive: set flow temp offset 7 ok

high volt

This command reports the current high voltage for the detector. The following example reports that the high voltage is 1400 V.

Send: high volt Receive: high volt 1400

set high volt value

This command sets the high voltage for the detector to *value*, where *value* is a floating-point representation of the high voltage. The following example sets the high voltage to 1445 V.

Send: set high volt 1445 Receive: set high volt 1445 ok

mass coef

This command reports the current mass coefficient. The following example reports that the mass coefficient is 7100.

Send: mass coef

Receive: mass coef 7100.0

set mass coef value

This command sets the mass coefficient to user-defined values to *value*, where *value* is a floating-point representation of the coefficient. The following example sets the mass coefficient to 7000.

Send: set mass coef 7000 Receive: set mass coef 7000 ok

thermal mass coef

This command reports the current thermal mass coefficient. The following example reports that the thermal mass coefficient is 19.000000.

Send: thermal mass coef

Receive: thermal mass coef 19.000000

set thermal mass coef value

This command sets the thermal mass coefficient to user-defined values to value, where value is a floating-point representation of the coefficient. The following example sets the thermal mass coefficient to 20.5.

Send: set thermal mass coef 20.5 set thermal mass coef 20.5 ok Receive:

vac mass coef

This command reports the current vacuum mass coefficient. The following example reports that the vacuum mass coefficient is 2.0.

Send: vac mass coef

Receive: vac mass coef 2.000000

set vac mass coef value

This command sets the vacuum mass coefficient to user-defined values to value, where value is a floating-point representation of the coefficient. The following example sets the vacuum mass coefficient to 3.1.

Send: set vac mass coef 3.1 Receive: set vac mass coef 3.1 ok

neph cal bkg

This command sets the nephelometer into an auto-zero calibration routine. The following example set this command.

Send: set neph cal bkg Receive: set neph cal bkg ok

neph coef

This command reports the nephelometer span coefficient set at the factory. The following example reports that the nephelometer span coefficient is 388.000.

Send: neph coef

neph coef 388.000 Receive:

set neph coef value

This command sets the nephelometer span coefficient to user-defined values to value, where value is a floating-point representation of the coefficient. The following example sets the nephelometer span coefficient to 250.00

Send: set neph coef 250 Receive: set neph coef 250 ok

neph reset bkg

This command will reset all measured background values to zero. The following example sets this command.

set neph reset bkg Send: Receive: set neph reset bkg ok Calibration

neph restore bkg

This command will restore the background values to the previous background values. The following example sets this command.

Send: set neph restore bkg Receive: set neph restore bkg ok

neph rh offset

This command reports the nephelometer relative humidity sensor offset set at the factory. The following example reports that the nephelometer relative humidity sensor offset is 7.3%.

Send: neph rh offset neph rh offset 7.3 % Receive:

set neph rh offset value

This command sets the nephelometer relative humidity sensor offset to user-defined values to *value*, where *value* is a floating-point representation of the offset. The following example sets the nephelometer relative humidity sensor offset to 3%.

Send: set neph rh offset 3 Receive: set neph rh offset 3 ok

neph src level

This command reports the nephelometer source level set at the factory. The following example reports that the nephelometer source level is 44%.

Send: neph src level Receive: neph src level 44 %

set neph src level value

This command sets the nephelometer source level to user-defined values to value, where value is a floating-point representation of the level. The following example sets the nephelometer source level to 50%.

Send: set neph src level 50 Receive: set neph src level 50 ok

neph temp offset

This command reports the nephelometer temperature offset set at the factory. The following example reports that the nephelometer temperature offset is 2.6 °C.

neph temp offset Send:

Receive: neph temp offset 2.6 degC

set neph temp offset value

This command sets the nephelometer temperature offset to user-defined values to value, where value is a floating-point representation of the offset. The following example sets the nephelometer temperature offset to 2.5 °C.

set neph temp offset 2.5 Send: Receive: set neph temp offset 2.5 ok

neph thermal coef

This command reports the nephelometer thermal coefficient set at the factory. The following example reports that the nephelometer thermal coefficient is 0.00058.

Send: neph thermal coef

Receive: neph thermal coef 0.00058

set neph thermal coef value

This command sets the nephelometer thermal coefficient to user-defined values to *value*, where *value* is a floating-point representation of the coefficient. The following example sets the nephelometer thermal coefficient to 0.001.

Send: set neph thermal coef 0.001 Receive: set neph thermal coef 0.001 ok

tape to neal ratio

This command reports the ratio of filter tape changes per nephelometer auto-zero. The following example reports this value.

Send: tape to ncal ratio Receive: tape to ncal ratio 1:1

set tape to neal ratio

This command sets the filter tape change per nephelometer auto-zero ratio to a user-defined *value*, where *value* is a floating-point representation of the ratio. The following example sets the nephelometer filter tape change to auto-zero to 2:1.

Send: set tape to ncal ratio 2:1 Receive: set tape to ncal ratio 2:1 ok

vac pres span

This command reports the vacuum span for the detector at the time of calibration. The following example reports that the vacuum pressure span is 1.0.

Send: vac pres span Receive: vac pres span 1.000

set vac pres span value

This command sets the vacuum span to the value specified at the time of calibration, where *value* is a floating-point representation of vacuum span. The following example successfully sets the new value for vacuum pressure span to 1.002.

Send: set vac pres span 1.002 Receive: set vac pres span 1.002 ok

vac pres offset

This command reports the vacuum offset for the detector at the time of calibration. The following example reports that the vacuum pressure offset is 0.3.

Send: vac pres zero Receive: vac pres zero 0.3

set vf pres cal def

This command resets the vacuum and flow pressure calibration to their default values.

Send: set vf pres cal def Receive: set vf pres cal def ok

Keys/Display

push button		
do	me	1
down	menu	2
en	ri	3
enter	right	4
he	ru	
help	run	
le	up	
left		

button = | do | down | en | enter | he | help | le | left | me | menu | ri | right | ru | run | up | 1 | 2 | 3 | 4 |

These commands simulate pressing the front panel pushbuttons. The numbers represent the front panel soft keys, from left to right.

Send: push enter Receive: push enter ok

isc

iscreen

These commands retrieve the framebuffer data used for the display on the *i*Series instrument. It is 19200 bytes in size, 2-bits per pixel, 4 pixels per byte arranged as 320 by 240 characters. The data is sent in RLE encoded

form to save time in transmission. It is sent as a type '5' binary C-Link response with no checksum.

The RLE encoding consists of a 0 followed by an 8-bit count of consecutive 0xFF bytes. The following 'c' code will expand the incoming data.

```
unpackDisplay ( void far* tdib, unsigned char far* rlescreen )
void
int i,j,k;
unsigned char far *sc4bpp, *sc2bpp, *screen, *ptr;
   ptr = screen = (unsigned char far *)malloc(19200);
   //RLE decode the screen
   for (i=0; i<19200 && (ptr - screen) < 19200; i++)
      *(ptr++) = *(rlescreen + i);
      if (*(rlescreen + i) == 0)
         unsigned char rlecount = *(unsigned char *)(rlescreen + ++i);
         while (rlecount)
            *(ptr++) = 0;
            rlecount--;
      else if (*(rlescreen + i) == 0xff)
         unsigned char rlecount = *(unsigned char *)(rlescreen + ++i);
         while (rlecount)
            *(ptr++) = 0xff;
            rlecount--;
     }
  }
}
```

To convert this data into a BMP for use with Windows, it needs to be saved as a 4-bit-per-pixel gray-scale image. Also note that BMP files are upside down relative to this data, that is, the top display line is the last line in the BMP.

sc

screen

These commands are meant for backward compatibility with the C series. Screen information is instead reported using the "iscreen" command above.

Send: screen

Receive: screen This is an iSeries instrument. Screen information not available.

Measurement Configuration

conc unit

This command reports the current concentration units $(mg/m^3 \text{ or } \mu g/m^3)$. The following example reports that the concentration units are set to mg/m^3 .

Measurement Configuration

Send: conc unit Receive: conc unit μg/m3

set conc unit unit

```
unit = |\mu g/m^3| mg/m^3|
```

This command sets the concentration units to mg/m^3 or $\mu g/m^3$. The following example sets the concentration units to mg/m³.

Send: set conc unit mg/m3 Receive: set conc unit mg/m3 ok

custom range

```
range = |1|2|3|
```

This command reports the user-defined value of custom *range* 1, 2, or 3. The following example reports that custom range 1 is defined to 5.50 mg/m^3 .

Send: custom 1

Receive: custom 1 5.500E+00 mg/m3

set custom range range value

set custom 1 value

set custom 2 value

set custom 3 value

These commands are used to set the maximum concentration for any of the three custom ranges 1, 2, or 3 to range value, where value is a floating-point number representing concentration in the currently selected units. The following example sets the custom 1 range to 100.5 µg/m³.

Send: set custom 1 100.5 μg/m3 Receive: set custom 1 100.5 μ g/m3 ok

filter period

This command reports the number of hours to be added to filter next time for the filter tape change. The following example reports that the filter period is eight hours.

filter period Send: filter period 8 HRS Receive:

set filter period value

This command sets the number of hours to be added to filter next time for the filter tape change to value, where value is a floating-point representation of the filter period in hours. The following example sets the filter period to 10 hours.

set filter period 10 Send: Receive: set filter period 10 ok

filter time

This command reports the next date and time of the filter tape change. The following example reports that the date and time is January 1, 2008, 6:12

Send: filter time

Receive: filter time 01Jan08 18:12

set filter time dd-mm-yyyy hh:mm:ss

```
dd = day
mm = month
yyyy = year
hh = hours
mm = minutes
ss = seconds
```

This command sets the next filter tape change. The following example sets the filter time to October 1, 2008, 11:32 pm.

Send: set filter time 10-01-2008 23:32 Receive: set filter time 10-01-2008 23:32 ok

flow target

This command reports the current flow. The following example reports that the flow is 16.0 LPM.

Send: flow target Receive: flow target 16.00

set flow target value

This command sets the flow to value, where value is a floating-point number representation of flow between 1 to 20 LPM. The following example sets the flow to 16.67 LPM.

set flow target 16.67 Send: Receive: set flow target 16.67 ok

ht control

This command reports the current status of the heater (off, RH threshold, or temp threshold). The following example reports that the heater is RH threshold.

Send: ht control ht control RH Receive:

set ht control selection

selection = | off | rh | temp |

Measurement Configuration

This command sets the heater to off, RH threshold, or temp threshold. The following example sets the heater to temp threshold.

Send: set ht control temp Receive: set ht control temp ok

int time

This command reports the current integration time of the calculated mass and concentration. The following example reports the integration time is 15 minutes.

Send: int time Receive: int time 15 min

set int time value

This command sets the integration time to *value*, where *value* can be 15, 20, 30, 40, 45, or 60 minutes. The following example sets the integration time to 20 minutes.

Send: set int time 20 Receive: set int time 20 ok

mass limit

This command reports the current filter mass limit. The following example reports that the mass limit is 1,500 mg.

mass limit Send: Receive: mass limit 1500

set mass limit value

This command sets the filter mass limit to value, where value is a floatingpoint number representation of mass limit between 0.5 to 5.0 mg or 500 to 5,000 µg. The following example sets the mass limit to 1.0 mg/m³.

Send: set mass limit 1.0 set mass limit 1.0 ok Receive:

pres comp

This command reports whether pressure compensation is for actual or standard conditions. The following example shows the pressure compensation is standard.

Send: pres comp Receive: pres comp std

set pres comp selection selection = | act | std |

These commands turn the pressure compensation to either actual or standard conditions. The following example turns the pressure compensation to actual.

Send: set pres comp act Receive: set pres comp act ok

pres std

This command reports the standard pressure. The following example reports that the standard pressure is 760 mmHg.

Send: pres std

Receive: pres std 760 mmHg

set pres std value

This command sets the standard pressure to *value*, where *value* is a floatingpoint number representation of standard pressure between 0 to 760 mmHg. The following example sets the standard pressure to 730 mmHg.

Send: set pres std 730 Receive: set pres std 730 ok

range

This command reports the current PM range. If the mode is incorrect, the instrument responds with "can't, wrong settings". The following example reports that the PM range is set to 5 mg/m³, according to Table B-5.

Send: range

Receive: range 4: 5.000E+00 mg/m3

set range selection

This command selects the PM ranges, according to Table B–5. The following example sets the PM range to 10 mg/m³.

set range 5 Send: Receive: set range 5 ok

Table B–5. Standard Ranges

Selection	μg/m³	mg/m³	
0	100	0.1	
1	1000	1.0	
2	2000	2.0	
3	3000	3.0	
4	5000	5.0	
5	10000	10.0	

Measurement Configuration

Selection	μ g/m ³	mg/m³
6	C1	C1
7	C2	C2
8	C3	C3

rh th

This command reports the current heater RH threshold for the sample. The following example reports that the RH threshold is 30%.

Send: rh th Receive: rh th 30 %

set rh th value

This command sets the heater RH threshold for the sample to value, where value is a floating-point number representation of RH threshold between 25 to 90%. The following example sets the RH threshold to 35%.

Send: set rh th 35 Receive: set rh th 35 ok

temp comp

This command reports whether temperature compensation is for actual or standard conditions. The following example shows the temperature compensation is standard.

Send: temp comp Receive: temp comp std

set temp comp selection

selection = | act | std |

These commands turn the temperature compensation to either actual or standard conditions. The following example turns the temperature compensation to actual.

Send: set temp comp act Receive: set temp comp act ok

temp std

This command reports the standard temperature. The following example reports that the standard temperature is 18 °C.

Send: temp std

Receive: temp std 18 degC

set temp std value

This command sets the standard temperature to *value*, where *value* is a floating-point number representation of standard temperature between 0 to 25 °C. The following example sets the standard temperature to 15 °C.

Send: set temp std Receive: set temp std 15 ok

temp th

This command reports the heater temperature threshold for the sample. The following example reports that the temperature threshold is 30 °C.

Send: temp th

Receive: temp th 30 degC

set temp th value

This command sets the heater temperature threshold for the sample to value, where value is a floating-point number representation of temperature threshold between 0 to 70 °C. The following example sets the temperature threshold to 35 °C.

Send: set temp th 35 Receive: set temp th 35 ok

Hardware **Configuration**

contrast

This command reports the screen's level of contrast. The following example shows the screen contrast is 55%, according to Table B-6.

Send: contrast

Receive: contrast 11: 55%

set contrast level

This command sets the screen's *level* of contrast, according to Table B–6. The following example sets the contrast level to 50%.

Send: set contrast 10 Receive: set contrast 10 ok

Table B–6. Contrast Levels

Level	Contrast Level
0	0%
1	5%
2	10%
3	15%
4	20%

Level	Contrast Level
5	25%
6	30%
7	35%
8	40%
9	45%
10	50%
11	55%
12	60%
13	65%
14	70%
15	75%
16	80%
17	85%
18	90%
19	95%
20	100%

date

This command reports the current date. The following example reports the date as April 1, 2009.

Send: date

Receive: date 04-01-09

set date *mm-dd-yy*

mm = month

dd = day

yy = year

This command sets the date of the analyzer's internal clock. The following example sets the date to May 1, 2009.

Send: set date 05-01-09 Receive: set date 05-01-09 ok

set default params

This command sets all the parameters to their default values. This does not affect the factory-calibrated parameters.

Send: set default params Receive: set default params ok

det

This command reports the status of the detector board (sharp/beta/map/none). The following example reports that the detector is beta.

Send: det Receive: det beta

pump

This command reports the current status of pump as on or off. The following example reports that the pump is set to off.

Send: pump Receive: pump off

set pump *onoff onoff* = | on | off |

This command sets the pump *on* or *off*. The following example sets the pump to on.

Send: set pump on Receive: set pump on ok

save

set save params

These commands store all current parameters in FLASH memory. It is important that each time instrument parameters are changed, that this command be sent. If changes are not saved, they will be lost in the event of a power failure. The following example saves the parameters to FLASH memory.

Send: set save params Receive: set save params ok

time

This command reports the current time (24-hour format). The following example reports that the internal time is 2:15:30 pm.

Send: time

Receive: time 14:15:30

set time hh:mm:ss hh = hoursmm = minutesss = seconds

This command sets the internal clock (24-hour format). The following example sets the internal time to 2:15 pm.

Note If seconds are omitted, the seconds default to 00.

Send: set time 14:15 Receive: set time 14:15 ok

Communications **Configuration**

addr dns

This command reports the TCP/IP address for the domain name server.

Send: addr dns

Receive: addr dns 192.168.1.1

set addr dns address

This command sets the domain name server address, where address consists of four numbers ranging from 0-255 inclusive, separated by ".".

Send: set addr dns 192.168.1.1 Receive: set addr dns 192.168.1.1 ok

addr gw

This command reports the default TCP/IP gateway address.

Send: addr gw

addr gw 192.168.1.1 Receive:

set addr gw address

This command sets the default gateway address, where address consists of four numbers ranging from 0-255 inclusive, separated by ".".

Note This command cannot be used when DHCP is on. Refer to the DHCP command that follows for additional information.

Send: set addr gw 192.168.1.1 Receive: set addr gw 192.168.1.1 ok

addr ip

This command reports the IP address of the analyzer.

Send: addr ip

Receive: addr ip 192.168.1.200

set addr ip address

This command sets the analyzer's IP address, where address consists of four numbers ranging from 0-255 inclusive, separated by ".".

Note This command cannot be used when DHCP is on. Refer to the DHCP command that follows for additional information.

Send: set addr ip 192.168.1.200 Receive: set addr ip 192.168.1.200 ok

addr nm

This command reports the IP netmask.

addr nm

Receive: addr nm 255.255.252.0

set addr nm mask

This command sets the netmask *mask*, where *mask* consists of four numbers ranging from 0-255 inclusive, separated by ".".

Note This command cannot be used when DHCP is on. Refer to the DHCP command that follows for additional information.

Send: set addr nm 255.255.252.0 Receive: set addr nm 255.255.252.0 ok

addr ntp

This command reports the IP address for the network time protocol server. See "Network Time Protocol Server" in the Communications Settings" section of the "Operation" chapter for more information.

Send: addr ntp

Receive: addr ntp 10.209.43.237

set addr ntp address

This command sets the network time protocol server address, where address consists of four numbers ranging from 0-255 inclusive, separated by ".".

Send: set addr ntp 10.209.43.237 Receive: set addr ntp 10.209.43.237 ok

allow mode cmd

This command reports the current allow mode setting: 1 = allow "set mode local" and "set mode remote" commands; 0 = ignore "set mode local" or "set mode remote" commands, according to Table B-7. The default value is 0; ignore the commands. The following example shows that the instrument is configured to ignore "set mode local" or "set mode remote" commands.

allow mode cmd Send: Receive: allow mode cmd 0

Communications Configuration

set allow mode cmd value

This command is used to configure the instrument to *value*, where *value* is either 1 = accept or 0 = ignore the "set mode local" and "set mode remote" commands, according to Table B-7.

If the instrument is set to accept the commands (value = 1), the "set mode local" command will unlock the instrument and the keypad can be used to make changes via the front panel.

If the instrument is set to ignore the commands (*value* = 0), the instrument will respond with "ok" as if the command has been accepted and acted upon, but will not change the instrument lock status (this is for compatibility with systems expecting and "ok" response).

Note The instrument will always respond to the command "mode" with the status of the password lock as "mode local" or "mode remote", regardless of the above setting. **\(\Delta\)**

The following example sets the instrument to accept the "set mode local" and "set mode remote" commands.

Send: set allow mode cmd 1 Receive: set allow mode cmd 1 ok

Table B–7. Allow Mode Command Values

Value	Allow Mode Command
0	Ignore (default)
1	Accept

baud

This command reports the current baud rate for the serial port (RS232/RS485). The following example reports that the current baud rate is 9600 baud.

Send: baud baud 9600 Receive:

set baud rate

rate = | 1200 | 2400 | 4800 | 9600 | 19200 | 38400 | 57600 | 115200 |

This command sets the instrument baud rate to *rate*. The following example sets the instrument's baud rate to 9600.

Note After the command is sent, the baud rate of the sending device must be changed to agree with the instrument.

Send: set baud 9600 Receive: set baud 9600 ok

dhcp

This command reports the current state of use of the Dynamic Host Configuration Protocol (DHCP) as on or off. DHCP is used to assign an IP address to the instrument automatically. The following example shows that DHCP is on.

Send: dhcp Receive: dhcp on

set dhcp onoff *onoff* = | on | off |

This command enables (*on*) and disables (*off*) the DHCP service. When DHCP is set to on, the instrument gets the IP address, the netmask address, and the gateway address from a DHCP server. When DHCP is set to off, the instrument gets these addresses from system memory. The following example sets the DHCP service to on.

Note If DHCP is changed from on to off and then the IP address, the netmask address, or the gateway address is changed, you must cycle power to the instrument before the change takes effect. Until you cycle the power, the address assigned by the DHCP server will still be used and reported as the current address.

Send: set dhcp on Receive: set dhcp on ok

format

This command reports the current reply termination format. The following example shows that the reply format is 00, which means reply with no checksum, according to Table B-8.

Send: format Receive: format 00

set format format

This command sets the reply termination *format*, where *format* is set according to Table B-8. The following example sets the reply termination format to checksum.

Send: set format 01 Receive: set format 01 ok

Table B–8. Reply Termination Formats

Format	Reply Termination
00	<cr></cr>
01	<nl> sum xxxx <cr></cr></nl>

where xxxx = 4 hexadecimal digits that represent the sum of all the characters (bytes) in the message

host name

This command reports the host name string. The following example reports the host name is set to iSeries.

Send: host name

Receive: host name iSeries

set host name string

This command sets the host name *string*, where *string* is 1-13 alphanumeric characters. The following example sets the host name to analyzer01.

Send: set host name analyzer01 Receive: set host name analyzer01 ok

instr name

This command reports the instrument name. The following example reports the instrument name for the Model 5030i.

Send: instr name Receive: instr name

SHARP

Particle Analyzer

instrument id

This command reports the instrument identification (ID). The following example reports the current setting of the instrument ID.

instrument id Send: Receive: instrument id 14

set instrument id value

This command sets the instrument ID to *value*, where *value* is an integer between 0 and 127 inclusive. The following example shows the instrument ID changed to 12.

Note Sending this command via RS-232 or RS-485 will require the host to use the new ID for subsequent commands. **\(\rightarrow\$**

Send: set instrument id 12 Receive: set instrument id 12 ok

layout ack

This command reports the stale layout/layout change indicator (*) that is attached to each response if the erec layout has changed since the last time erec layout was requested, according to Table B-9. The following example reports that the instrument is configured to do nothing.

Send: layout ack Receive: layout ack 0

set layout ack value

This command disables the stale layout/layout change indicator (*) that is attached to each response if the erec layout has changed since the last time erec layout was requested, according to Table B–9.

Send: set layout ack set layout ack ok Receive:

Table B–9. Set Layout Ack Values

Value	Function
0	Do nothing (default)
1	Append "*"

power up mode

This command reports the current power up mode setting to either 0 =local/unlocked or 1 = remote/locked, according to Table B-10. The default value is 0; power up in local/unlocked mode. The following example shows that the instrument is configured to power up in the remote/locked mode.

Send: power up mode Receive: power up mode 1

set power up mode value

This command is used to configure the instrument to power up in the local/unlocked mode (value = 0) or the remote/locked mode (value = 1), according to Table B–10.

If the instrument is set to power up in the local/remote mode, the keypad can be used to make changes via the front panel. If the instrument is set to power up in the remote/locked mode, changes can not be made from the front panel. The following example sets the instrument to power up in remote/locked mode.

Send: set power up mode 1 Receive: set power up mode 1 ok

Table B–10. Power Up Mode Values

Value	Power up Mode	
0	Local/Unlocked Mode (default)	
1	Remote/Locked Mode	

program no

This command reports the analyzer's model information and program version number.

Send: program no

Receive: program no iSeries 5030i 00.05.37.093

tz

This command reports the "tz" timezone string for the NTP server. See "Network Time Protocol Server" in the "Communications Settings" section of the "Operation" chapter for more information.

Send: 17

Receive: tz EST+5EDT

set tz string

This command sets the timezone *string* for the instrument for use with the NTP server, where *string* is a standard timezone string. Common strings are listed in the "Timezone" screen description in Chapter 3.

Send: set tz EST+5EDT set tz EST+5EDT ok Receive:

I/O Configuration

analog iout range channel

This command reports the analog current output range setting for *channel*, where *channel* must be between 1 and 6, inclusive. The following example reports current output channel 4 is in the 4-20 mA range, according to Table B-11. This command responds with "feature not enabled" if the I/O expansion board is not detected.

Send: analog iout range 4 Receive: analog iout range 4 2

set analog iout range channel range

This command sets analog current output *channel* to the *range* where *channel* is between 1 and 6 inclusive, and *range* is set according to Table B-11. The following example sets current output channel 4 to the 0-20 mA range. This command responds with "feature not enabled" if the I/O expansion board is not detected.

Send: set analog iout range 4 1 Receive: set analog iout range 4 1 ok

Table B–11. Analog Current Output Range Values

Range	Output Range
1	0-20 mA
2	4-20 mA
0 [cannot be set to this, but may report]	Undefined

analog vin channel

This command retrieves the analog voltage input *channel* data, both the calculated value and the actual voltage. In the following example, the "calculated" value of channel 1 is 75.325 degrees F, volts are 2.796. This command responds with "feature not enabled" if the I/O expansion board is not detected.

Send: analog vin 1

Receive: analog vin 1 75.325, 2.796 V

analog vout range channel

This command reports the analog voltage output *channel* range, where channel is between 1 and 6 inclusive, according to Table B-12. The following example reports that analog voltage output channel 2 is set to 3 (0-10 V).

I/O Configuration

Send: analog vout range 2 Receive: analog vout range 2 3

set analog vout range channel range

This command sets analog voltage output *channel* to the range, where channel is between 1 and 6 inclusive, and range is set according to Table B-12. The following example sets channel 2 to the 0-10 V range.

set analog vout range 2 3 Send: Receive: set analog vout range 2 3 ok

Table B–12. Analog Voltage Output Range Values

Range	Output Range
1	0-1 V
2	0-100 mV
3	0-10 V
4	0-5 V
0 [cannot be set to this, but may report]	Undefined

dig in

This command reports the status of the digital inputs as a 4-digit hexadecimal string with the most significant bit (MSB) being input 16.

Send: dig in

Receive: dig in Oxffff

din channel

This command reports the action assigned to the digital input *channel* and the index number of the corresponding active state. The following example reports input 1 to be assigned an index number 3 corresponding to action of "PM mode" with the active state being high.

Send: din 1

Receive: din 1 3 PM MODE high

set din channel index state

This command assigns digital input *channel* (1-16) to activate the action indicated by *index* (1-12), when the input transitions to the designated *state* (high or low). Use the "list var din" command to obtain the list of supported *index* values and corresponding actions. The following example sets the digital input channel 1 to 3 on a low-to-high transition.

Send: set din 1 3 high Receive: set din 1 3 high ok

dout channel

This command reports the index number, output variable and the active state assigned to digital output *channel*. The following example reports output 4 to be assigned an index number 11 corresponding to action of "flowl alarms".

Send: dout 4

Receive: dout 4 11 FLOW ALARMS open

set dout channel index state

This command assigns digital output *channel* to be assigned to the action associated with *index*, and assigns it an active state of *state* (open or closed). Use the "list var dout" command to obtain the list of supported index values and corresponding state. The following example sets the digital output channel 4 to state 11.

Send: set dout 4 11 open Receive: set dout 4 11 open ok

dtoa channel

This command reports the outputs of the 6 or 12 Digital to Analog converters, according to Table B-13. The following example shows that the D/A #1 is 97.7% full-scale.

Send: dtoa 1 Receive: dtoa 1 97.7%

Note If the instrument is in a mode which does not provide a particular output, and that output is selected, the value will be 0.0. ▲

All channel ranges are user definable. If any customization has been made to the analog output configuration, the default selections may not apply. \triangle

Table B–13. Default Analog Output Channel Assignments

D to A	Function	Range
1	Voltage Output	PM
2	Voltage Output	AVG PM
3	Voltage Output	Flow
4	Voltage Output	Ambient Temperature
5	Voltage Output	Flow Temperature
6	Voltage Output	Ambient Relative Humidity
7	Current Output	PM

I/O Configuration

D to A	Function	Range
8	Current Output	AVG PM
9	Current Output	Flow
10	Current Output	Ambient Temperature
11	Current Output	Flow Temperature
12	Current Output	Ambient Relative Humidity

list din list dout

These commands report the current selection for the digital inputs or the digital outputs in the format. Output no Index number variable name active state. The active state for digital outputs is open or closed. The active state for digital inputs is high or low.

Send: list dout Receive: list dout

> output index variable state 1 5 CONC ALARM open 2 1 LOCAL/REMOTE open

3 3 UNITS open

list var aout list var dout list var din list var log

These commands report the list of possible index numbers, and the variables (associated with that index number) available for selection in the current mode for analog outputs, digital outputs, digital inputs and datalogging. The index number is used to insert the variable in a field location in a list using "set sp field index". The following example reports the list of analog outputs, index numbers, and variables.

Send: list var aout Receive:

list var aout index variable

0 none

1 pm

3 baro

4 vac

6 pflow

8 ambrt

9 srh

11 ambtemp

12 brdtemp

13 ftemp

15 stemp

17 frol 19 beta 28 braw 29 araw 30 avgpm 32 mass 34 bzero 45 exfg 50 bref 52 cflg 53 aflg

relay stat

This command reports the current relay logic as normally "open" or normally "closed," if all the relays are set to same state, that is all open or all closed. The following example shows that the status of all the relays' logic is set to normally "open".

Send: relay stat Receive: relay stat open

Note If individual relays have been assigned different logic, then the response would be a 4-digit hexadecimal string with the least significant byte (LSB) being relay no 1. ▲

For example:

relay stat 0x0001 Receive:

(indicates relay no 1 is set to normally open logic, all others are normally closed)

Receive: relay stat 0x0005

(indicates relay no 1 and 3 are set to be normally open logic, all others are normally closed)

set relay open set relay open value set relay closed set relay closed value

These commands set the relay logic to normally open or closed for relay number value, where value is the relay between 1 and 16. The following example sets the relay no 1 logic to normally open.

Note If the command is sent without an appended relay number, then all the relays are assigned the set logic of normally open/closed.

Send: set relay open 1
Receive: set relay open 1 set relay open 1 ok

Record Layout Definition

The erec, lrec, and srec layouts contain the following:

- A format specifier for parsing ASCII responses
- A format specifier for parsing binary responses

In addition to these, the erec layout contains:

A format specifier for producing the front panel display screens

Values are read using either the ASCII or binary format specifiers and converted to uniform internal representations (32-bit floats or 32-bit integers). These values are converted into text for display on the screen using the format specifier for the front panel display. Normally, the specifier used to parse a particular datum from the input stream will be strongly related to the specifier used to display it (such as, all of the floating point inputs will be displayed with an 'f' output specifier, and all of the integer inputs will be displayed with a 'd' specifier).

Format Specifier for ASCII Responses

The first line of the layout response is the scanf-like parameter list for parsing the fields from an ASCII erec response. Parameters are separated by spaces and the line is terminated by a "\n" (the normal line separator character). Valid fields are:

%s - parse a string

%d - parse a decimal number

%ld - parse a long (32-bit) decimal number

%f - parse a floating point number

%x - parse a hexadecimal number

%lx - parse a long (32-bit) hex number

%* - ignore the field

Note Signed versus unsigned for the integer values does not matter; it is handled automatically. **\(\rightarrow\)**

Format Specifier for Binary Responses

The second line of the layout response is the binary parameter list for parsing the fields from a binary response. Parameters MUST be separated by spaces, and the line is terminated by a '\n'. Valid fields are:

t - parse a time specifier (2 bytes)

D - parse a date specifier (3 bytes)

i - ignore one 8-bit character (1 byte)

e - parse a 24-bit floating point number (3 bytes: n/x)

E - parse a 24-bit floating point number (3 bytes: N/x) f - parse a 32-bit floating point number (4 bytes)

c - parse an 8-bit signed number (1 byte)

C - parse an 8-bit unsigned number (1 byte)

n - parse a 16-bit signed number (2 bytes)

N - parse a 16-bit unsigned number (2 bytes)

m - parse a 24-bit signed number (3 bytes)

M - parse a 24-bit unsigned number (3 bytes)

1 - parse a 32-bit signed number (4 bytes)

L - parse a 32-bit unsigned number (4 bytes)

There is an optional single digit d which may follow any of the numeric fields, which indicates that after the field has been parsed out, the resulting value is to be divided by 10^A. Thus the 16-bit field 0xFFC6 would be interpreted with the format specifier 'n3' as the number -0.058.

Format Specifier for Erec Layout

The subsequent lines in the erec layout response describe the appearance of the full panel. The full instrument panel as it appears on the screen has two columns of lines. Each line is composed of three major components: (1) a text field, (2) a value field, and (3) a button. None of these three components is required. The text field contains statically displayed text.

The value field displays values which are parsed out of the response to a erec command. It also displays, though background changes, alarm status. The button, when pressed, triggers input from either a dialog box or a selection list. There are five kinds of buttons, B, I, L, T, and N.

Each line in the layout string corresponds to one line on the display. The layout string describes each of the three major fields as well as translation mechanisms and corresponding commands.

Text

The first field in the layout string is the text. It is delimited by a ':'. The string up to the first ':' will be read and inserted in the text field of the line.

Value String

This is followed by a possible string enclosed in quotes that is used to place a string into the value field.

Value Source

The value source, which is the item (or word) number in the DATA/EREC response, appears next. This is followed by an optional bitfield designator. The datum identified by the value source can be printed as a string 's', hexadecimal 'x', decimal 'd', floating point 'f', or binary 'b' number.

Typically, bitfield extractions are only done for decimal or hexadecimal numbers.

Floating-point numbers can be followed with an optional precision specifier which will be used as an argument to printf's %f format (for example, a field of '4' would be translated into the printf command of '%.3f). Alternately, the special character '*' can precede the precision specifier; this causes an indirection on the precision specifier (which now becomes a field number).

This is useful when formatting, for example, numbers which have varying precision depending on the mode of the instrument.

Binary numbers can also have an optional precision specifier which is used to determine how many bits to print. For example, the specifier 'b4' will print the lowest four bits of the parsed number.

There are serious restrictions on where an 's' field may appear: currently sources 1 and 2 must be 's', and no others may be 's'.

Alarm Information

The value source is followed by optional alarm information, indicated by a commercial at sign '@' with a source indicator and a starting bit indicator. All alarm information is presumed to be two bits long (low and high). The bitfield extraction is performed on the integer part of the source. Typical alarm information would appear as '@6.4'.

Translation Table

Then, there appears an optional translation table within braces '{}'. This is a string of words separated by spaces. An example translation table would be '{Code_0 Code_1 Code_2 Code_3}'. The value, once extracted, is used as a zero-based index into the translation table to determine the string to display.

Selection Table

Then there appears an optional selection table within parentheses '(...)'. This is a string of numbers separated by spaces '(0 1)'. The selection table lists the translation table entries which the user may select from when setting the parameter. This is not necessarily the same as the entries which may be displayed.

Button Designator

Then there appears an optional button designator. This will be one of 'B', 'I', 'L', 'T', or 'N'.

B- Indicates a button which pops up an input dialog prompting the user for a new value using the designated input format. The input format is specified from the 'B' through the subsequent semicolon.

I—Indicates a button which pops up a selection list with input translation. That is, the values read are translated before they are compared to the selection list options.

L—Indicates a button which pops up a selection list without any translation. The output value is the number of the selected option.

T—Indicates a button which pops up a selection list with output translation. The number of the option selected is used as an index into the translation table to generate an output string.

N—Indicates a button which only sends the subsequent command to the instrument. No user-prompting happens.

The following string through an optional 'I' or the end of the line is the command which is to be sent to the instrument upon the completion of the button selection. The command string should normally contain print-style formatting to include the user input. If a 'l' is present, it indicates a command which is sent to the instrument upon successful completion of the button command to update the value field.

Examples Some examples ('\n' is the C syntax for an end-of-line character):

'Concentrations\n'

This is a single text-only line.

'\n'

This is a single blank line.

' NO:3s\n'

This is a line which appears slightly indented. The text field is 'NO', the value is taken from the third element of the data response, and interpreted as a string.

' NO:18sBd.ddd;set no coef %s\n'

This is a line which also appears slightly indented. The next field is also 'NO', but the value is taken from the eighteenth element of the data response, again interpreted as a string. A button appears on this line which, when pressed, pops up an input dialog which will state "Please enter a new value for NO using a d.ddd format." The string entered by the user is used to construct the output command. If the user enters, for example, '1.234', the constructed command will be 'set no coef 1.234'.

```
' NO:21f{Code 0 Code 1 Code 2 Code 3 Code 4 Code 5 Code 6
Code 7 Code 8 Code 9 Code 10 Code 11}Lset range no %d\n'
```

This is a line which appears slightly indented, the title is again 'NO', and the value is the twenty-first element of the data response, interpreted as a floating-point number. There is a no-translation button which creates a selection list of twelve "Code nn" options. The number of the user selection is used to create the output command.

```
'Mode:6.12-13x{local remote service service}(0 1)Tset mode
%s\n'
```

This is a line which has a title of 'Mode' and value taken from the sixth field of the data response. There is a bitfield extraction of bits 12 through 13 from the source (the value type is not important here because the value is being translated to an output string). Once the bits have been extracted, they are shifted down to the bit-zero position. Thus, the possible values of this example will be 0 through 3. The translation list shows the words which correspond to each input value, the zero index value appearing first (0 -> local, 1 -> remote, etc.). The selection list shows that only the first two values, in this case, are to be shown to the user when the button is pressed. The 'T' button indicates full translation, input code to string, and user selection number to output string.

```
'\xC'
```

This is a line that starts a new column (the \xC or ^L).

```
' Comp:6.11x{off on}Tset temp comp %s\n'
```

This shows that the bitfield end (the second part of a bitfield specification) is optional. The bitfield will be one bit long, starting in this case at the eleventh bit.

```
'Background:7f*8Bd.ddd;set o3 bkg %s\n'
```

This shows the use of indirect precision specifiers for floating point displays. The background value is taken from the 7th element, and the precision specifier is taken from the 8th. If the asterisk were not present, it would indicate instead that 8 digits after the decimal point should be displayed.

Appendix C MODBUS Protocol

This appendix provides a description of the MODBUS Protocol Interface and is supported both over RS-232/485 (RTU protocol) as well as TCP/IP over Ethernet.

The MODBUS commands that are implemented are explained in detail in this document. The MODBUS protocol support for the iSeries enables the user to perform the functions of reading the various concentrations and other measurement values, read the status of the digital outputs of the analyzer, and to trigger or simulate the activation of a digital input to the instrument. This is achieved by using the supported MODBUS parameters listed below.

Up to three simultaneous connections are supported over Ethernet.

For details of the Model 5030i MODBUS Protocol specification, see the following topics:

- "Serial Communication Parameters" on page C-1
- "TCP Communication Parameters" on page C-2
- "Application Data Unit Definition" on page C-2
- "Function Codes" on page C-3
- "MODBUS Parameters Supported" on page C-8

Additional information on the MODBUS protocol can be obtained at http://www.modbus.org. References are from MODBUS Application Protocol Specification V1.1a MODBUS-IDA June 4, 2004.

Serial Communication Parameters

The following are the communication parameters that are used to configure the serial port of the *i*Series to support MODBUS RTU protocol.

Number of Data bits : 7 or 8 Number of Stop bits : 1 or 2

: None, Odd, or Even **Parity**

Data rate : 1200 to 115200 Baud (9600 is default)

TCP Communication Parameters

iSeries instruments support the MODBUS/TCP protocol. The register definition is the same as for the serial interface. Up to three simultaneous connections are supported over Ethernet.

TCP connection port for MODBUS : 502

Application Data Unit Definition

Here are the MODBUS ADU (Application Data Unit) formats over serial and TCP/IP:

Serial:	Slave Address	Function Code	Data	Error Check
TCP/IP:	MBAP Header	Function Code	Data	

Slave Address

The MODBUS slave address is a single byte in length. This is the same as the instrument ID used for C-Link commands and can be between 1 and 127 decimal (i.e. 0x01 hex to 0x7F hex). This address is only used for MODBUS RTU over serial connections.

Note Device ID '0', used for broadcast MODBUS commands, is not supported. Device IDs 128 through 247 (i.e. 0x80 hex to 0xF7 hex) are not supported because of limitations imposed by C-Link. ▲

MBAP Header

In MODBUS over TCP/IP, a MODBUS Application Protocol Header (MBAP) is used to identify the message. This header consists of the following components:

Transaction Identifier	2 Bytes	0x0000 to 0xFFFF (Passed back in response)
Protocol Identifier	2 Bytes	0x00 (MODBUS protocol)
Length	2 Bytes	0x0000 to 0xFFFF (Number of following bytes)
Unit Identifier	1 Byte	0x00 to 0xFF (Passed back in response)

Function Code

The function code is a single byte in length. The following function codes are supported by the instrument:

Read Coils 0x01

Read Inputs 0x02

Read Holding Registers 0x03

Read Input Registers 0x04

0x05Force (Write) Single Coil

Read Exception Status 0x06

If a function code is received that is not in this list, an invalid function exception is returned.

Data

The data field varies depending on the function. For more description of these data fields, see "Function Codes" below.

Error Check

In MODBUS over serial, an error check is included in the message. This is not necessary in MODBUS over TCP/IP because the higher-level protocols ensure error-free transmission. The error check is a two-byte (16 bit) CRC value.

Function Codes

This section describes the various function codes that are supported by the Model 5030i.

(0x01/0x02) Read **Coils/Read Inputs**

Read Coils/Inputs read the status of the digital outputs (relays) in the instrument. Issuing either of these function codes will generate the same response.

These requests specify the starting address, i.e. the address of the first output specified, and the number of outputs. The outputs are addressed starting at zero. Therefore, outputs numbered 1–16 are addressed as 0–15.

The outputs in the response message are packed as one per bit of the data field. Status is indicated as 1 = Active (on) and 0 = Inactive (off). The LSB of the first data byte contains the output addressed in the query. The other **Function Codes**

outputs follow toward the high end of this byte, and from low order to high order in subsequent bytes. If the returned output quantity is not a multiple of eight, the remaining bits in the final data byte will be padded with zeros (toward the high order end of the byte). The Byte Count field specifies the quantity of complete bytes of data.

Note The values reported may not reflect the state of the actual relays in the instrument, as the user may program these outputs for either active closed or open. ▲

Request

Function Code	1 Byte	0x01 or 0x02
Starting Address	2 Bytes	0x0000 to maximum allowed by instrument
Quantity of Outputs	2 Bytes	1 to maximum allowed by instrument
Unit Identifier	1 Byte	0x00 to 0xFF (Passed back in response)

Response

Function Code	1 Byte	0x01 or 0x02
Byte Count	1 Byte	N*
Output Status	N Byte	N = N or N+1

^{*}N = Quantity of Outputs / 8, if the remainder not equal to zero, then N=N+1

Error Response

Function Code	1 Byte	0x01 or 0x02
Exception Code	1 Byte	01=Illegal Function, 02=Illegal Address,
		03=Illegal Data, 04=Slave Device Failure

Here is an example of a request and response to read outputs 2–15:

Request

Field Name	(Hex)
Function	0x01
Starting Address Hi	0x00
Starting Address Lo	0x02
Quantity of Outputs Hi	0x00
Quantity of Outputs Lo	0x0D

Response

Field Name	(Hex)
Function	0x01
Byte Count	0x03
Output Status 2–10	0xCD
Output Status 11–15	0x0A

The status of outputs 2-10 is shown as the byte value 0xCD, or binary 1100 1101. Output 10 is the MSB of this byte, and output 2 is the LSB. By convention, bits within a byte are shown with the MSB to the left and the LSB to the right. Thus, the outputs in the first byte are '10 through 2', from left to right. In the last data byte, the status of outputs 15-11 is shown as the byte value 0x0A, or binary 0000 1010. Output 15 is in the fifth bit position from the left, and output 11 is the LSB of this byte. The four remaining high order bits are zero filled.

(0x03/0x04) Read Holding **Registers/Read Input** Registers

Read Holding/Input Registers reads the measurement data from the instrument. Issuing either of these function codes will generate the same response. These functions read the contents of one or more contiguous registers.

These registers are 16 bits each and are organized as shown below. All of the values are reported as 32-bit IEEE standard 754 floating point format. This uses 2 sequential registers, least significant 16 bits first.

The request specifies the starting register address and the number of registers. Registers are addressed starting at zero. Therefore, registers numbered 1–16 are addressed as 0–15. The register data in the response message are packed as two bytes per register, with the binary contents right justified within each byte. For each register, the first byte contains the high order bits and the second contains the low order bits.

Request

	Function Code	1 Byte	0x03 or 0x04
--	---------------	--------	--------------

Starting Address 2 Bytes 0x0000 to maximum allowed by instrument

Quantity of Registers 2 Bytes 1 to maximum allowed by instrument

Response

Function Code 1 Byte 0x03 or 0x04 Byte Count 1 Byte $2 \times N^*$

Register Value $N^* \times 2$ Bytes N = N or N+1

Error Response

Function Code 1 Byte Function code + 0x80

Exception Code 1 Byte 01=Illegal Function, 02=Illegal Address,

03=Illegal Data, 04=Slave Device Failure

Here is an example of a request and response to read registers 10–13:

Request

Field Name (Hex)
Function 0x03
Starting Address Hi 0x00
Starting Address Lo 0x09
No. of Registers Hi 0x00
No. of Registers Lo 0x04

Response

Field Name (Hex)
Function 0x03
Byte Count 0x06
Register Value Hi (10) 0x02
Register Value Lo (10) 0x2B
Register Value Hi (11) 0x00
Register Value Lo (11) 0x00

^{*}N = Quantity of Registers

Register Value Hi (12)	0x00
Register Value Lo (12)	0x64
Register Value Hi (13)	0x00
Register Value Lo (13)	0x64

The contents of register 10 are shown as the two byte values of 0x02 0x2B. Then contents of registers 11–13 are 0x00 0x00, 0x00 0x64 and 0x00 0x64, respectively.

(0x05) Force (Write) **Single Coil**

The Force (Write) Single Coil function simulates the activation of the digital inputs in the instrument, which triggers the respective action.

This function code is used to set a single action to either ON or OFF. The request specifies the address of the action to be forced. Actions are addressed starting at zero. Therefore, action number 1 is addressed as 0. The requested ON/OFF state is specified by a constant in the request data field. A value of 0xFF00 requests the action to be ON. A value of 0x0000 requests it to be OFF. All other values are illegal and will not affect the output. The normal response is an echo of the request, returned after the state has been written.

Note This function will not work if the instrument is in service mode. \triangle

Re	q	ue	st
----	---	----	----

•		
Function Code	1 Byte	0x05
Starting Address	2 Bytes	0x0000 to maximum allowed by instrument
Output Value	2 Bytes	0x0000 or 0xFF00
Response		

Function Code

Starting Address	2 Bytes	0x0000 to maximum allowed by instrument
Output Value	2 Bytes	0x0000 or 0xFF00

0x05

1 Byte

Error Response		
Function Code	1 Byte	Function code + 0x80
Exception Code	1 Byte	01=Illegal Function, 02=Illegal Address,
		03=Illegal Data, 04=Slave Device Failure

Here is an example of a request to write Coil 5 ON:

Request

Field Name	(Hex)
Function	05
Output Address Hi	00
Output Address Lo	05
Output Value Hi	FF
Output Value Lo	00

Response

Field Name	(Hex)
Function	05
Output Address Hi	00
Output Address Lo	05
Output Value Hi	FF
Output Value Lo	00

MODBUS Parameters Supported

Table C-1 through Table C-3 lists the MODBUS addresses supported for the Model 5030i.

IMPORTANT NOTE The addresses in the following tables are Protocol Data Unit (PDU) addresses. Verify the coil number on your MODBUS master to ensure that it matches the coil number on the instrument. **\(\Lambda \)**

Note Coil status 1 indicates active state. ▲

Table C–1. Read Coils for 5030*i*

Coil Number	Status
0	INVALID
1	LOCAL/REMOTE
2	SERVICE
3	NOT USED
4	GEN ALARM
5	CONC ALARM
6	INST ALARMS

Coil Number	Status
7	BETA DETECTOR ALARMS
8	NEPHELOMETER ALARMS
9	RH/TEMP ALARMS
10	PRES/VAC ALARMS
11	FLOW ALARMS
12	NOT USED
13	NOT USED
14	NOT USED
15	EXT ALARM 1
16	EXT ALARM 2
17	EXT ALARM 3

Data Unit (PDU) addresses. Verify the register number on your MODBUS master to ensure that it matches the register number on the instrument.

Note For additional information on how to read registers and interpret the data, refer to the "(0x03/0x04) Read Holding Registers/Read Input Registers" section in this appendix. ▲

Table C–2. Read Registers for 5030*i*

Register Number	Variable
0	INVALID
1 & 2	PMa
3 & 4	NOT USED
5 & 6	BARO PRES
7 & 8	VACUUM
9 & 10	NOT USED
11 & 12	FLOW PRES
13 & 14	NOT USED
15 & 16	AMB RH
17 & 18	SAMP RH
19 & 20	NOT USED
21 & 22	AMB TEMP

Register Number	Variable
23 & 24	BOARD TEMP
25 & 26	FLOW TEMP
27 & 28	NOT USED
29 & 30	NOT USED
31 & 32	NOT USED
33 & 34	FLOW VOL
35 & 36	NOT USED
37 & 38	BETA
39 & 40	ANALOG IN 1
41 & 42	ANALOG IN 2
43 & 44	ANALOG IN 3
45 & 46	ANALOG IN 4
47 & 48	ANALOG IN 5
49 & 50	ANALOG IN 6
51 & 52	ANALOG IN 7
53 & 54	ANALOG IN 8
55 & 56	BETA RAW
57 & 58	ALPHA RAW
59 & 60	AVG PM
61 & 62	NOT USED
63 & 64	MASS
65 & 66	NOT USED
67 & 68	BETA ZERO
69 & 70	NOT USED
71 & 72	NEPH
73 & 74	NOT USED
75 & 76	NOT USED
77 & 78	NOT USED
79 & 80	NOT USED
81 & 82	NOT USED
83 & 84	SHARP
85 & 86	NOT USED
87 & 88	AVG SHARP
89 & 90	NOT USED

Register Number	Variable
91 & 92	EXT ALARMS
93 & 94	NEPH TEMP
95 & 96	NEPH RH
97 & 98	NEPH IRED
99 & 100	NEPH REF
101 & 102	BETA REF
103 & 104	NOT USED
105 & 106	COMMON FLAGS
107 & 108	BETA DETECTOR FLAGS
109 & 110	NOT USED
111 & 112	COMP MASS
113 & 114	NOT USED
115 & 116	AVG NEPH

IMPORTANT NOTE The addresses in the following tables are Protocol Data Unit (PDU) addresses. Verify the coil number on your MODBUS master to ensure that it matches the coil number on the instrument. **\(\Lambda \)**

Note Writing 1 to the coil number shown in the following table will initiate the "action triggered" listed in the table. This state must be held for at least 1 second to ensure the instrument detects the change and triggers the appropriate action. ▲

Note The coils within each coil group in the following table are mutually exclusive and will not be triggered if there is conflict. Before you assert (1) one coil in a group, make sure the other coils in the group are de-asserted **(0)**. **▲**

Table C–3. Write Coils for 5030*i*

Coil Number	Action Triggered
100	INVALID
101	NOT USED
102	NOT USED
103	NOT USED
104	AOUTS TO ZERO
105	AOUTS TO FS

MODBUS Protocol

MODBUS Parameters Supported

Coil Number	Action Triggered
106	FILTER TAPE COUNT RESET TO ZERO
107	FILTER TAPE CNTRL
108	PUMP CNTRL ON/OFF
109	TEMP COMP ON/OFF
110	PRES COMP ON/OFF
111	HEATER ON/OFF
112	HTR RH/TEMP CNTRL
113	EXT ALARM 1
114	EXT ALARM 2
115	EXT ALARM 3

Appendix D Gesytec (Bayern-Hessen) Protocol

This appendix provides a description of the Gesytec (Bayern-Hessen or BH) Protocol Interface and is supported both over RS-232/485 as well as TCP/IP over Ethernet.

The Gesytec commands that are implemented are explained in detail in this document. The Gesytec protocol support for the iSeries enables the user to perform the functions of reading the various concentrations and to trigger the instrument to be in sample/zero/span mode if valid for that instrument. This is achieved by using the supported Gesytec commands listed below.

Up to three simultaneous connections are supported over Ethernet.

For details of the Model 5030*i* Gesytec Protocol specification, see the following topics:

- "Serial Communication Parameters" on page D-1
- "TCP Communication Parameters" on page D-2
- "Instrument Address" on page D-2
- "Abbreviations Used" on page D-2
- "Basic Command Structure" on page D-2
- "Block Checksum" on page D-3
- "Gesytec Commands" on page D-3

Serial Communication Parameters

The following are the communication parameters that are used to configure the serial port of the *i*Series to support Gesytec protocol.

Number of Data bits : 7 or 8 Number of Stop bits : 1 or 2

Parity : None, Odd, or Even

Data rate : 1200 to 115200 Baud (9600 is default)

TCP Communication Parameters

iSeries instruments support the Gesytec protocol over TCP/IP. The register definition is the same as for the serial interface. Up to three simultaneous connections are supported over Ethernet.

TCP connection port for Gesytec:

Instrument Address

The Gesytec instrument address has a value between 0 and 127 and is represented by a 3 digit ASCII number with leading zeros or leading spaces if required (e.g. instrument address of 1 is represented as 001 or <SP><SP>1). The default instrument address is 14.

The instrument address is the same as the Instrument ID used for C-Link and MODBUS commands. This can be set via the front panel.

The instrument address is represented by <address> in the examples throughout this document.

Note Device IDs 128 through 247 are not supported because of limitations imposed by the C-Link protocol. ▲

Abbreviations Used

The following is a list of abbreviations used in this document:

<CR> is abbreviation for Carriage Return (ASCII code 0x0D)

<STX> is abbreviation for Start of Text (ASCII code 0x02)

<ETX> is abbreviation for End of Text (ASCII code 0x03)

<SP> is abbreviation for space (ASCII code 0x20)

Basic Command Structure

The following is the basic structure of a Gesytec command:

<STX>Command text<ETX><BCC>

OR

<STX>Command text<CR>

Each command is framed by control characters, <STX> at the start and terminated with either <ETX> or <CR>.

If a command is terminated with <ETX>, then two additional characters <BCC> is attached after <ETX>. This is the block checksum.

Block Checksum Characters < BCC> may be added to the command to prevent processing invalid commands.

Block Checksum Characters < BCC>

The Block Checksum Characters are calculated beginning with a seed value of 00000000, binary (0x00), and bitwise exclusive ORing with each of the characters of the command string (or response) including the framing characters <STX> and <ETX>. The checksum works as an error check. The command terminator determines the presence or absence of <BCC>.

If a command is terminated by <ETX> then the next two characters are the checksum, if the command is terminated with <CR> no checksum is attached.

The block checksum is represented by two characters, which represent a 2 digit hex number (1byte) (e.g. 1 byte 0xAB hex checksum will be represented by the two characters 'A' & 'B').

The checksum is referred to as <BCC> throughout this document.

Gesytec Commands

The following commands are supported by the Gesytec protocol:

- Instrument Control Command (ST)
- Data Sampling/Data Query Command (DA)

Instrument Control Command (ST)

There is one control command supported by the Gesytec protocol.

This <control command> is a single letter, which triggers an action in the instrument. These commands are active only when service mode is inactive and the zero/span option is present.

Command 'N' initiates a filter change.

The following are the different acceptable formats of the ST command:

<STX>ST<address><control command><ETX><BCC>

OR

<STX>ST<address><control command><CR>

OR

<STX>ST<address><SP><control command><CR>

OR

<STX>ST<address><SP><control command><ETX><BCC>

The <address> is optional, which means it can be left out completely. The <address>, if present, must match the Instrument Address. Additional space can be present after the <address>.

If the received command does not satisfy the above formats, or if the <address> does not match the Instrument Address, the command is ignored.

This is a sample command to switch the instrument to initiate a filter change, instrument address 14:

<STX>ST014<SP>N<CR>

Data Sampling/Data Query Command (DA)

This command initiates a data transfer from the instrument. The instrument responds with measurement data, which depends on the range mode and is listed in "Measurements reported in response to DA command" below.

The command structure for a data query command is as follows:

<STX>DA<address><ETX><BCC>

The <address> is optional, which means it can be left out completely. The <address>, if present, must match the Instrument Address. Additional space can be present after the <address>.

If the <address> is left out, then no space is allowed in the query string.

A command with no address is also a valid command.

The following are the different acceptable formats of the DA command with Instrument Address 14:

<STX>DA<CR>

<STX>DA014<CR>

<STX>DA<SP><14<ETX><BCC>

<STX>DA<ETX><BCC>

The data query string is valid and will be answered with data transmission only if the command starts with <STX>, which is followed by the characters DA, and the <address> (if present) matches the Instrument Address, and the command is terminated with either <CR> with no checksum or <ETX>, followed by the correct checksum <BCC>.

Sample Data Reply String in response to Data Query Command (DA):

In response to a valid data query command, the instrument responds in the following format:

```
<STX>MD09<SP><address><SP><measured
value1><SP><status><SP><SFKT><SP><address+1><SP><measured
value2><SP ><status><SP><SFKT><ETX><BCC>
```

The response uses the same command terminators as used by the received command, i.e. if the received command was terminated with a <CR> then the response is terminated with <CR>, and if the command was terminated with a <ETX><BCC>, then the response is terminated with<ETX> and the computed checksum <BCC>.

The 09 after the MD indicates that nine measurements are present in the reply string, 10 for ten measurements and so on. This will also determine the length of the reply string.

<address> is the Instrument Address. Each subsequent measurement attached to the response will have the <address + X>, where X keeps incrementing by 1 for each measurement included.

<measured value> is the concentration value in currently selected gas units, represented as exponential representation with 4 characters mantissa and 2 characters exponent, each with sign.

Mantissa: sign and 4 digits. The decimal point is assumed to be after the first digit and is not transmitted.

Exponent: sign and 2 digits.

Example:

-5384000.0 is represented as -5384+06

+0.04567 is represented as +4567-02

<status>: is formed by < operating status > and < error status > and separated by a space, i.e.:

<operating status><SP><error status>

Each of the two (<operating status> and <error status>) are formed by two characters, each representing a 2 digit hex number which is one byte (8 Bits) operation status and one byte (8 Bits) error status.

These two bytes contain the information about the main operating conditions of the instrument at that instant. For details on how to interpret the status bytes, refer to Table D-1 and Table D-2 below.

<SFKT>: is the space provided for future use for special function. It currently contains a string of ten 0's, i.e. <0000000000>.

Gesytec Commands

The Gesytec serial number defaults to zero. To set the Gesytec serial number select Main Menu > Instrument Controls > Communication Settings > **Gesytec Serial No.**

Example of response to DA command from an instrument with Gesytec serial number set to 000. The Gesytec serial number is bold in the example.

Gesytec Protocol with transmission of three concentrations (Instrument ID is 1, Operation Status is 03, Error Status is 04):

Data Query String: <STX>DA<CR> Reply String: <STX>MD03<SP>001<SP>+2578+01<SP>03 <SP>04<SP>**000**00000000 <SP>002 <SP> \uparrow Address First Concentration(E-format)=25.78 Address+1 +5681+00<SP>03<SP>04<SP>00000000000CSP>003<SP>+1175+01<SP>03<SP>04<SP Second Concentration = 5.681 Third Concentration=11.75 Address+2 0000000000<SP><CR>

Example of response to DA command from an instrument with Gesytec serial number set to 123. The Gesytec serial number is **bold** in the example.

Gesytec Protocol with transmission of three concentrations (Instrument ID is 1, Operation Status is 03, Error Status is 04):

Data Query String: <STX>DA<CR> Reply String: <STX>MD03<SP>001<SP>+2578+01<SP>03 <SP>04<SP>1230000000 <SP>002 <SP> Address First Concentration(E-format)=25.78 Address+1 +5681+00<SP>03<SP>04<SP>00000000000<SP>003<SP>+1175+01<SP>03<SP>04<SP Second Concentration = 5.681 Third Concentration=11.75 Address+2

1230000000<SP><CR>

The attached concentrations are in the selected gas units. The measurements that are attached to the response, if not valid in a particular mode, will report a value of 0.0.

Measurements reported in response to DA command

The following 14 measurements reported in response to DA command for the Model 5030*i* include:

- **SHARP**
- PM
- Nephelometer
- Volumetric Flow
- Ambient Temperature
- Sample Temperature
- Ambient RH
- Sample RH
- Flow Pressure
- Vacuum Pressure
- Barometric Pressure
- Average SHARP
- Average PM
- Average Neph

Operating and Error Status

See Table D-1 for operating status and Table D-2 for error status for the Model 5030i.

Table D–1. Operating Status for Model 5030*i*

	D7	D6	D5	D4	D3	D2	D1	D0
→ Bit	8	7	6	5	4	3	2	1
→ Hex-value	80	40	20	10	80	04	02	01
		MSB				LSB		
Operating status:								
Service Mode (On)	0	0	0	0	0	0	0	1
No Password Protect	0	0	0	0	0	0	1	0
Pump (Off)	0	0	0	0	0	1	0	0
Heater (Off)	0	0	0	0	1	0	0	0
Filter Change	0	0	0	1	0	0	0	0
Nephelometer Zero	0	0	1	0	0	0	0	0
Nephelometer Standby	0	1	0	0	0	0	0	0
Not Used	1	0	0	0	0	0	0	0

Table D–2. Error Status for Model 5030*i*

	D7	D6	D5	D4	D3	D2	D1	D0
→ Bit	8	7	6	5	4	3	2	1
→ Hex-value	80	40	20	10	80	04	02	01
		MSB		LSB				
Error status:								
Filter Tape Cntr Alarm	0	0	0	0	0	0	0	1
Filter Change	0	0	0	0	0	0	1	0
Beta Cnts Alarm	0	0	0	0	0	1	0	0
Neph Brd Alarm	0	0	0	0	1	0	0	0
Detector Board Status Alarm	0	0	0	1	0	0	0	0
Motherboard Status Alarm	0	0	1	0	0	0	0	0
Flow Alarm	0	1	0	0	0	0	0	0
Nephelometer Reference Voltage Alarm	1	0	0	0	0	0	0	0

Appendix E ESM Protocol Commands

This appendix provides a description of the ESM Protocol commands (from the prior FH62 platform) that can be used to remotely control a Model 5030*i* instrument using a host device such as a PC or a datalogger. ESM protocol may be used over RS-232, RS-485 or over Ethernet. ESM functions can be accessed over Ethernet using TCP port 9884.

Up to three simultaneous connections per protocol may be made over Ethernet.

ESM Commands Supported

Table E-1 through Table E-3 lists the ESM commands supported for the Model 5030i.

Table E–1. Read Commands for 5030*i*

Command	Description
C3	PM conc always always μg/m³
C2	Neph conc μg/m³
С	SHARP conc μg/m³
H3	Avg PM conc always μg/m³
H2	Avg Neph conc μg/m³
HT	Avg SHARP conc μg/m³
JB	temperature sampling head—ambient temp
JD	temperature inside of the flow meter orifice—flow temp
JF	different pressure of the air flow measuring module in Pa
JG	low pressure suction chamber
JH	barometer in hPa
JI	air flow sampling head-volumetric flow
JJ	norm air flow (273K, 1013hPa)
JR	relative humidity value (%RH)
JS	sample relative humidity value (%RH)
m1	non filtered mass in μg or mg based on units selected
0	reports "offline" in service mode, "online" if NOT in service mode

Command	Description
UA	beta count rate (1/s)
UB	beta zero count rate (1/s)
UC	alpha count rate (1/s)
UD	alpha zero count rate (1/s)
UQ	radon-EEC activity concentration (Bq/m³)
US	Read neph (coef factor)
?	read device address-instrument ID
#	flags—need nephelometer alarms

Table E–2. Write Commands for 5030*i*

Command	Description			
d4	baud rate			
d7	device address-instrument ID			
K4	concentration factor			
КВ	filter change dust load in μg			
KD	filter change cycle in hours			
KG	external heating control			
	0=off			
	1=RH control			
	2=TEMP control			
KH	set point air flow regulation in I/h			
KN	0=temp comp on pres comp off			
	1=temp comp off pres comp off			
KS	nephelometer coef factor			
KU	establishes the RH target value			
KT	establishes the temp target value			
K\$	norm-Pressure			
K%	norm-Temp			
Y\$	write parameters to EEPROM			

Table E–3. Control Commands for 5030*i*

Command	Description
А	pump off

ESM Commands Supported

Command	Description
Е	pump on
F	filter change